STOP
DO NOT RETURN TO THE STORE!

If you discover missing or damaged parts,
or if you have questions about the building process,
please reach out to us directly for the fastest service.

24/7 Support
help.backyardproducts.com

- Answers to frequently asked questions
- Technical assistance and how-to videos
- Submit a help request
- Request replacement parts

Business Hours
(734) 242-6900

Monday - Friday .... 8:00am - 6:00pm EST
Saturday - Sunday ....Closed

INSTALLERS WANTED

Did you enjoy building your shed?

JOIN OUR TEAM
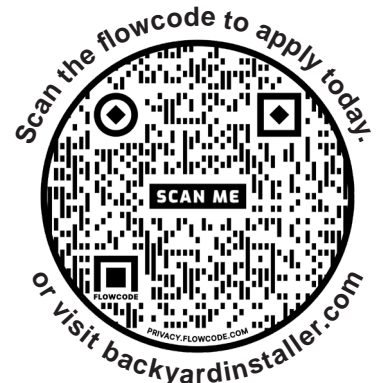AND MAKE UP TO $1,500/WEEK*

Call a Recruiter Today! 734-365-7000

Flexible schedule

No selling,
just building

Bonus incentives
available

Scan the flowcode to apply today.
or visit backyardinstaller.com
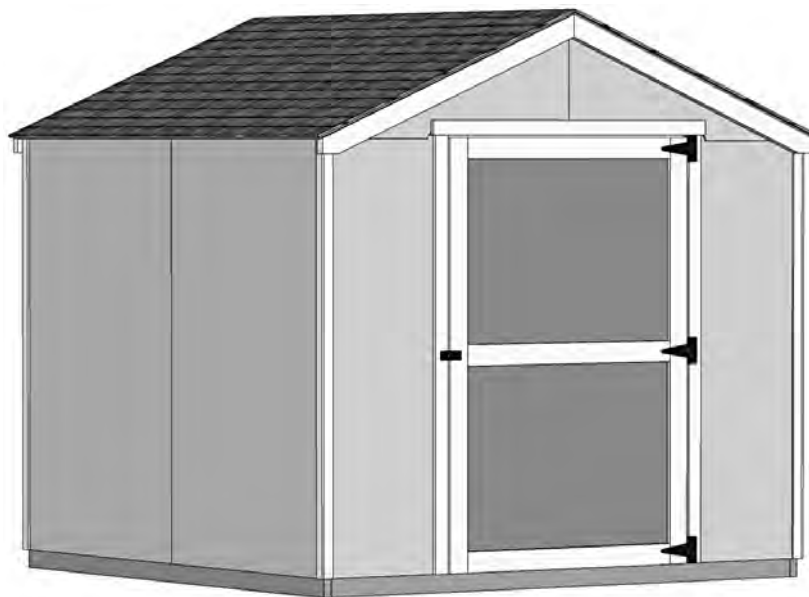
SCAN ME

*based on number of completed installations

GABLE 8' x 8' (244 x 244 cm)
ACTUAL FLOOR SIZE IS 96 x 92-5/8" (244 x 235 cm)

KEEP THIS MANUAL FOR FUTURE REFERENCE

⚠ *IMPORTANT!* ⚠
READ INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING ASSEMBLY.

BEFORE YOU BEGIN

• **BUILDING RESTRICTIONS AND APPROVALS**
  Be sure to check local building department and homeowners association for specific restrictions and/ or requirements before building.

• **ENGINEERED DRAWINGS**
  Contact our Customer Service Team if engineered drawings are needed to pull local permits.

• **SURFACE PREPARATION**
  To ensure proper assembly you must build your shed on a level surface.
  Recommended methods and materials to level your shed are listed on page 7.

• **CHECK ALL PARTS**
  Inventory all parts listed on pages 5-6.

• **ADDITIONAL MATERIALS**
  You will need additional materials to complete your shed. See page 4 for required and optional materials and quantities.

CONTACT OUR CUSTOMER SERVICE TEAM IF ANY PARTS ARE MISSING OR DAMAGED
- Order form and warranty at back of manual -
Call: 1-734-242-6900 email: customerservice@backyardproducts.com

TOOLS

Required	Optional

Required

- ❏ Phillips Screwdriver
- ❏ Drill / Driver
  - ❏ 3/8" Drill Bit
  - ❏ 1/4" Drill Bit
  - ❏ 1/2" Drill Bit
  - ❏ 1/8" Drill Bit
  - ❏ #2 Philips Drive Bit
- ❏ Level
- ❏ Pencil
- ❏ Tape Measure
- ❏ Square   or

- ❏ Utility Knife
  - ❏ Shingle Blades
- ❏ Caulk Gun
- ❏ Paint Tools
- ❏ Safety Glasses
- ❏ Ladder

Optional

- ❏ Tool Belt/ Nail Pouch
- ❏ Tin Snips (for drip edge)
- ❏ Chalk Line
- ❏ Nail Gun
  - • gun nails
- ❏ Gloves
- ❏ Hammer
- ❏ Wood Glue

Safety! Always use approved safety glasses during assembly.

HELPFUL REMINDER SYMBOLS
Look for these symbols for helpful reminders throughout this manual.

= Assistance Required; two or more people.

= Ensure squareness.

= Important required step or operation.

= Helpful assembly hint.

= Mark part with pencil.

√**BEGIN** = Beginning of steps for assembly or installation.

**FINISH** = You have finished the assembly or installation.

= Level

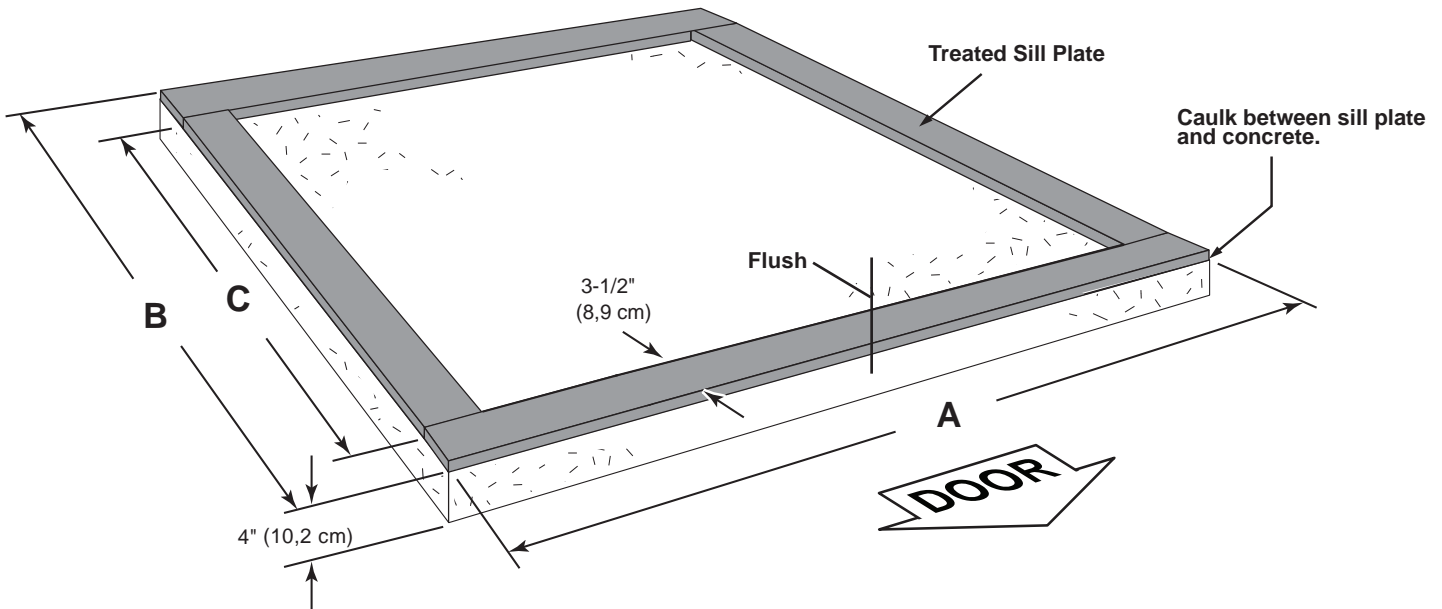## *ORIENT LUMBER AND TRIM FOR BEST APPEARANCE*

Framing lumber is graded for structural strength and not appearance. Exterior trim is graded for one good side.

Always install the material leaving the best edge and best surface visible. Please remember that these blemishes in no way negatively affect the strength or integrity of our product. (See Fig. **A**, **B**, **C**.)

A

B

C
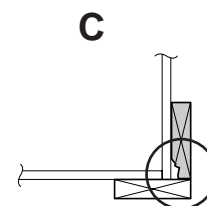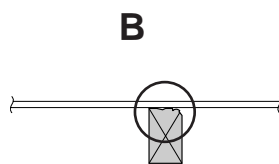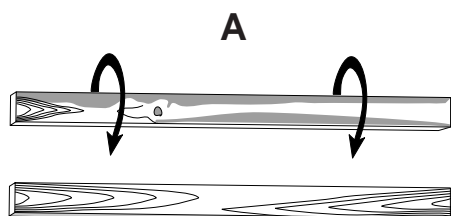
CONCRETE FOUNDATION
If you choose to install your kit on a concrete slab refer to the diagram below.

Treated Sill Plate

Caulk between sill plate and concrete.

Flush

3-1/2"
(8,9 cm)

B **C**

A

DOOR

4" (10,2 cm)

⚠ *Slab must be flush at the front of the shed for door opening clearance.* ⚠
Any over-sized slab must have the excess at the sides or back of shed.

Building Size	Actual Floor Size	A	B	C
8'x 8' (243,8 x 243,8 cm)	8'x 7'-8-5/8" (243,8 x 235,3 cm)	96" (243,8 cm)	92-5/8" (235,3 cm)	85-5/8" (217,5 cm)

Requires:

☐ **x4** 2 x 4 x 8' (5,1 x 10,2 x 243,8 cm) ⚠ **MUST be treated lumber.**

☐ **x1 Caulk**

⚠ Allow new concrete slabs to cure for at least seven (7) days.

- A treated 2 x 4" (5,1 x 10,2 cm) sill plate is required when installing your shed on concrete. **Hint: Use treated lumber in your kit or purchase full length treated lumber.**

- Use a high quality exterior grade caulk beneath all sill plates.

- Fasten 2 x 4" (5,1 x 10,2 cm) sill plates to slab using approved concrete anchors **(fasteners not included)**.

- Check local code for concrete foundation requirements.

NOTES

_____

_____

_____

_____

ADDITIONAL MATERIALS

FOUNDATION OR FLOOR MATERIALS

• This shed kit includes a wood floor system.

• This shed does not include any leveling materials.

• **See the FLOOR LEVELING section on page 8 for recommended methods and suggested materials to properly level your floor, as this will vary depending on your specific site.**

REINFORCED WOOD FLOOR FRAME (OPTIONAL)

IMPORTANT! The included floor has been designed for general use. Depending on your specific use you may want to construct a heavy duty floor frame by adding additional floor joists (shown below as shaded). Below is a list of additional materials (not included):
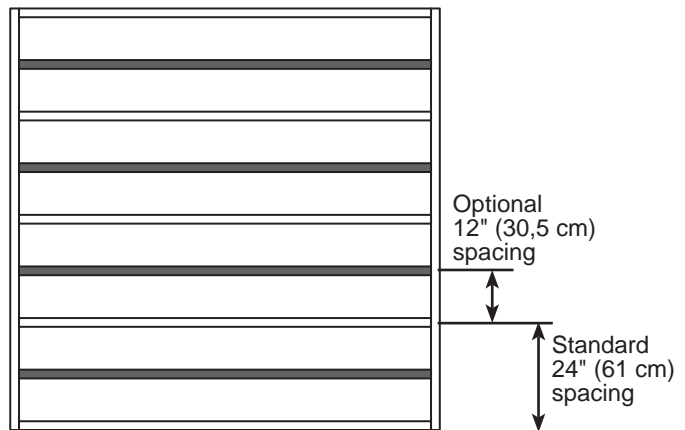
x4 2 x 4 x 8' (5,1 x 10,2 x 243,8 cm) Treated Lumber
Cut to 2 x 4 x 93" (5,1 x 10,2 x 236,2 cm)

x16 ea. 3" (7,6 cm) Hot Dipped Galvanized Nails

Optional 12" (30,5 cm) spacing

Standard 24" (61 cm) spacing

COMPLETING YOUR SHED
You will need these additional materials:

3-TAB SHINGLES .... 4 Bundles

PAINT FOR SIDING .... 2 Gallons
Use 100% acrylic latex exterior paint. (2) coats recommended.

CAULK .... 2 Tubes
Use acrylic latex exterior caulk that is paintable.

1" GALVANIZED ROOFING NAILS.... 2 Lbs
For shingles.

PAINT FOR TRIM ....1 Quart
Use 100% acrylic latex exterior paint.

1" GALVANIZED ROOFING NAILS.........1/4 Lb
For roofing felt.

⚠️ TO VALIDATE WARRANTY YOU MUST USE THE FOLLOWING: ⚠️

DRIP EDGE .... 34 Feet

#15 ROOFING FELT
To cover 73 Sq. Ft. of roof area.

REFER TO THE BACK OF THIS MANUAL AND THE MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION OF SHINGLES, DRIP EDGE AND FELT.

PARTS IDENTIFICATION AND SIZES

Part identification is stamped on some parts.

RS   **RS**
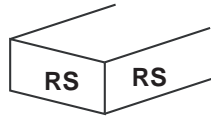
• Check these locations for part stamp.

Treated lumber is stamped:

TREATED

WOOD SIZE CONVERSION CHART

Nominal Board Size	Actual Size
2 x 4	..............1-1/2" x 3-1/2" (3,8 x 8,9 cm)
1 x 4	..................3/4" x 3-1/2" (1,9 x 8,9 cm)
2 x 3	..............1-1/2" x 2-1/2" (3,8 x 6,3 cm)
1 x 3	..................3/4" x 2-1/2" (3,8 x 6,3 cm)

PARTS LIST
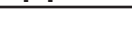
☑ **INVENTORY YOUR PARTS before you begin.**
We suggest sorting parts by the category they are listed in.

FLOOR

☐ **x2** TREATED — 2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)

☐ **x5** TREATED — 2 x 4 x 93" (5,1 x 10,2 x 236,2 cm)

Treated lumber is stamped:

TREATED

WALL

☐ **x2** **RK** — 2 x 3 x 13" (5,1 x 7,6 x 33 cm)

☐ **x2** **BV** — 2 x 3 x 17-1/2" (5,1 x 7,6 x 44,5 cm)

☐ **x2** **CI** — 2 x 3 x 34" (5,1 x 7,6 x 86,4 cm)

☐ **x10** **CJ** — 2 x 3 x 67-3/8" (5,1 x 7,6 x 171,1 cm)

☐ **x2** **KU** — 2 x 3 x 69-1/2" (5,1 x 7,6 x 176,5 cm)

☐ **x1** **PS** — 2 x 3 x 91 " (5,1 x 7,6 x 231,1 cm)

☐ **x2** **PM** — 2 x 3 x 92-5/8" (5,1 x 7,6 x 235,3 cm)

☐ **x2** **PT** — 2 x 3 x 96" (5,1 x 7,6 x 243,8 cm)

☐ **x2** — 5/8 x 2-1/2 x 92-5/8" (1,6 x 6,4 x 235,3 cm)

☐ **x2** **DS** — 1 x 3 x 55" (2,5 x 7,6 x 137,2 cm)

RAFTER

☐ **x6** — 6 x 24" (15,2 x 61 cm)

☐ **x6** **CM** — 2 x 4 x 52" (5,1 x 10,2 x 132,1 cm)

☐ **x2** **GUA** — 1 x 3 x 60" (2,5 x 7,6 x 152,4 cm)

TRIM

☐ **x4** **CL** — 2 x 4 x 53-11/16" (5,1 x 10,2 x 136,4 cm)

☐ **x4** — 3/8 x 1-3/4 x 71" (1 x 4,4 x 180,3 cm)

☐ **x4** — 3/8 x 1-3/4 x 72" (1 x 4,4 x 182,9 cm)

☐ **x2** **KY** — 19/32" x 2-1/2" x 72-3/8" (1,5 x 6,3 x 183,8 cm)

DOOR

☐ **x1** **OO** — 2 x 3 x 69" (5,1 x 7,6 x 175,3 cm)

☐ **x2** — 3/8 x 1-3/4 x 69" (1 x 4,4 x 175,3 cm)

WALL PANELS, AND DOORS

☐ **x2**
3/8 x 48 x 72"
(1 x 121,9 x 182,9 cm)

☐ **x4**
3/8 x 46-1/8 x 72"
(1 x 117,2 x 182,9 cm)

☐ **x2**
3/8 x 23-7/8 x 72"
(1 x 60,6 x 182,9 cm)

☐ **x1**

☐ **x1**

☐ **x1**

☐ **x1**

☐ **x1** DOOR

ROOF PANELS

☐ **x2**
5-7/8" x 96"
(14,9 x 243,8 cm)

☐ **x2**
48" x 96"
(121,9 x 243,8 cm)

Roof panels are 7/16" (1,1 cm) thick.

FLOOR PANELS

☐ **x1**
44-5/8" x 96"
(113,3 x 243,8 cm)

☐ **x1**
48" x 96"
(121,9 x 243,8 cm)

Floor panels are 5/8" (1,6 cm) thick.

NAIL BOXES

☐ **x1** BOXES
3" (7,6 cm)

☐ **x4** BOXES
2" (5,1 cm)

FASTENER/HARDWARE BAG
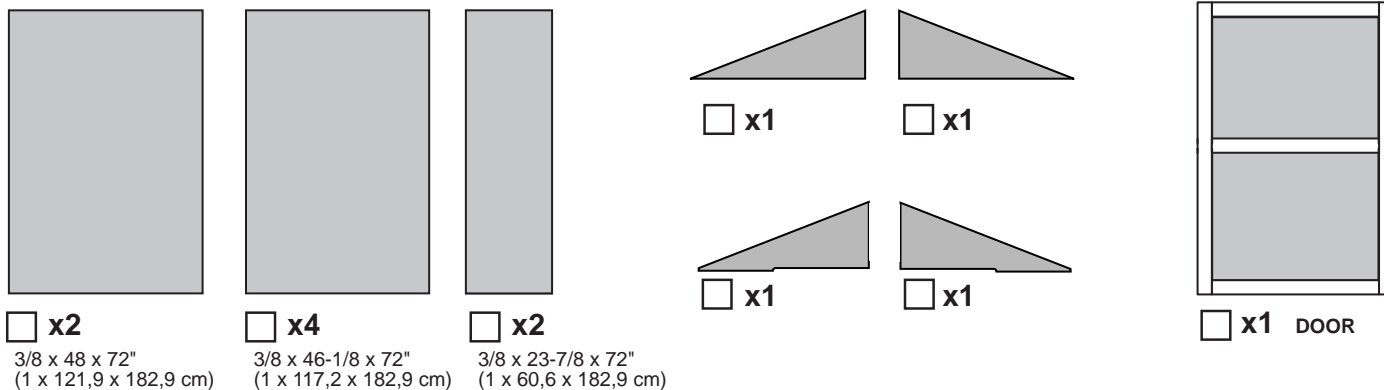
☐ **x107**
1-1/2" (3,8 cm)

☐ **x73**
2" (5,1 cm)

☐ **x24** ⊕
3" (7,6 cm)

☐ **x13** ⊕
2" (5,1 cm)

☐ **x42** ⊕
1-1/4" (3,2 cm)

☐ **x25** ⊕
3/4" (1,9 cm)
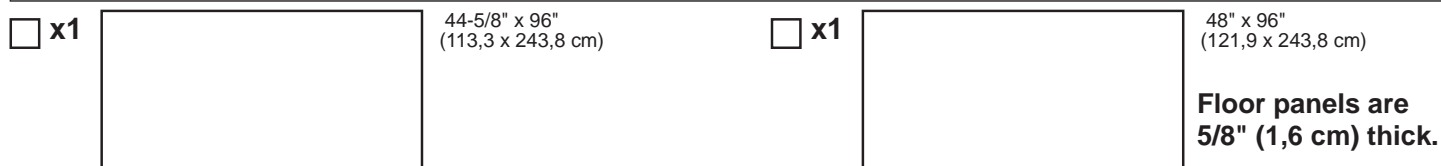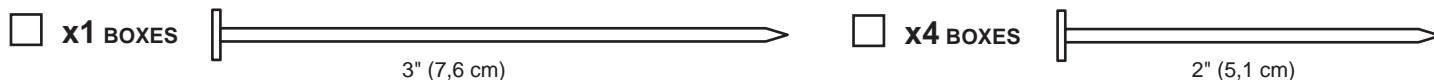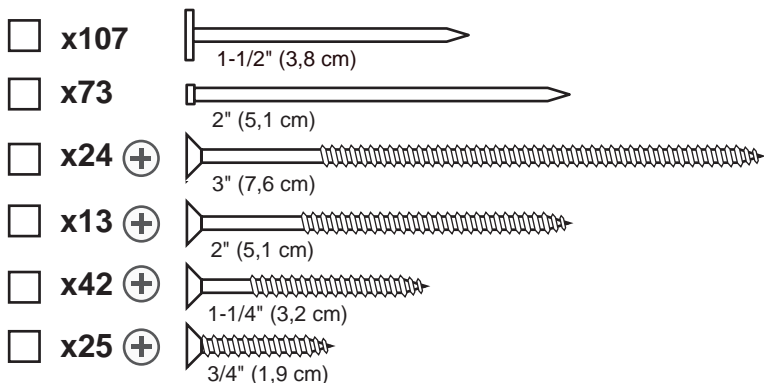
NOTE:
If you are using a nail gun, nails may be used where screws are shown for quicker assembly. Length of nail must match screw length.

DOOR HARDWARE

☐ **x3**
1-1/2"
(3,8 cm)

☐ **x3**
x3 Sets

☐ **x4**

☐ **x7**
3/4" (1,9 cm)

☐ **x3**

☐ **x5**
1" (2,5 cm)

☐ **x7**
2-1/2" (6,4 cm)

6

FLOOR LEVELING OPTIONS

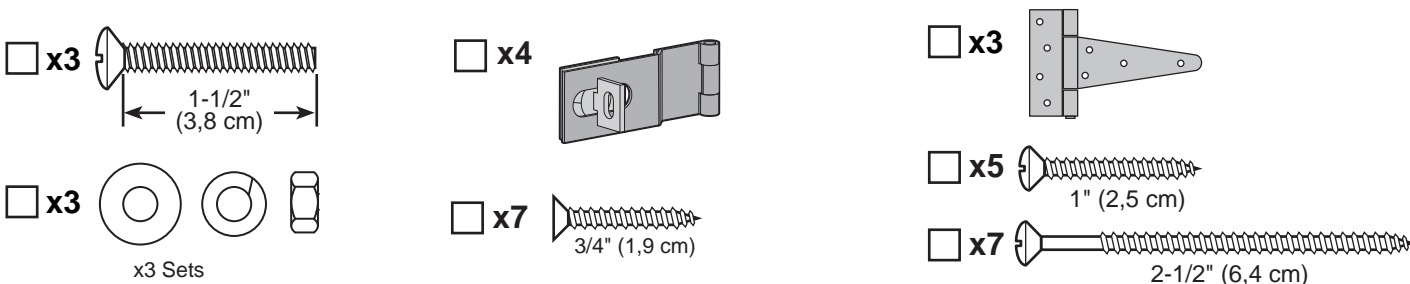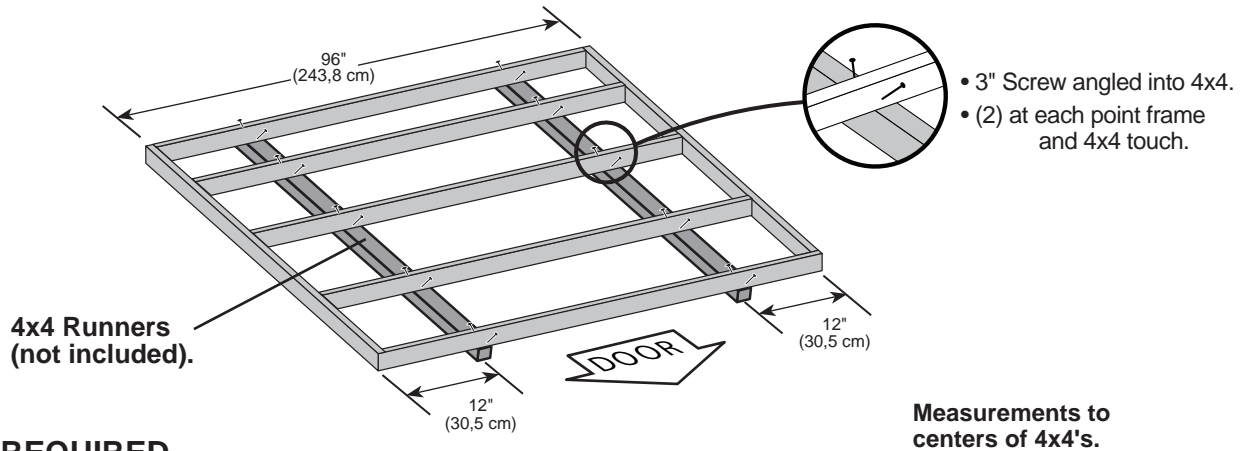There are multiple ways to level your floor frame. Our recommended leveling method is shown below.
Leveling materials are not included in this kit.
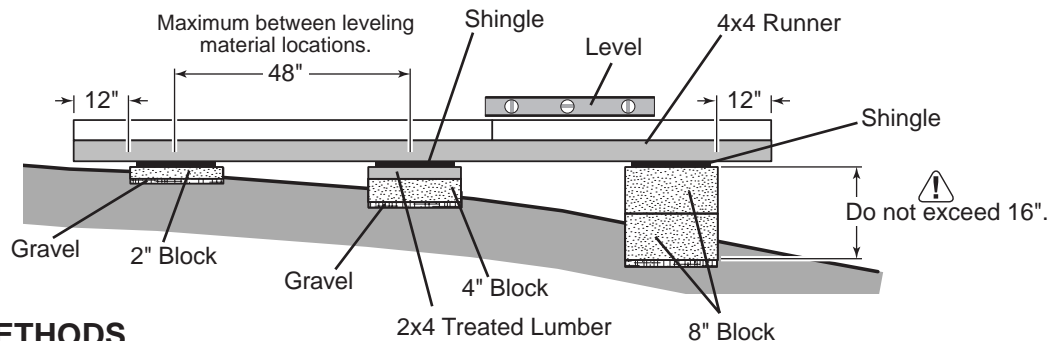
PREFERRED METHOD - 4x4 TREATED RUNNERS

96"
(243,8 cm)

• 3" Screw angled into 4x4.
• (2) at each point frame and 4x4 touch.

4x4 Runners (not included).

12"
(30,5 cm)

12"
(30,5 cm)

DOOR

Measurements to centers of 4x4's.

MATERIAL REQUIRED

☐ **x2** 4 x 4 x 8' (10,2 x 10,2 x 243,8 cm) Treated Lumber

☐ **Fasteners for Frame to 4 x 4.**
(3" Screws shown as one option.) Minimum (20) 3" screws / exterior grade.

⚠️ **Use only wood treated for ground contact and fasteners approved for use with treated wood.**

⚠️ **Always support frame seams.**

Maximum between leveling material locations.

Shingle

Level

4x4 Runner

48"

12"

12"

Shingle

Gravel

2" Block

Gravel

4" Block

Do not exceed 16".

2x4 Treated Lumber

8" Block

LEVELING METHODS

- Level under 4x4 runners only.
- Locate leveling material 12" from ends of runners and no more than 48" apart.
- Asphalt shingles should be used between 4x4 runners and blocks or treated lumber. Never use shingles in direct contact with ground.
- For best results and aiding in water drainage use gravel under each concrete block.

LEVELING MATERIALS

☐ Gravel

☐ Solid Masonry Blocks in 1", 2", 4" or 8" thickness

☐ 2x4 Treated Lumber

☐ Asphalt Shingles

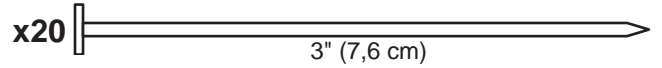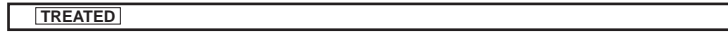⚠️ **Leveling higher than 16" not recommended.**

CONCRETE

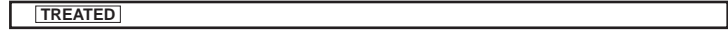- If you are building your shed on a concrete foundation see the following page.

STANDARD FLOOR FRAME

PARTS REQUIRED: **NOTE:**
Look for [TREATED] **Stamp.** **x20** |————————————————— 3" (7,6 cm)

x5 [TREATED |———————————————————] 2 x 4 x 93" (5,1 x 10,2 x 236,2 cm)

x2 [TREATED |———————————————————] 2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)
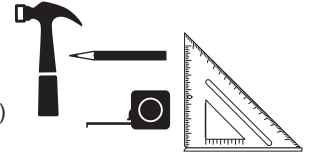
✓**BEGIN**

1 Arrange parts as shown on flat surface. Measure and mark.

Secure with (2) 3" nails at each mark and (4) nails at seams.

92-1/2"
(235 cm)

72"
(182,8 cm)

20-1/2"
(52,1 cm)

48"   24"
(121,9 cm) (60,9 cm)

HINT:
For easier nailing
stand on frame.

Center
on marks.

96"
(243,8 cm)

93"
(236,2 cm)

Flush
at ends.

DOOR

Center
on marks.

92-1/2"
(235 cm)
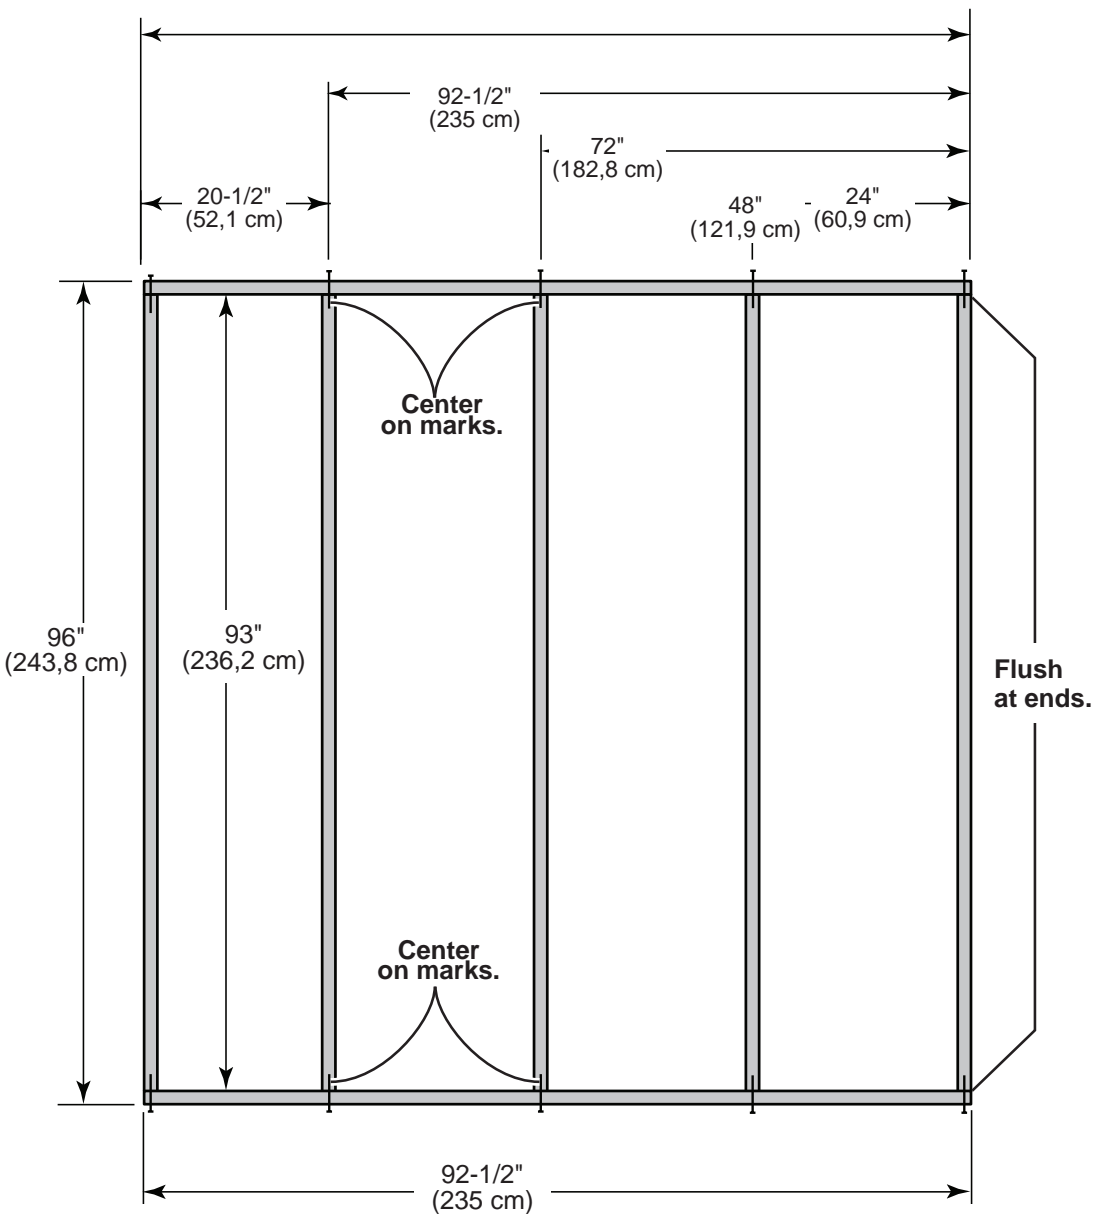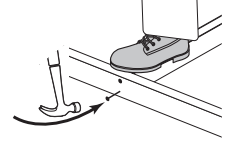
🏁**FINISH**

Your floor frame is now finished. Proceed to level and square frame.

8

⚠ **LEVEL AND SQUARE FLOOR FRAME** ⚠

Before attaching floor decking, it is important to level and square the floor frame.

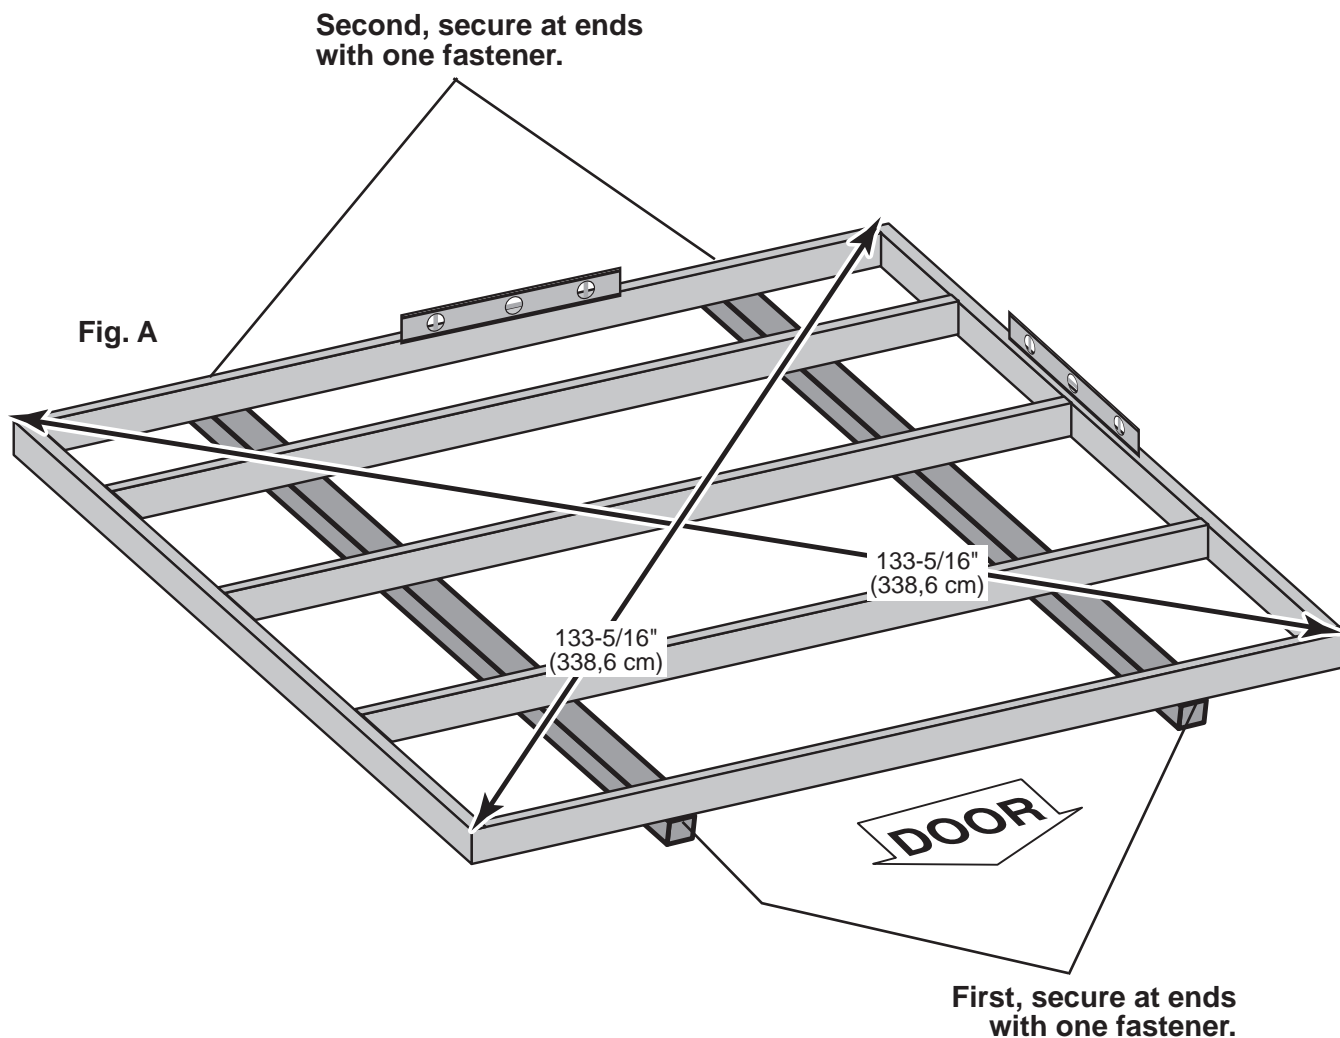A level and square floor frame is required to correctly construct your shed.

✓**BEGIN**

1 ⚠ See page 7 for the preferred floor leveling method.

2 Use level and check the frame is level before applying floor panels.

3 Check for frame squareness by measuring diagonally across corners. If the measurements are the same, the frame is square. The diagonal measurement will be approximately 133-5/16" (338,6 cm).

4 When the frame is level and square secure one side of frame to the 4x4 runners using one fastener at ends of each runner. At the opposite end of the frame, secure the frame to 4x4 runners with one fastener at ends of each runner making sure the frame remains square **(Fig. A)**.

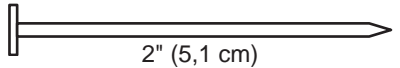🏁**FINISH**

Once the floor frame is level and square fasten the frame at each point where the frame contacts the 4x4 runners.

Second, secure at ends with one fastener.

Fig. A

133-5/16"
(338,6 cm)

133-5/16"
(338,6 cm)

DOOR

First, secure at ends with one fastener.

FLOOR PANELS

PARTS REQUIRED:

x1

5/8 x 48 x 96"
(1,6 x 121,9 x 243,8 cm)

x53 2" (5,1 cm)

Install all floor panels with the rough side (painted grid lines) facing up.

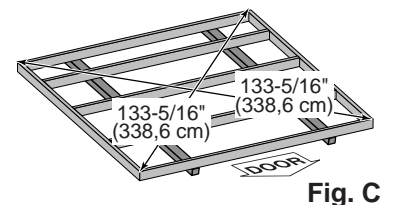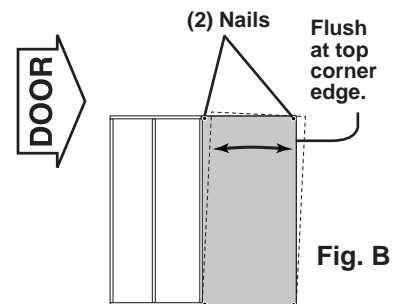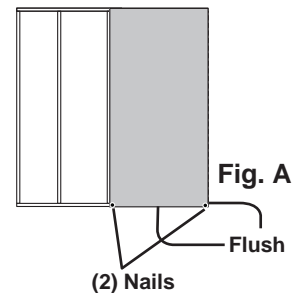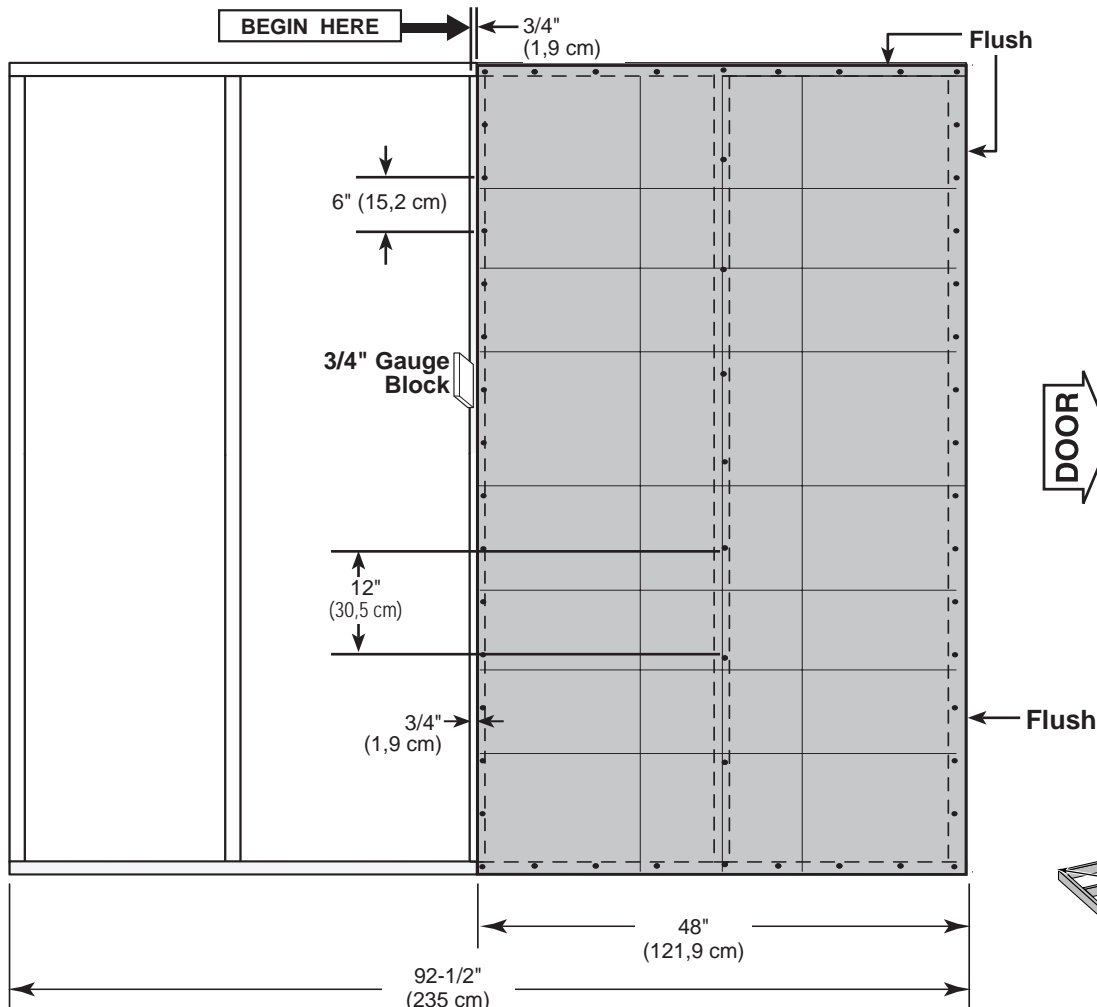⚠ **Ensure your floor frame is square by installing one panel and squaring frame.**

✓**BEGIN**

1 Place the **48" x 96"** panel with the 48" edge and corner flush to the floor frame **(Fig A)**.
Secure panel with (2) 2" nails in the corners.

2 Move to the opposite side. Using the long edge of the panel as a lever, move the panel side-to-side until the corner is flush to the floor frame **(Fig. B)**. Use the gauge block to ensure 3/4" on the joist.
Secure panel with (2) 2" nails in the corners.

3 Ensure that the floor frame is square by measuring diagonally across the frame corners. If the measurements are the same, your floor frame is square. The measurement will be approximately 133-5/16" (338,6 cm).

4 Secure the panel with 2" nails spaced 6" apart on edges and 12" apart inside panel.
Use a chalk line or use pre-painted grid lines to locate joists.
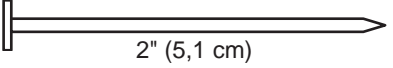
For squareness maintain 3/4" measurement along panel edge. ⚠

BEGIN HERE ➡ 3/4" (1,9 cm)

Flush

6" (15,2 cm)

3/4" Gauge Block

Fig. A

Flush

(2) Nails

(2) Nails

Flush at top corner edge.

DOOR

Fig. B

12" (30,5 cm)

3/4" (1,9 cm)

Flush

48" (121,9 cm)

92-1/2" (235 cm)

133-5/16" (338,6 cm)

133-5/16" (338,6 cm)

DOOR

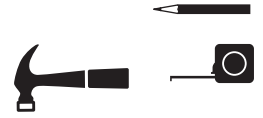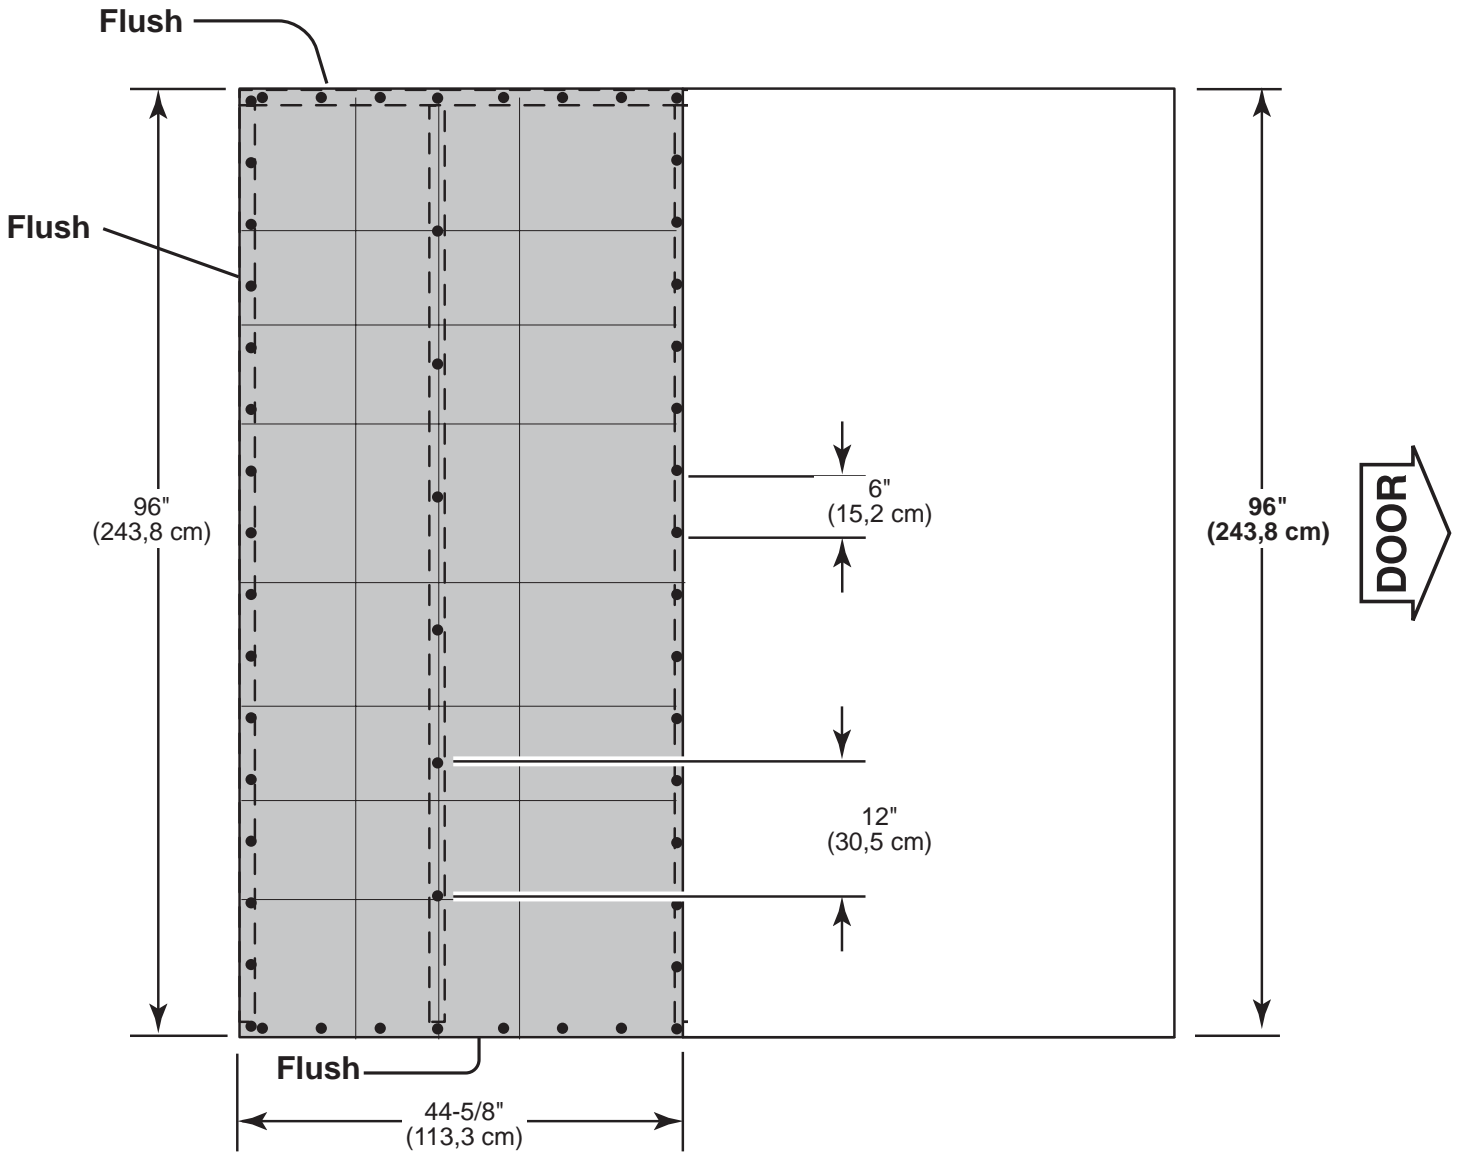**Fig. C**

FLOOR PANELS

PARTS REQUIRED:

x53

2" (5,1 cm)

x1

5/8 x 44-5/8 x 96"
(1,6 x 113,3 x 243,8 cm)

5 Place the **44-5/8 x 96"** panel with the 48" edge and corner flush to the floor frame **(Fig A)**.
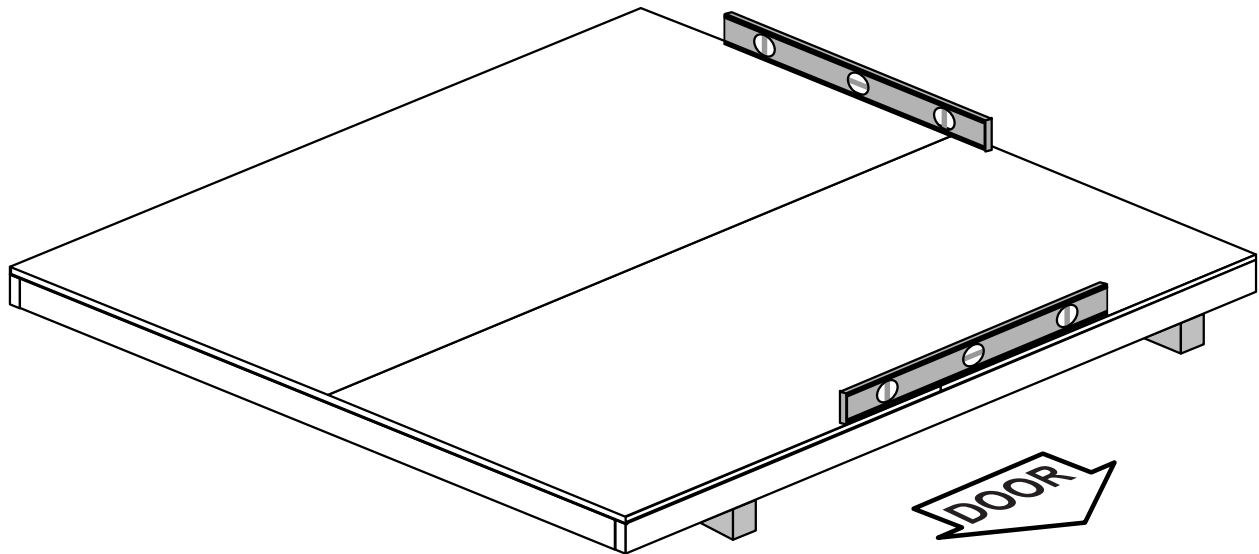Secure panel with (2) 2" nails in the corners.

Flush

Flush

96"
(243,8 cm)

6"
(15,2 cm)

96"
(243,8 cm)

DOOR

12"
(30,5 cm)

Flush

44-5/8"
(113,3 cm)

FINISH

Your floor panels are now installed.

STOP! **Check the floor frame for level after installing floor panels.
Re-level if needed.**

DOOR

HINT: • **The floor should be used as a stable work surface for wall construction.**

• **Organize your assembly procedure during the build process
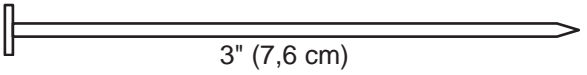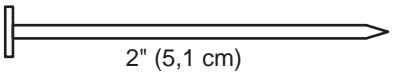to avoid over-handling of the walls.**

BACK WALL

SIDE WALL

DOOR

SIDE WALL

FRONT WALL
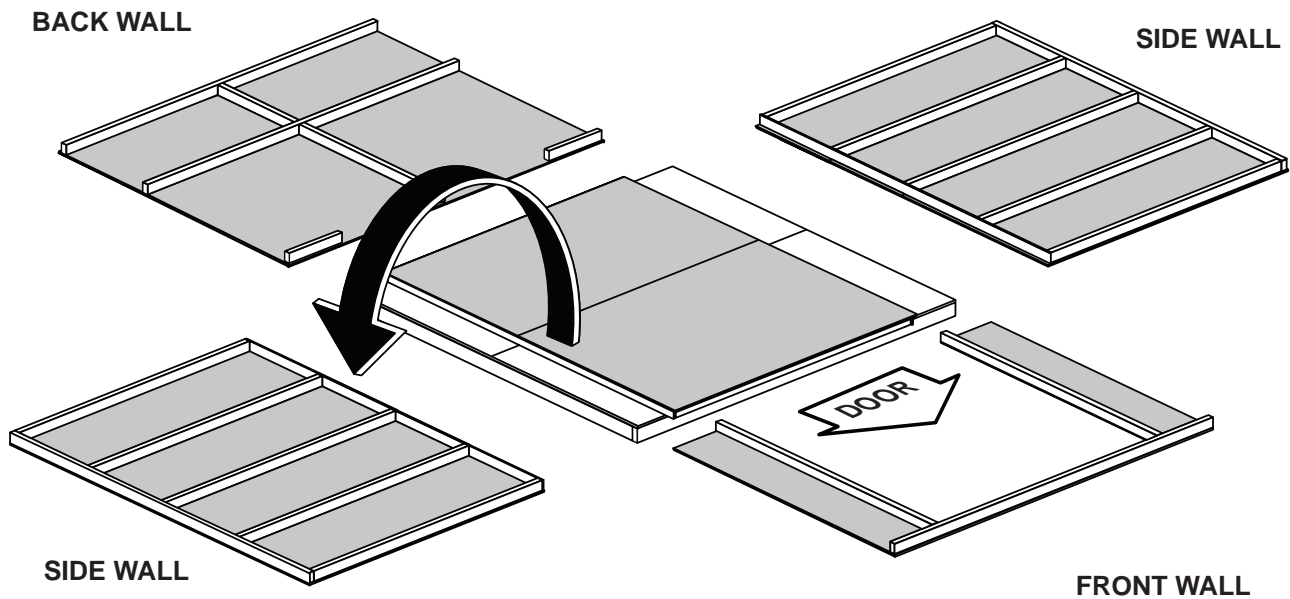
SIDE WALL FRAMES

PARTS REQUIRED:

x20 3" (7,6 cm)

x10 CJ
2 x 3 x 67-3/8" (5,1 x 7,6 x 171,1 cm)

x20 2" (5,1 cm)

x2 PM
2 x 3 x 92-5/8" (5,1 x 7,6 x 235,3 cm)

x2
5/8 x 2-1/2 x 92-5/8" (1,6 x 6,4 x 235,3 cm)
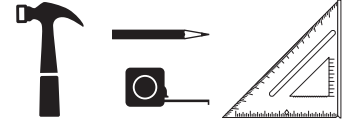
IMPORTANT! You will build two walls the same.

✓**BEGIN**

1 Arrange parts on edge on floor. Measure and mark from end of boards.
Secure with (2) 3" nails at each mark at top plate and (2) 2" nails at bottom plate.
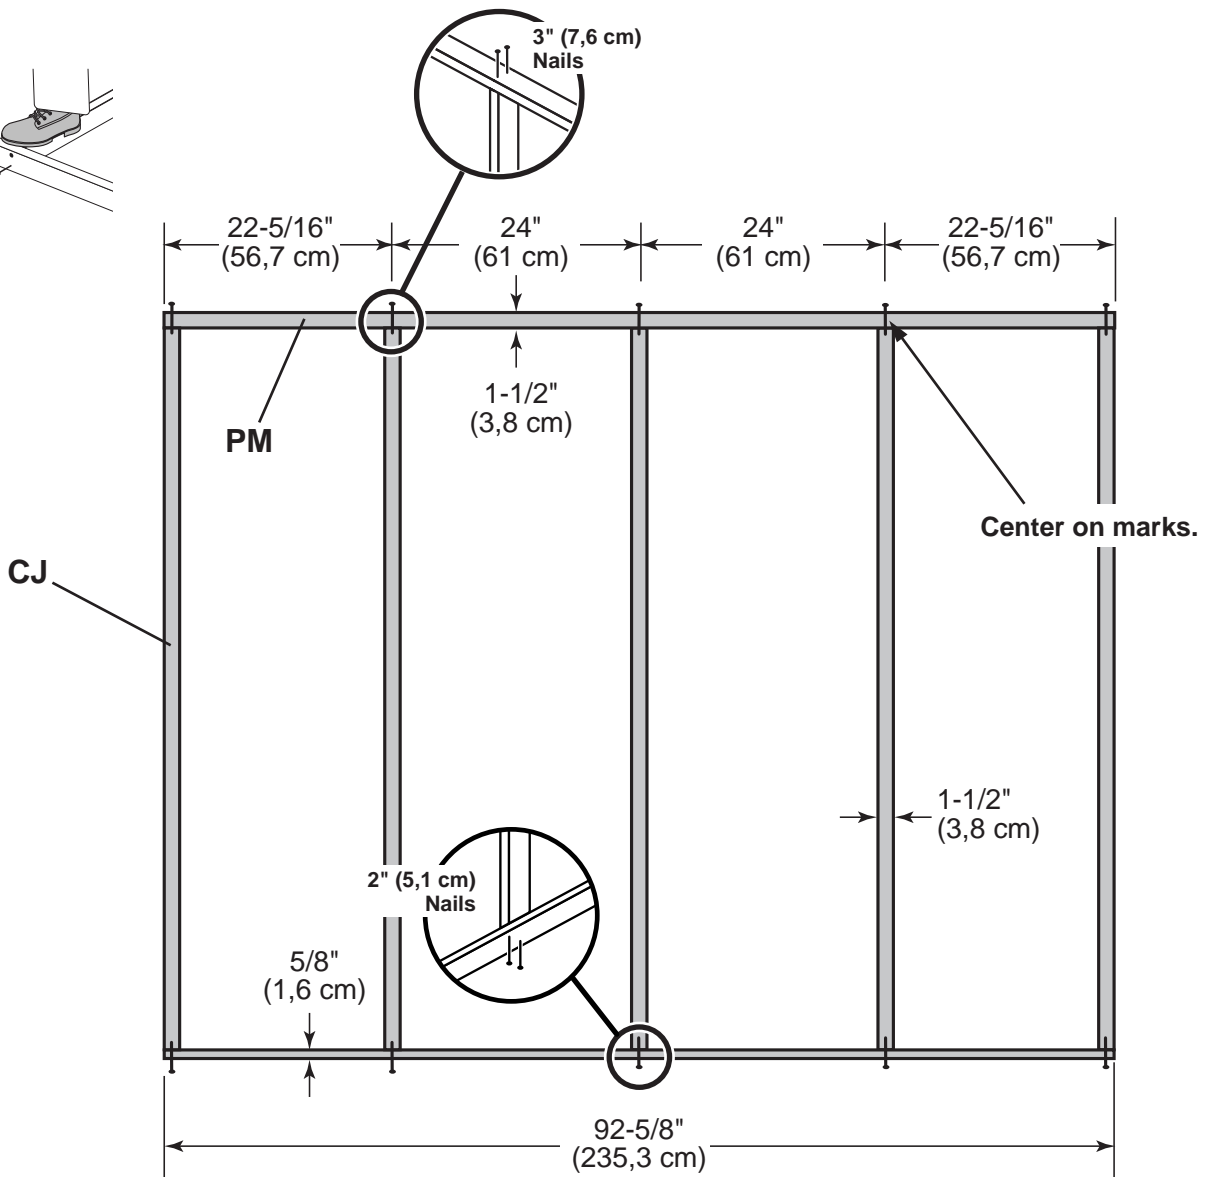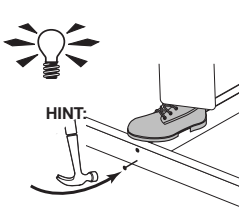
HINT:

3" (7,6 cm) Nails

22-5/16" (56,7 cm)   24" (61 cm)   24" (61 cm)   22-5/16" (56,7 cm)

1-1/2" (3,8 cm)

PM

Center on marks.

CJ

1-1/2" (3,8 cm)

2" (5,1 cm) Nails

5/8" (1,6 cm)

92-5/8" (235,3 cm)

SIDE WALL PANELS

PARTS REQUIRED:

x1 3/8 x 46-1/8 x 72"
(1 x 117,2 x 182,9 cm)

x1 RK 2 x 3 x 13" (5,1 x 7,6 x 33 cm)
TEMPORARY SPACER

GAA
3/4" GAUGE BLOCK

x90 2" (5,1 cm)

Install all wall panels with the primed side facing up.

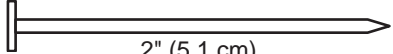⚠ **Ensure your wall frame is square by installing one panel and squaring frame.**

3 Place (1) **46-1/8 x 72"** panel onto wall frame, as shown.

Ensure a 3/4" measurement along the wall stud and locate the panel to 1-1/2" above top plate.
Secure panel with (2) 2" nails in the corners **(Fig. A)**.

4 Move to the opposite end. Using the long edge of the panel as a lever move the panel side-to-side
until you have a 3/4" measurement on the wall stud. Secure corner with (2) 2" nails **(Fig. B)**.

5 Secure the panel with 2" nails spaced 6" apart on edges and 12" apart inside panel.

**For squareness maintain 3/4" and 1-1/2"
measurement along stud.**

⚠ **BEGIN HERE** ➡

Use RK as gauge block.

3/4"
(1,9 cm)

1-1/2"
(3,8 cm)

2 Nails

3/4" Gauge Block

6" (15,1 cm)

12" (30,2 cm)

3/4"
(1,9 cm)

Fig. A

3/4"
(1,9 cm)

3/4"
(1,9 cm)

46-1/8"
(117,2 cm)

2 Nails

Fig. B

14

SIDE WALL PANELS

PARTS REQUIRED:

x90 2" (5,1 cm)

x1 | RK | 2 x 3 x 13" (5,1 x 7,6 x 33 cm)
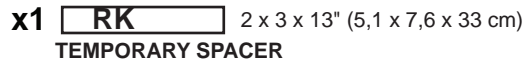**TEMPORARY SPACER**

x1 3/8" x 46-1/8" x 72"
(1 x 117,2 x 182,9 cm)
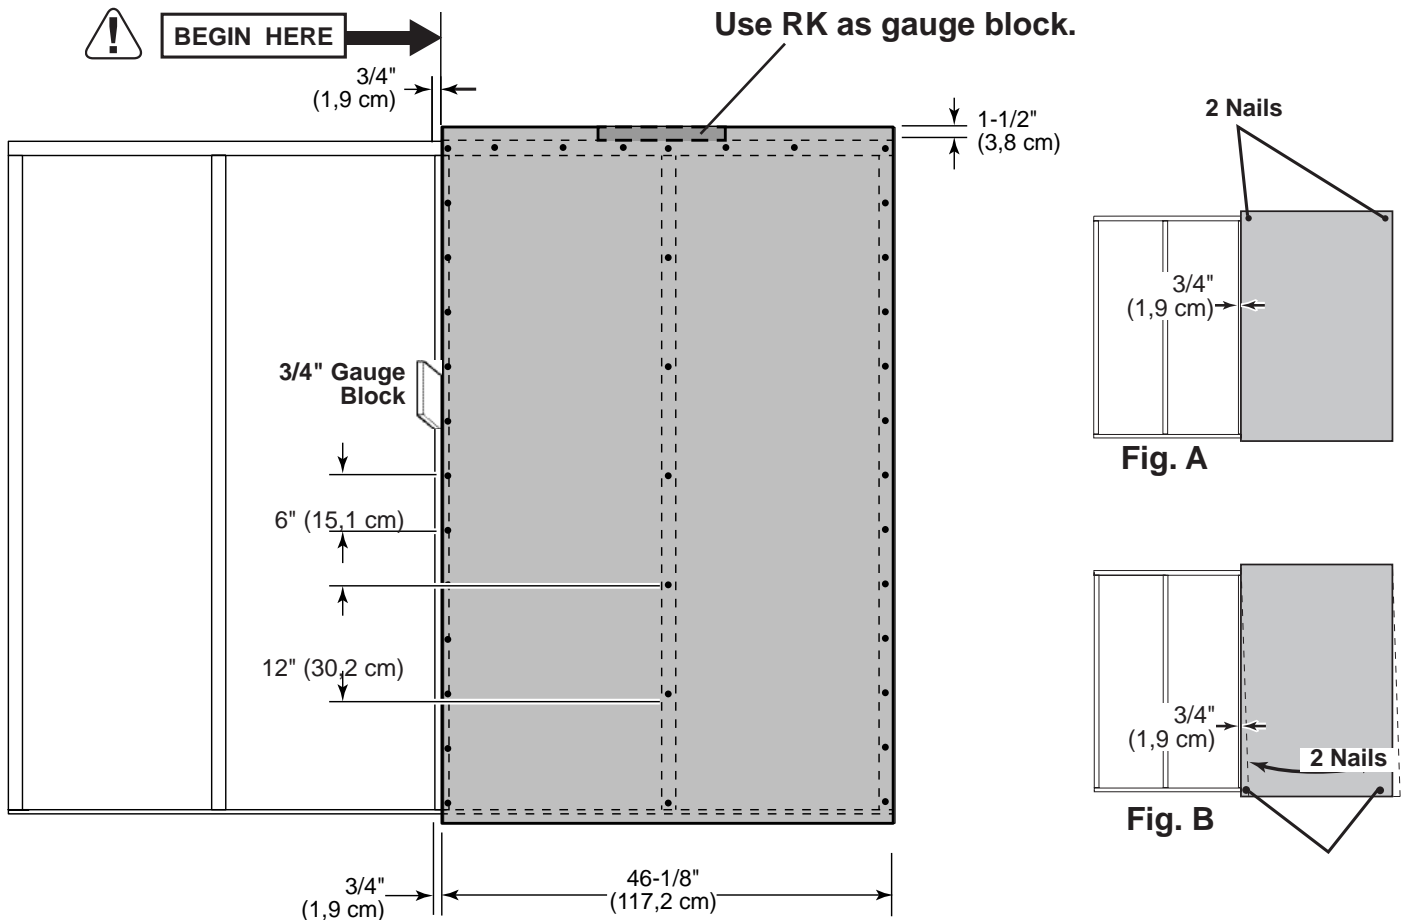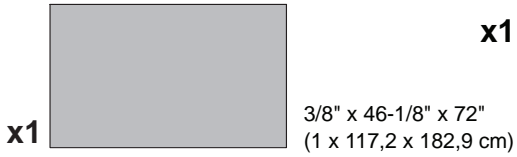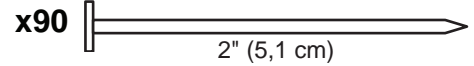
6 Place (1) **46-1/8 x 72"** panel on frame flush to installed panel.
Secure with 2" nails spaced 6" apart on edges and 12" apart inside panel.

Carefully flip your side wall over.

Repeat steps to assemble your second side wall.

Use RK as a gauge block.

To draw panels tight at seams, angle nail.

Flush

1-1/2"
(3,8 cm)

12" (30,2 cm)

6" (15,1 cm)

46-1/8"
(117,2 cm)
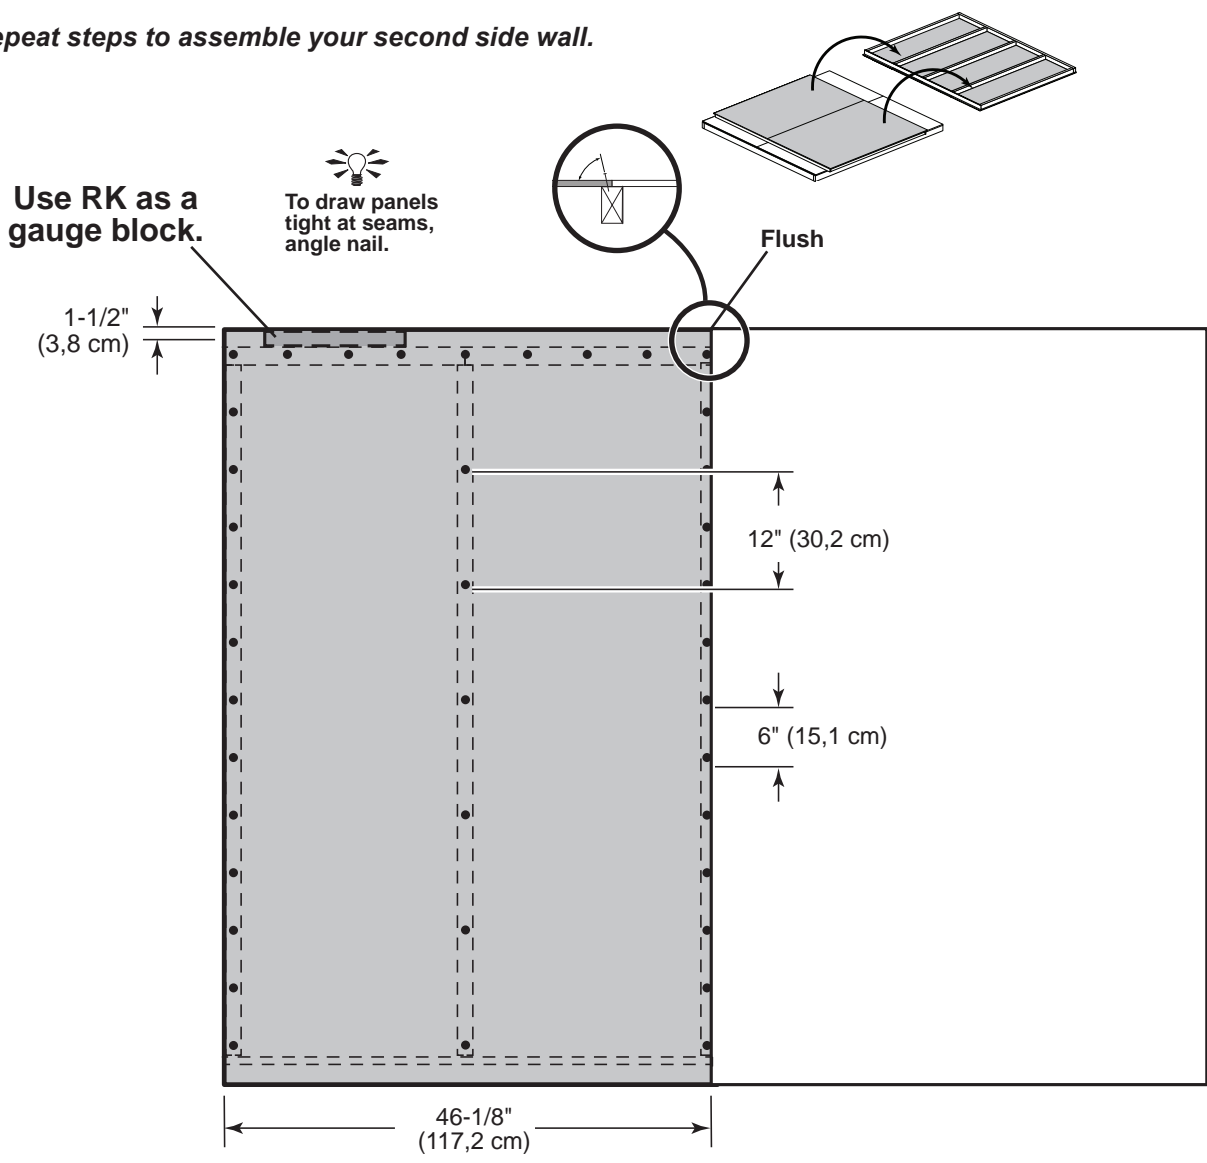
FINISH
You (2) side walls are now assembled.

15

BACK WALL FRAME

PARTS REQUIRED:

x1 | CI
2 x 3 x 34" (5,1 x 7,6 x 86,4 cm)

x1 | PS
2 x 3 x 91 " (5,1 x 7,6 x 231,1 cm)

x3 | GUSSET
TEMPORARY SUPPORT

x3 | 3" (7,6 cm)
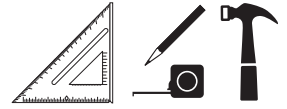
√BEGIN

1 Place **CI** on flat side. Use (3) gussets stacked under **CI** as support.

2 Center **PS** on **CI** on edge on floor as shown.
Secure parts with (2) 3" nails.

HINT:

91"
(231,1 cm)

45-1/2"
(115,6 cm)

45-1/2"
(115,6 cm)

**3" (7,6 cm)
Nails**

PS

1-1/2"
(3,8 cm)

34"
(86,4 cm)

GUSSET

CI

2-1/2"
(6,4 cm)

PS

2-1/2"
(6,4 cm)

Flush

**(2) 3" (7,6 cm
Nails**

1-1/2
(3,8 cm)
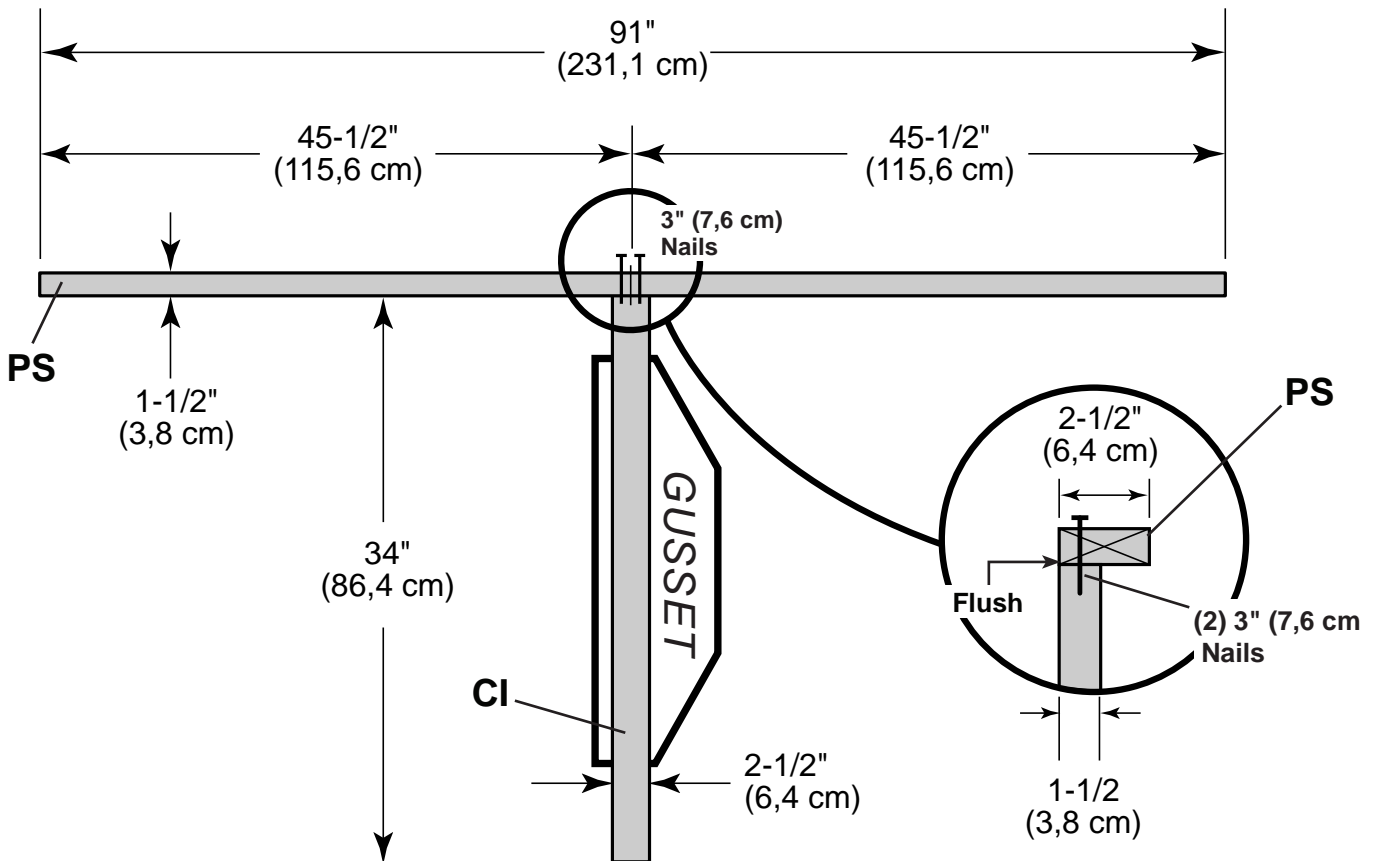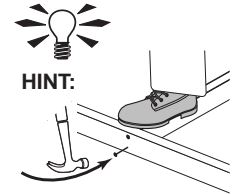
BACK WALL FRAME

PARTS REQUIRED:

x1 | CI
2 x 3 x 34" (5,1 x 7,6 x 86,4 cm)

x1 | PT
2 x 3 x 96" (5,1 x 7,6 x 243,8 cm)

x2 —— 3" (7,6 cm)

x2 —— 3" (7,6 cm)

x3 GUSSET
TEMPORARY SUPPORT
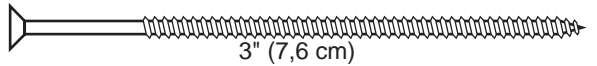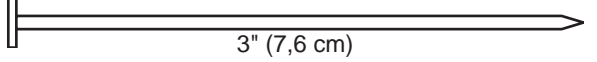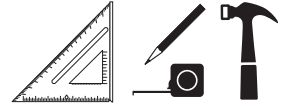
3 Center **CI** on **PS** on flat side. Use (3) gussets stacked under **CI** as support.

4 Center **PT** on **CI** on edge on floor as shown.
Secure **PT** to **CI** with (2) 3" nails **(Fig. A)**.

5 At the middle connection, connect **PS** to **CI** with (2) 3" screws angled **(Fig. B)**.

96"
(243,8 cm)

48"
(121,9 cm)

48"
(121,9 cm)

3" (7,6 cm)
Nails

PT

Fig. A

2-1/2"
(6,4 cm)

1-1/2"
(3,8 cm)

2-1/2"
(6,4 cm)

3" (7,6 cm)
Nails

Flush

GUSSET

34"
(86,4 cm)

Fig. B

1-1/2
(3,8 cm)

CI

3" (7,6 cm)
Screws

PS
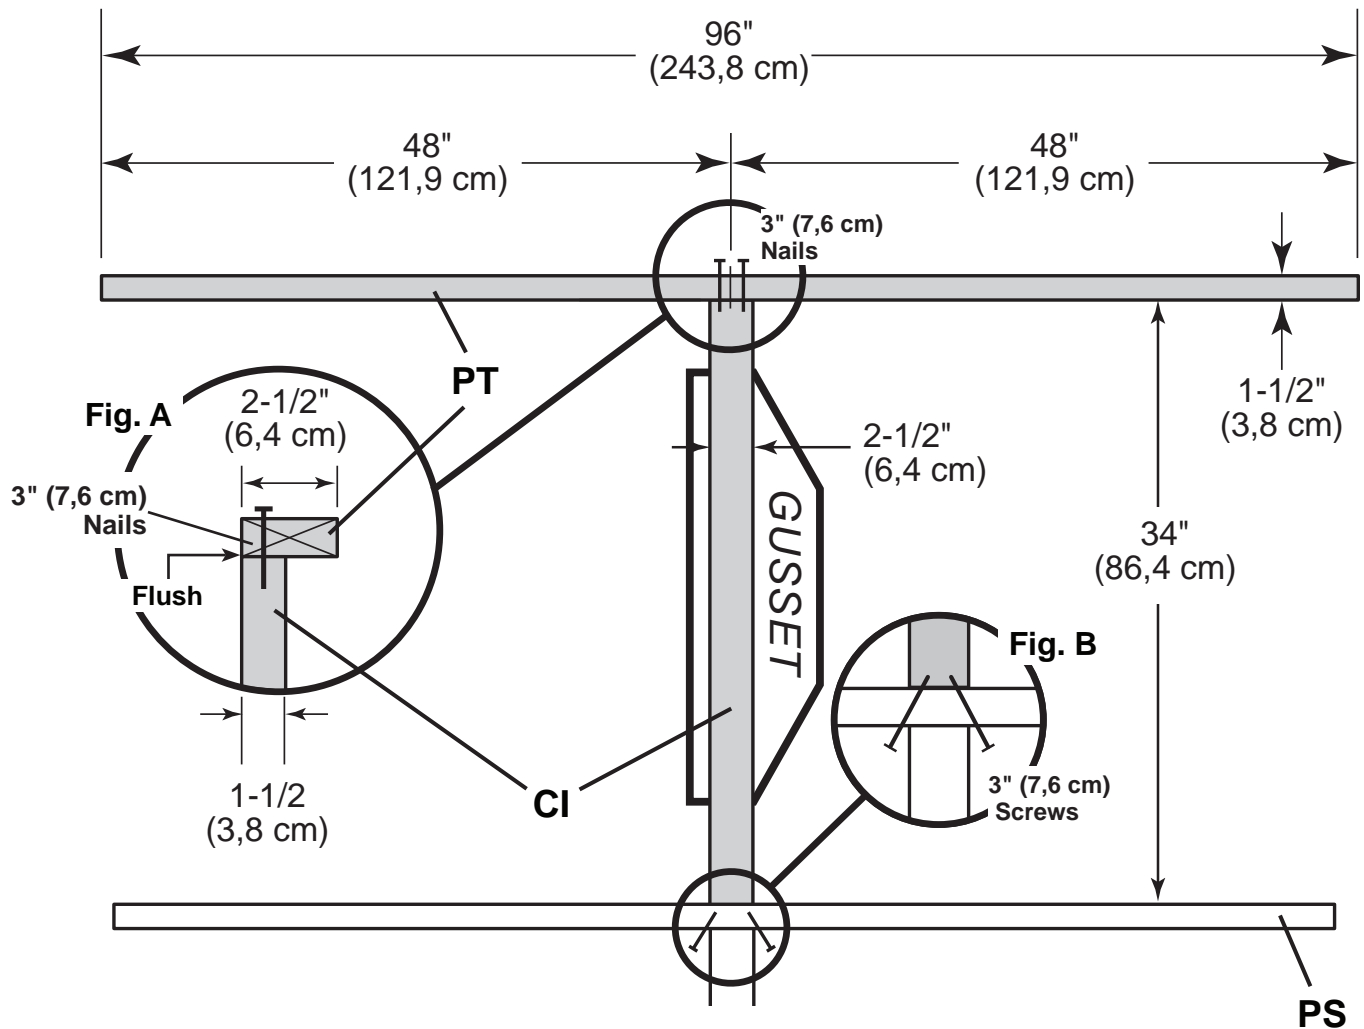
FINISH
Your back wall frame is now finished.

BACK WALL PANELS

PARTS REQUIRED:

x1   3/8 x 48 x 72"
(1 x 121,9 x 182,9 cm)

x11   2" (5,1 cm)

x11   1-1/2" (3,8 cm)
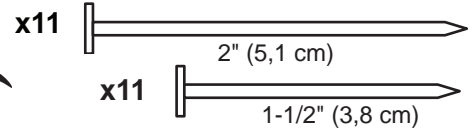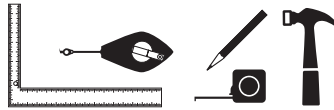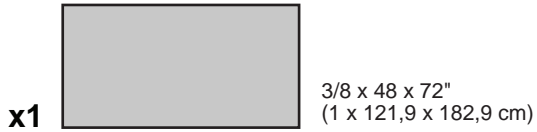
Install all wall panels with the primed side up.

✓**BEGIN**

1 Place left panel on back frame, as shown.

2 Secure horizontal framing with 2" nails spaced 6" apart on edges and 12" apart inside panel.

3 Secure vertical framing with 1-1/2" nails spaced 6" apart on edges.

! **For squareness maintain flush at top and 1-1/4" measurement along panel edges.**

2" (5,1 cm) **Nails**

Flush

1-1/4"
(3,2 cm)

! 1-1/2" Nails only in vertical framing.

34"
(86,4 cm)

12"
(30,5 cm)

6"
(15,2 cm)

2" (5,1 cm) **Nails**

2-1/2"
(6,4 cm)

! 1-1/2" Nails only in vertical framing.

34"
(86,4 cm)

1-1/4"
(3,2 cm)

1-1/2" (3,8 cm) **Nails**

1-1/4"
(3,2 cm)

BACK WALL PANELS

PARTS REQUIRED:

x11 — 2" (5,1 cm)

x11 — 1-1/2" (3,8 cm)

x1 — 3/8 x 48 x 72"
(1 x 121,9 x 182,9 cm)
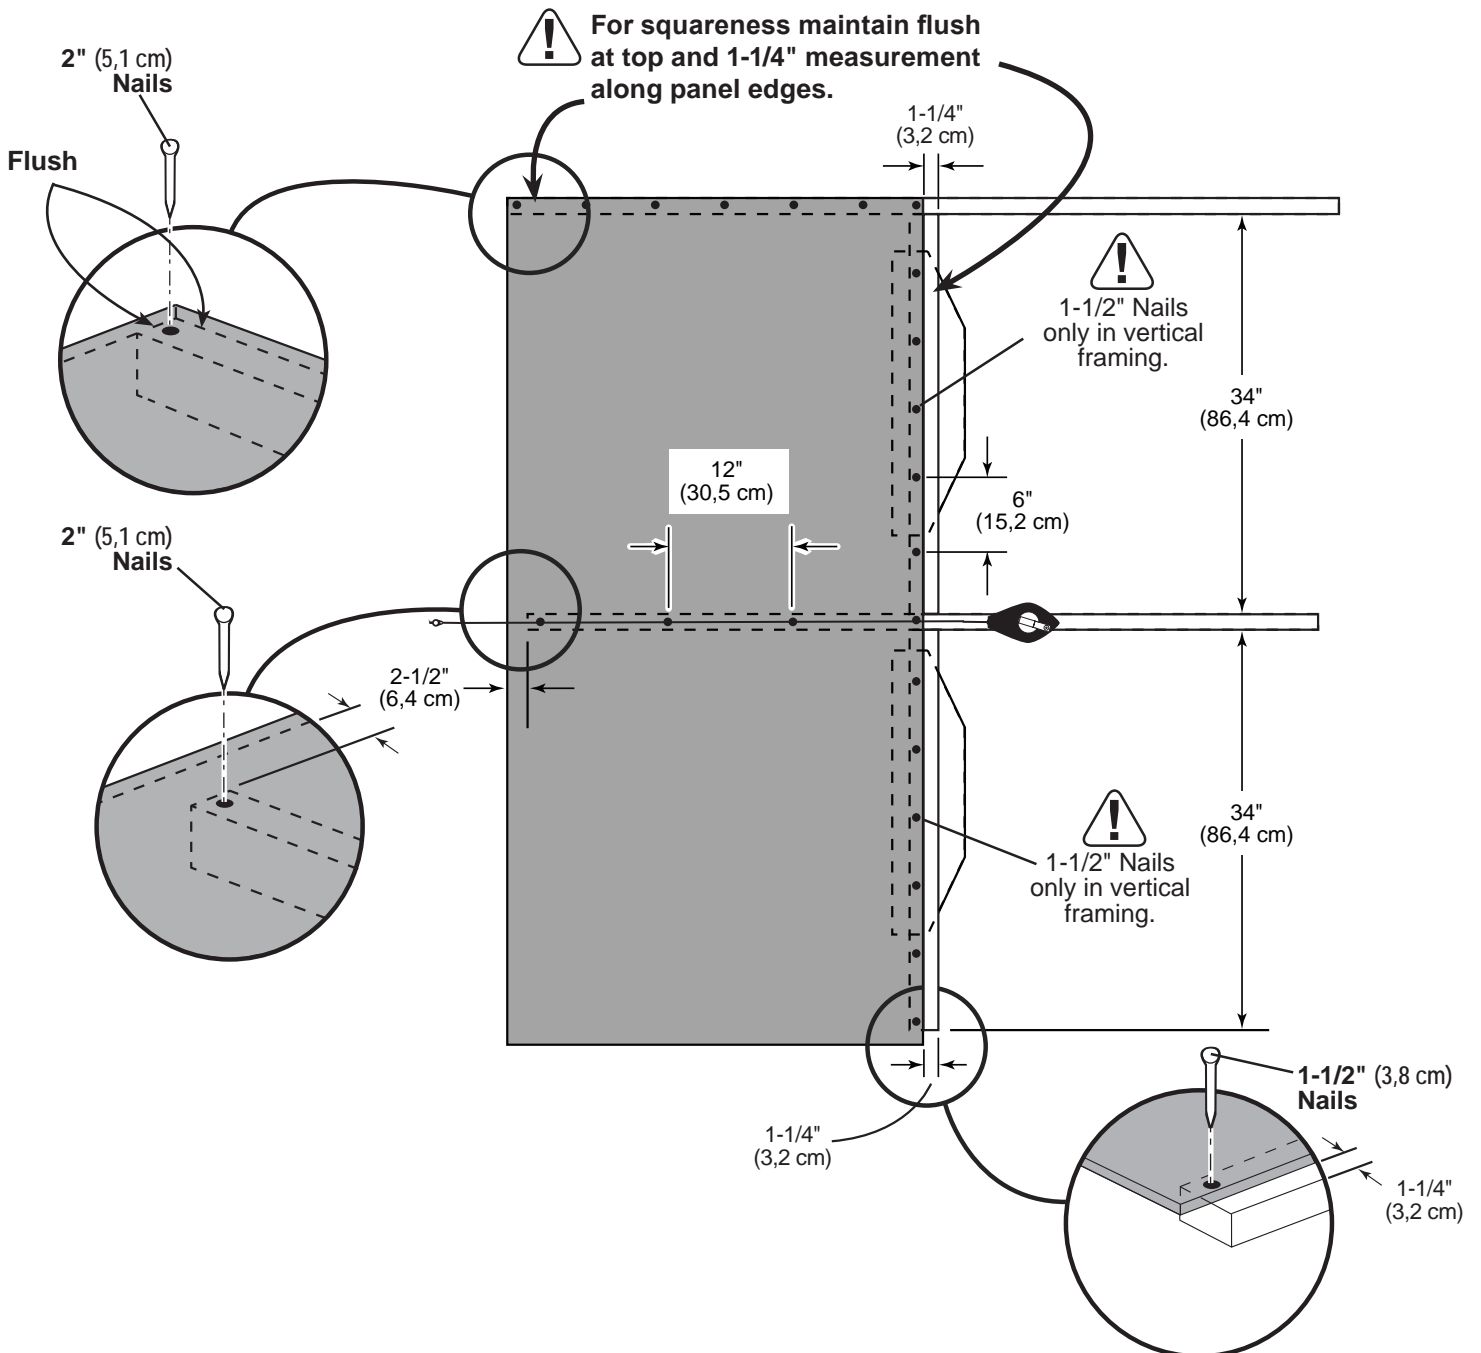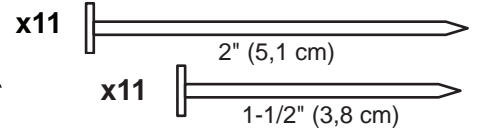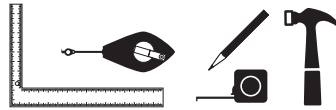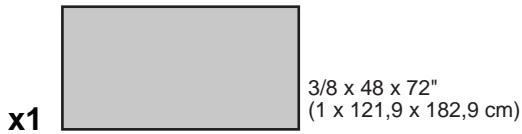
4 Install right panel flush to installed panel and flush at top.

5 Secure horizontal framing with 2" nails spaced 6" apart on edges and 12" apart inside panel.

6 Secure vertical framing with using 1-1/2" nails spaced 6" apart on edges.

1-1/4"
(3,2 cm)

Flush

2" (5,1 cm)
Nails

Flush

1-1/2" Nails
only in vertical
framing.

34"
(86,4 cm)

6"
(15,2 cm)

12"
(30,5 cm)

2" (5,1 cm)
Nails

1-1/2" Nails
only in vertical
framing.

34"
(86,4 cm)

2-1/2"
(6,4 cm)
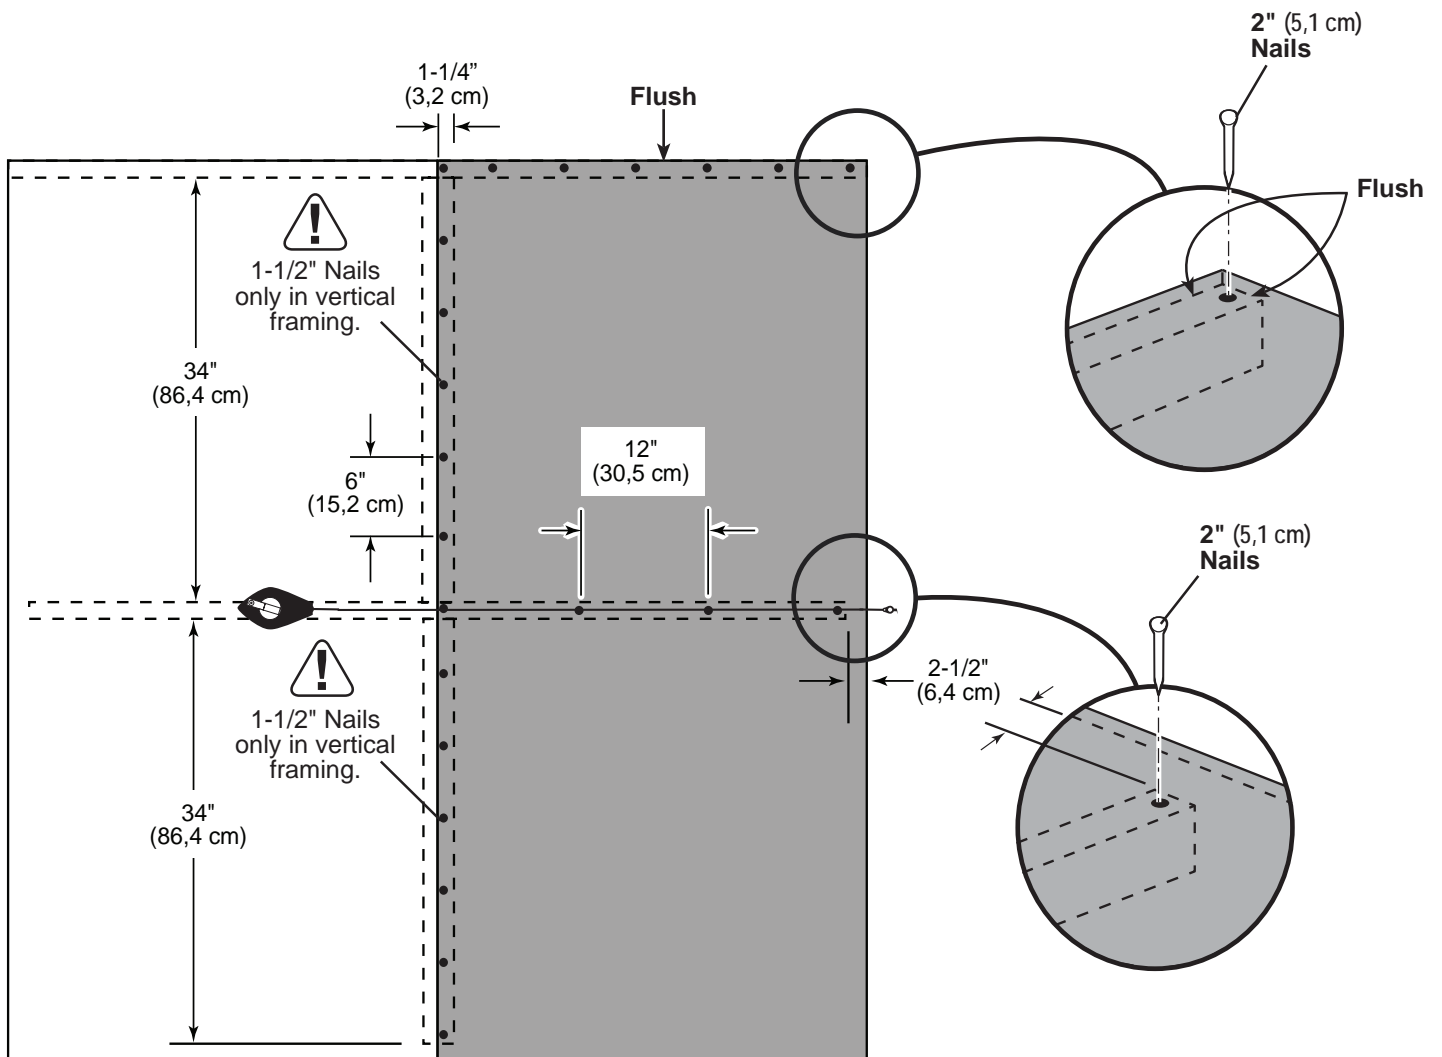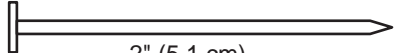
FINISH
Your back wall panels are now installed.

BACK WALL BOTTOM PLATES

PARTS REQUIRED:

x2 ☐ RK
2 x 3 x 13" (5,1 x 7,6 x 33 cm)

x6 ▭━━━━━━━►
2" (5,1 cm)

√BEGIN

1 Position **RK** on edge, 2-1/2" from outside edge and 1" from bottom edge of left wall panel **(Fig A)**.

Secure **RK** to wall panel with (3) 2" nails **(Fig B)**.

2-1/2"
(6,4 cm)

**2" (5,1,cm)
Nails**

1"
(2,5 cm)

1"
(2,5 cm)

2-1/2"
(6,4 cm)

RK

RK

2-1/2"
(6,4 cm)

**2" (5,1,cm)
Nails**

2-1/2"
(6,4 cm)

1"
(2,5 cm)

1"
(2,5 cm)

Fig A

Fig B
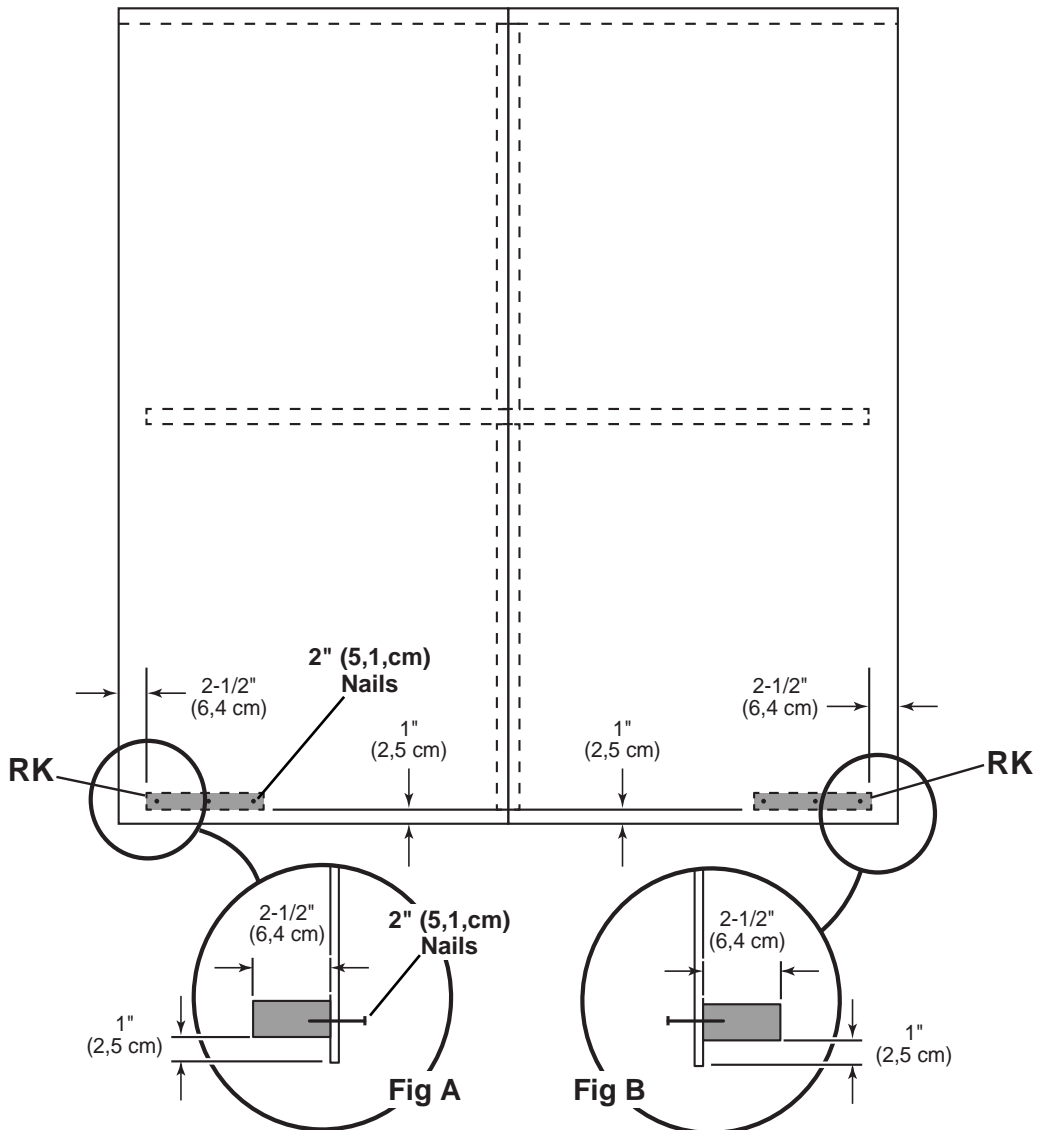
FINISH
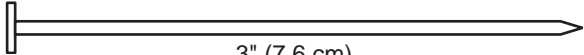
Your back wall is now complete.

FRONT WALL FRAME

PARTS REQUIRED:

x4 ▭━━━━━━━━
3" (7,6 cm)

x2 | KU |
2 x 3 x 69-1/2" (5,1 x 7,6 x 176,5 cm)

x1 | PT |
2 x 3 x 96" (5,1 x 7,6 x 243,8 cm)
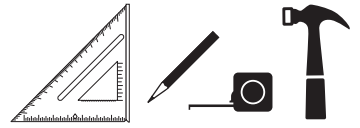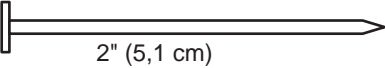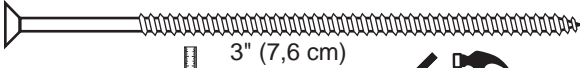
✓**BEGIN**

1 Arrange parts on edge on floor as shown.

Secure with (2) 3" nails at each connection.

HINT:

96"
(243,8 cm)

73"
(185,4 cm)

23"
(58,4 cm)

(2) 3" Nails

1-1/2"
(3,8 cm)

PT

⚠ **MAINTAIN DIMENSION BETWEEN STUDS**

48-1/2"
(123,2 cm)

69-1/2"
(176,5 cm)

KU

KU

1-1/2" →
(3,8 cm)

1-1/2" →
(3,8 cm)

48-1/2"
(123,2 cm)
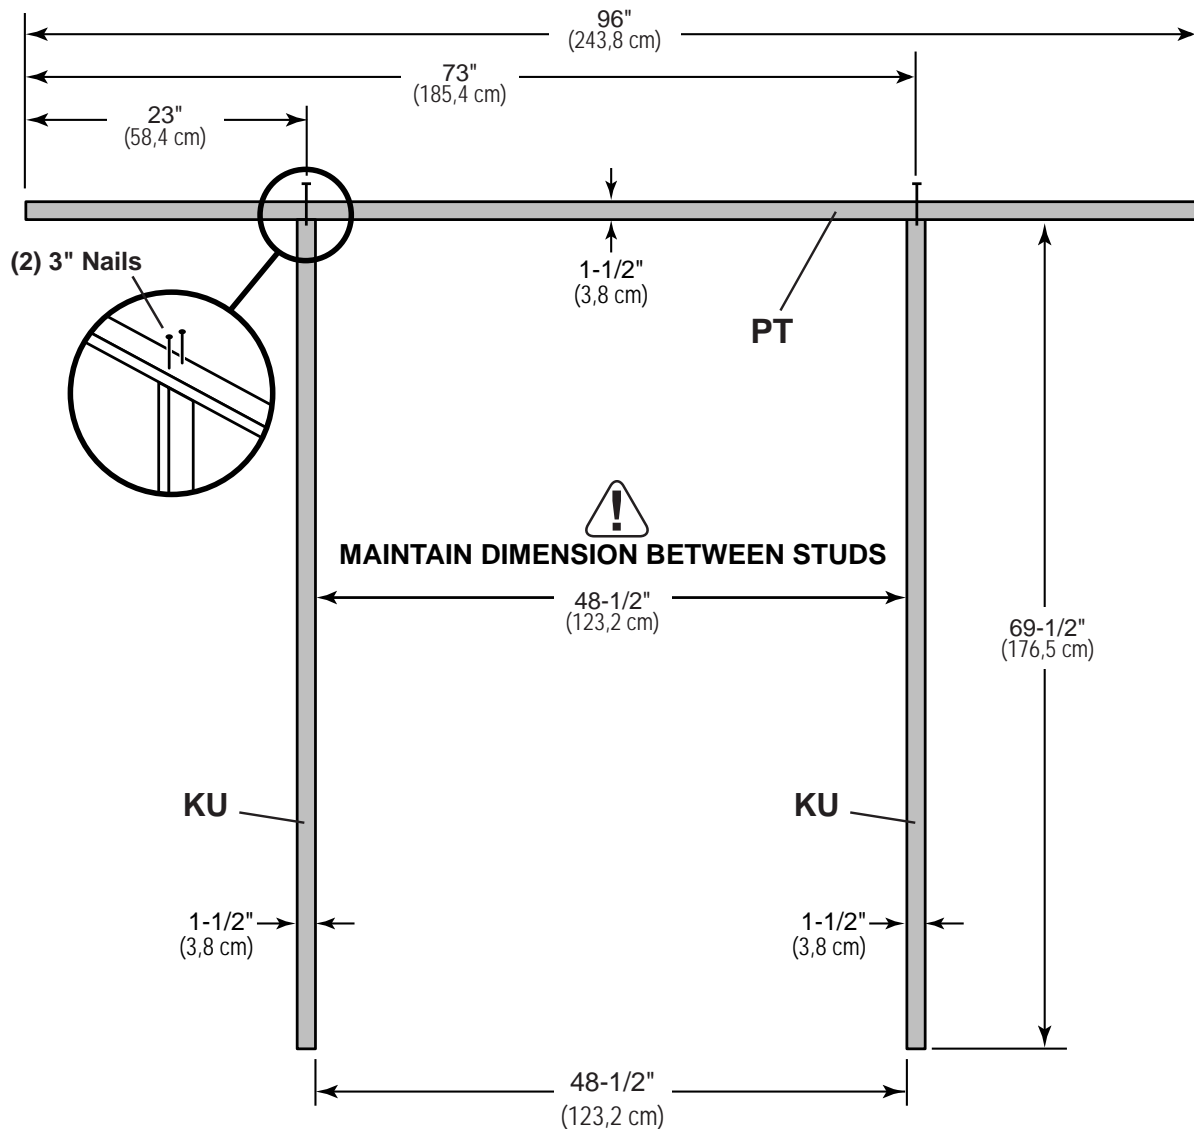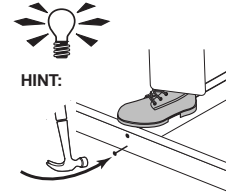
FRONT WALL PANELS

PARTS REQUIRED: **x32** |————————————————→ **x2** ◁∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭∭→
2" (5,1 cm)   3" (7,6 cm)

x2 [ ]
3/8 x 23-7/8 x 72"
(1 x 60,6 x 182,9 cm)

x1 | OO   Temporary Brace |
69" (175,3) Door Stiffener

Install all wall panels with the primed side up.

✓ **BEGIN**

1 Place left panel on front wall frame, as shown
Ensure panel has a 1" gap at bottom and is flush to inside edge.
Secure with 2" nails spaced 6" apart.
Repeat steps to install right panel.

Panels will overhang frame approx. 3/16" (4,8 mm).

6"
(15,2 cm)

6"
(15,2 cm)

MAINTAIN DIMENSION BETWEEN STUDS

48-1/2"
(123,2 cm)

←— **Flush**   **Flush** —→

3" (7,6 cm)   **3"** (7,6 cm)
Screw   **Screw**

OO *Temporary Brace*

1"
(2,5 cm)   1"
                  (2,5 cm)
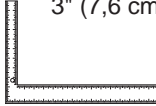
2-1/2"
(6,4 cm)   2-1/2"
                  (6,4 cm)
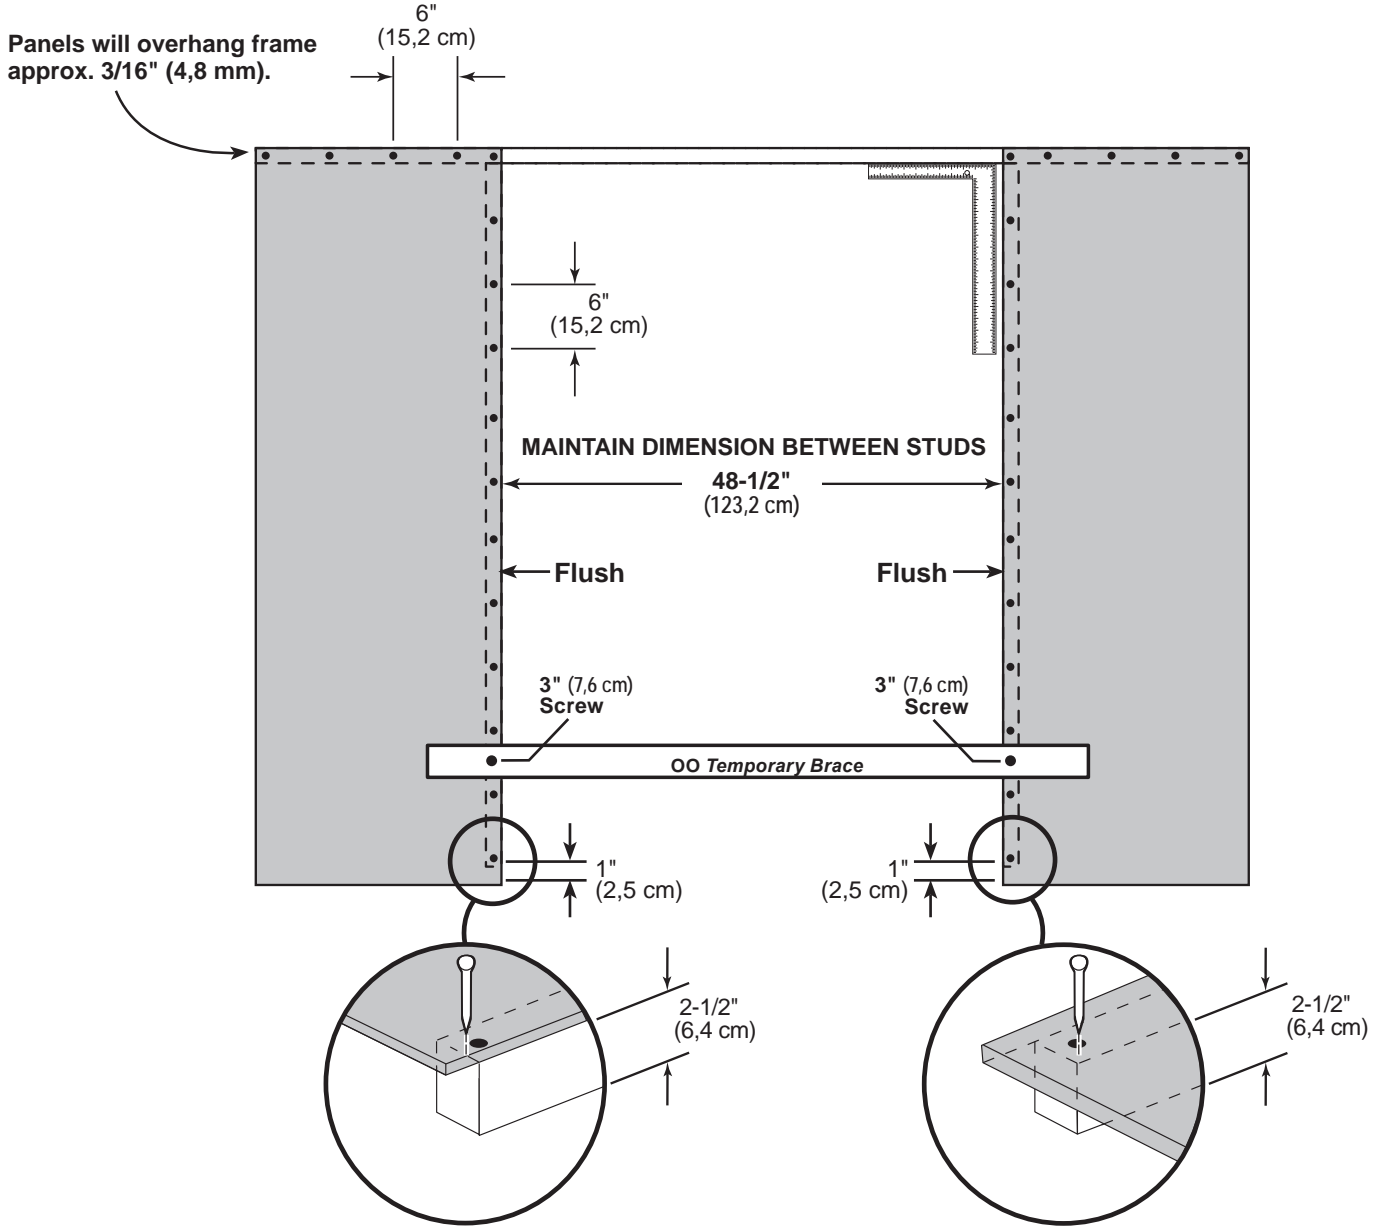
2 Install part **OO** as a temporary brace.
Secure with with (2) 3" screws.

🏁 **FINISH**

Your front wall is now complete.

22

RIGHT SIDE WALL INSTALLATION

PARTS REQUIRED:

x1 | **OO**
2 x 3 x 69" (5,1 x 7,6 x 175,3 cm)
TEMPORARY SUPPORT

x2 3" (7,6 cm)

x8 3" (7,6 cm)

x17 2" (5,1 cm)

✓**BEGIN**

1

Center side wall on the floor.
Ensure 1-1/2" measurement is at the top.

Install **OO** as a temporary brace.
Secure with (2) 3" screws.

92-1/2" (235 cm)

3" (7,6 cm) Screws

OO
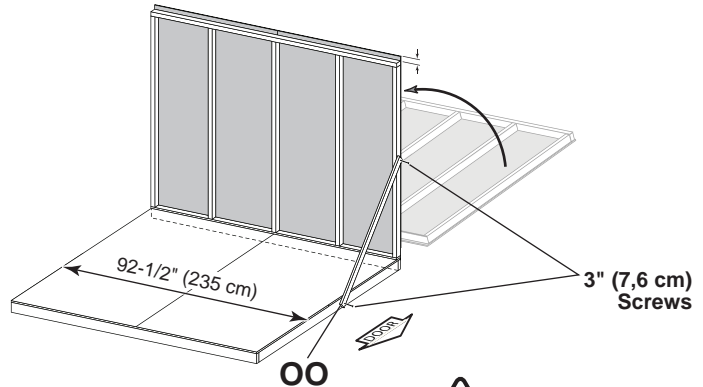
⚠ **Center wall assembly on floor.**

2

Secure lower edge of panels to floor frame
with 2" nails spaced 6" apart.
Angle nails into the floor frame **(Fig. A)**.

3

Secure wall bottom plates to floor with 3" nails **(Fig. A)**.

1-1/2"
(3,8 cm)

3" (7,6 cm) Nails

2" (5,1 cm) Nails

Fig. A

⚠ **Nail 2" nails first.**

6"
15,2 cm

Flush

2" (5,1 cm) Nail

Flush

3" Nails into bottom plate.

DOOR

🏁**FINISH**

Your right side wall is now installed

BACK WALL INSTALLATION

PARTS REQUIRED:

x18 — 2" (5,1 cm)

x11 — 1-1/2" (3,8 cm)

x2 — 2" (5,1 cm)

x4 — 3" (7,6 cm)

x8 — 3" (7,6 cm)
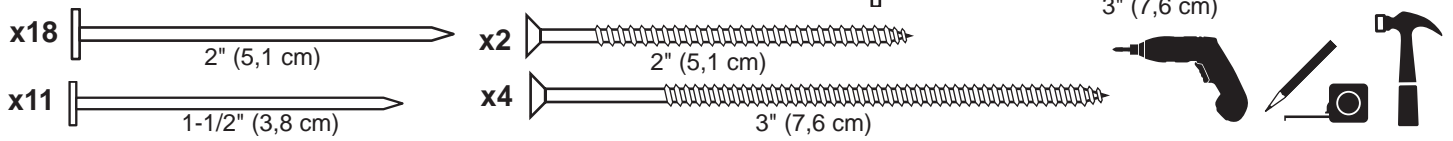
✓**BEGIN**

1 Center back gable wall on the floor.

Secure wall with (1) 2" screw into side wall stud and top plate. *Secure wall to stud first.*

⚠ **ENSURE SIDE AND BACK PANELS ARE EQUALLY SPACED ALONG CORNER.**

2 Secure lower edge of panels to floor frame with 2" nails spaced 6" apart. Angle nail into floor frame **(Fig. A)**.

3 Secure back wall bottom plates to floor with 3" nails.

4 Secure back wall center upright to floor with (2) 3" screws **(Fig. B)**.

5 Secure back wall top plate to side wall top plate with (2) 3" nails.

6 Secure back wall panel to side wall stud with 1-1/2" nails spaced 6" apart.

7 Secure back wall inside horizontal support to side wall stud with (2) 3" screws **(Fig C)**.

DOOR

2" (5,1 cm) **Screws**

Equally Spaced

3" (7,6 cm) **Nails**

(2) 3" (7,6 cm) **Screws**

Fig. C

1-1/2" (3,8 cm) **Nails**

DOOR

3" (7,6 cm) **Nails**

⚠ **Nail 2" nails first.**

2" (5,1 cm) **Nails**

Fig. A

3" Nails into bottom plate.

2" (3,8 cm) **Nails**

6" (15,2 cm)

6" (15,2 cm)

3" (7,6 cm) **Screws**

Fig. B

🏁**FINISH**

Your back wall is now installed.

24

LEFT SIDE WALL INSTALLATION

PARTS REQUIRED:

x11 1-1/2" (3,8 cm)

x2 2" (5,1 cm)

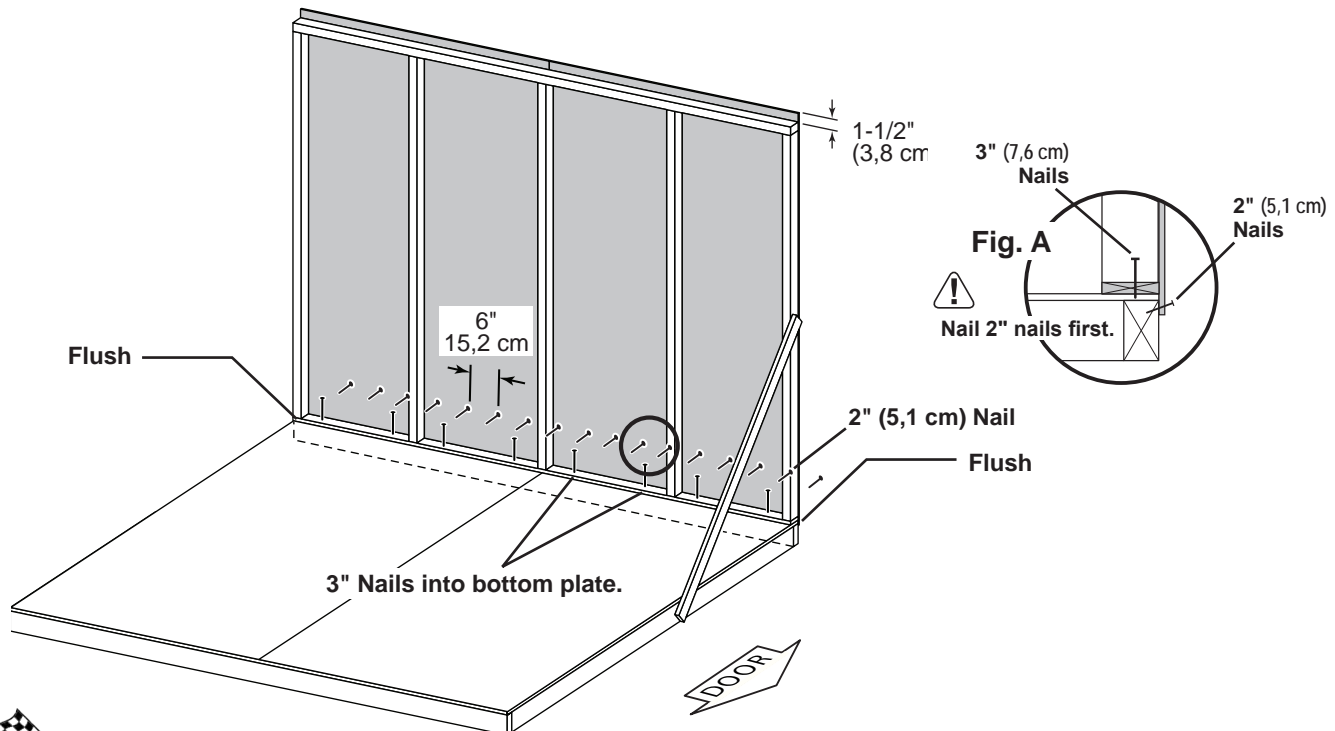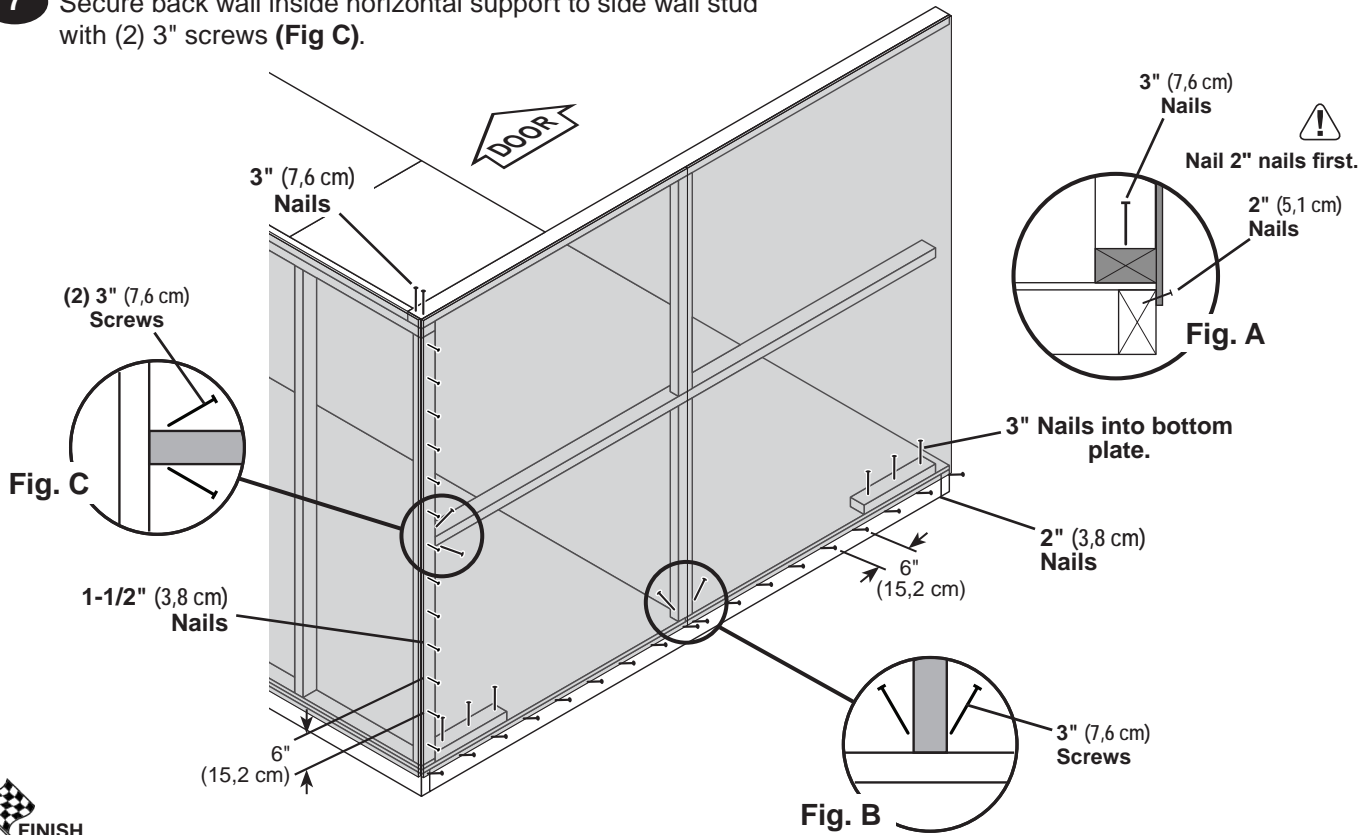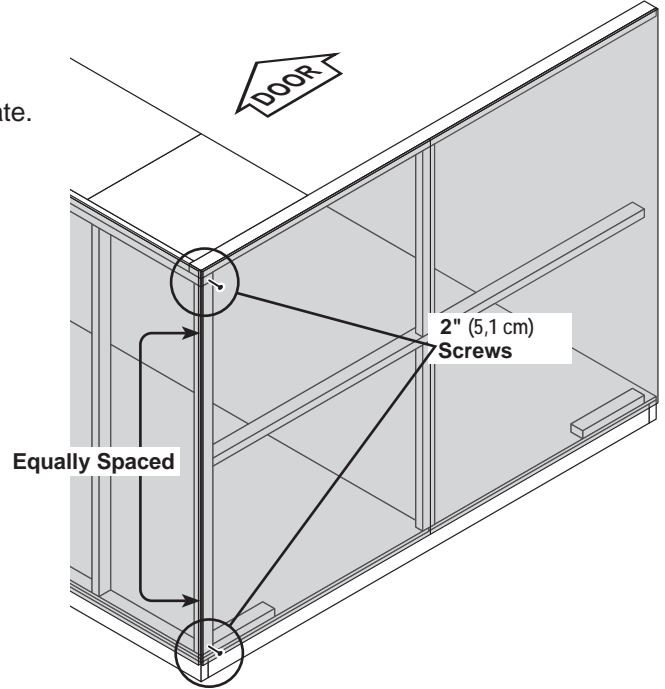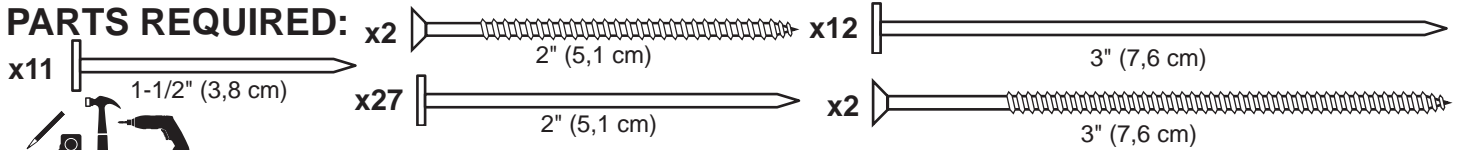**x27** 2" (5,1 cm)
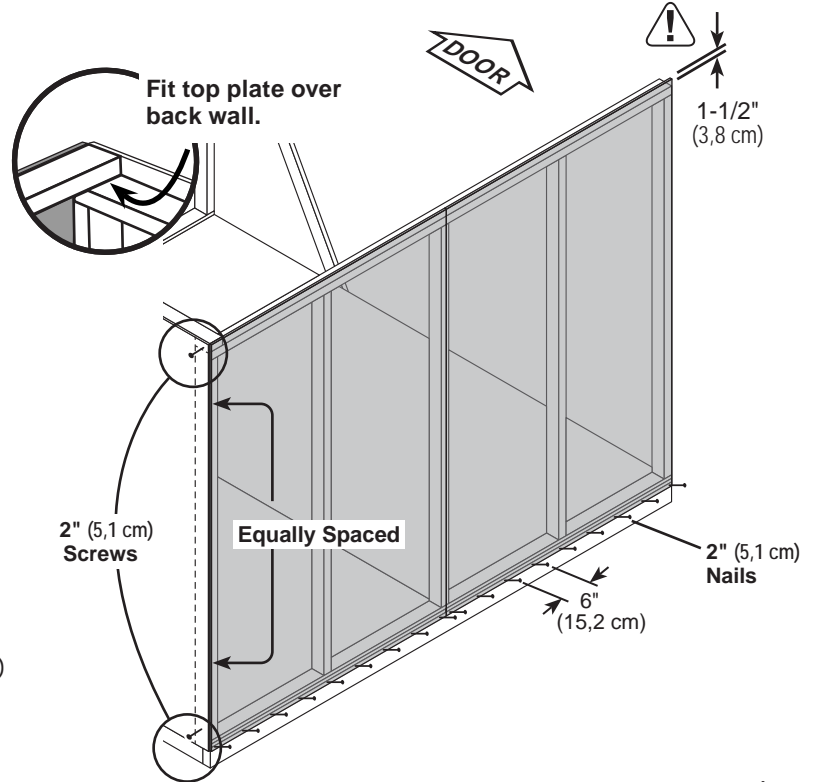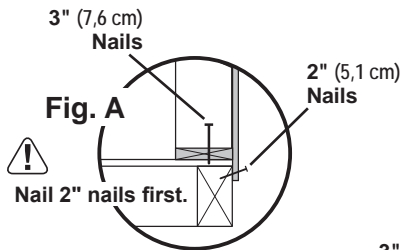
x12 3" (7,6 cm)

x2 3" (7,6 cm)

✓**BEGIN**

1 Install left side wall on the floor.
Ensure 1-1/2" measurement is at the top.
*(Push top plate over back wall top plate.
Flush both top plates at corner.)*
Secure back wall to side wall with (1) 2"
screw into side wall stud and top plate.
Secure back wall to stud first.

⚠ **ENSURE SIDE AND BACK PANELS ARE
EQUALLY SPACED ALONG CORNER.**

2 Secure lower edge of panels to floor frame
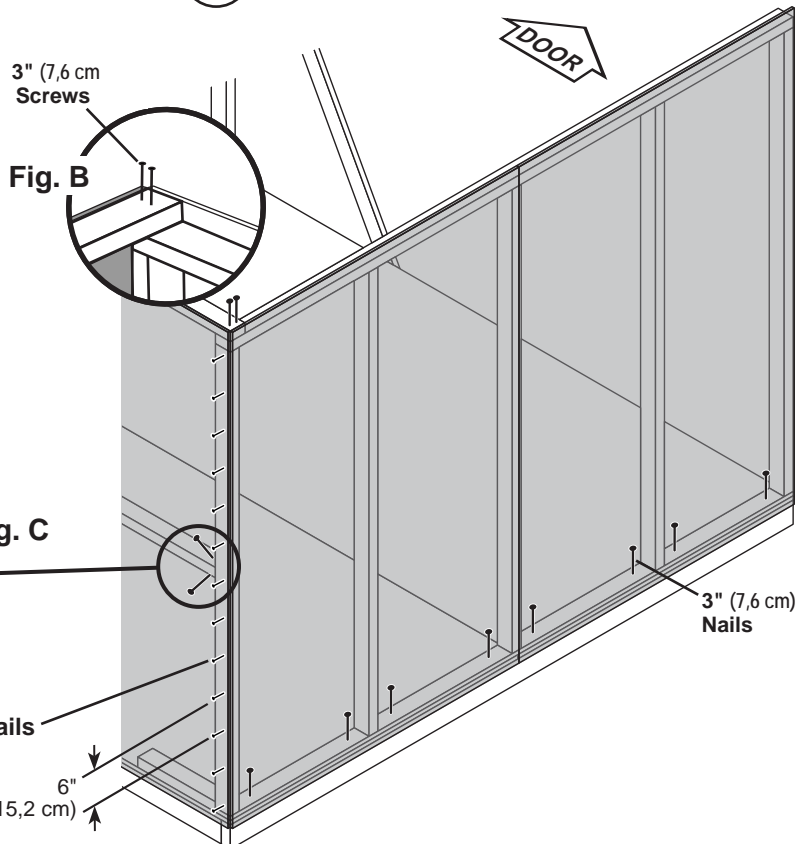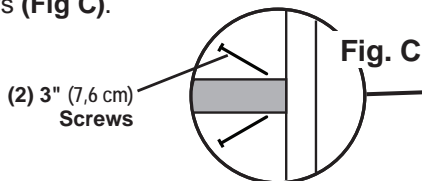with 2" nails spaced 6" apart.
Angle nail into floor frame **(Fig. A)**.

**Fit top plate over
back wall.**

DOOR

1-1/2"
(3,8 cm)

2" (5,1 cm)
Screws

Equally Spaced

2" (5,1 cm)
Nails

6"
(15,2 cm)

3" (7,6 cm)
Nails

2" (5,1 cm)
Nails

Fig. A

⚠ **Nail 2" nails first.**

3 Secure side wall bottom plate to floor
with 3" nails **(Fig. A)**.

4 Secure back wall top plate to side wall
with (2) 3" nails **(Fig. B)**.

5 Secure back wall panel to side wall stud
with 1-1/2" nails spaced 6" apart.

6 Secure back wall inside horizontal
support to side wall stud with
(2) 3" screws **(Fig C)**.

3" (7,6 cm
Screws

Fig. B

DOOR

Fig. C

(2) 3" (7,6 cm)
Screws

3" (7,6 cm)
Nails

1-1/2" (3,8 cm) **Nails**

6"
(15,2 cm)

🏁**FINISH**
Your left side wall is now installed.

25

FRONT WALL INSTALLATION

PARTS REQUIRED:

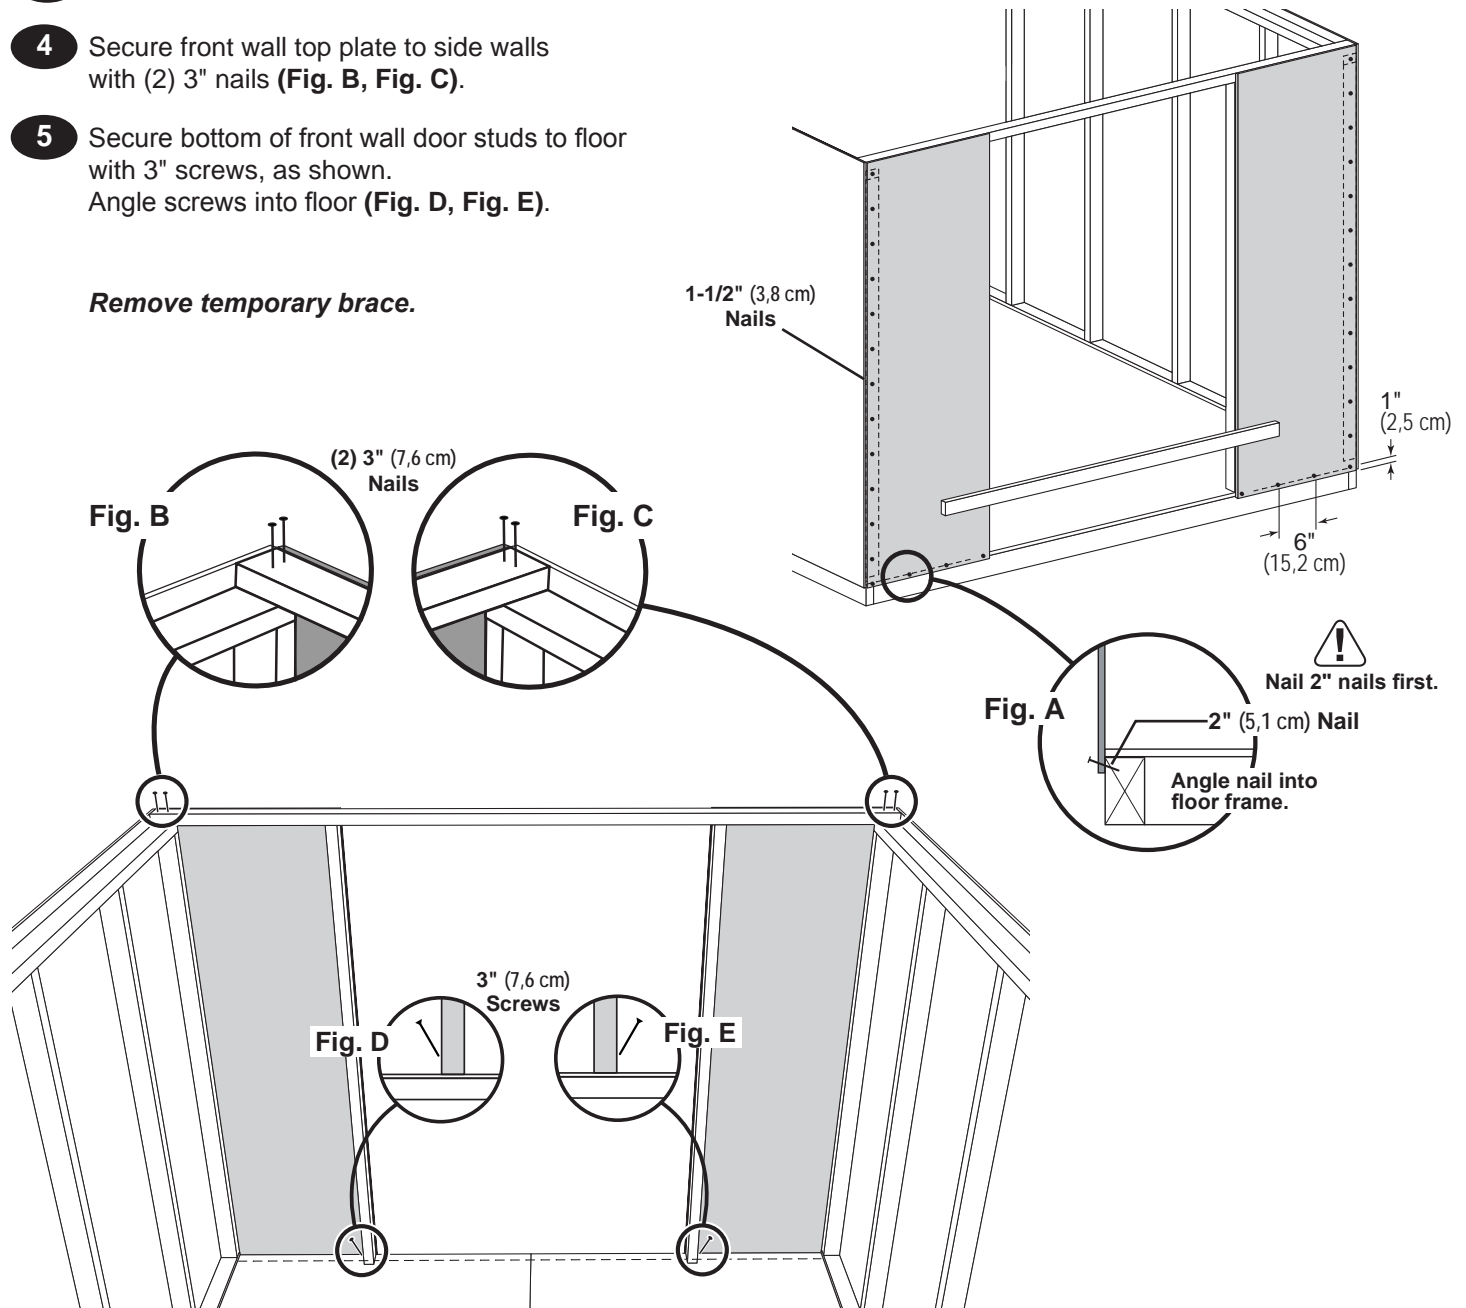x24 1-1/2" (3,8 cm)

x2 3" (7,6 cm)

x8 2" (5,1 cm)

x4 3" (7,6 cm)
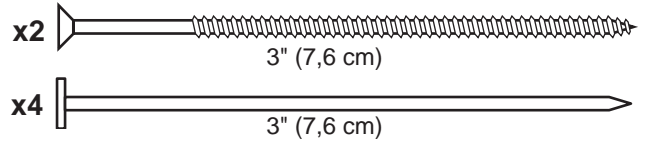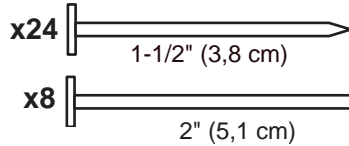
✓BEGIN

1 Center front wall assembly on the floor.

2 Secure lower edge of panel to floor frame with 2" nails spaced 6" apart.
Angle nail into floor frame **(Fig. A)**.

3 Secure front wall to side walls with 1-1/2" nails spaced 6" apart.

4 Secure front wall top plate to side walls
with (2) 3" nails **(Fig. B, Fig. C)**.

5 Secure bottom of front wall door studs to floor
with 3" screws, as shown.
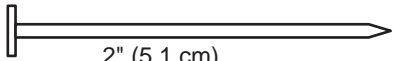Angle screws into floor **(Fig. D, Fig. E)**.

Remove temporary brace.

1-1/2" (3,8 cm)
Nails

1" (2,5 cm)

6" (15,2 cm)

(2) 3" (7,6 cm)
Nails

Fig. B

Fig. C

⚠
Nail 2" nails first.

Fig. A

2" (5,1 cm) **Nail**

Angle nail into floor frame.

3" (7,6 cm)
Screws

Fig. D

Fig. E

🏁**FINISH**
Your walls are now installed.

FRONT WALL HEADER

PARTS REQUIRED:

x9 2" (5,1 cm)

x1 DS
1 x 3 x 55" (2,5 x 7,6 x 137,2 cm)

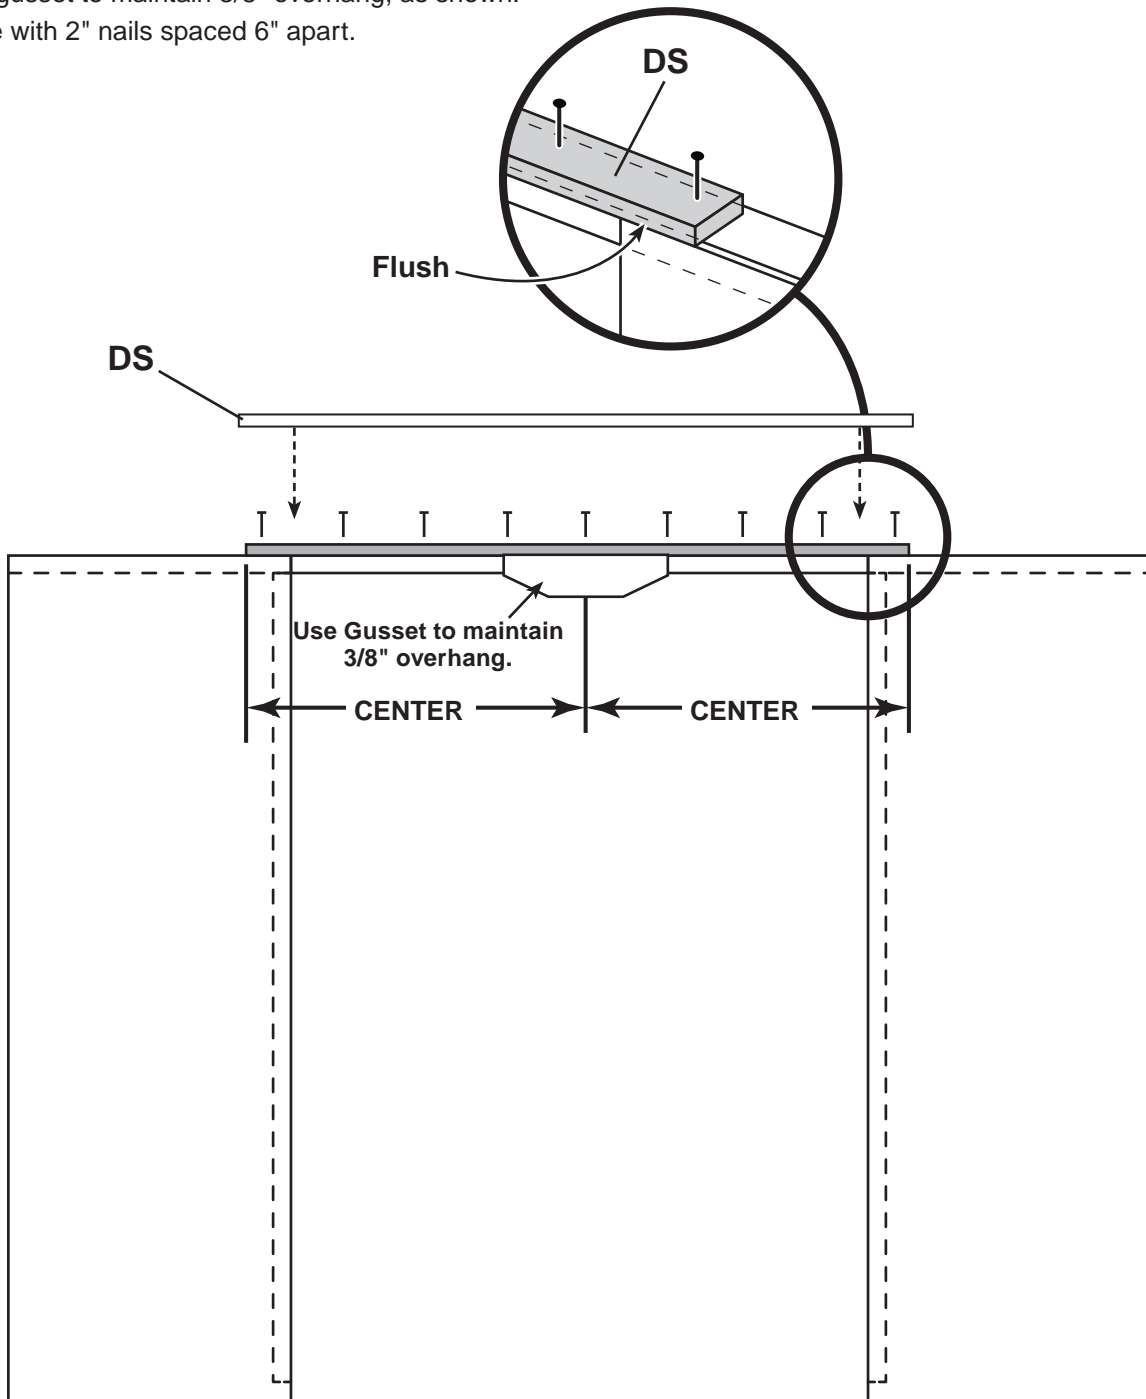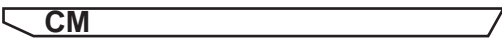**x1** GUSSET
TEMPORARY SPACER
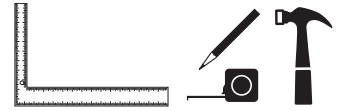
√BEGIN

1 Center **DS** on **PT** on flat, flush to front wall panel.
Use a gusset to maintain 3/8" overhang, as shown.
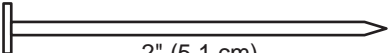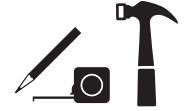Secure with 2" nails spaced 6" apart.

DS

Flush

DS

Use Gusset to maintain 3/8" overhang.

← **CENTER** →   ← **CENTER** →

RAFTERS

PARTS REQUIRED:

x120 ┃━━━━━━━━━━━━━━ 2" (5,1 cm)

x10 ⬡ 6 x 24" (15,2 x 61 cm)

x10 ▭ **CM**
2 x 4 x 54" (5,1 x 10,2 x 137,2 cm)
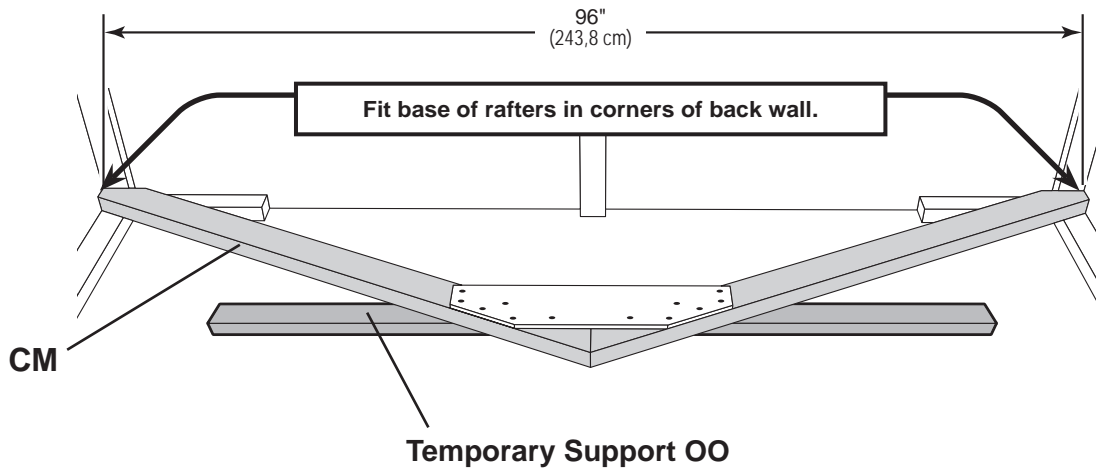
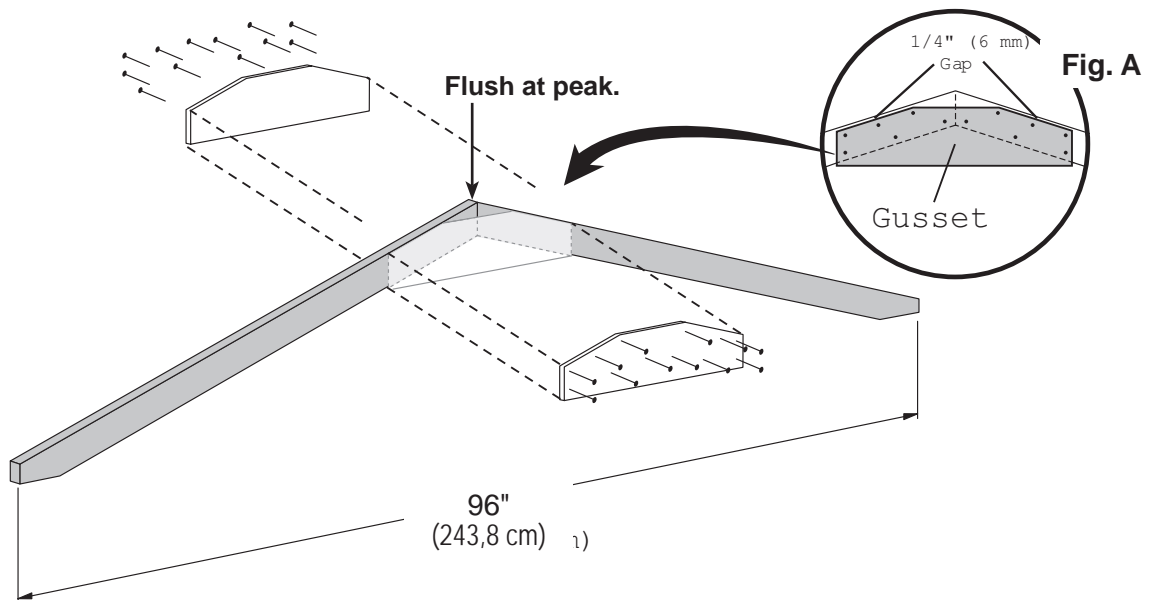x1 ▭ **OO** **Temporary Support**
69" (175,3) Door Stiffener

√**BEGIN**

1 Place (2) rafter halves **CM** in corners of back wall. You will assemble (5) rafters.

Secure gusset to rafter with 2" nails. Stagger the nailing pattern **(Fig. A)**.

96"
(243,8 cm)

Fit base of rafters in corners of back wall.

CM

Temporary Support OO

2 Flip over rafter assembly and nail gusset to back side.

1/4" (6 mm)
Gap
Fig. A

Flush at peak.

Gusset

96"
(243,8 cm)

Repeat steps to build (2) more rafters.

🏁**FINISH**
You have assembled (5) rafters.

RAFTERS

PARTS REQUIRED:

x12 3" (7,6 cm)

x3 Preassembled

x6 2" (5,1 cm)
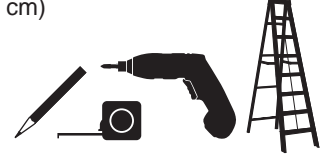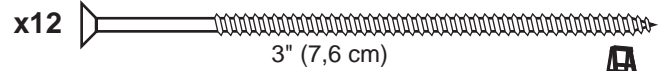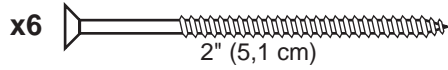
√**BEGIN**

1 Align rafters with the wall studs. Ensure the measurement between rafters, as shown.

2 Secure with with (1) 2" screw through panel into end of rafter **(Fig. A)**.
NOTE: use (2) screws at siding seams.

3 Secure rafters with (2) 3" screws angled into top plate **(Fig. B)**.

⚠ *Maintain the measurements between rafters.*

NOTE: Measurements from outside of panels

| 22-1/4" (56,5 cm) | 24" (61 cm) | 24" (61 cm) | 22-1/4" (56,5 cm) |

Align over studs.

Fig. A

2" (5,1 cm) **Screw**

Fig. B

3" (7,6 cm) **Screws into top plate.**
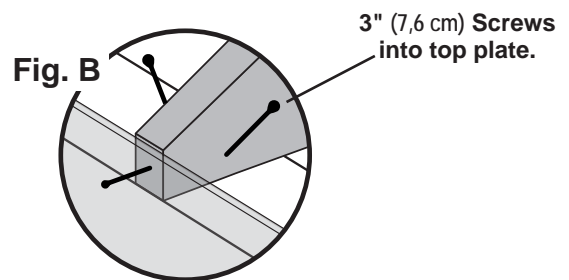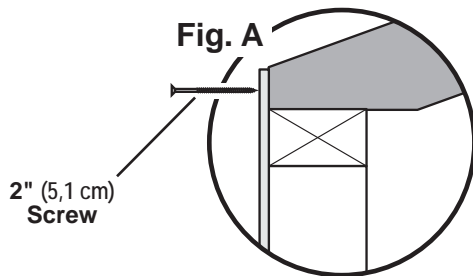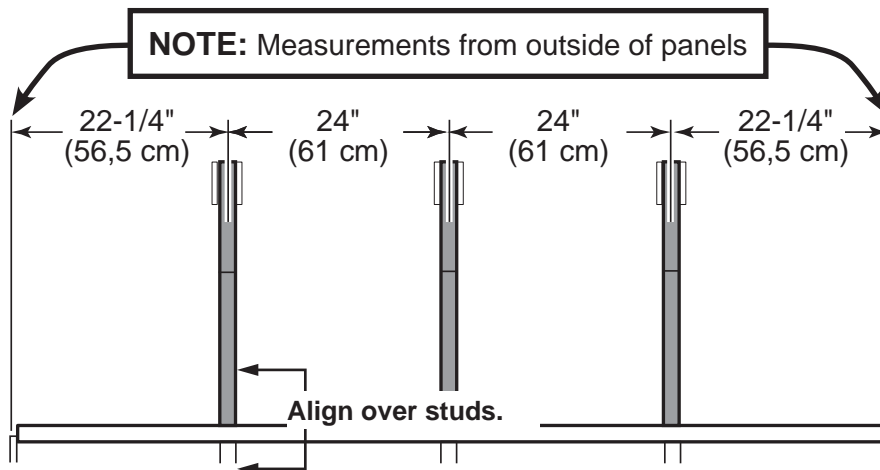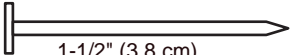
🏁 **FINISH**
Your (3) rafters are now installed.

BACK GABLE UNIT

PARTS REQUIRED:

x8 ├────────────────────────▷
1-1/2" (3,8 cm)

x1 | BV |
2 x 3 x 17-1/2" (5,1 x 7,6 x 44,5 cm)

x1 ◣   x1 ◢

Install gable panels with the primed side up.

✓**BEGIN**

1 Place **BV** on flat on floor.

2 Place **right** gable panel centered on **BV** with a 1" overhang on bottom.
Secure with (4) 1-1/2" nails.

2-1/2"
(6,3 cm)

BV

6"
(15,2 cm)

1"
(2,5 cm)

1-1/4"
(3,2 cm)

6"
(15,2 cm)

1-1/4"
3,2 cm
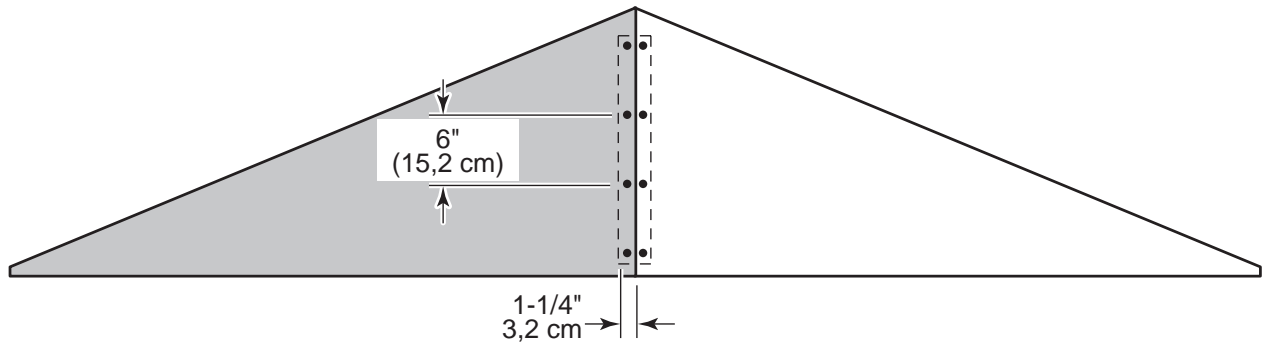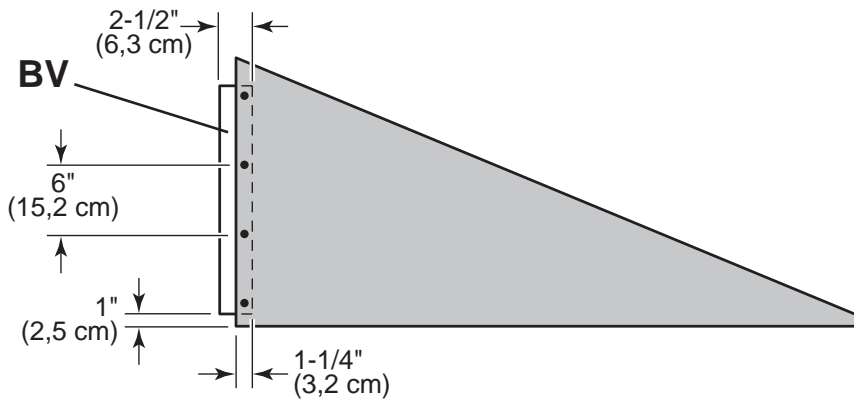
3 Place **left** gable panel flush to right panel on **BV** with a 1" overhang on bottom.
Secure with (4) 1-1/2" nails.

🏁**FINISH**
Your back gable unit is now assembled.

BACK GABLE UNIT INSTALLATION

PARTS REQUIRED:

Preassembled

x2 ———— 3" (7,6 cm)

x18 ———— 2" (5,1 cm)

√**BEGIN**

1 Lift and set back gable unit on back wall top plate, overlapping wall panels.

Working inside, secure gable unit with (2) 3" screws into **BV**, angled into top plate **(Fig. A)**.

⚠ **ENSURE GABLE IS CENTERED ON WALL BEFORE NAILING.**

2 Measure 1" (2,5 cm) down from top plate and mark at each side, as shown.
Hold secure with (1) 2" nail on each side.

BV

Fig. A

Top Plate

3" (7,6 cm) Screws

6"
(15,2 cm)

NAIL FIRST 2" (5,1 cm)

1" (2,5 cm) Measure and Mark

TOP PLATE DOUBLER

1" (2,5 cm) Measure and Mark

NAIL FIRST 2" (5,1 cm)

3 Continue nailing lower edge of panels to top plate doublers with 1-1/2" nails spaced 6" apart.

🏁**FINISH**

Your back gable unit is now installed.

31

FRONT GABLE UNIT

PARTS REQUIRED:

x1 x1

x8 1-1/2" (3,8 cm)
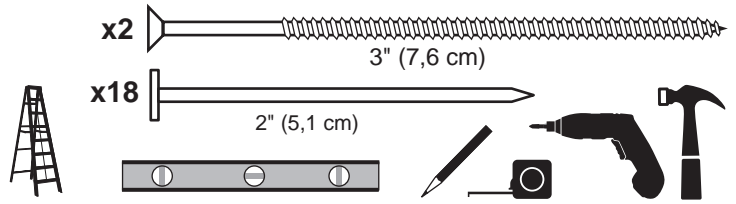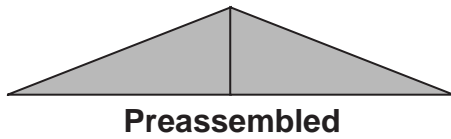
x1 BV
2 x 3 x 17-1/2" (5,1 x 7,6 x 44,5 cm)
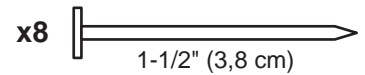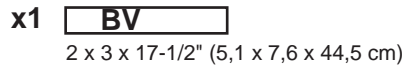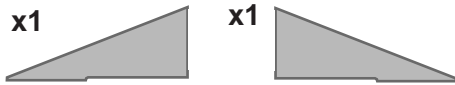
Install gable panels with the primed side up.

√**BEGIN**

1 Place **BV** on flat on floor as shown.

2 Place **right** gable panel centered on **BV** with a 3/4" overhang on bottom and 1-3/4" overhang on top.
Secure with (4) 2" nails.

3 Place left gable panel flush to right panel on **BV** with a 3/4" overhang on bottom.
Secure with (4) 1-3/4" Nails.

2-1/2"
(6,3 cm)

1-3/4"
(4,4 cm)

17-1/2"
(44,5 cm)

3/4"
(1,9 cm)

1-1/4"
(3,2 cm)

6"
(15,2 cm) **Flush**

3/4"
(1,9 cm)

1-1/4"
(3,2 cm)

27-1/2"
(69,9 cm)

27-1/2"
(69,9 cm)

55"
(139,7 cm)

🏁**FINISH**
Your front gable unit is now assembled.

FRONT GABLE UNIT INSTALLATION
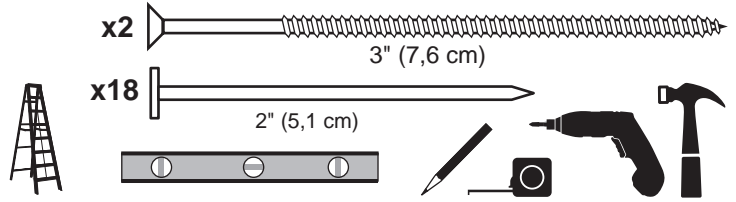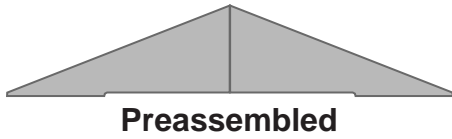
PARTS REQUIRED:

Preassembled
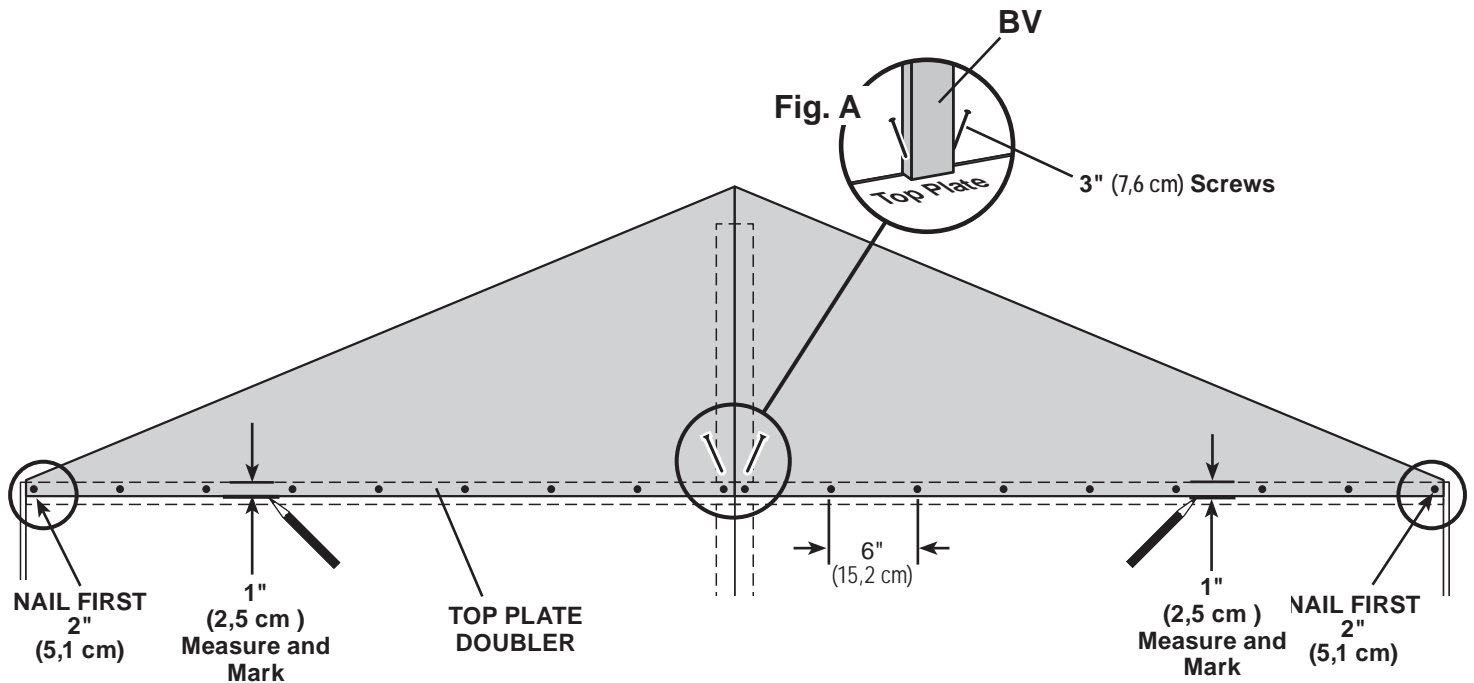
x2 3" (7,6 cm)

x18 2" (5,1 cm)

✓**BEGIN**

1 Lift and set back gable unit on back wall top plate, overlapping wall panels.

Working inside, secure gable unit with (2) 3" screws into **BV**, angled into top plate **(Fig. A)**.

⚠ **ENSURE GABLE IS CENTERED ON WALL BEFORE NAILING.**

2 Measure 1" (2,5 cm) down from top plate and mark at each side, as shown.
Hold secure with (1) 2" nail on each side.

BV

Fig. A

DOUBLER

3" (7,6 cm)
Screws

DOUBLER

6"
(15,2 cm)

**NAIL FIRST
2"
(5,1 cm)**

**1"
(2,5 cm)
Measure and
Mark**

**1"
(2,5 cm)
Measure and
Mark**

**NAIL FIRST
2"
(5,1 cm)**

3 Continue nailing lower edge of panels to top plate doublers with 1-1/2" nails spaced 6" apart.

🏁**FINISH**
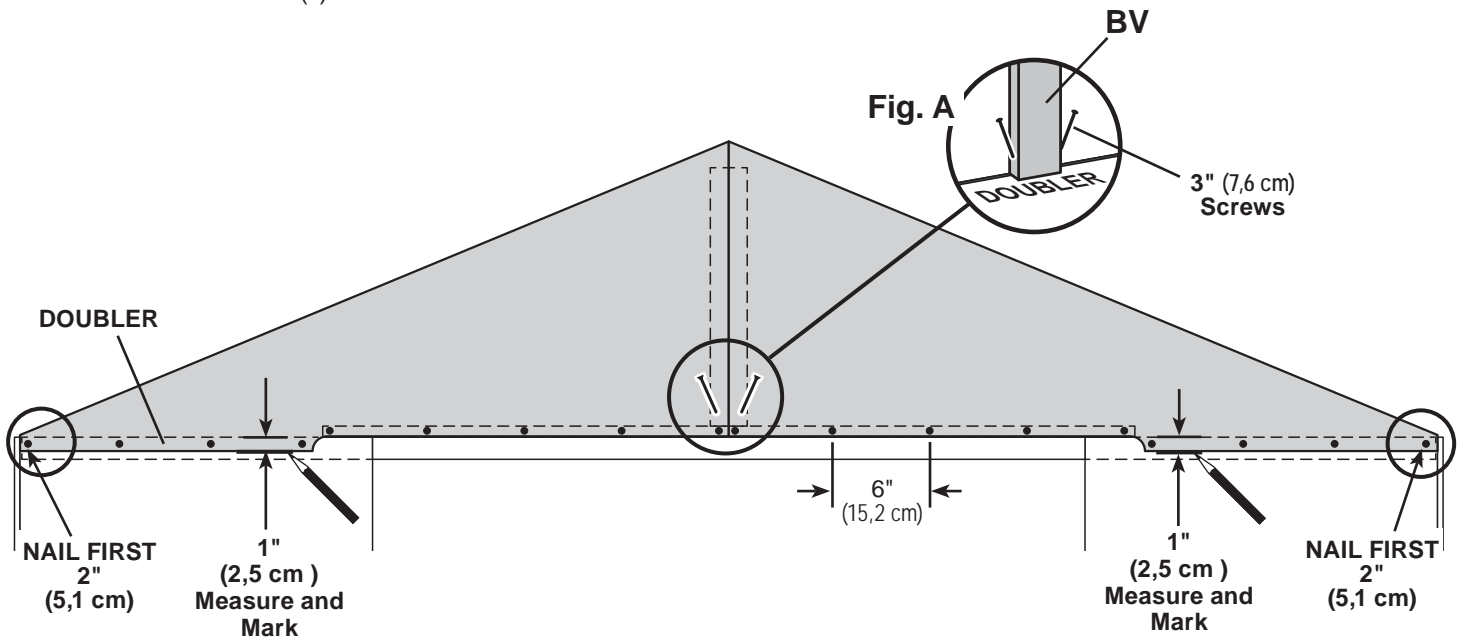
Your front gable unit is now installed.

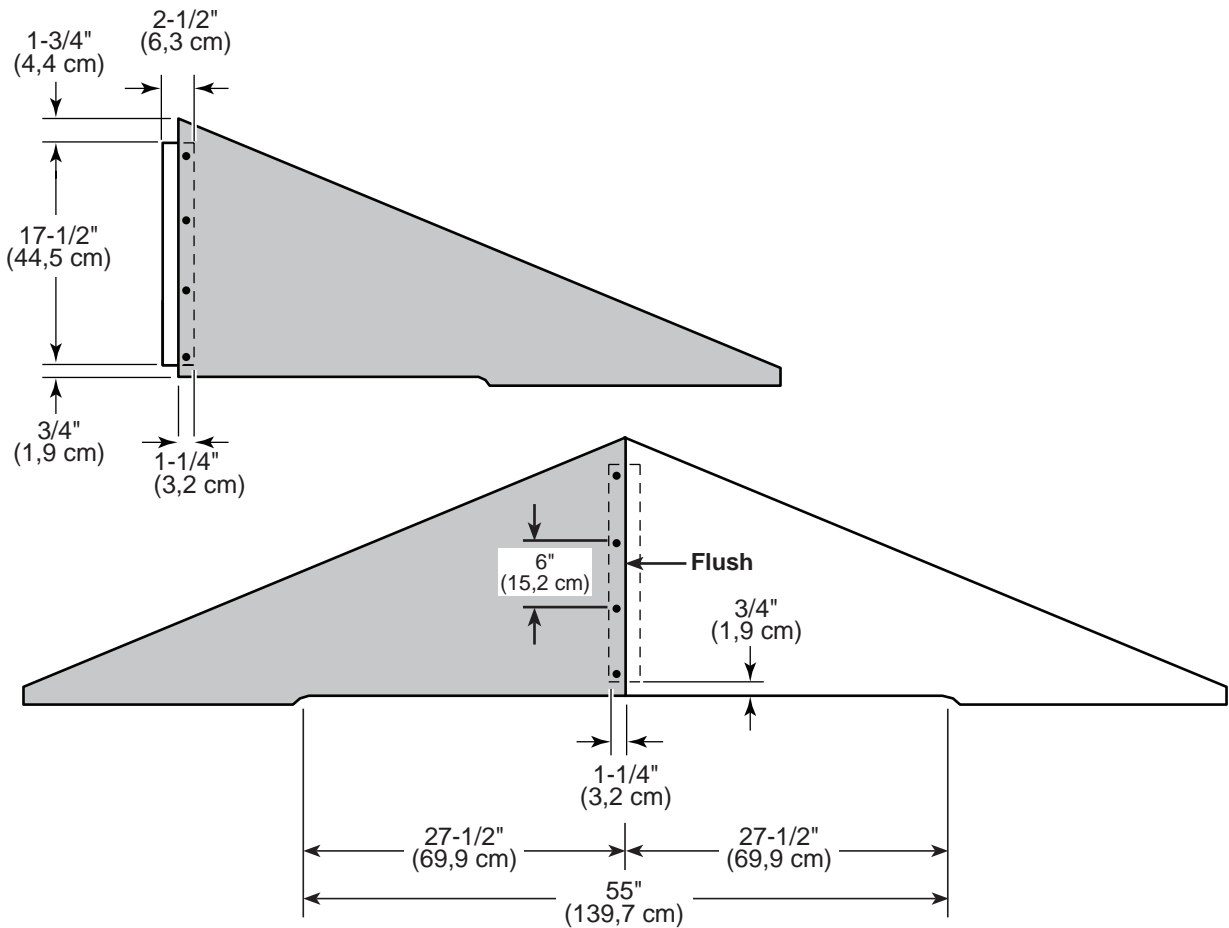## TRIM

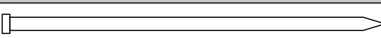**PARTS REQUIRED:**

x56 ⬡──────────────▷
2" (5,1 cm)

x4 ▭────────────────
3/8 x 1-3/4 x 71" (1 x 4,4 x 180,3 cm)

x4 ▭────────────────
3/8 x 1-3/4 x 72" (1 x 4,4 x 182,9 cm)

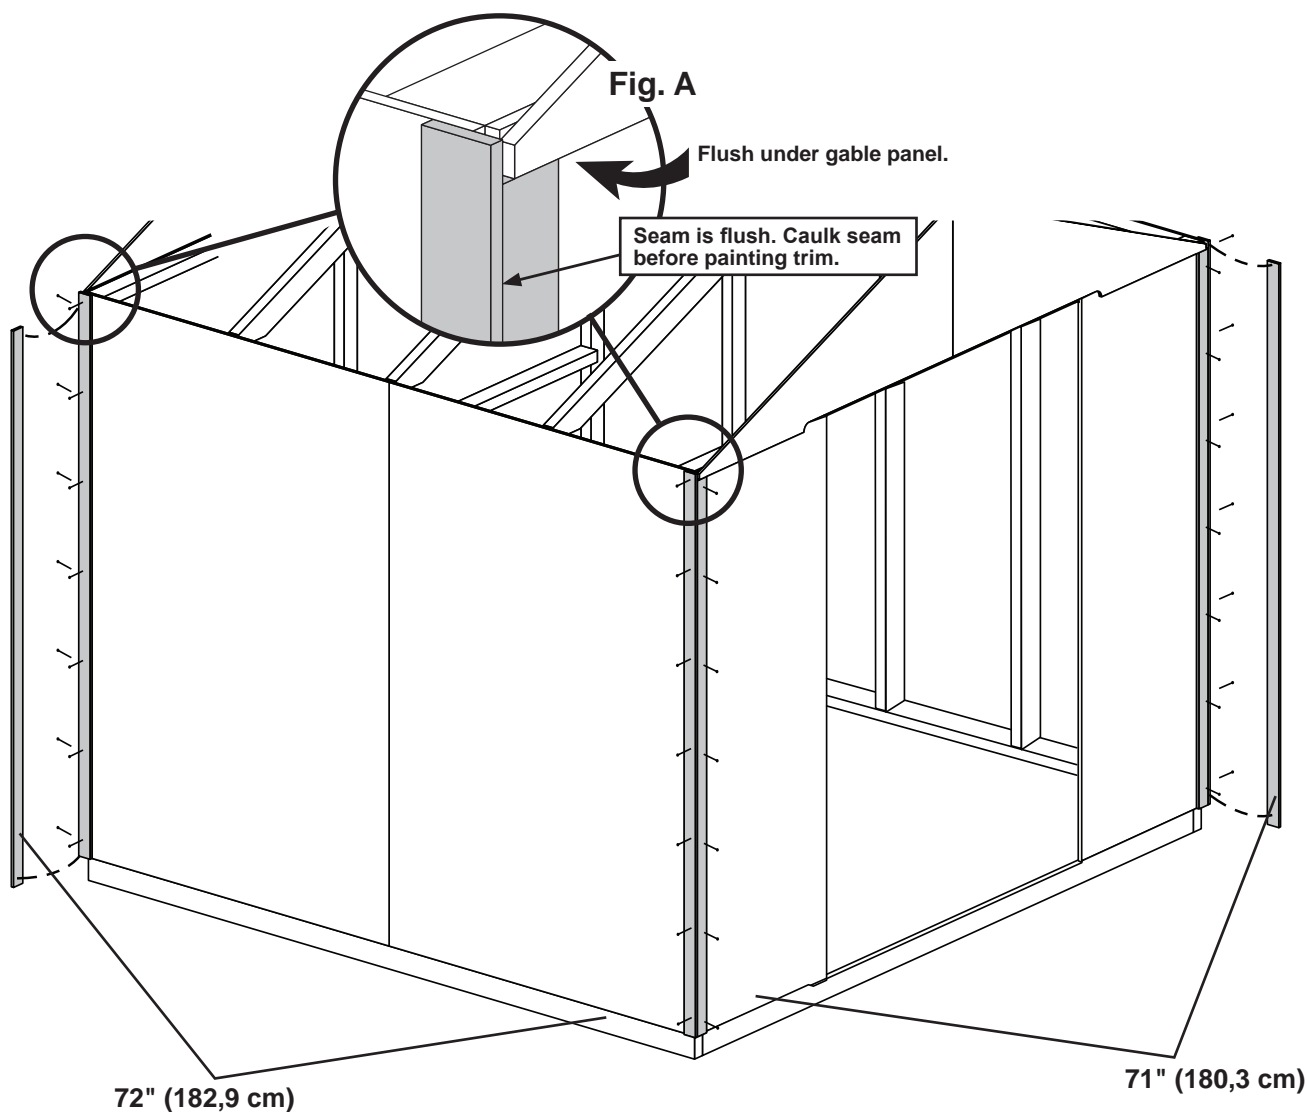√**BEGIN**

1 Install **71"** trim flush under gable panel **(Fig. A)**.
Secure with (1) 2" nail.

2 Install **72"** trim flush to top of side wall panel and flush to edge of 71" trim **(Fig. A)**.
Secure with (1) 2" nail.

3 Secure trim flush to corners with 2" finish nails evenly spaced, as shown.

Repeat steps to install trim to all (4) corners.

Fig. A

Flush under gable panel.

Seam is flush. Caulk seam
before painting trim.

72" (182,9 cm)

71" (180,3 cm)

🏁**FINISH**
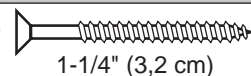Your corner trim is now installed.

GABLE TRIM

PARTS REQUIRED:

x4   CL

2 x 4 x 53-11/16" (5,1 x 10,2 x 136,4 cm)
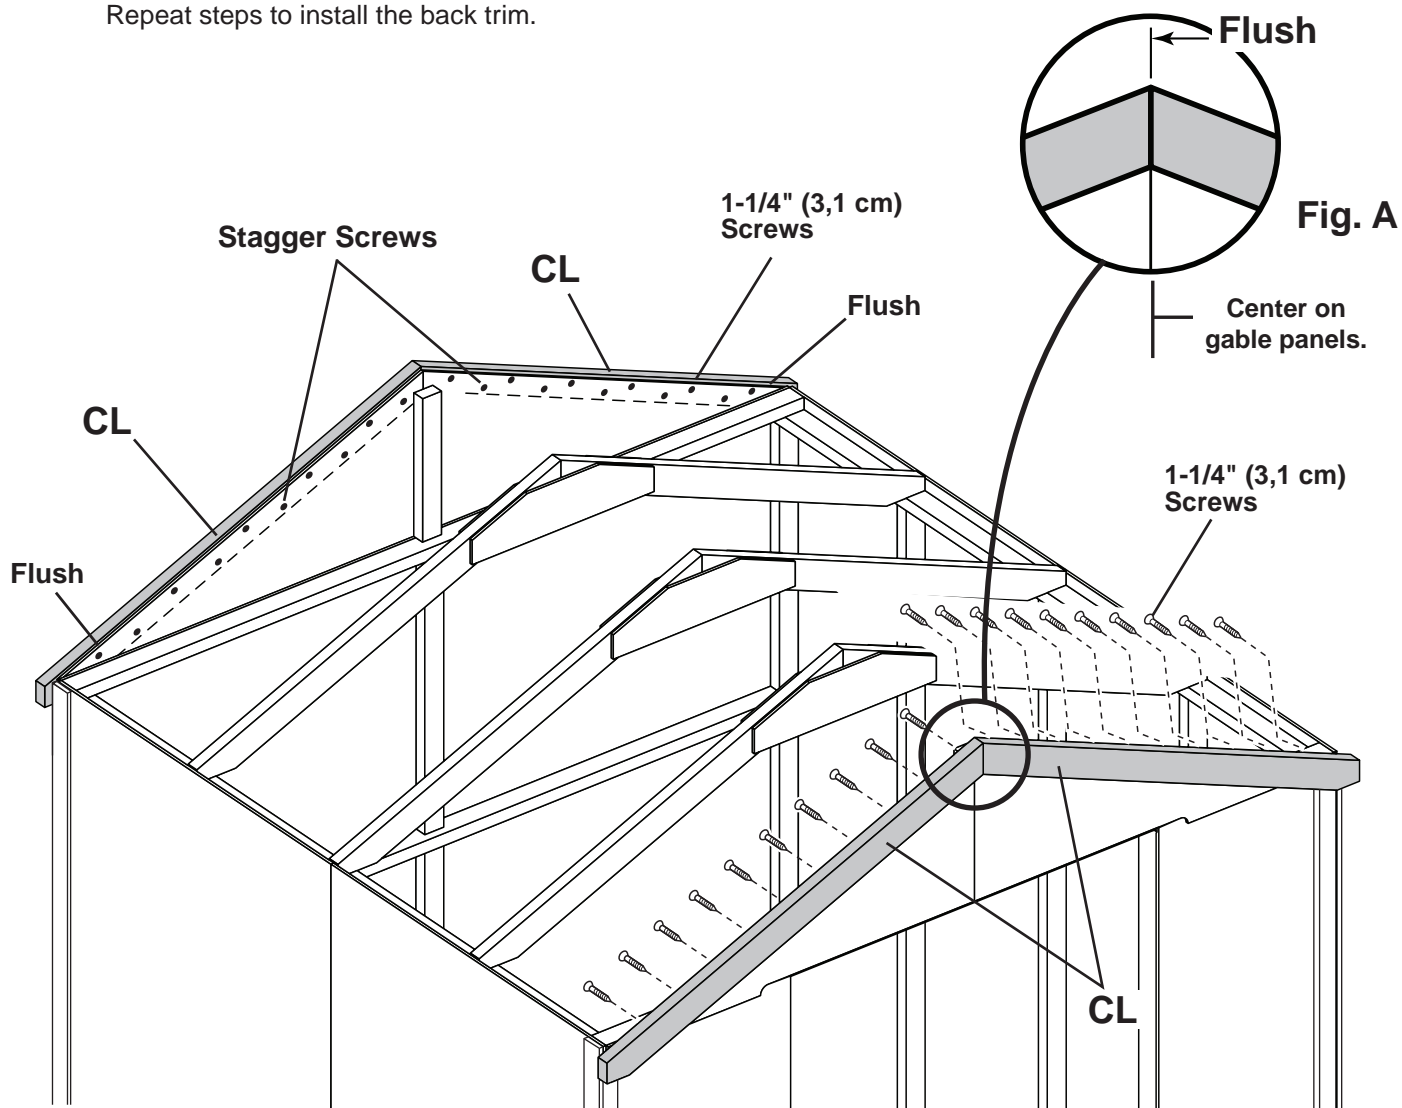
x40   1-1/4" (3,2 cm)

✓**BEGIN**

1   Position one **CL** flush to front panel edge and center on right edge of groove **(Fig. A)**.
Secure trim with (10) 1-1/4" screws from inside.

2   Position second **CL** flush to panel edge and flush to installed **CL (Fig. A)**.
Secure trim with (10) 1-1/4" screws from inside.

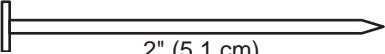Repeat steps to install the back trim.

Flush

Stagger Screws

1-1/4" (3,1 cm) Screws

CL

Flush

CL

Flush

Fig. A

Center on gable panels.

1-1/4" (3,1 cm) Screws

CL

🏁**FINISH**
Your gable trim is now installed.

ROOF PANELS

PARTS REQUIRED:

x2   7/16 x 48 x 96"
(1,1 x 121,9 x 243,8 cm)

x8   2" (5,1 cm)

⚠️ **Roof panels may cause serious injury until securely fastened.**
*Install all roof panels with the rough side facing up (painted grid lines side).*

✓**BEGIN**

1 Before installing **48" x 96"** roof panel,
measure down 48" from rafter peak
and mark 2 rafters, as shown.
Place (1) 2" nail at each mark.
(Nails will support panel in position.)

**Gable
Trim**

Fig. A

1/2"
(1,3 cm)

Two Nails

Flush at peak.

Fig. B

48"
(121,9 cm)

DOOR
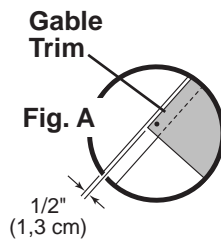
2 Install the **48" x 96"** panel with a 1/2"
measurement on the gable trim **(Fig A)** and
the panel flush at the peak **(Fig. B)**.

Secure panel with (2) 2" nails in
the corners.

2" (5,1 cm) **Nails**
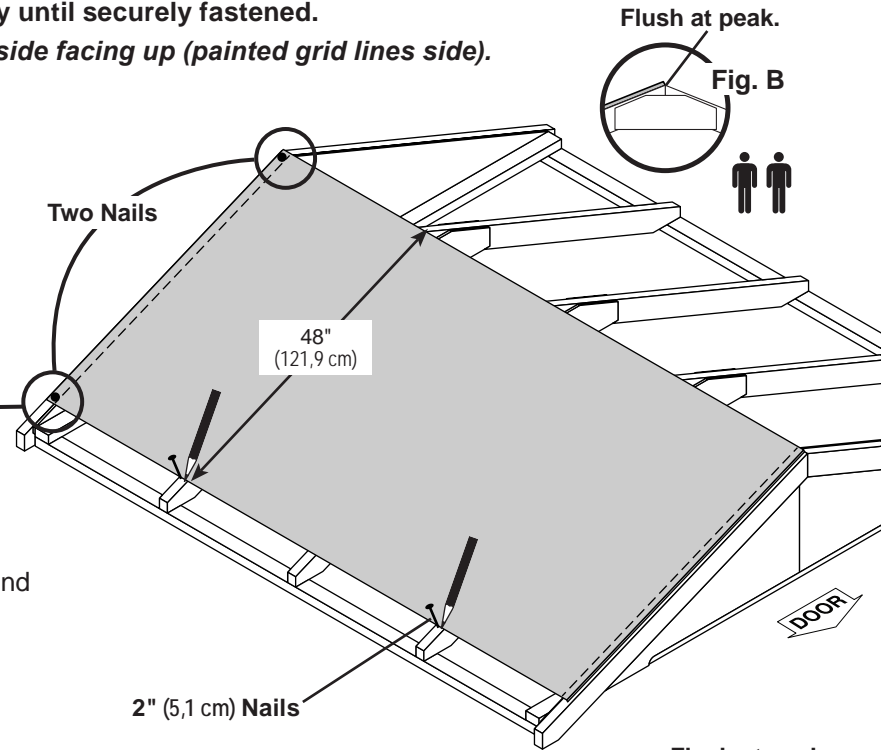
Flush at peak.

Fig. B

3 Move to the opposite end.
Using the long edge of the panel as
a lever, move the panel side-to-side
until the top corner is flush at the
peak **(Fig. B)**.

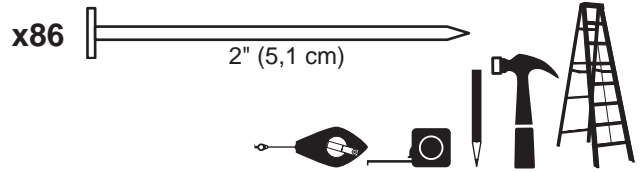Move the gable unit until it is 1/2"
from the roof panel **(Fig. C)**.

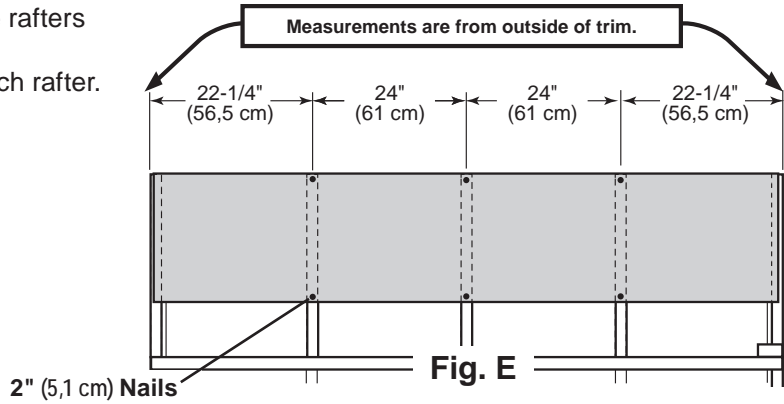Secure panel with (2) 2" nails
in the corners.

Move Gable

DOOR

Two Nails

Fig. D   **Gable
Trim**

1/2"
(1,3 cm)
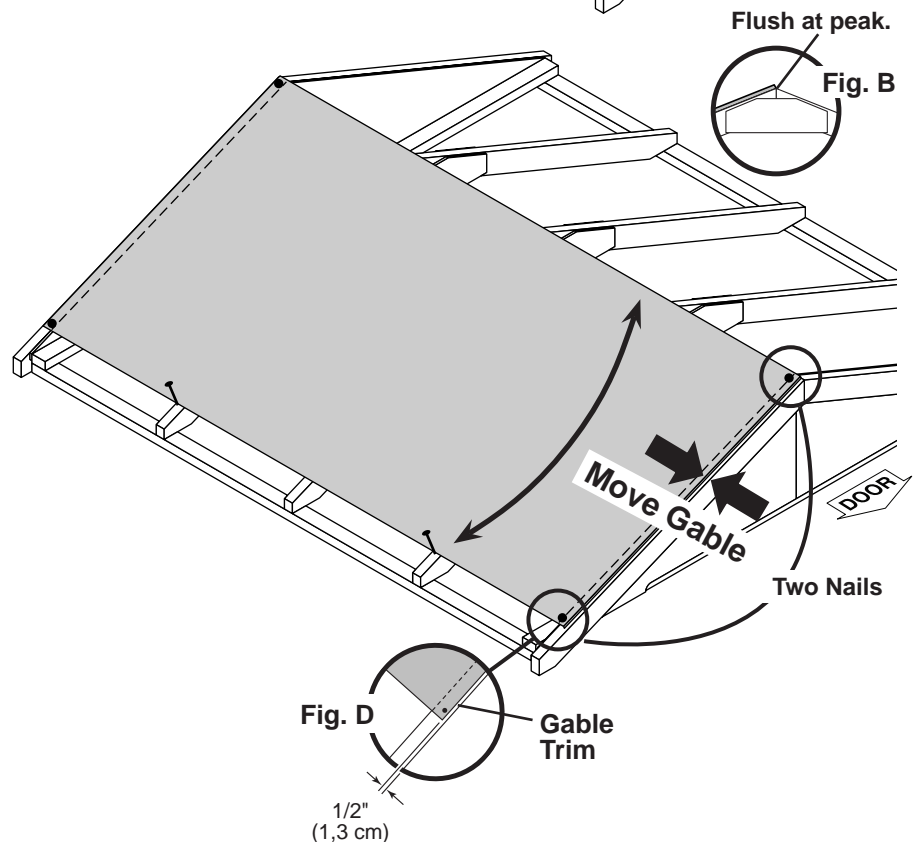
ROOF PANELS

PARTS REQUIRED:

x2 5-7/8" x 96"
(14,9 x 243,8 cm)

x86 2" (5,1 cm)

---

4 Maintain spacing between the center of the rafters **(Fig. E)**.
Secure top of panels with (1) 2" nail into each rafter.

Move to the bottom and secure panels with (1) 2" nail into each rafter.

Measurements are from outside of trim.

22-1/4" (56,5 cm) | 24" (61 cm) | 24" (61 cm) | 22-1/4" (56,5 cm)

2" (5,1 cm) **Nails**

Fig. E

5 Install the **5-7/8" x 96"** roof panel flush to the upper panel and with a 1/2" measurement at the gable trim **(Fig.G)**.

Complete the securing of all panels with 2" nails spaced 6" along edges and 12" inside panels.

6" (15,2 cm)

12" (15,2 cm)
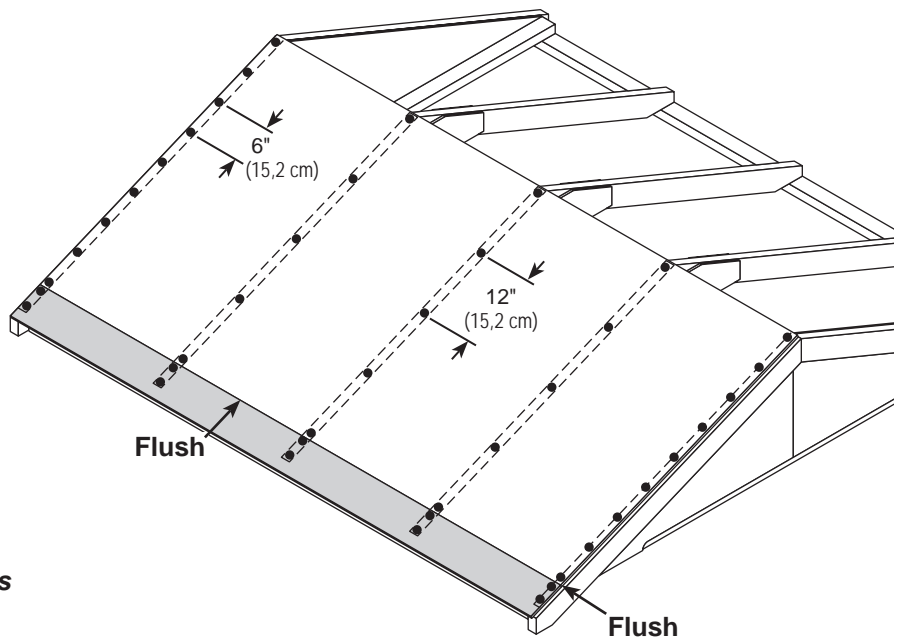
Flush

Flush

Repeat all steps to install roof panels on opposite side.

🏁 **FINISH**
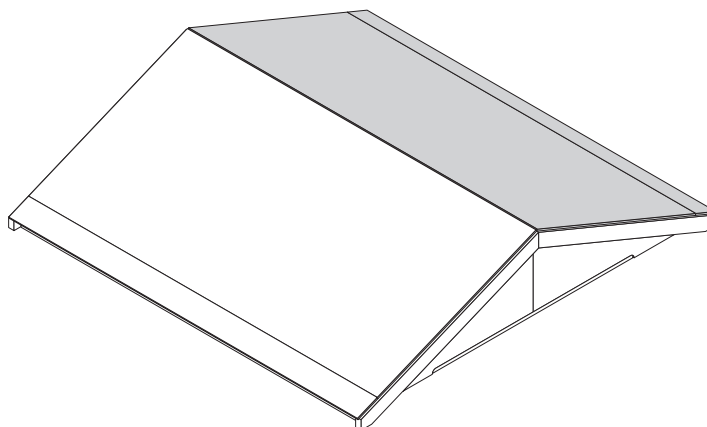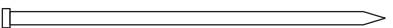
Your roof panels are now installed.

DOOR TRIM

PARTS REQUIRED:

x12 2" (5,1 cm)

x2 KY
19/32" x 2-1/2" x 72-3/8" (1,5 x 6,3 x 183,8 cm)
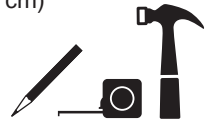
√ **BEGIN**

1 Install (2) **KY** flush to the bottom of gable panels and aligned with stud.
Secure each with (6) 2" nails evenly spaced.

Flush   Flush

KY

← **48-1/2"** (123,2 cm) **TRIM TO TRIM** →

**MAINTAIN DIMENSION
BETWEEN TRIM.**

48-1/2"
(123,2 cm)

Note: Edge may result here.

Align stud and trim.

DOORS

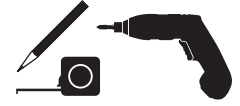**PARTS REQUIRED:**

x4 — 2" (5,1 cm)

x1 | **GUA**   **Temporary Support**
1 x 3 x 60" (2,5 x 7,6 x 152,4 cm)

x1
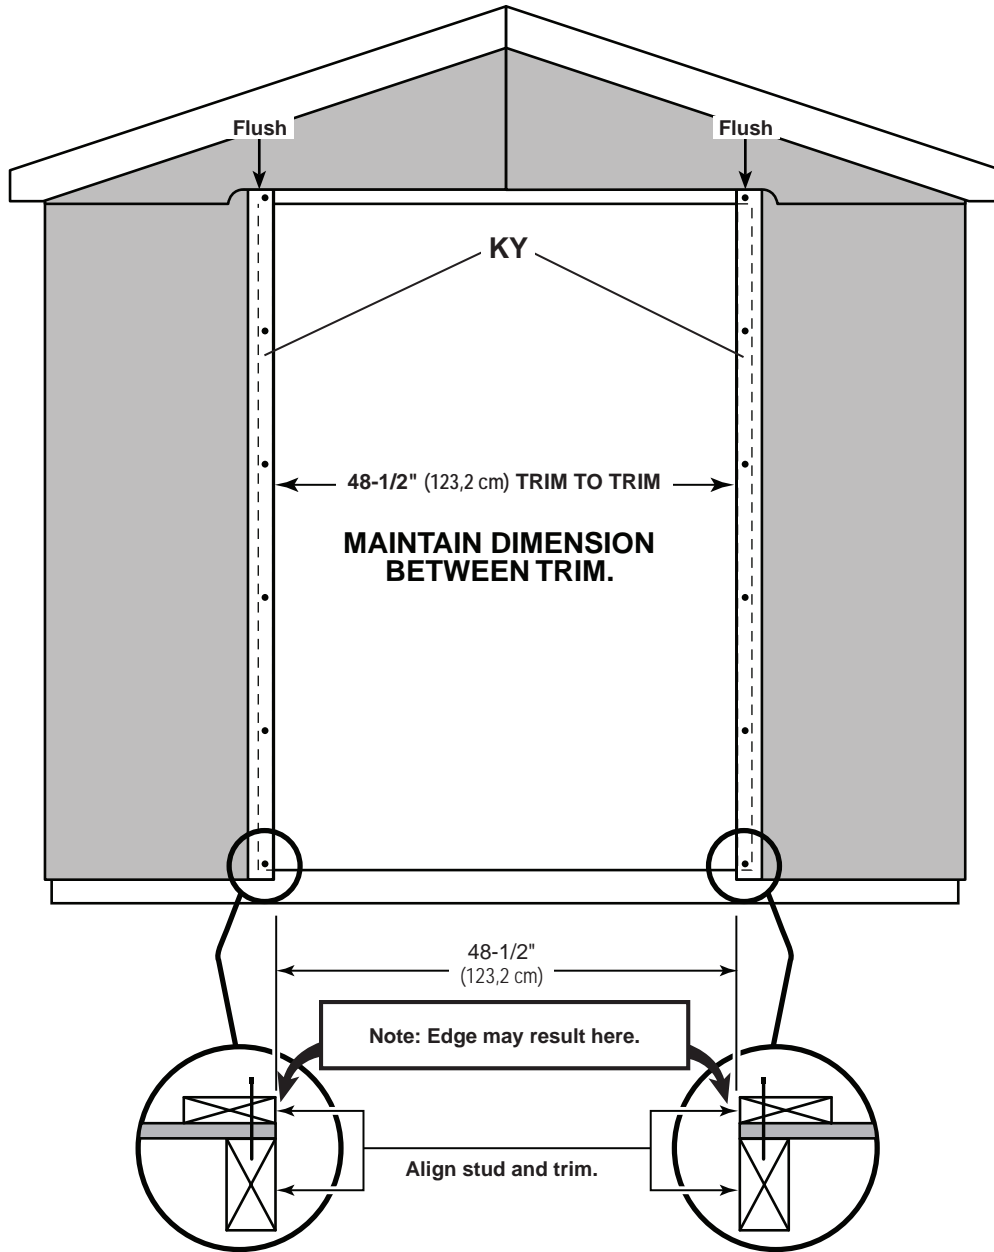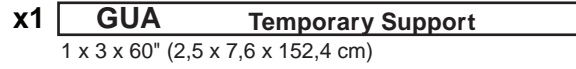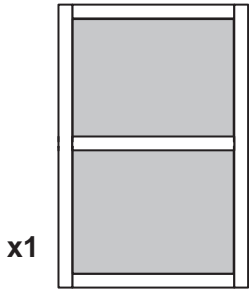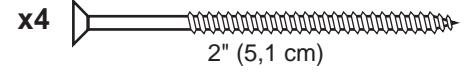
√**BEGIN**

1   Arrange parts as shown on flat surface. **Center temporary part GUA over door.**

Secure temporary support **GUA** with (4) 2" screws.

GUA
Temporary support

2" (5,1 cm)
Screws

CENTER   CENTER

PARTS REQUIRED:

x2 — 3" (7,6 cm)

x4 — 2" (5,1 cm)

x1

x1 | **OO** **Temporary Support**
69" (175,3) Door Stiffener
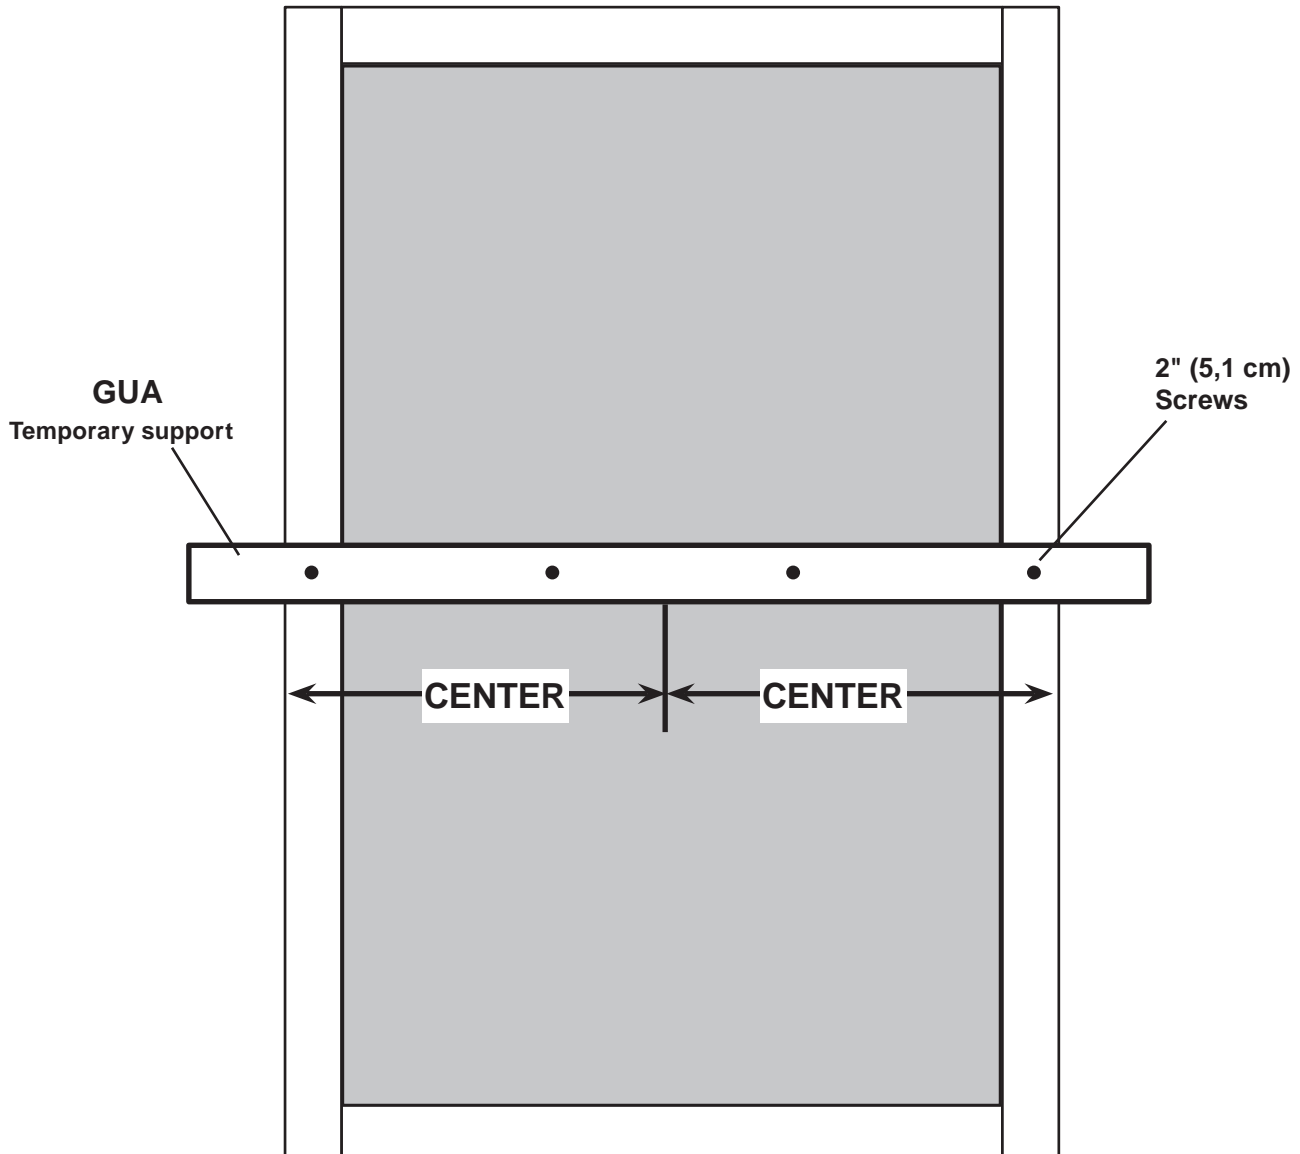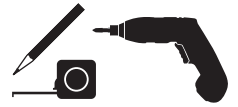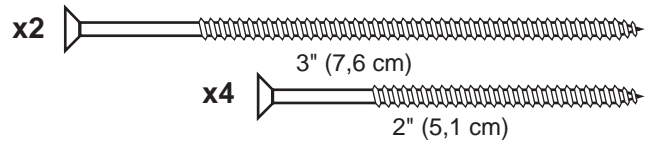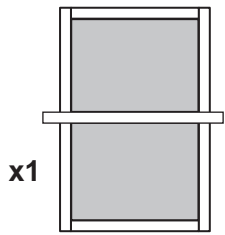
√**BEGIN**

1 Install temporary support **OO** flush to bottom of door trim **(Fig. A)**.
Secure with (2) 3" screws.

Locate center of door opening and mark.

Mark center.

Fig. A

Flush to bottom of trim. !

OO

OO
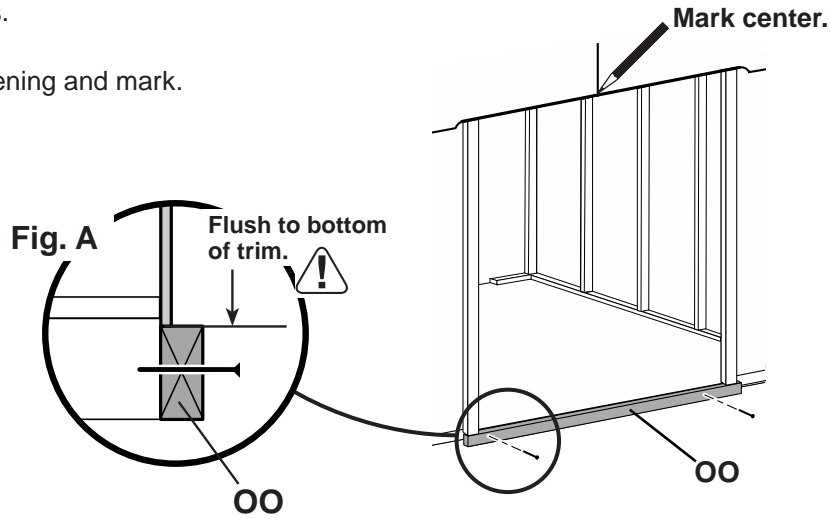
2 Set door on **OO**. Ensure door is centered.
Secure **GUA** to door trim with (4) 2" screws **(Fig. B)**.

Fig. B

1/4" (0,6 cm)

1/4" (0,6 cm)

2" (5,1 cm) **Screws**
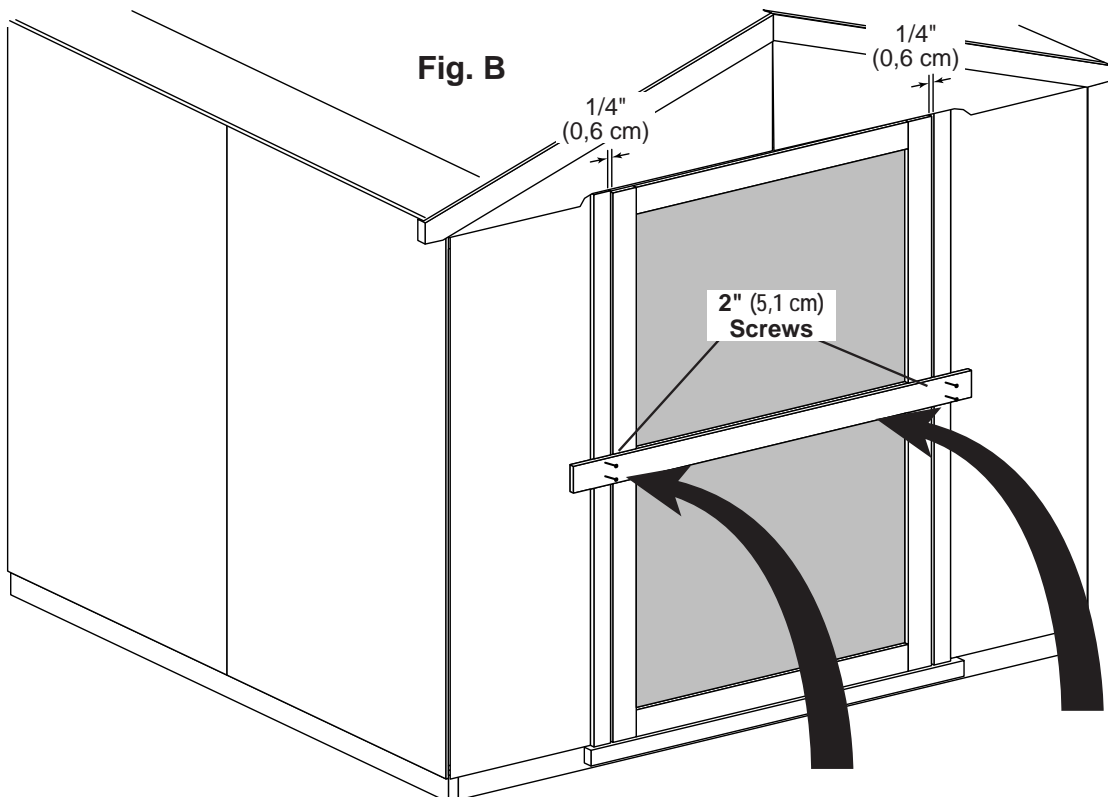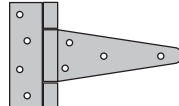
DOOR HARDWARE

PARTS REQUIRED:

x6 1" (2,5 cm)

x8 2-1/2" (6,4 cm)

x3
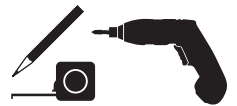
IMPORTANT! Verify 1/4" (0,6 cm) gap spacing on each side of door.

3 Place top hinge flush to top and 1" (2,5 cm) from the outside of trim as shown.
Repeat step for bottom hinge.

4 Secure hinges with 2-1/2" screws on trim and 1" screws on door.
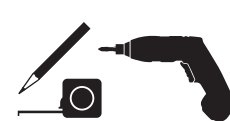
IMPORTANT! If you want door to swing from opposite side, reverse position of hinges.

Flush

3/8" (1 cm)

1" (2,5 cm)

1/4" (0,6 cm)

3/8" (1 cm)

Do not insert screw here.

1" (2,5 cm) Screws x3

2-1/2" (6,3 cm) Screws x4

1/4" (0,6 cm)

1" (2,5 cm) Screws x3

2-1/2" (6,3 cm) Screws x3

Do not insert screw here.

Flush

1" (2,5 cm)

1/4" (0,6 cm) — **VERIFY 1/4" GAP** — 1/4" (0,6 cm)
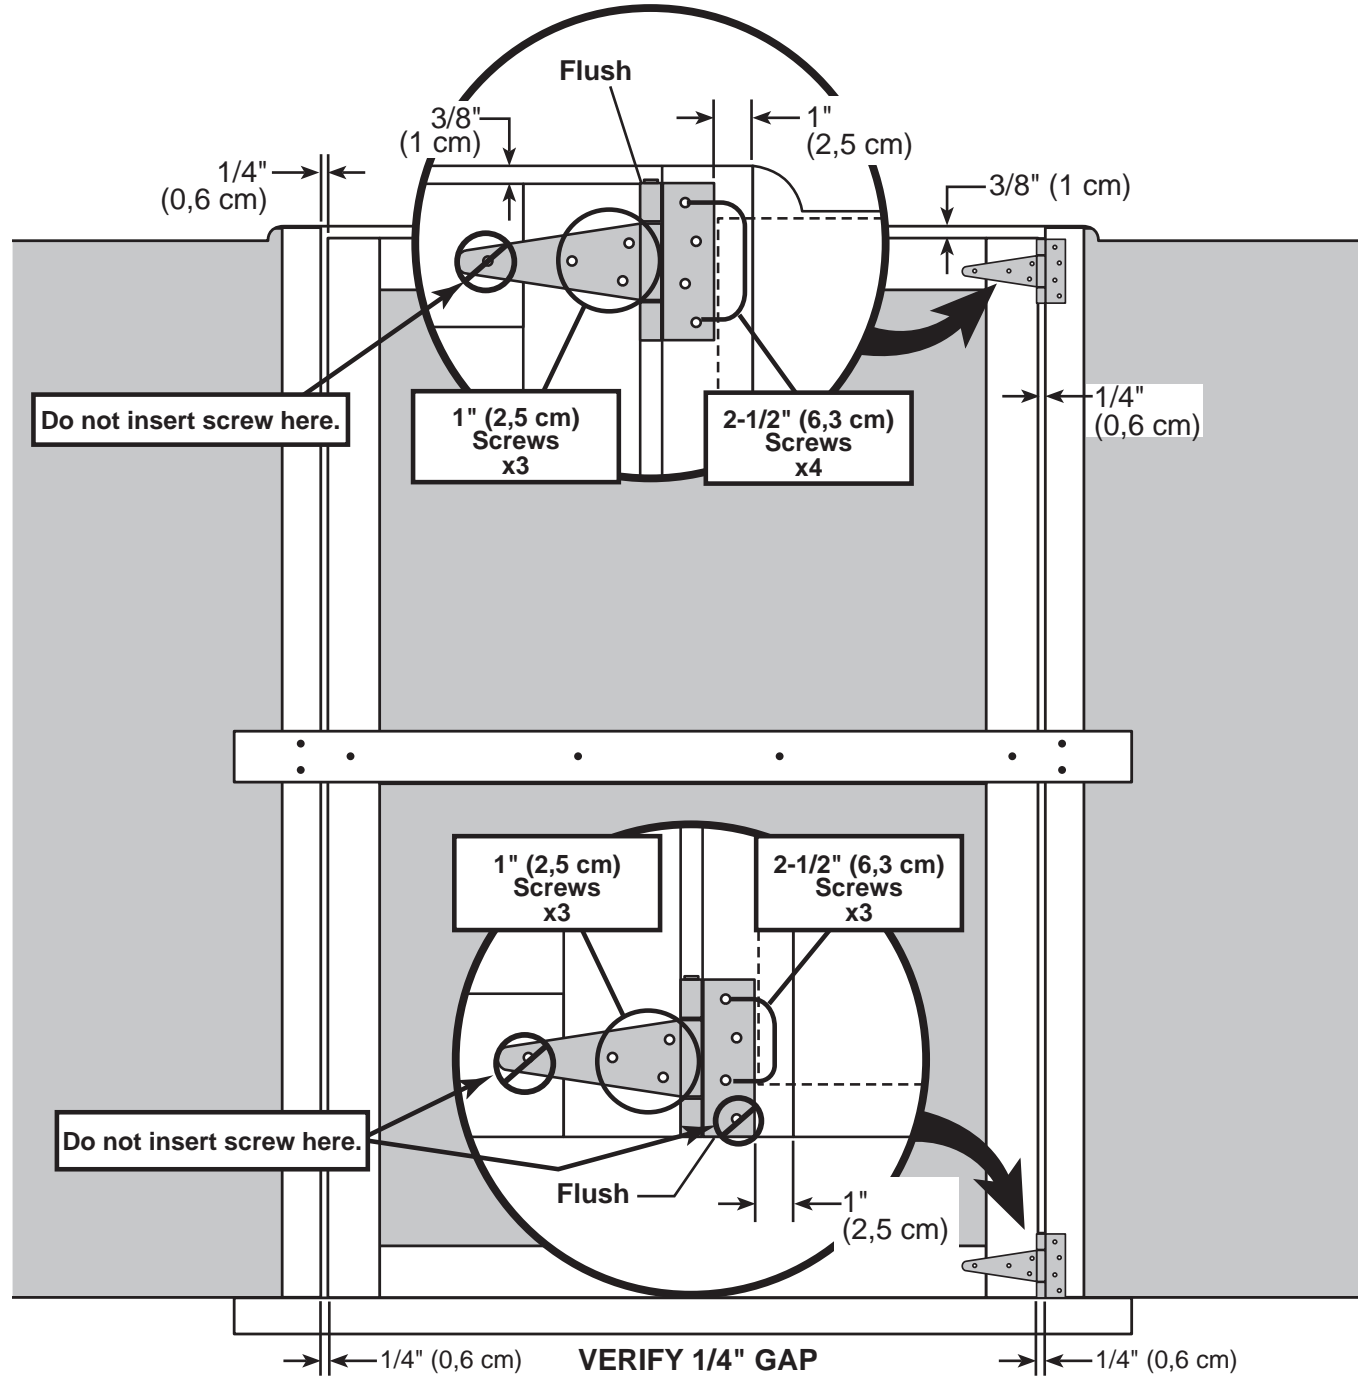
DOOR TRIM

PARTS REQUIRED:

x1 `OO`
69" (175,3) Door Stiffener

x2
3/8 x 1-3/4 x 69" (1 x 4,4 x 175,3 cm)

x10 2" (5,1 cm)

x24 3/4" (1,9 cm)

5 Remove temporary support **(Fig. A)**.

6 Place **OO** 1" (2,5 cm) from side opposite of hinge. Center between floor and over-door header. Secure with (5) 2" (5,1 cm) screws from outside of door **(Fig. B)**.

7 Place **1-3/4" x 69"** batten flush to front of studs and center between floor and over-door header **(Fig. C, Fig. D)**. Secure with (5) 3/4" screws.

8 Reinforce door with 3/4" screws.

OUTSIDE OF SHED

Flush

Batten

3/4" (1,9 cm) x5

2" (5,1 cm) x10

OO

1" (2,5 cm) Approx.

Flush

Batten

3/4" (1,9 cm) x5

Fig. C

Fig. B

Fig. D

Remove temporary support after wall is installed.

Fig. A

3/4" (1,9 cm) x5

Inside of Door

2" (5,1 cm) x5

3/4" (1,9 cm) x5

HINGE SIDE

Batten

OO

Center OO, 69" stiffener between floor and over-door header.

Batten

Center battens between floor and over-door header.

3/4" (1,9 cm)

Reinforce door with 3/4" screws from inside.

42

DOOR HARDWARE

PARTS REQUIRED:

x3 — 1-1/2" (3,8 cm)

x3 — x3 Sets

x3 — 1" (2,5 cm)

x4 — 2-1/2" (6,4 cm)

1/8" (3 mm) Drill Bit

9 Place middle hinge centered on door and 1" (2,5 cm) from the outside of trim.

10 Secure hinge with 2-1/2" screws on trim and 1" screws on door.

11 Pre-drill 1/8 x 1/2" deep holes in remaining hinge holes.

12 Install 1-1/2" hex bolts, washers and hex nuts on hinges, as shown

Hex Nut

Lock Washer

Flat Washer

! Install hex bolts after all screws are installed.

2-1/2" (6,3 cm)

1" (2,5 cm)

1-1/2" (3,8 cm) Bugle Head Bolt

1" Screws (2,5 cm) x3

2-1/2" Screws (6,3 cm) x4

2-1/2" (6,3 cm)

1" (2,5 cm)

1-1/2" (3,8 cm) Bugle Head Bolt

1" (2,5 cm)

2-1/2" (6,3 cm)

1" (2,5 cm)

1-1/2" (3,8 cm) Bugle Head Bolt
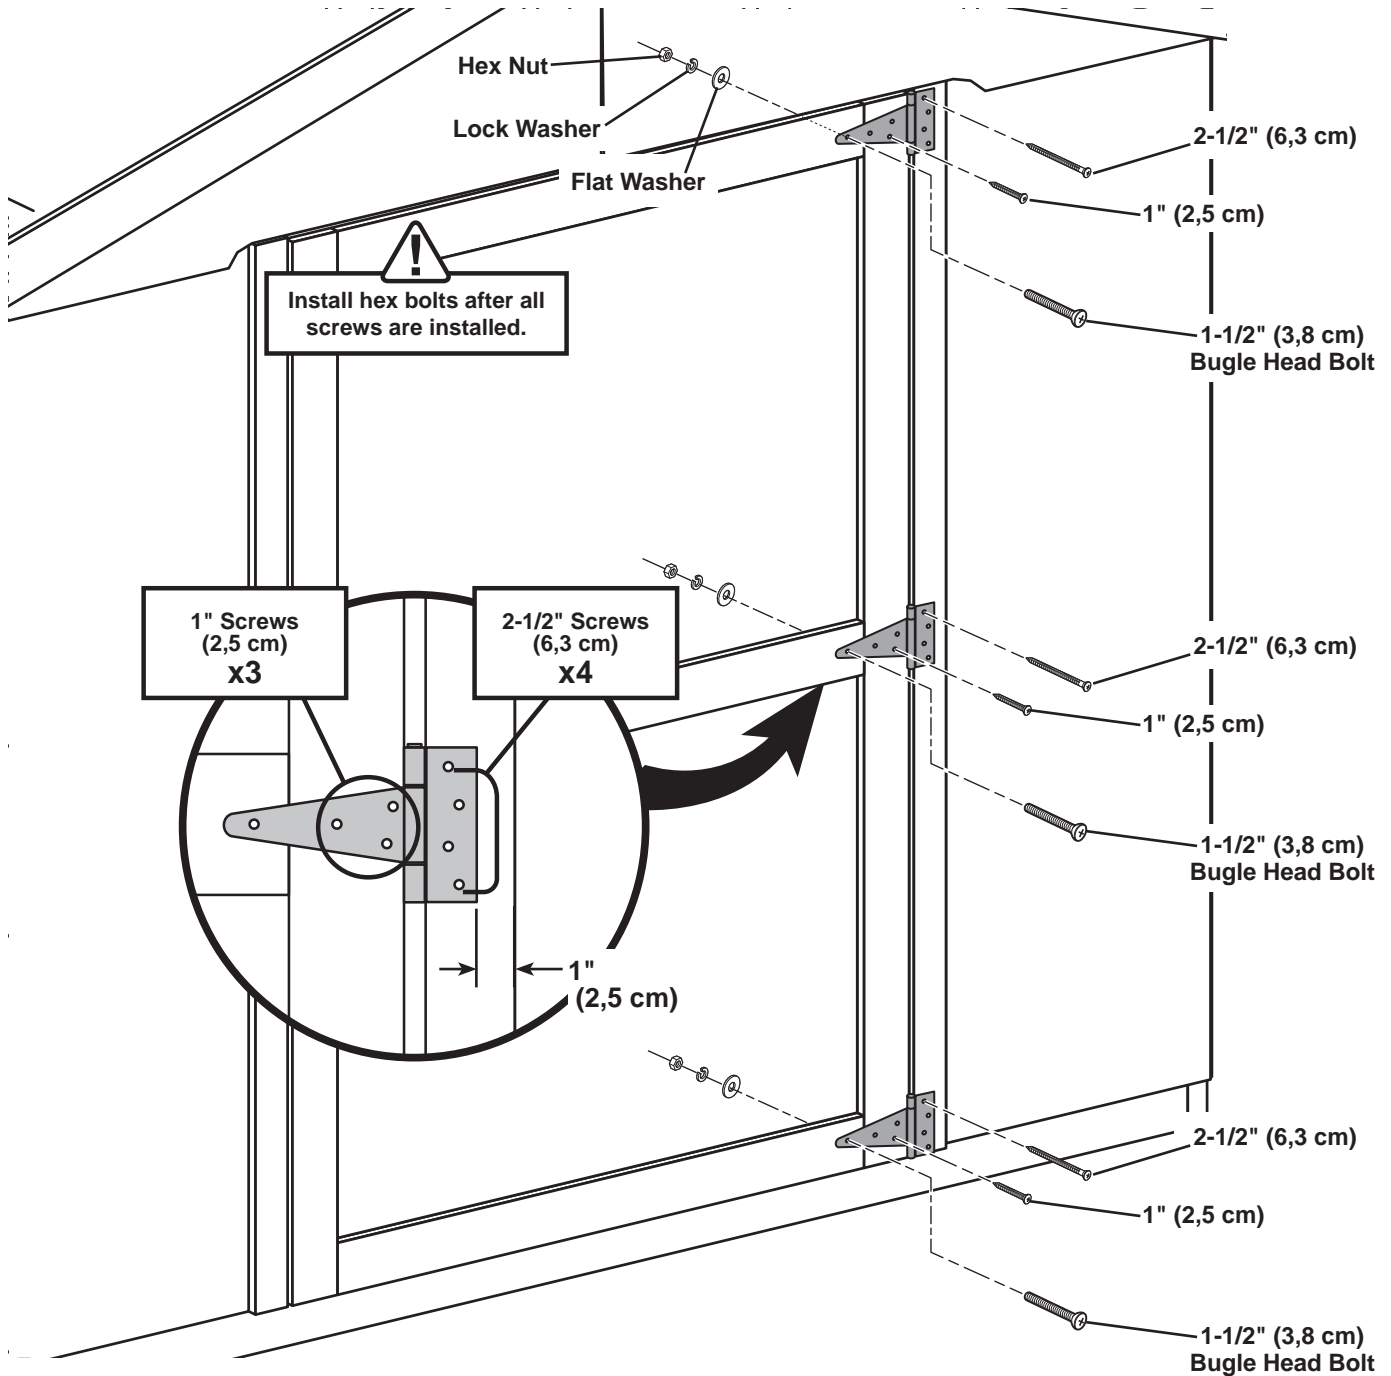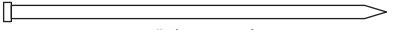
DOOR TRIM AND HARDWARE

PARTS REQUIRED:

x1 | ZB
19/32" x 2-1/2" x 55" (1,5 x 6,3 x 176,5 cm)

x4

x7 3/4" (1,9 cm)

x5 2" (5,1 cm)

13 Center the over-door trim **ZB**.
Secure with 2" screws **(Fig. A)**.

Center over door.

ZB

Fig. A

Flush

⚠ **Ensure nails are pounded into wall frame, behind the panel.**
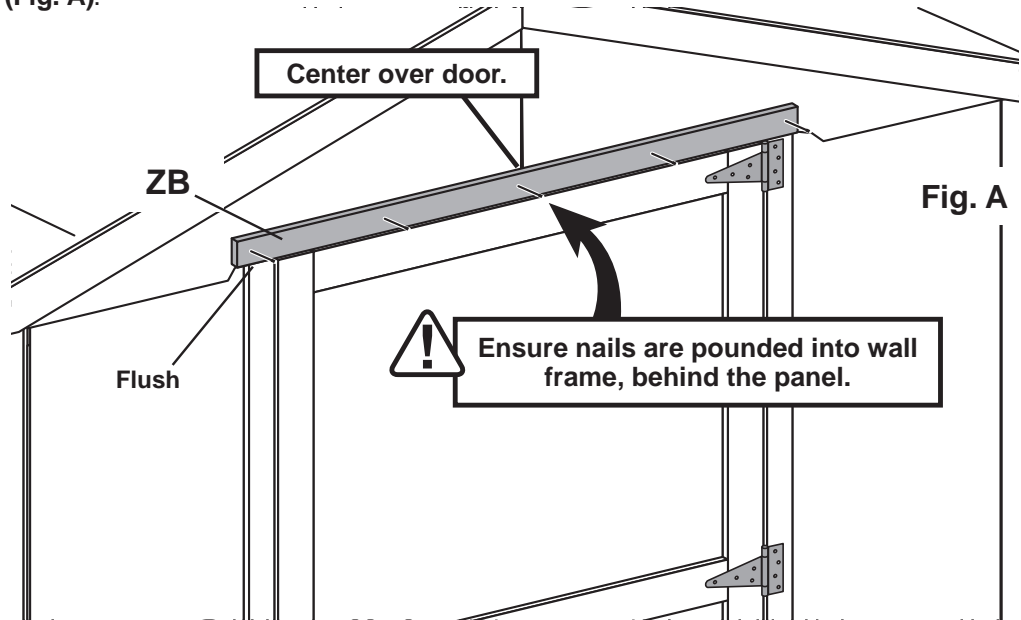
14 Install hasp door and latch on door trim.
Bottom edge of hasp is 36" (91,4 cm) up from bottom edge of door trim.
Measure and mark locations.
Secure with 3/4" screws, as shown **(Fig B)**.

3/4" (1,9 cm)
Screw (x7)

Fig. B
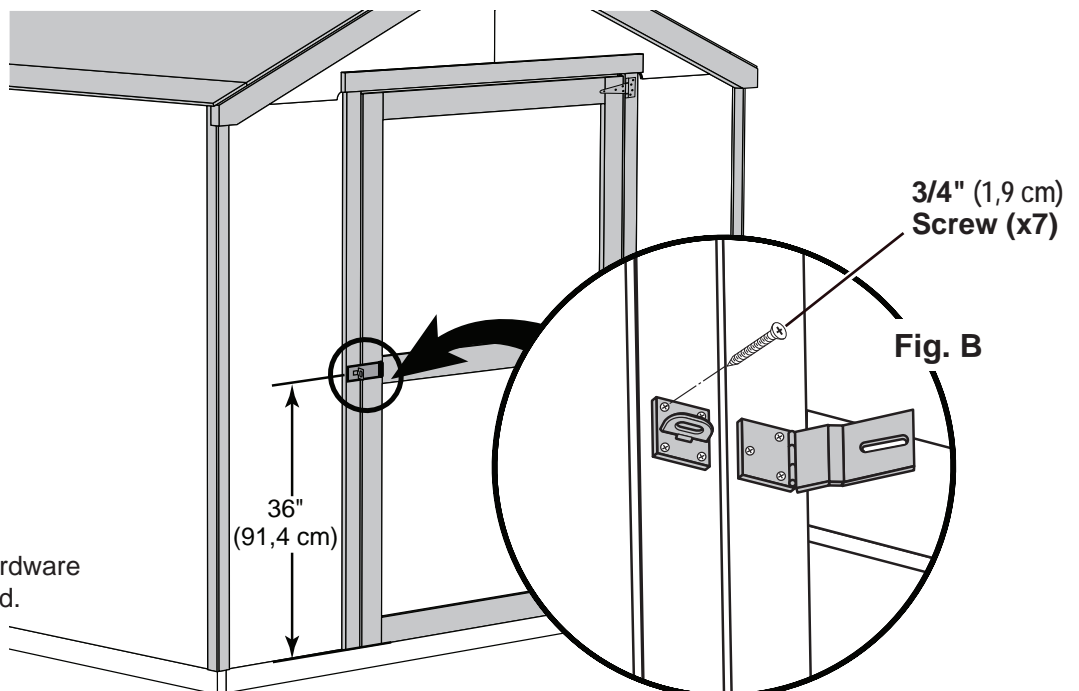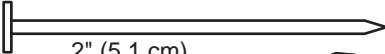
🏁 **FINISH**
Your door trim and hardware
items are now installed.

36"
(91,4 cm)

COLLAR TIES

PARTS REQUIRED:

x6 |━━━━━━━━━━━━━━━
2" (5,1 cm)

x1 | **GUA**
1 x 3 x 60" (2,5 x 7,6 x 152,4 cm)
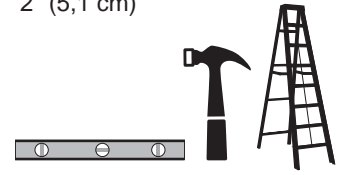
✓**BEGIN**

1 Install (1) collar ties **GUA** on center rafter **(Fig. A)**.
Ensure rafters are level and flush to roof panels.

HINT:
For best appearance, install
collar ties on back side of rafter.

Fig. A

**Flush to roof
panel**

2" (5,1 cm)
Nails

Flush

GUA

**Install collar tie on
middle-rafter.**

🏁**FINISH**
Your collar tie is now installed.

PAINT & CAULK
- NOT INCLUDED -
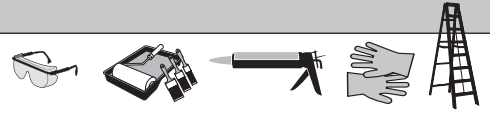
• Use acrylic latex caulk that is paintable. Caulk at all horizontal and vertical seams, between the trim and walls, and all around the door trim.

• Use a high quality exterior acrylic latex paint. When painting your building, there are a few key areas that can be easily overlooked that must be painted:
  • Bottom edge of all siding and trim
  • Inside of doors and all 4 edges

Note:
  Prime all un-primed exterior wood before painting.
  (Follow directions provided by manufacturer.)

ROOF FELT
- NOT INCLUDED -

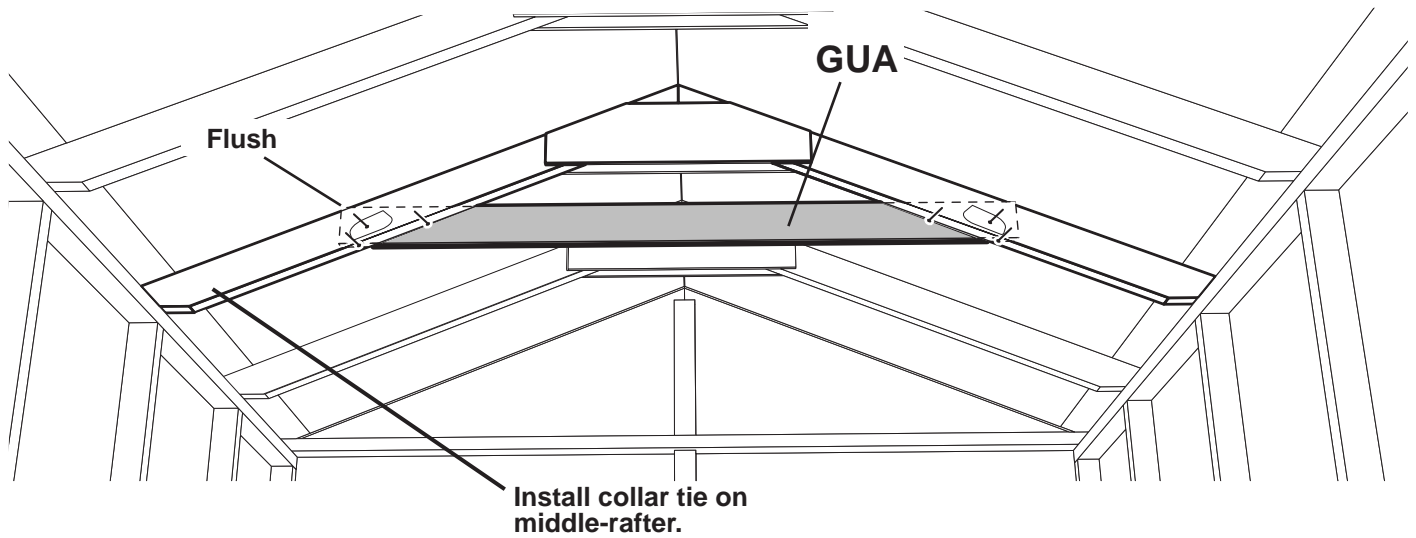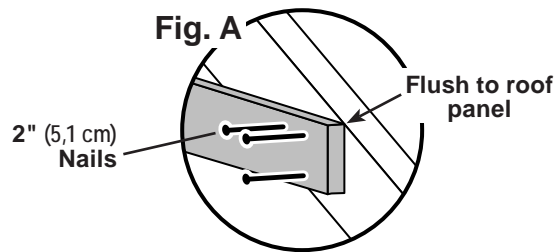• Install felt flush to all roof edges overlapping 3". Use minimal amount of roofing nails to hold in place.

OK to overlap at ridge.

3" OVERLAP

Flush

Flush
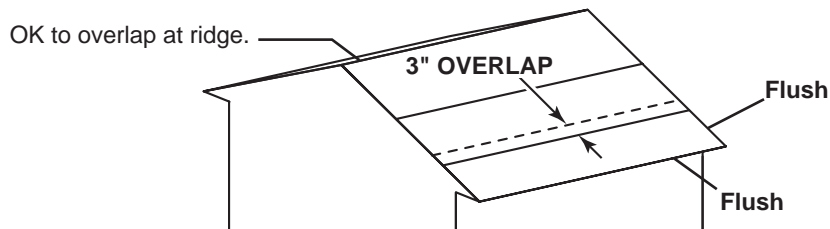
DRIP EDGE
- NOT INCLUDED -

• Install over roof felt on gable side **(Fig. A)**.
• Do not use nails on side of drip edge that hangs over side of building.
• Only nail top of drip edge as shown.

Roof Felt

Drip Edge

Fig. A

Edge flush to trim.

Snip bottom side of drip edge and bend over to other side of roof.

(Follow directions provided by manufacturer.)

46
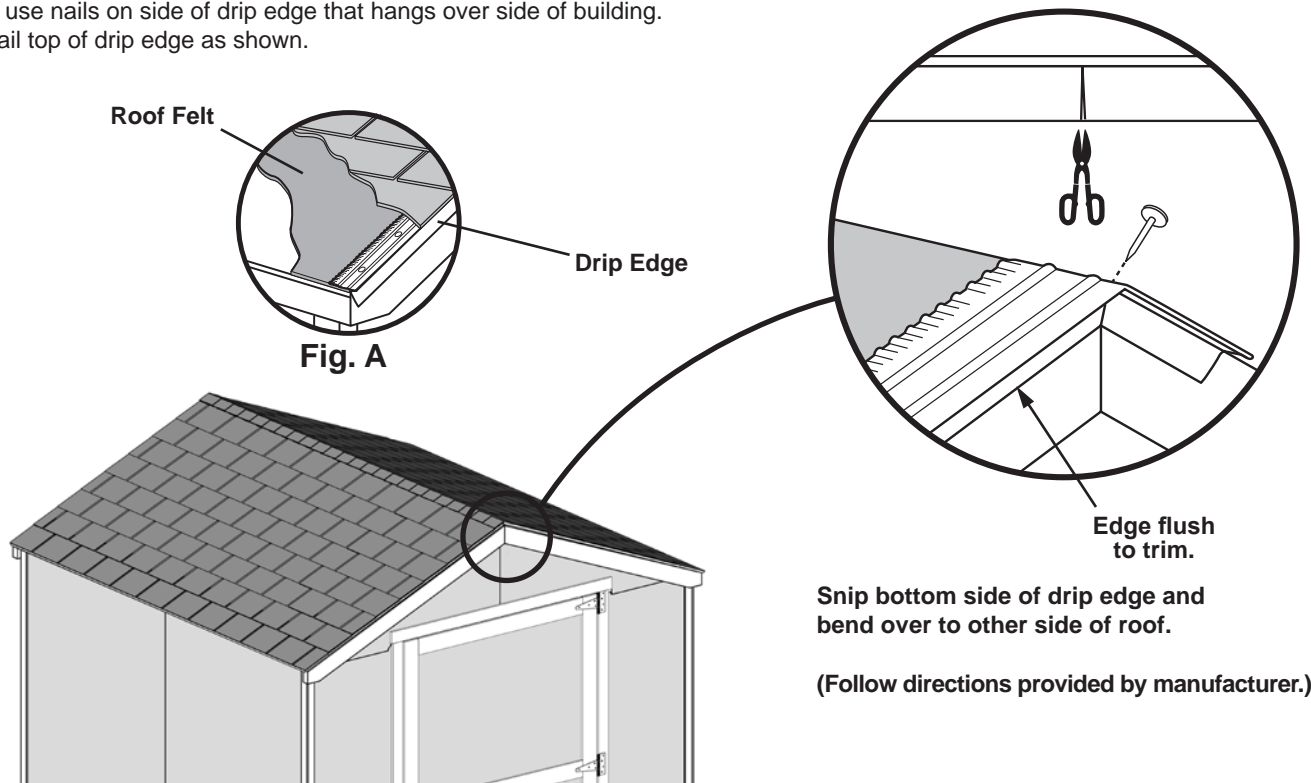
SHINGLES
- NOT INCLUDED -

• **Follow directions provided by manufacturer and these instructions.**
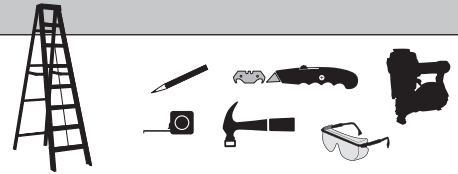
⚠ **Familiarize yourself with a 3-Tab Shingle.**

Notch   Notch
SHINGLE NAIL PATTERN

1"
(2,5 cm)

1/2"
(1,3 cm)

Sealing Strip

1"
(2,5 cm)

Half A Rain Slot

Full Rain Slot
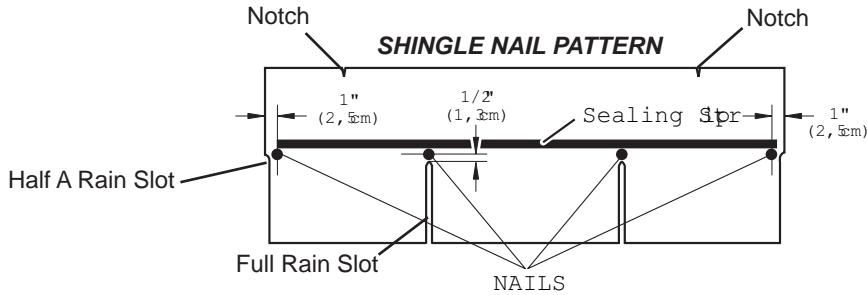
NAILS

⚠ **NEVER DRIVE FASTENERS INTO OR ABOVE SEALING STRIPS.**

✓**BEGIN**

1 Install first starter row upside down and color up with a 1" overhang at back and bottom of roof panel. Use (4) nails per shingle. **Starter row must be straight and level all the way across with lower edge of roof deck.**
NOTE: If you have installed drip edge install shingles flush to drip edge.

**FRONT OF
SHED**

**BACK OF
SHED**

(4) Nails

⚠ **TABS UP**

**1" (2,5 cm) overhang or
flush with drip edge.**

**Shingle overlaps
roof decking.**

**1" (2,5 cm) overhang
past roof deck.**
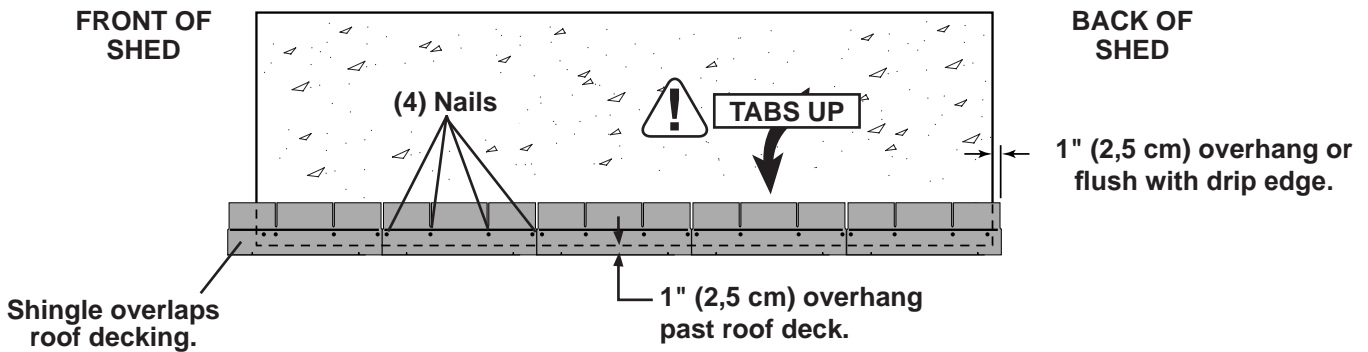
2 Beginning at front of shed, install first row of shingles with notch at 1" past roof edge or flush with drip edge.

Roof Deck

FRONT OF SHED

1" (2,5 cm)

Notch

- or -

Drip Edge

Notch

BACK OF SHED

Flush with starter row.

Flush with starter row.
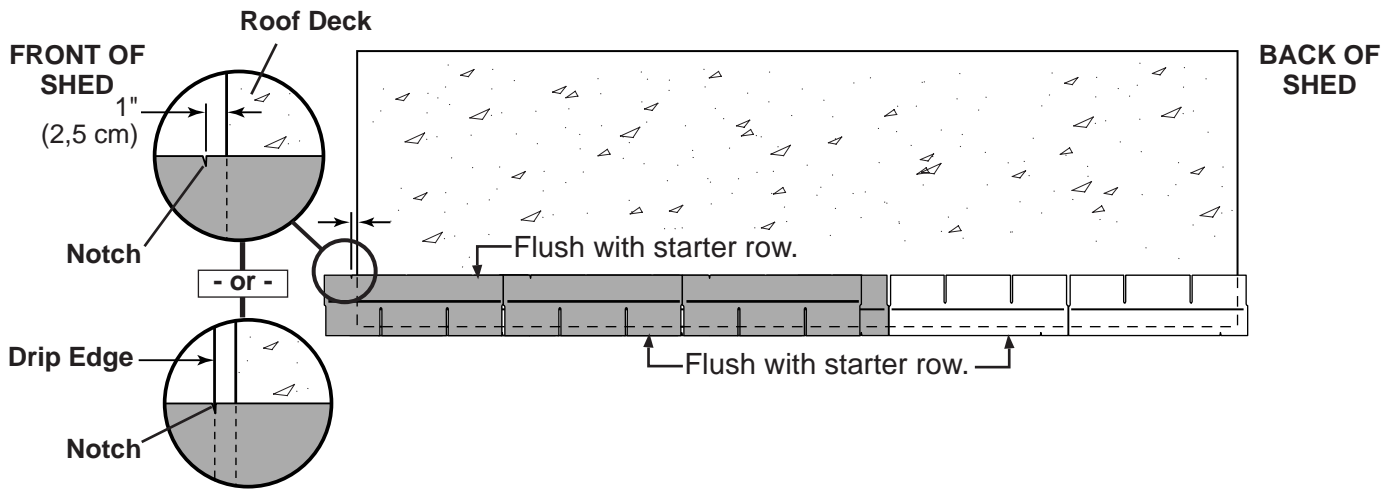
3 Install second row of shingles flush at top of first row's rain slots. Ensure 1" overhang or flush to drip edge at front, stagger each row.

FRONT OF SHED

BACK OF SHED

1" (2,5 cm)

Notch

Flush with rain slots.

Flush with rain slots.
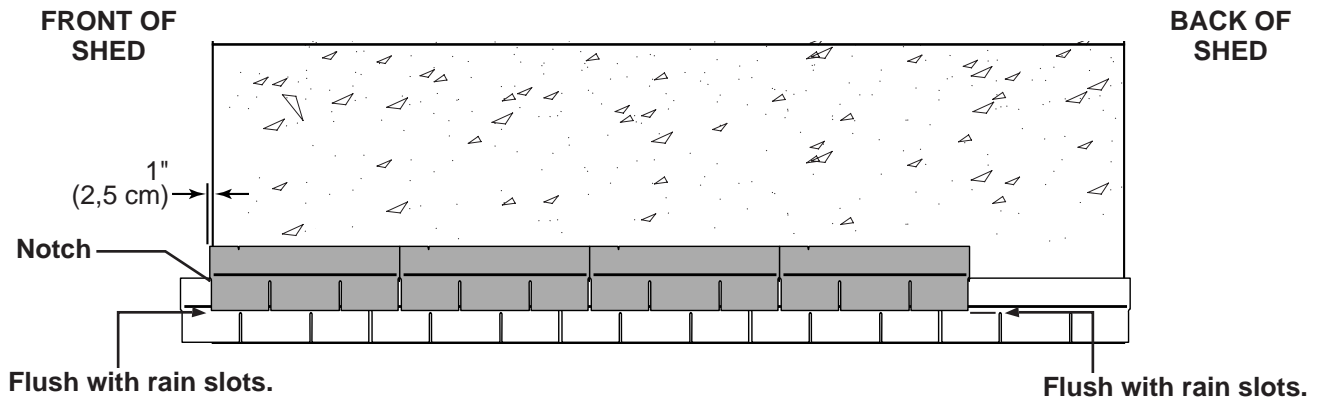
4 Continue installing rows of shingles by staggering at front.

1" (2,5 cm)

FRONT OF SHED

Notch

48
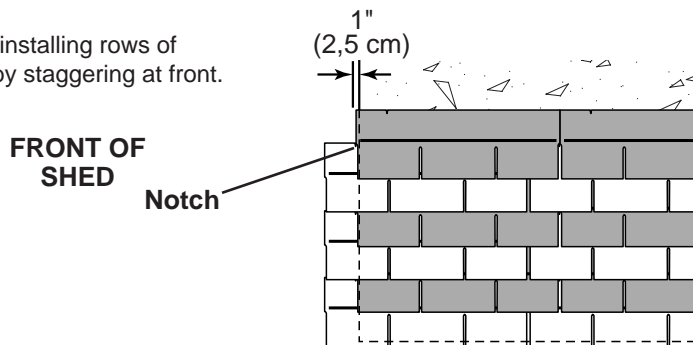
5 Continue installing rows of shingles to the peak. At the peak make sure there is a maximum of 5" or less to the rain slot, as shown below. If shingles overlap at ridge cut to peak with a utility knife.

5"
(12,7 cm) MAX.

Cut Off.

Top of rain slot.

CUT
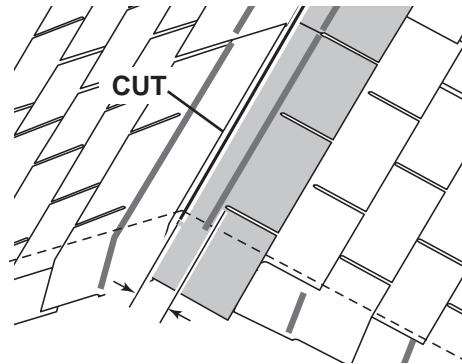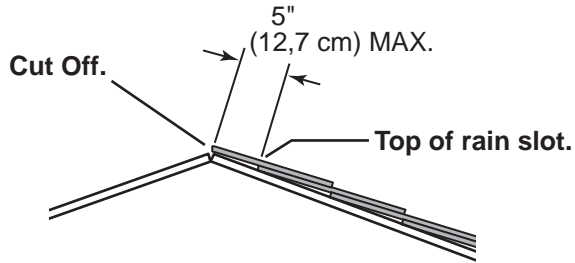
⚠ **• If more than 5" to rain slot you must install another row of shingles.**

6 Repeat steps 1 - 5 to shingle the opposite side of your roof. Trim shingles at ridge.

7 Once both sides are shingled you need to trim ends. Strike a chalk line 1" from edge.

8 Using your shingle hooked blade carefully cut shingles along chalk line.

🏁 **FINISH**

You have finished shingling your roof. Proceed to capping the ridge.
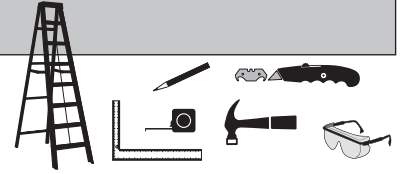
• You will finish off the top of the roof with a ridge cap made from shingles.

✓**BEGIN**

1 Cut shingles into THREE pieces.   **Hint:** Use cut-off pieces first.

2"
(5,1 cm)

2"
(5,1 cm)

2"
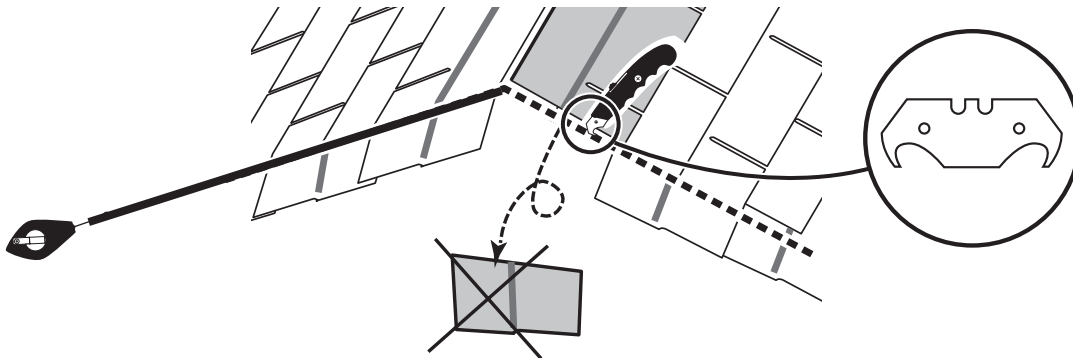(5,1 cm)

2"
(5,1 cm)

2"
(5,1 cm)

2"
(5,1 cm)
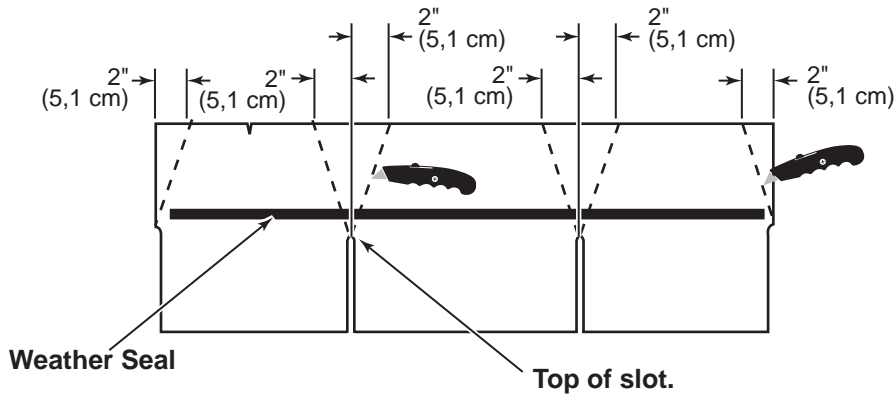
Score shingle,
then snap-off angled cut.

Weather Seal

Top of slot.

Note: • You will need about 20 - 22 cut pieces.

**20 to 22
Pieces**

2 Install first ridge cap flush to shingles at front, as shown.

(1) Nail per side through weather seal.

Flush   **FRONT OF
SHED**
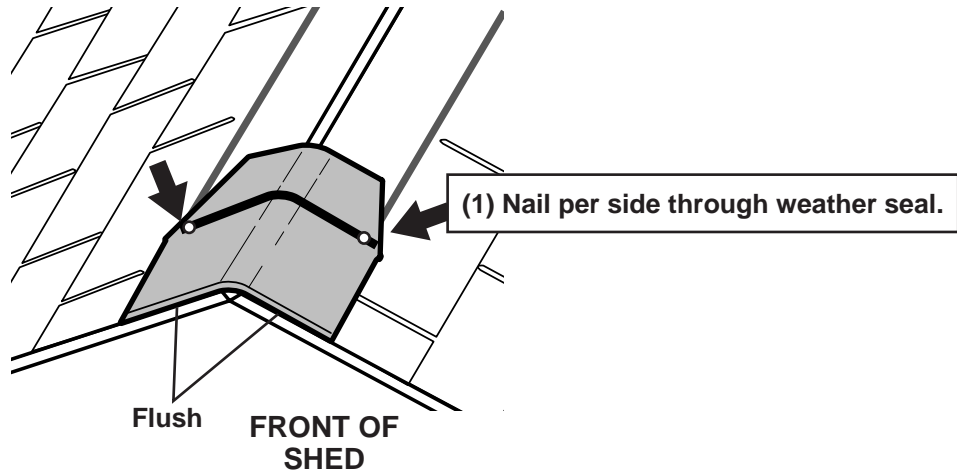
3 Install second ridge cap 5" back, as shown.

(1) Nail per side through weather seal.

5"
12,7 cm

Flush

**FRONT OF
SHED**

50
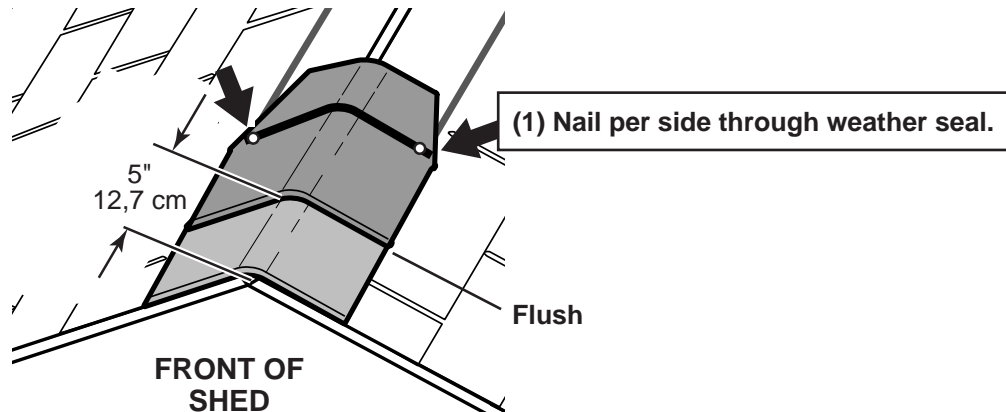
4 Continue installing ridge cap to back of roof.
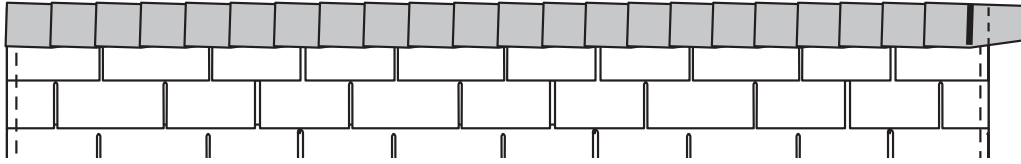
5 Make sure there is 4" between the shingle-color and edge of shingles.

Trim cap off flush to shingles

6 When you have 4" minimum of shingle color cut one piece to cap your roof.

Cap

7 Install flush to shingles.

Flush to shingles

(2) Nails per side.
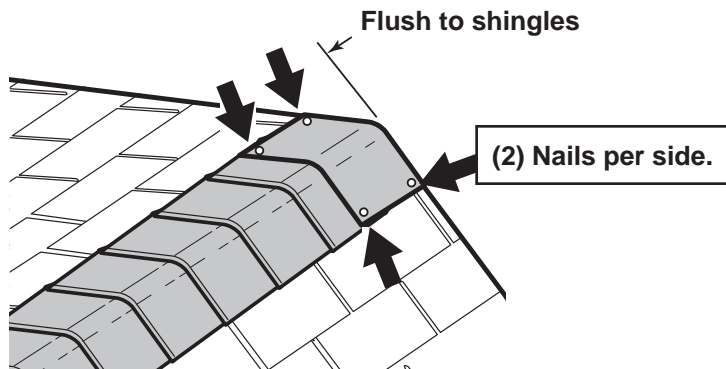
FINISH
You have finished your ridge cap.

LIMITED CONDITIONAL WARRANTY*

Backyard Storage Solutions, LLC warrants the following:

1. Every product is warranted from defects in workmanship and manufacturing for 1 year.
2. All accessories, hardware and metal components are warranted for 2 years.
3. All Oriented Strand Board (OSB) is warranted for 2 years
4. Siding and Trim is warranted for 10 years.
5. Solar Shed windows are warranted for 1 year.
6. Cedar lumber is warranted for 15 years.
7. Preserved Pine is warranted for 10 years.
8. Redwood is warranted for 10 years.

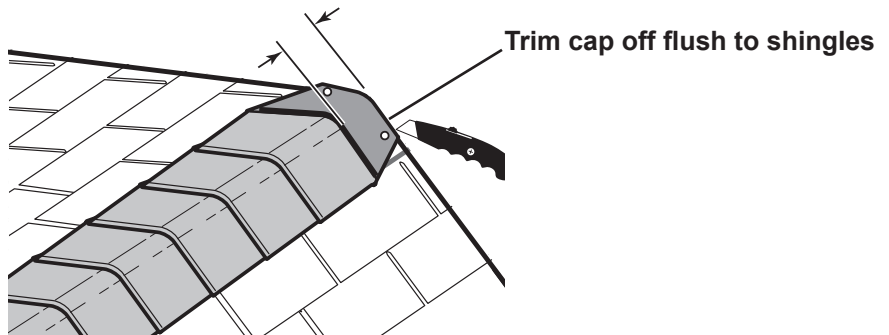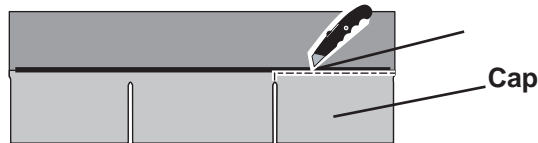Backyard Storage Solutions, LLC will repair, replace or pay for the affected part. In no event shall Backyard Storage Solutions, LLC pay the cost of labor or installation or any other costs related thereto. All warranties are from date of purchase. If a cash refund is paid on an affected part, it will be prorated from the date of purchase.

CONDITIONS

The warranty is effective only when:

1. The unit has been erected in accordance with the assembly instructions.
2. The unit has been properly shingled and painted or stained and reasonably and regularly maintained thereafter.
3. The failure occurs when the unit is owned by the original purchaser.
4. Backyard Storage Solutions, LLC has received the warranty registration card within thirty (30) days of purchase and notification of the failure in writing within the warranty period specified above.
5. Backyard Storage Solutions, LLC has had reasonable opportunity during the sixty (60) days following receipt of notification to inspect and verify the failure prior to commencement of any repair work.

REQUIREMENTS

Storage Buildings

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit; shingle the roof and paint or solid-colored stain the siding using quality, 100% acrylic latex exterior product with a minimum of two (2) coats within thirty (30) days of assembly; caulk above all doors and all horizontal and vertical trim boards; paint and seal all exposed edges, sides and faces of siding/trim and OSB siding to include all exterior walls and all sides and all edges of doors.

Gazebos & Pergolas

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit. This includes treating all of the exposed cedar and pine surfaces on your gazebo or pergola structure with an exterior grade wood preservative, an exterior oil-based semi-transparent stain, an acrylic latex exterior paint or an acrylic latex solid color exterior stain within 30 days of assembly and as needed thereafter to maintain your warranty.

Keep vegetation trimmed away from building and make sure siding panels and trim do not come in contact with masonry or cement. The minimum ground clearance for siding must be one half inch (½ inch) from concrete slab or two and one half inches (2 ½") from the ground when building is erected or constructed on a treated wood floor kit. Water from sprinklers must be kept off unit. In no event will Backyard Storage Solutions, LLC be responsible for any indirect, incidental, consequential or special damages nor for failure(s) that are caused by events, acts or omissions beyond our control including, but not limited to, misuse or improper assembly, improper maintenance (which eventually leads to rot or decay) and acts of God. Backyard Storage Solutions, LLC will not be held responsible for any labor costs incurred to construct your unit.

This warranty gives you certain specific rights that vary from state to state.

CLAIM PROCEDURE

To make a claim under this warranty, you can either call 1-888-827-9056 or email: customerservice@backyardproducts.com.
 Please have ready the information below when you call or include the information in your email:

1. The model and size of the product.
2. A list of the part(s) for which the claim is made.
3. Proof of purchase of the Backyard Storage Solutions, LLC item, as shown on the original invoice or receipt.
4. Run code: found on exterior product label or assembly instructions enclosed in the product package.

All other inquiries can be mailed to:
Backyard Storage Solutions, LLC
Attn: Customer Service
1000 Ternes
Monroe, MI 48162

*WARRANTY TERMS MAY VARY OUTSIDE THE U.S.A.
IMPORTANT: This is your warranty certificate.

10Y MV LDR: 3/20/2019