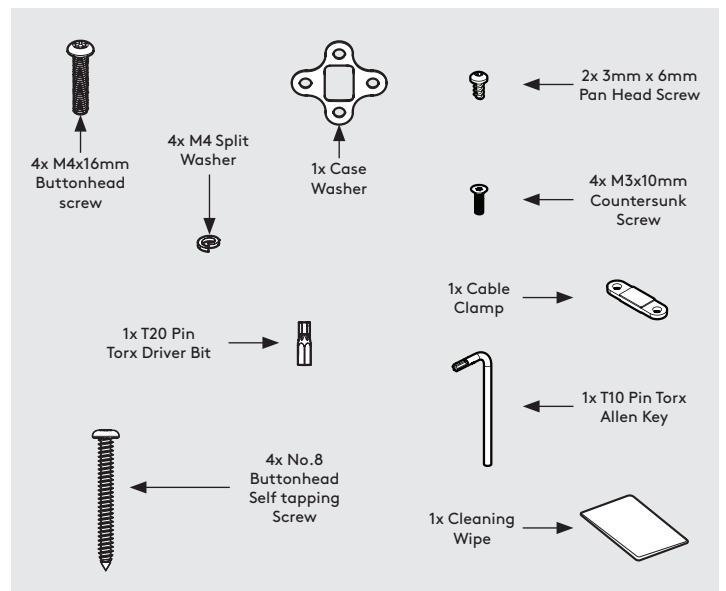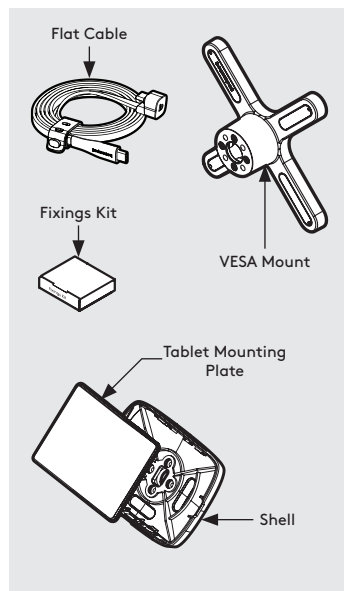# bouncepad®

Core VESA
Assembly Instructions

Tools Required:

- Pencil
- Electric Drill
- 2.5mm Drillbit   *if fixing to a surface*
- Socket Driver
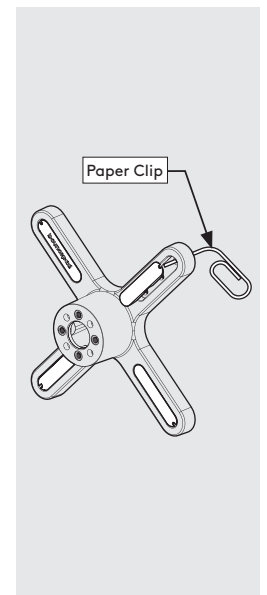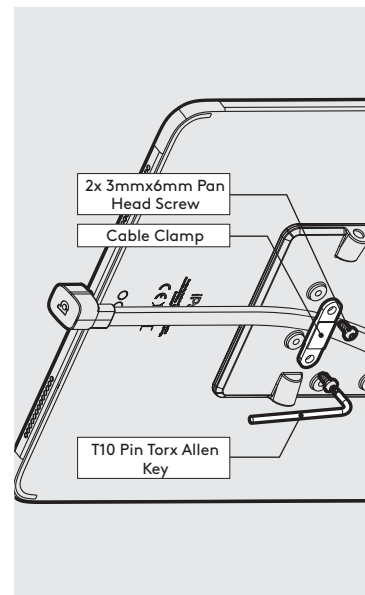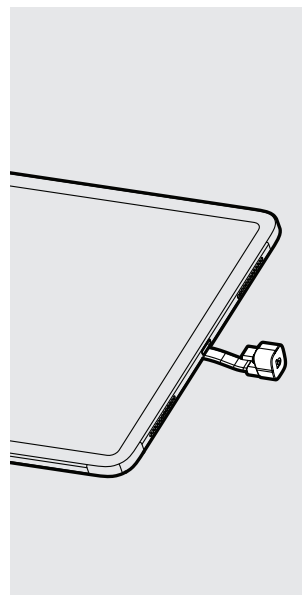- 16mm Holesaw   *if routing the tablet cable through your mounting surface*

In the Box

Flat Cable
Fixings Kit
VESA Mount
Tablet Mounting Plate
Shell

Fixings List

4x M4x16mm Buttonhead screw
4x M4 Split Washer
1x Case Washer
2x 3mm x 6mm Pan Head Screw
4x M3x10mm Countersunk Screw
1x Cable Clamp
1x T20 Pin Torx Driver Bit
1x T10 Pin Torx Allen Key
4x No.8 Buttonhead Self tapping Screw
1x Cleaning Wipe

* Due to the modular nature of our product range you may receive additional fixings in the fixings kit

---

*Before attaching the Mounting Plate, fully clean the back of the tablet with the provided wipe and allow it to fully dry.

For optimal adhesion, press firmly and leave for 72hrs in a 20°C environment before use. Do not reposition. Do not use prior to the 72hrs.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

Landscape   *Portrait*
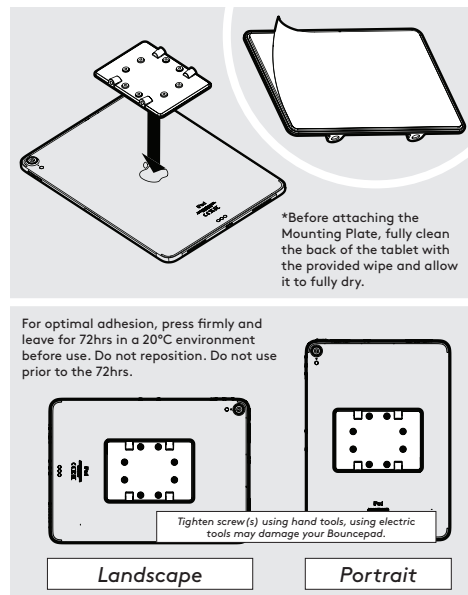
1 Remove the Mounting Plate adhesive backing. Attach level & centrally to the Tablet back as shown.
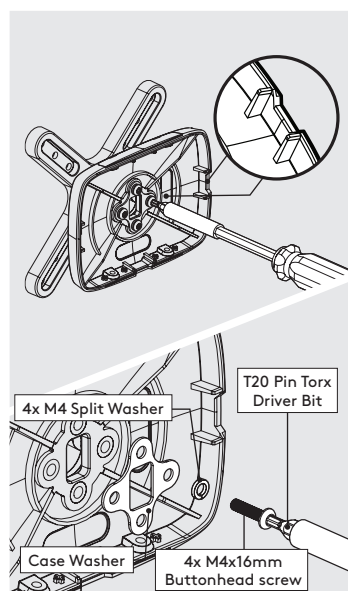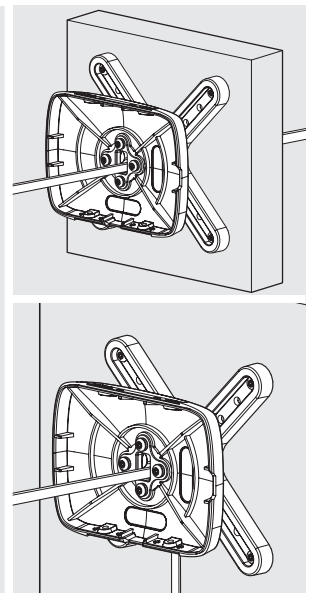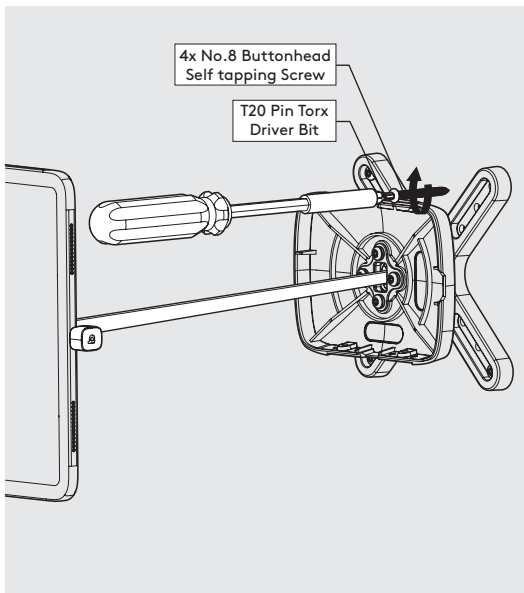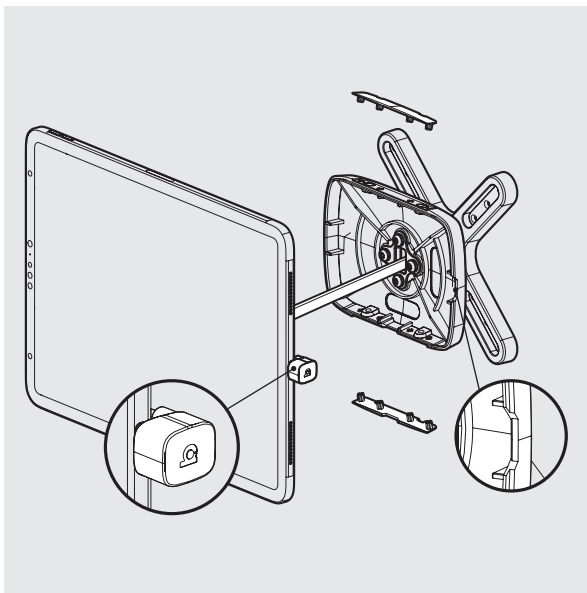
2 Attach the Flat Cable to the Tablet with the U-Bend Head.

2x 3mmx6mm Pan Head Screw
Cable Clamp
T10 Pin Torx Allen Key

3 Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.

Paper Clip

4 Remove the VESA Fixing Covers with a Paper Clip.

4x M4 Split Washer
T20 Pin Torx Driver Bit
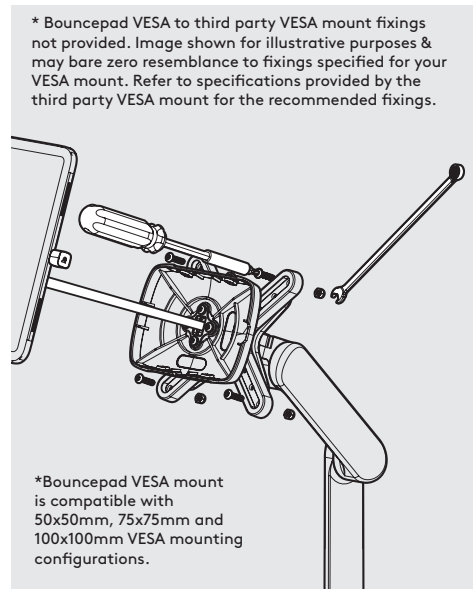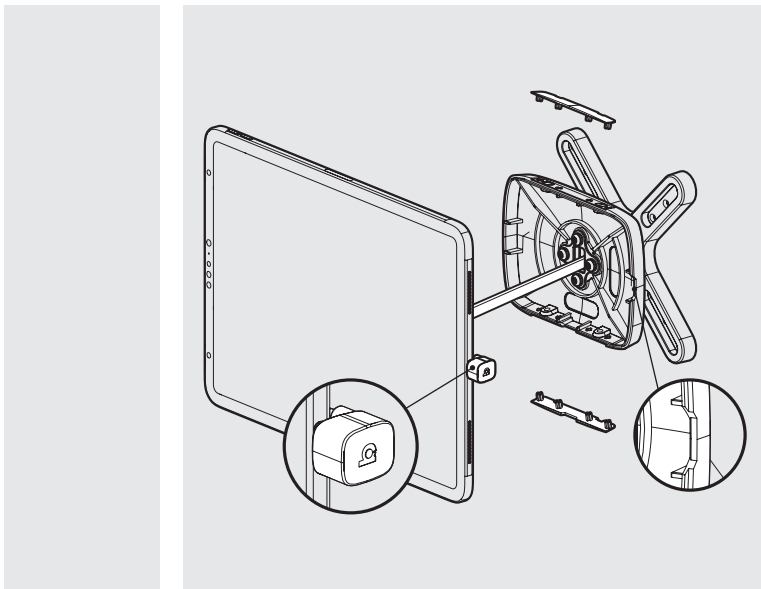Case Washer
4x M4x16mm Buttonhead screw
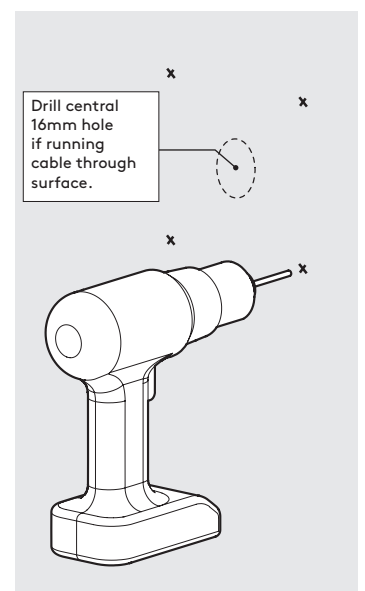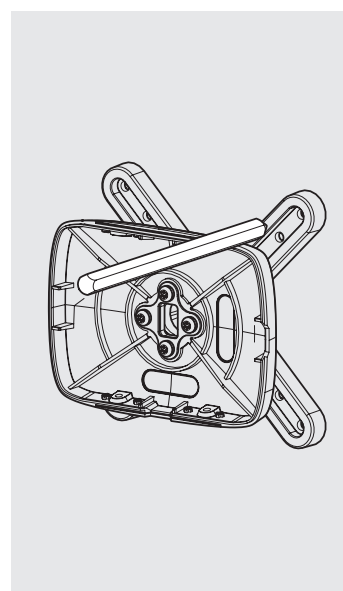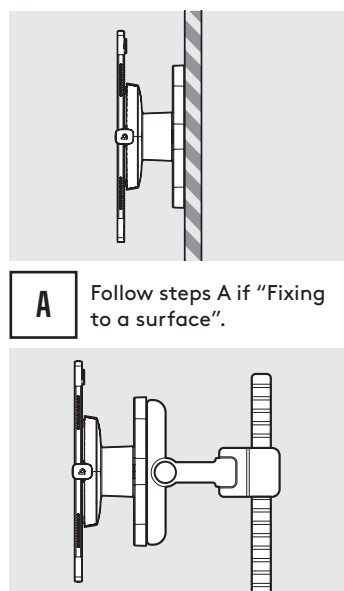
5 Locate & attach the Shell to the VESA in the correct orientation.

A Follow steps A if "Fixing to a surface".

B Follow steps B if "Fixing to a VESA Mount".

A1 Position & mark were the VESA is to be located. Ensure the VESA is level.

Drill central 16mm hole if running cable through surface.

A2 Drill the fixing holes into your surface.

A3 Remove the Shell Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

4x No.8 Buttonhead Self tapping Screw

T20 Pin Torx Driver Bit

A4 Attach the VESA to the surface with your chosen cable management.

---

* Bouncepad VESA to third party VESA mount fixings not provided. Image shown for illustrative purposes & may bare zero resemblance to fixings specified for your VESA mount. Refer to specifications provided by the third party VESA mount for the recommended fixings.

*Bouncepad VESA mount is compatible with 50x50mm, 75x75mm and 100x100mm VESA mounting configurations.
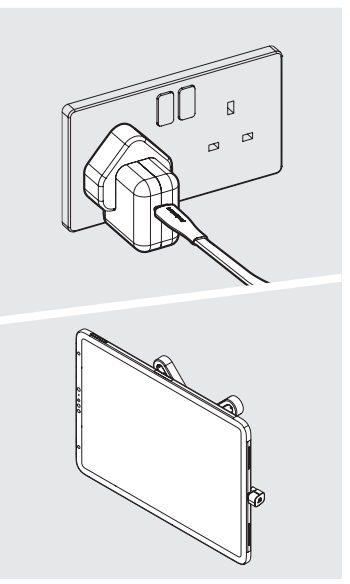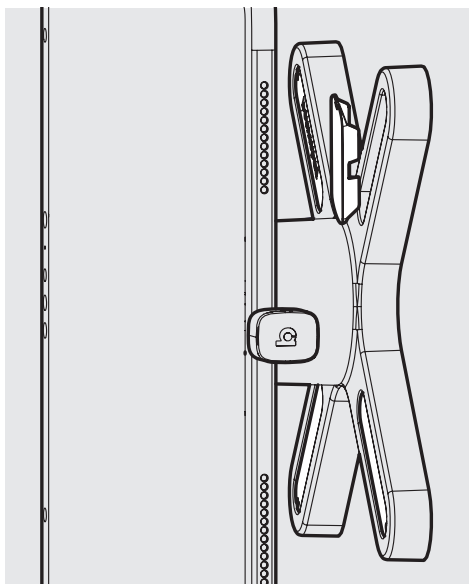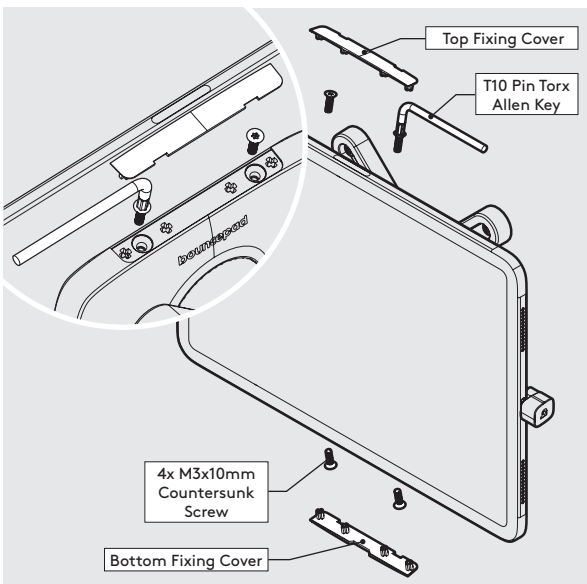
A5 Go to step 6.

B1 Remove the Shell Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

B2 Secure the Bouncepad VESA mount to VESA mounting bracket

B3 Go to Step 6.

Top Fixing Cover

T10 Pin Torx Allen Key

4x M3x10mm Countersunk Screw

Bottom Fixing Cover

6 Secure the Tablet to the Shell & attach the Shell Fixing Covers as shown.

7 Attach the VESA Fixing Covers to the VESA.

8 Connect tablet to power & installation is now complete.