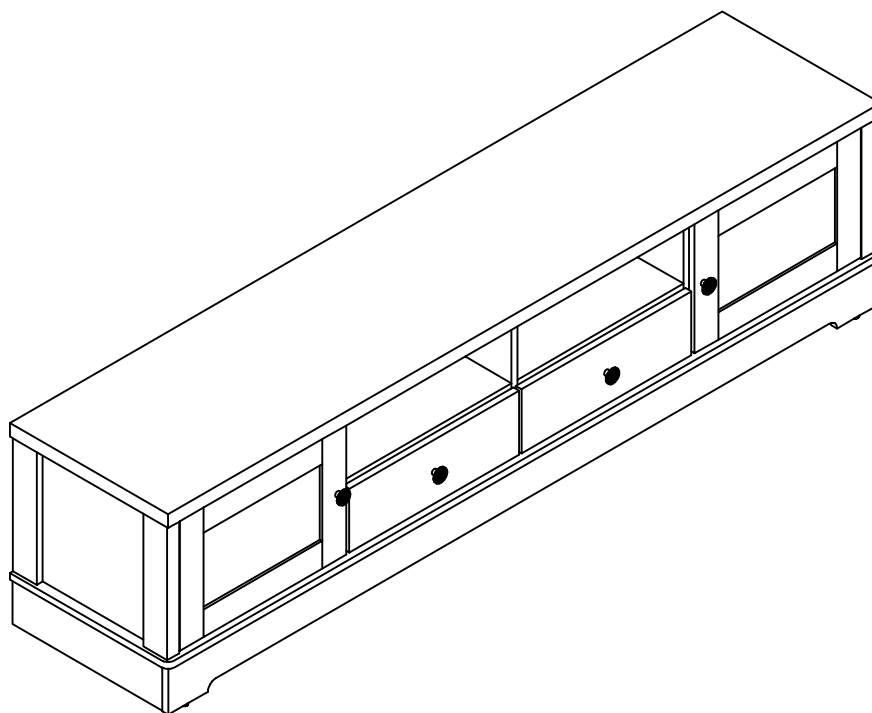# Assemble Instructions

Coco Series

Lifely*

Product Code
CCO-TV180-WHT TV STAND
Dimensions(W x D x H)
1800*400*445mm

Important

Please read through instructions carefully
Before assembly and keep for future reference.

For our full catalogue of assembly instructions,
Visit:lifely.com.au/assembly.
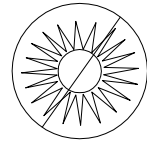
Important Tips and Maintenance

1.
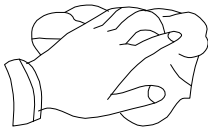Keep children and animals away from working area as smaller parts may cause choking if swallowed

2.
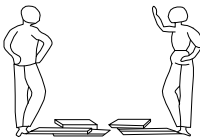Newer place liquids or anything damp upon furniture as it will mark,Ensure a coaster or running is beneath.

3.
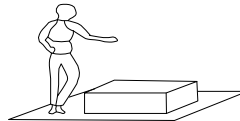New use ammonia based cleaning products as it will damage the finish.

4.
To avoid fading,keep furniture out of direct sunlight.

5.
Use a soft or damp cloth(dry cloth)when wiping or cleaning surface.

6.
Two person are required

7.
Lay a soft matt down to protect the furniture pieces before and during assembly.

So your relationship is strong.But is it flat-pack furniture strong?Unless you're an aerospace engineer,assembling furniture can be slightly stressful.We recommend meditating quietly,pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on,try a compliment instead .E.g."You're so good looking".

This 30-Step assembly should take around 85 minutes with an Allen Key-or 60 minutes with an electric drill. Godspeed.

Designed for everyday

Components Hardware

Please check you have all the fittings
part or tools are listed in below.

No.A
Quantity:45Pcs
Cam Bolt

No.A
Quantity:45Pcs
Cam Nut

No.B
Quantity:36Pcs
Dowel

No.C
Quantity:62Pcs
Screw M3.5*14mm

No.D
Quantity:4Pcs
HINGES

No.E
Quantity:6Pcs
Ground Nail

No.F
Quantity:2Pcs
Drawer Runner

DRAWER RUNNERA-L/R
DRAWER RUNNERB-L/R

No.G
Quantity:18Pcs
Screw M3.5*35mm

No.H
Quantity:4Pcs
Handle

No.I
Quantity:2Pcs
Dowel

No.J
Quantity:18Pcs
Back Plate Clamp

Components Panels & Part List

Please check you have all the panels
are listed below.

1. Back leg _ _ _ _ _ _ _ _ _ _ _ _ _ x1 CTN 1/2
2. Side leg_right _ _ _ _ _ _ _ _ _ _ x1 CTN 2/2
3. Side leg_left _ _ _ _ _ _ _ _ _ _ x1 CTN 2/2
4. Center leg _ _ _ _ _ _ _ _ _ _ _ x1 CTN 2/2
5. Front leg _ _ _ _ _ _ _ _ _ _ _ x1 CTN 1/2
6. Centre panel _ _ _ _ _ _ _ _ _ _ x1 CTN 2/2
7. Shelf panel _ _ _ _ _ _ _ _ _ x2 CTN 2/2
9. Centre panel_left _ _ _ _ _ _ _ x1 CTN 2/2
10. Centre panel_right _ _ _ _ _ _ _ x1 CTN 2/2
11. Top panel _ _ _ _ _ _ _ _ _ _ _ x1 CTN 1/2
12. Side panel_left _ _ _ _ _ _ _ _ x1 CTN 2/2
13. Side panel_right _ _ _ _ _ _ _ _ x1 CTN 2/2

14. Back panel _ _ _ _ _ _ _ _ _ _ _ x1 CTN 1/2
15. Bottom panel _ _ _ _ _ _ _ _ _ _ x1 CTN 1/2
16. Drawer back _ _ _ _ _ _ _ _ _ _ x2 CTN 1/2
17. Drawer side_left _ _ _ _ _ _ _ _ x2 CTN 1/2
18. Drawer side_right _ _ _ _ _ _ _ x2 CTN 1/2
19. Drawer front _ _ _ _ _ _ _ _ _ _ x2 CTN 2/2
20. Drawer base _ _ _ _ _ _ _ _ _ _ x2 CTN 2/2
21. Door panel _ _ _ _ _ _ _ _ _ _ _ x2 CTN 2/2
22. Back panel _ _ _ _ _ _ _ _ _ _ _ x2 CTN 1/2
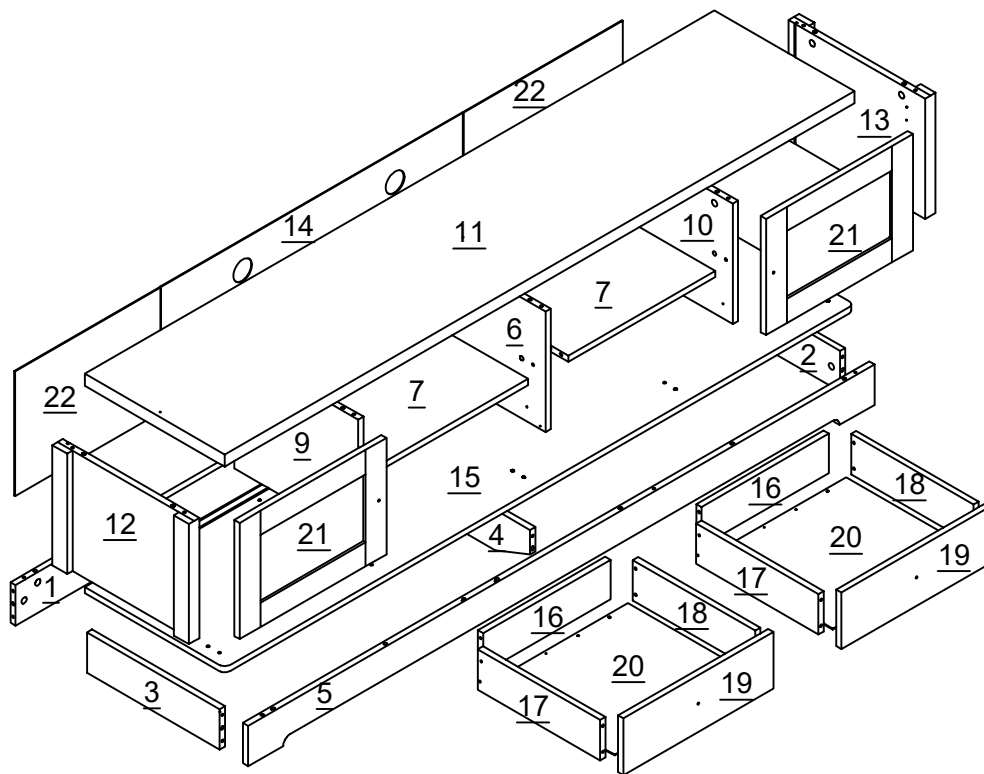
STEP1
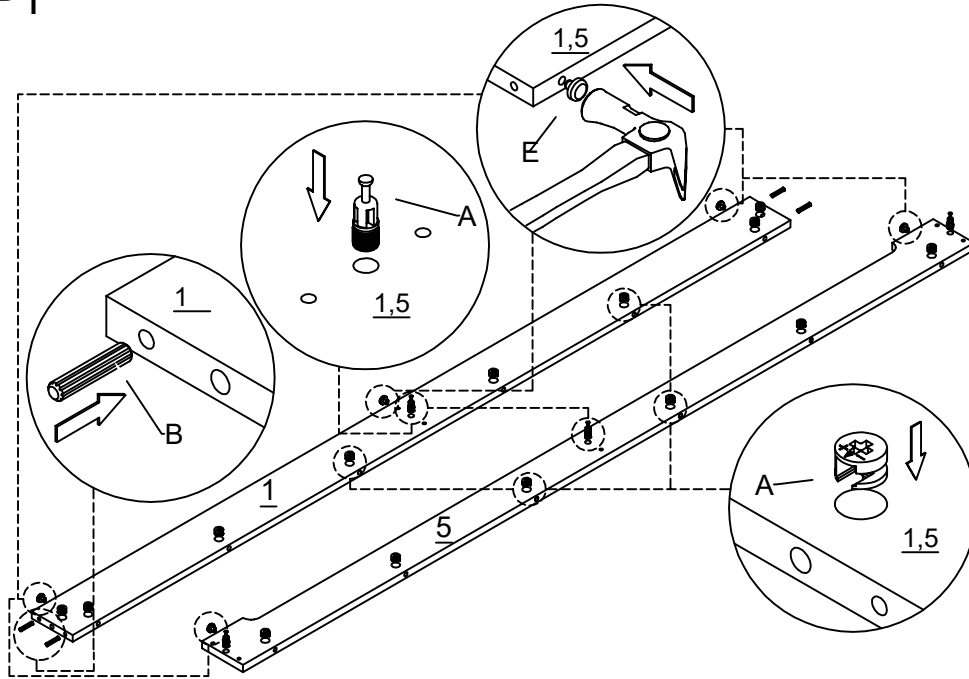
No.A
Quantity:4Pcs
Cam Bolt

No.A
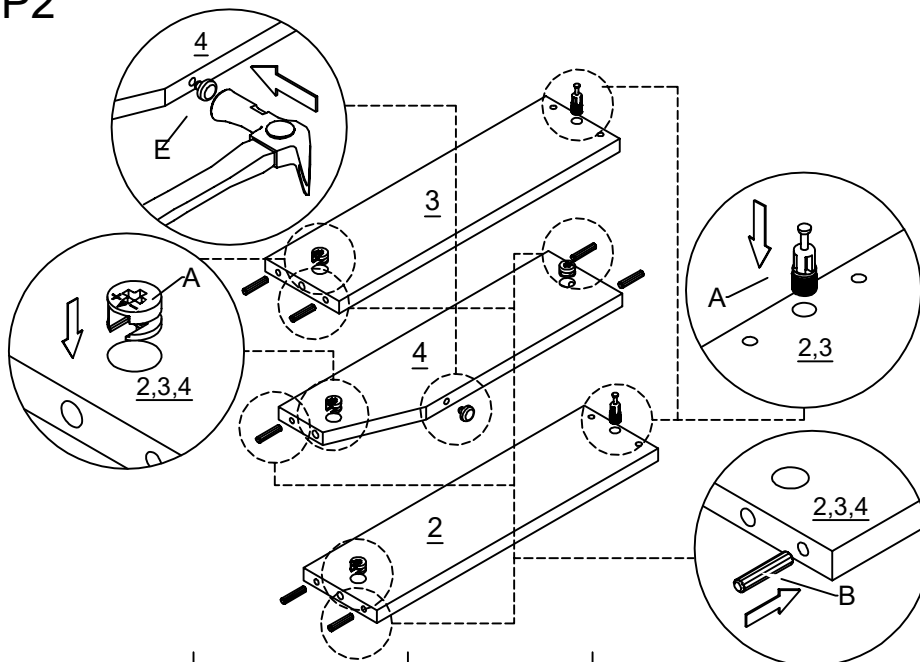Quantity:14Pcs
Cam Nut

No.B
Quantity:4Pcs
Dowel

No.E
Quantity:5Pcs
Ground Nail

STEP2

No.A
Quantity:2Pcs
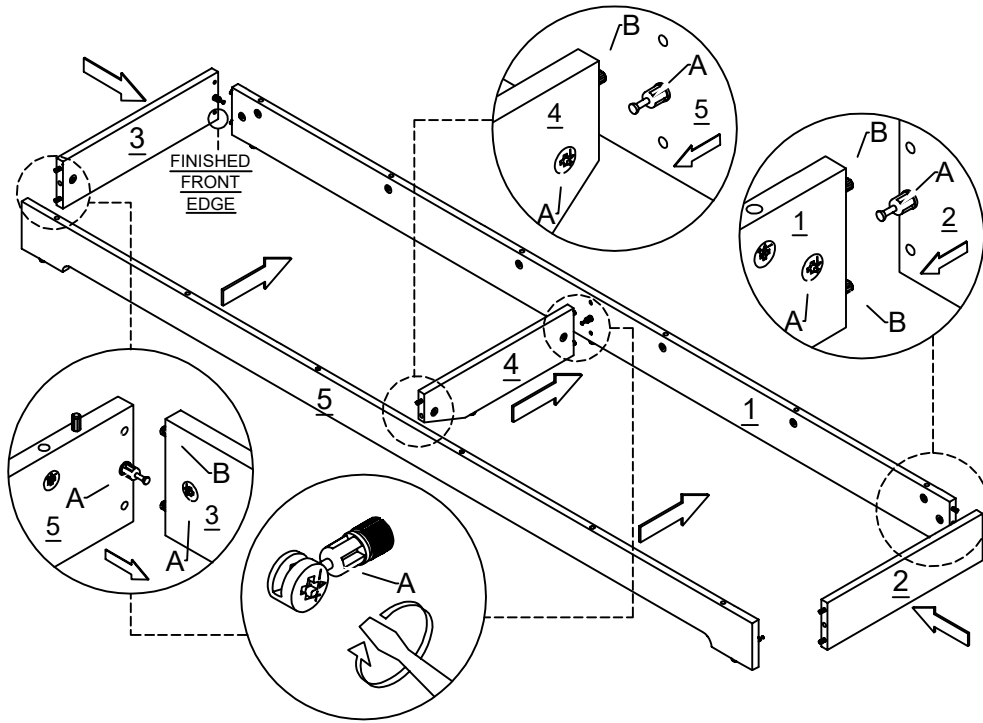Cam Bolt

No.A
Quantity:3Pcs
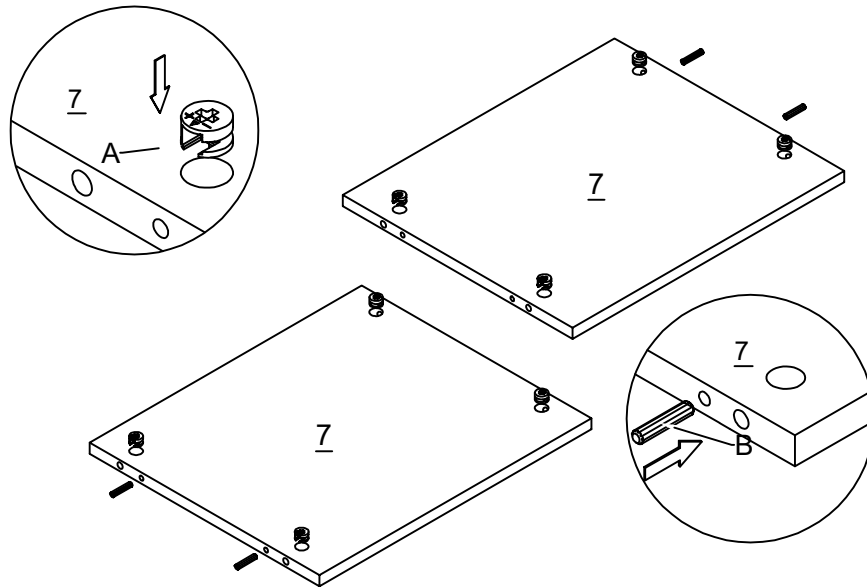Cam Nut

No.B
Quantity:7Pcs
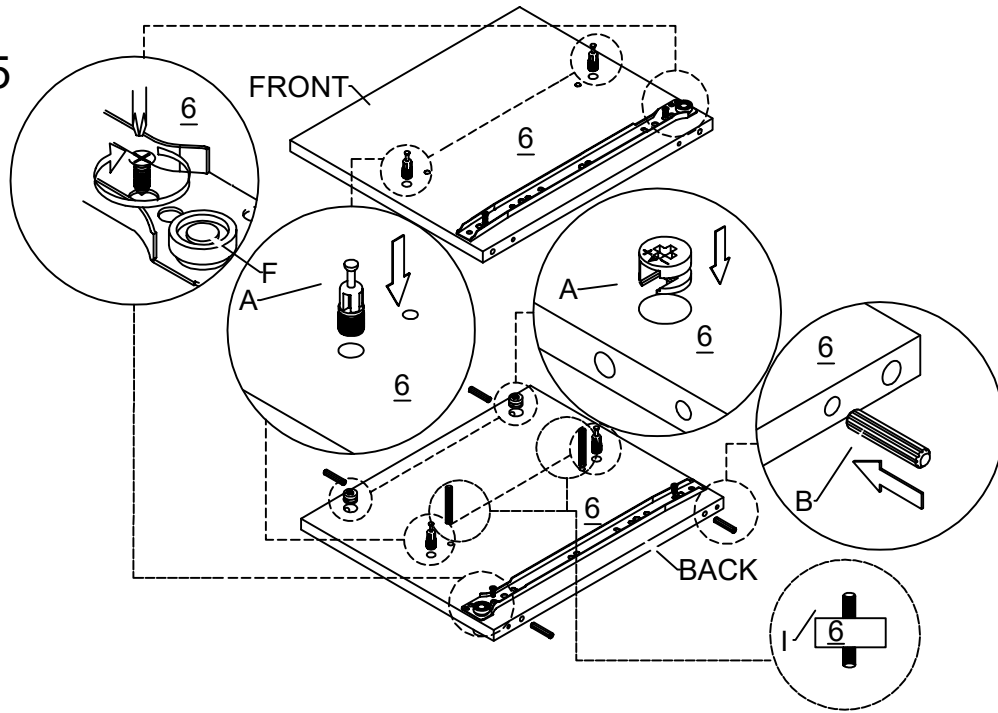Dowel

No.E
Quantity:1Pcs
Ground Nail

STEP3

FINISHED
FRONT
EDGE

STEP4

No.A
Quantity:8Pcs
Cam Nut

No.B
Quantity:4Pcs
Dowel

STEP5

FRONT

BACK

No.A	No.A	No.B	No.C	No.F	No.I
Quantity:4Pcs	Quantity:2Pcs	Quantity:4Pcs	Quantity:4Pcs	Quantity:2Pcs	Quantity:2Pcs
Cam Bolt	Cam Nut	Dowel	Screw M3.5*14mm	Drawer Runner	Dowel
				DRAWER RUNNERA-L/R	

STEP6

No.A	No.A	No.B	No.C	No.F
Quantity:2Pcs	Quantity:2Pcs	Quantity:4Pcs	Quantity:2Pcs	Quantity:1Pcs
Cam Bolt	Cam Nut	Dowel	Screw M3.5*14mm	Drawer Runner
				DRAWER RUNNERA-R

CCO - TV180 - WHT / 8

STEP 7

A

10

A

10

10

10

C

F

10

B

No.A	No.A	No.B	No.C	No.F	
Quantity:2Pcs	Quantity:2Pcs	Quantity:4Pcs	Quantity:4Pcs	Quantity:1Pcs	
Cam Bolt	Cam Nut	Dowel	Screw M3.5*14mm	Drawer Runner	
				DRAWER RUNNERA-L	

STEP 8

A

11

11

No.A
Quantity:10Pcs
Cam Bolt

STEP 9

B.	▬	8PCS
A.	◈	4PCS

12,13

A

13

B   12,13

12
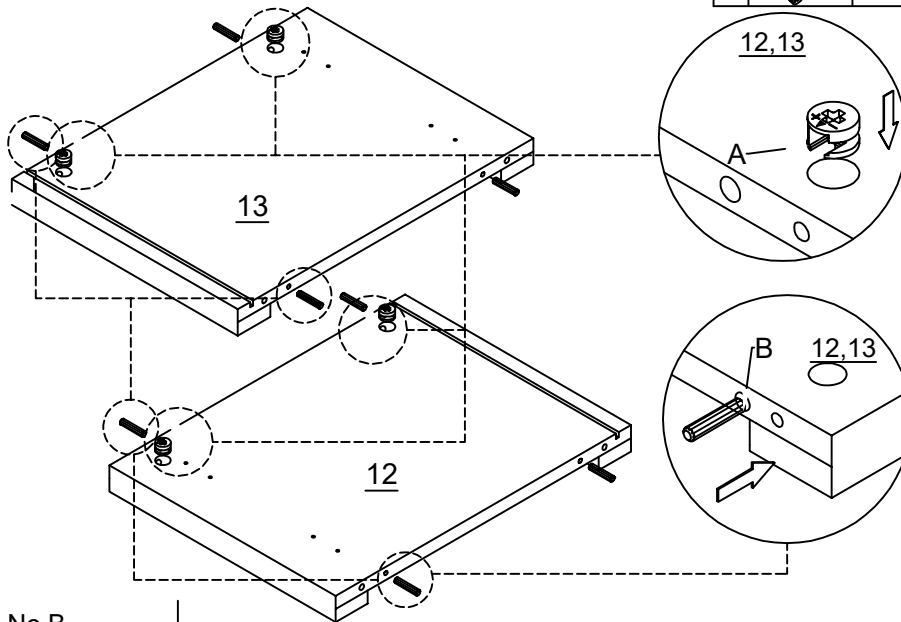
No.A
Quantity:4Pcs
Cam Nut

No.B
Quantity:8Pcs
Dowel

STEP 10

21

D

C

21

21

No.C
Quantity:8Pcs
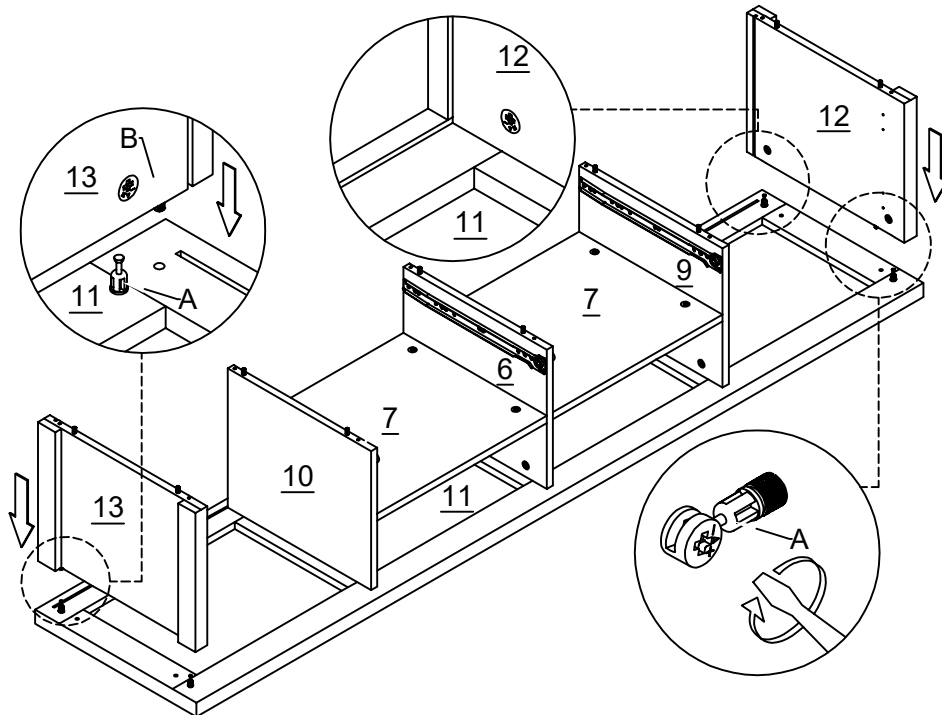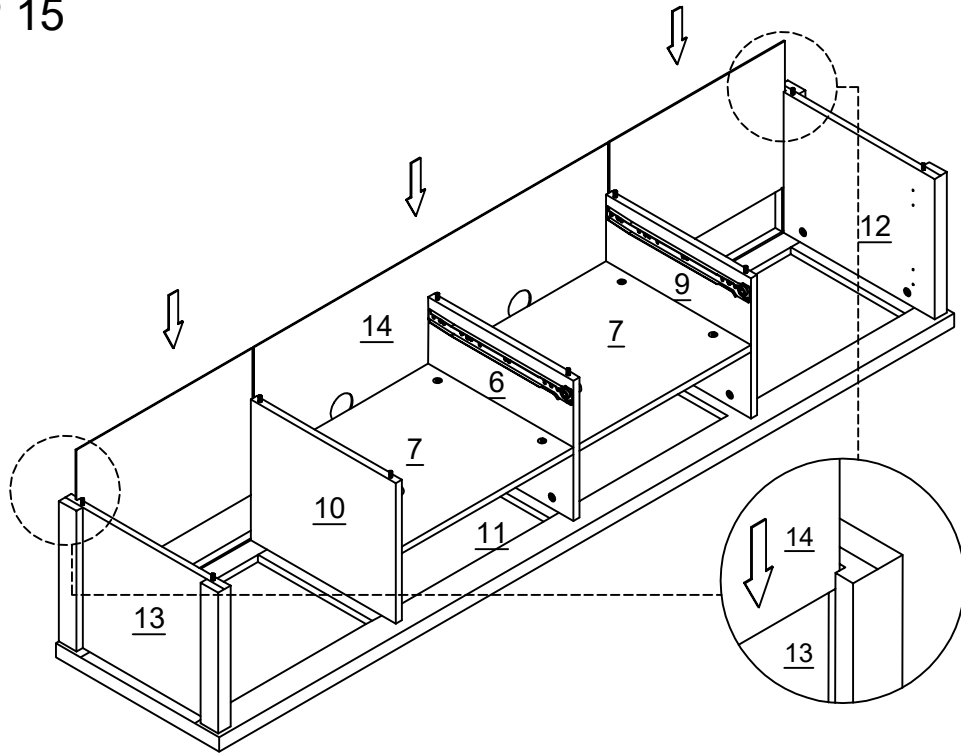Screw M3.5*14mm
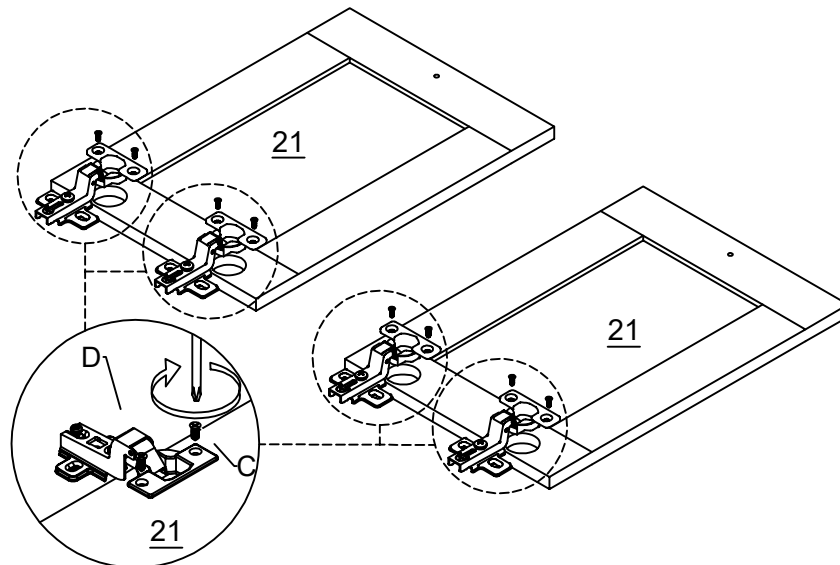
No.D
Quantity:4Pcs
HINGES

STEP 11

6
A

7

6

7

FINISHED
FRONT EDGE

FINISHED
FRONT EDGE

A

STEP 12

A
10
B 7

7

9

6

7

10

FINISHED
FRONT EDGE

FINISHED
FRONT EDGE

A

FINISHED
FRONT EDGE

STEP 13

6 / B

A

11

9

7

6

7

10

11

FINISHED
FRONT EDGE

A

STEP 14

12

B

13

12

11

9

11

7

7

6

7

10

11

A

13

A

STEP 15

14
9
7
6
7
12
10
11
13
14
13

STEP 16

15
B
15
12
13
14
B
15
15
9
6
7
7
11
12
12
10
ROUND EDGE
13
G
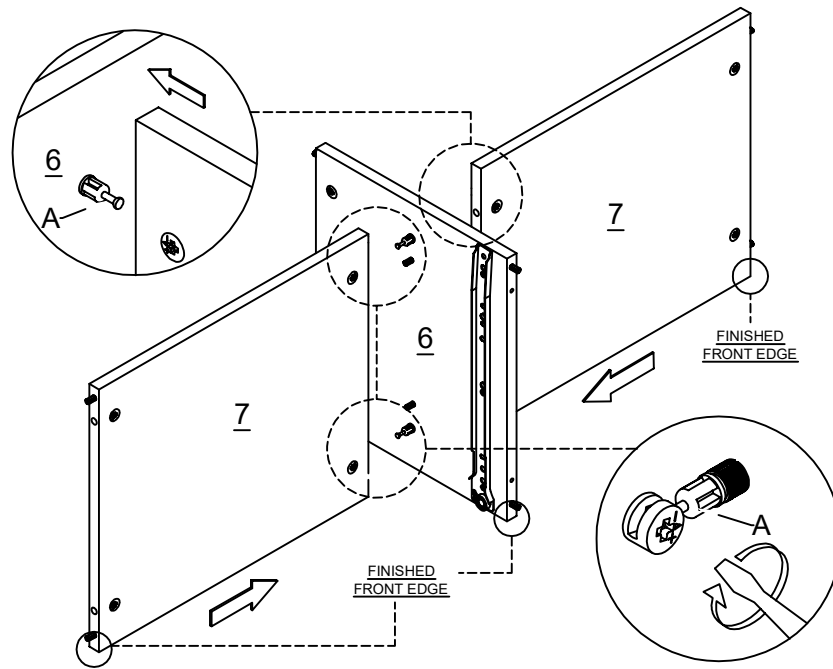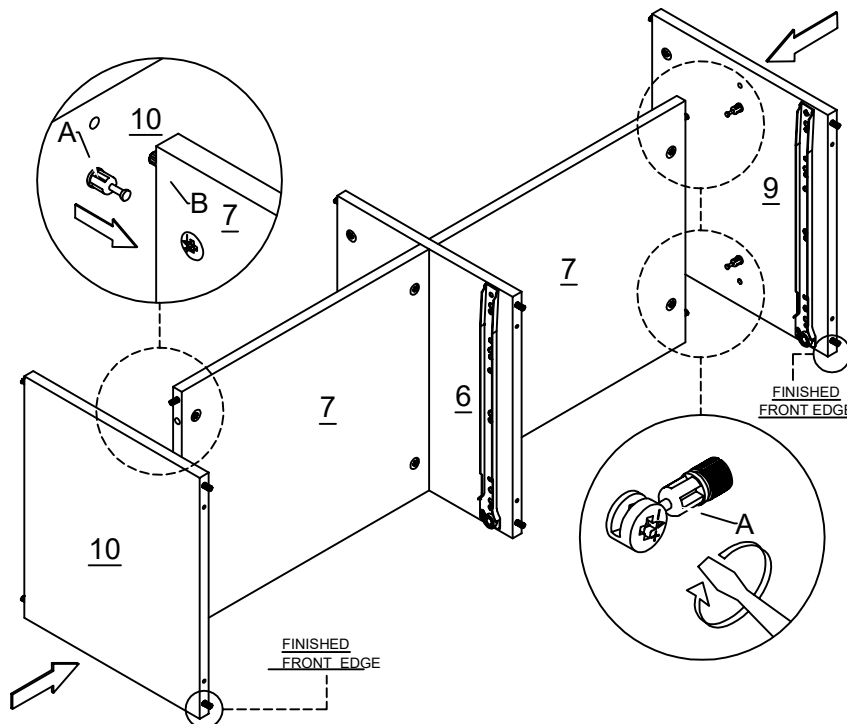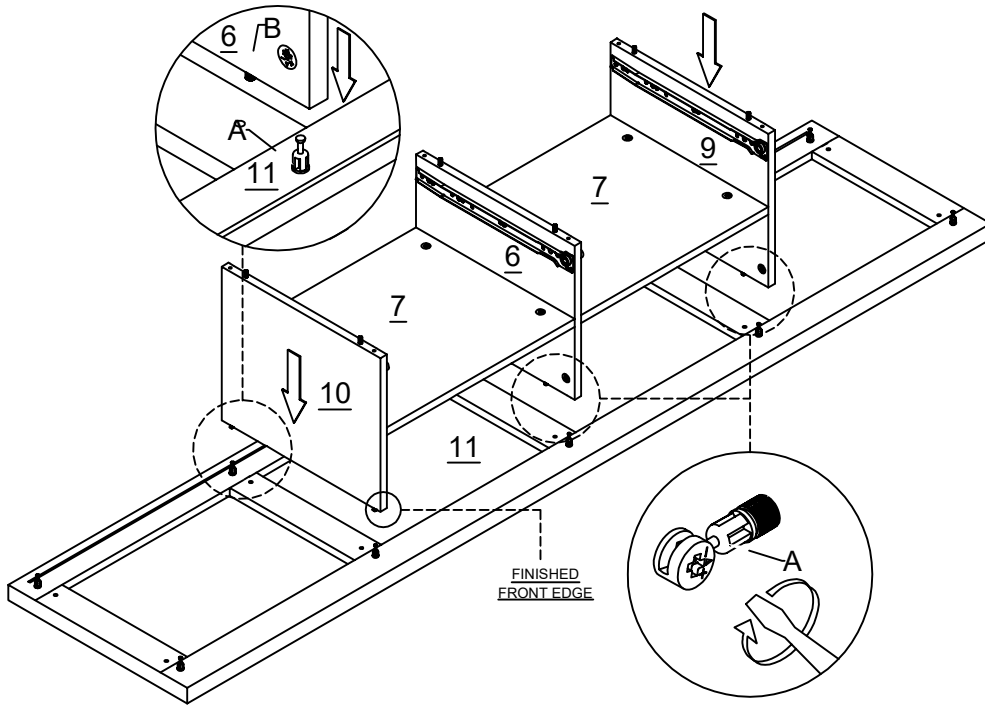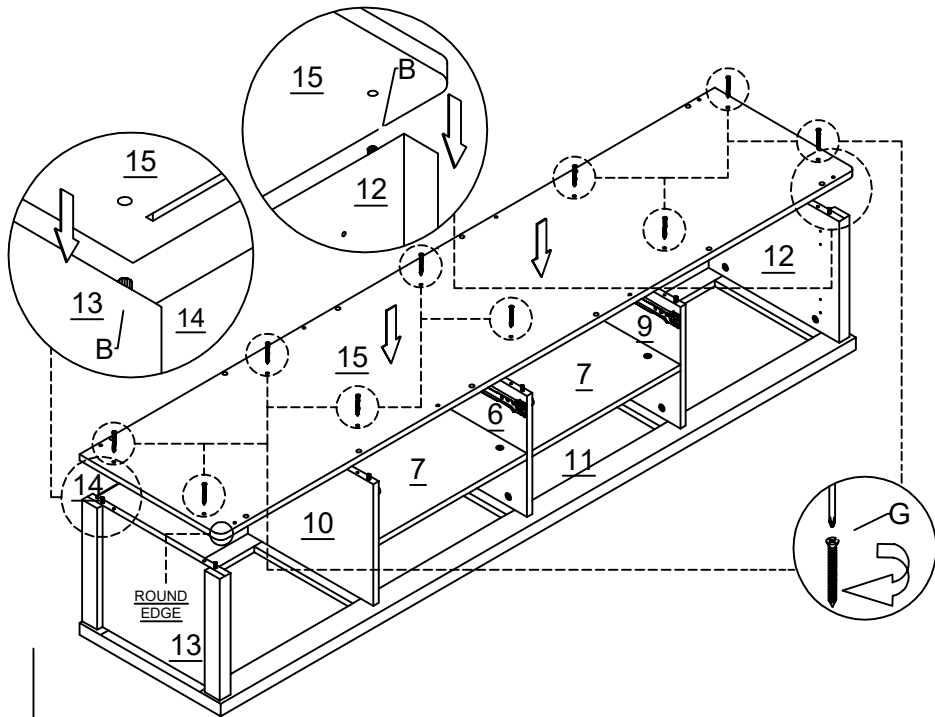
No.G
Quantity:10Pcs
Screw M3.5*35mm

STEP 17

15

12

9

11

10

13
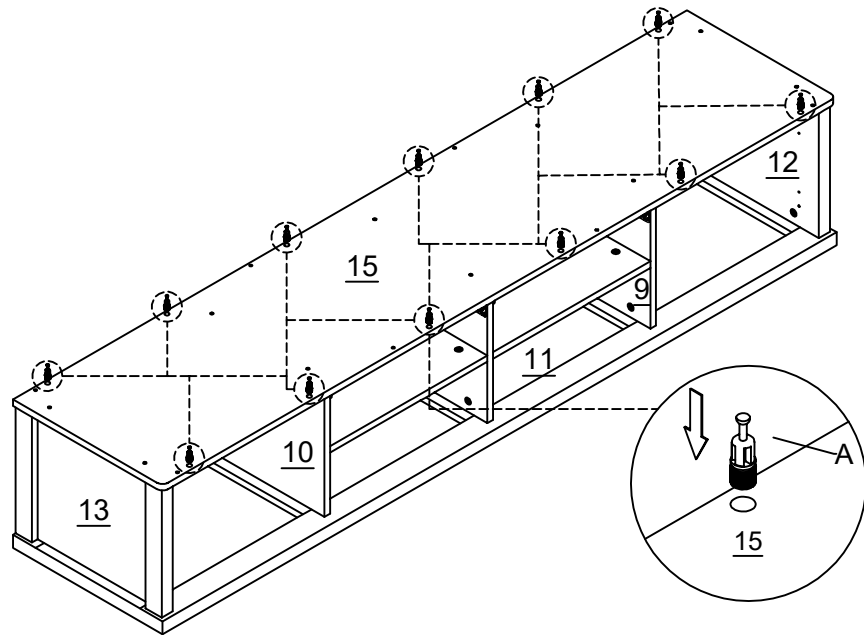
No.A
Quantity:12Pcs
Cam Bolt

A

15

STEP 18

A

1

B

A

15

1

15

2

3

4

5

12

9

11

10

13

A

STEP 19

14

1

15

J 14
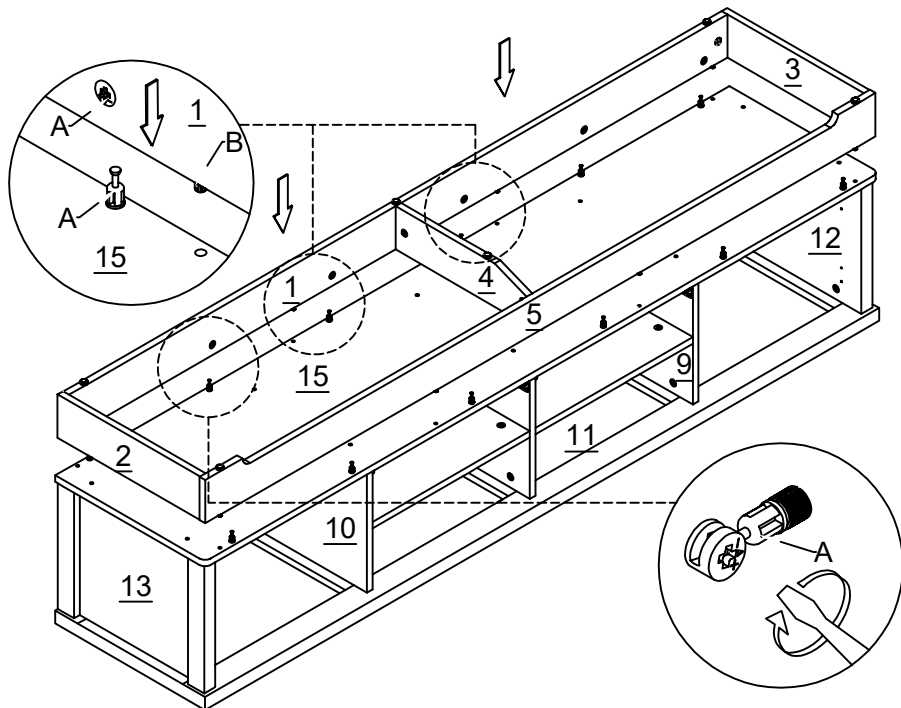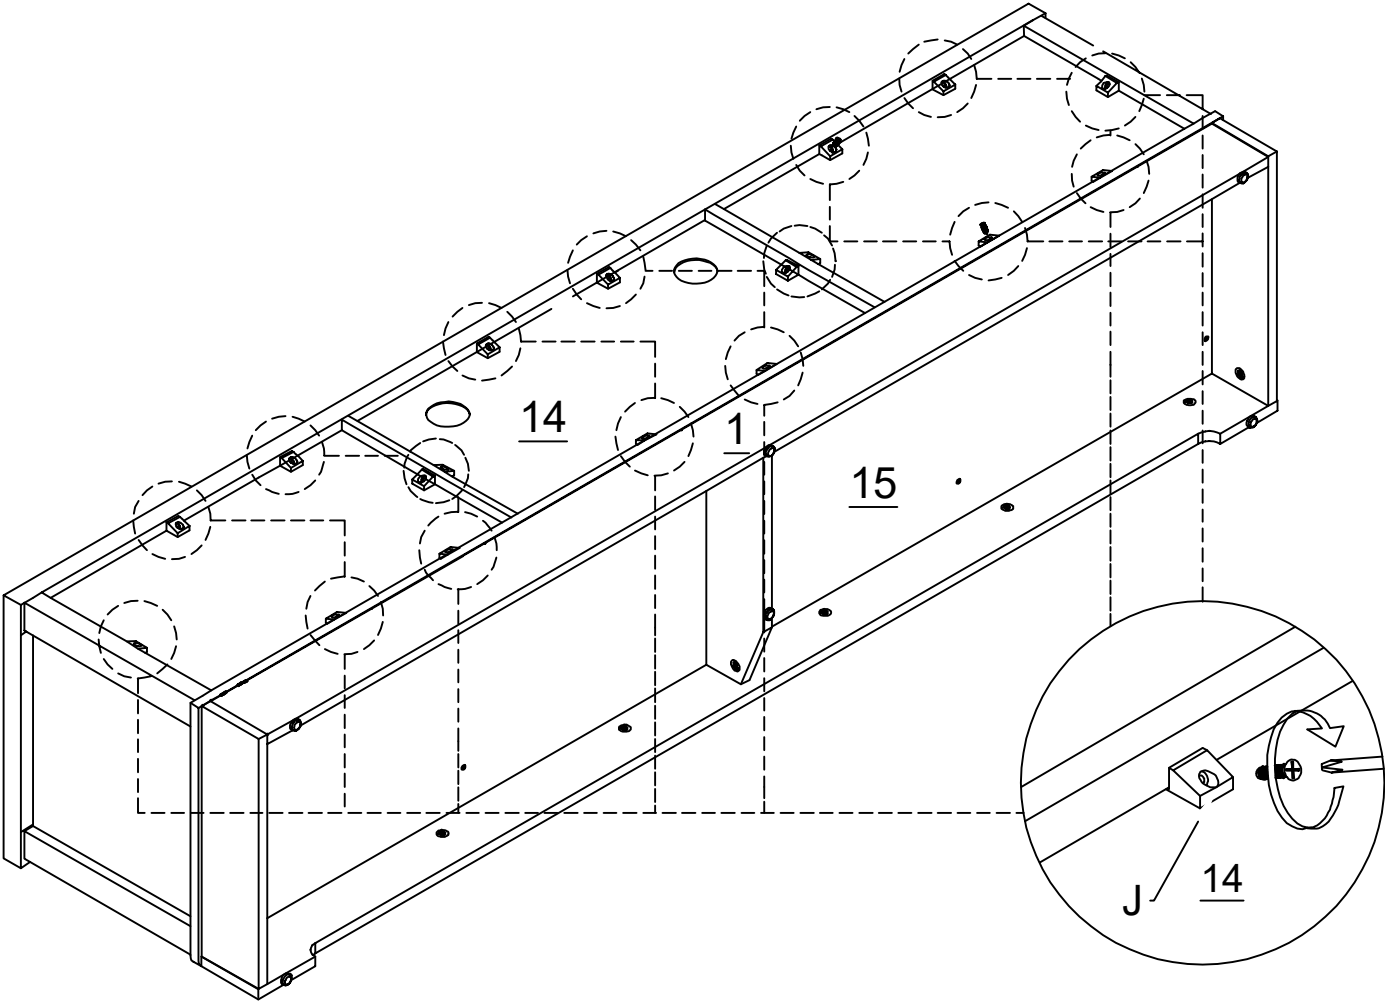
No.C
Quantity:18Pcs
Screw M3.5*14mm

No.J
Quantity:18Pcs
Back Plate Clamp

STEP 20
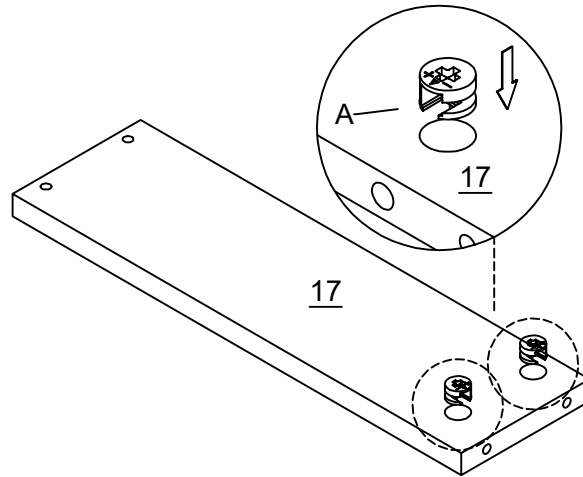
A

17

17

2xDrawer

STEP 21

18

A

18

2xDrawer

STEP 22

19

19

A
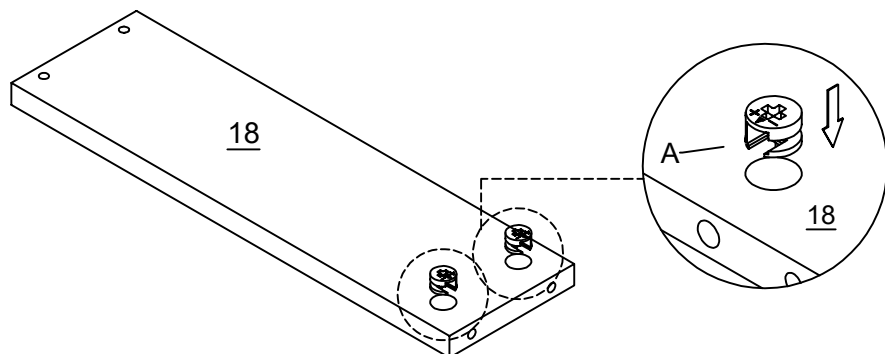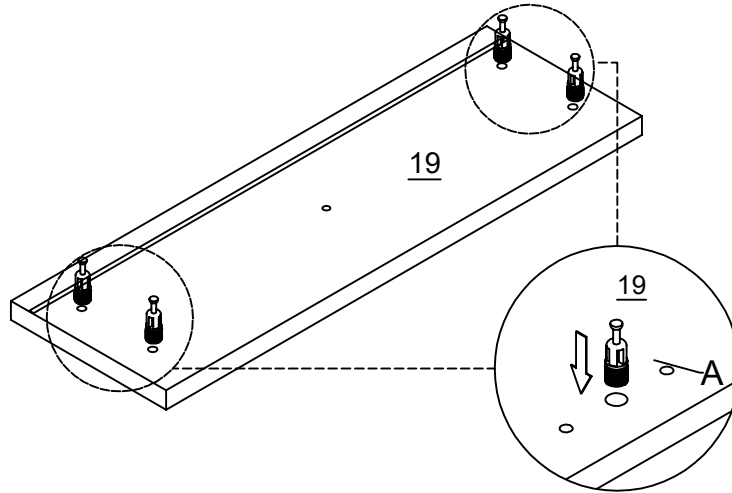
No.A
Quantity:8Pcs
Cam Bolt

2xDrawer

STEP 23

18 G

16

17

16

18
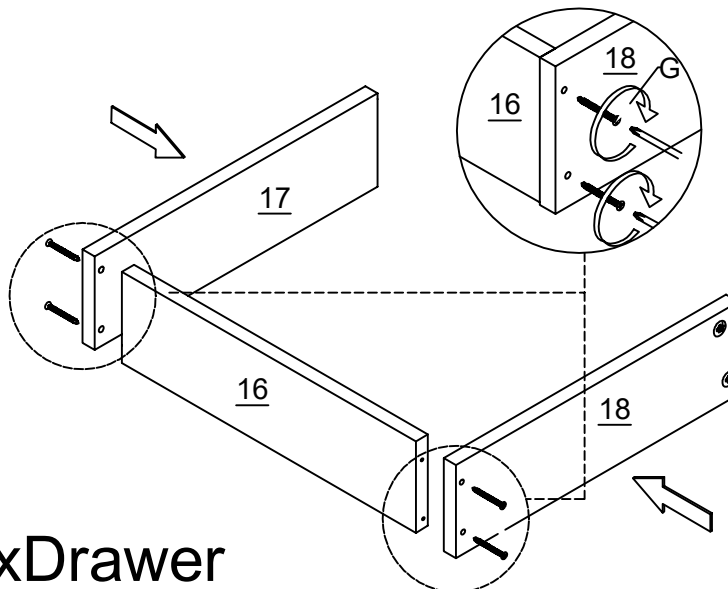
2xDrawer

No.G
Quantity:8Pcs
Screw M3.5*35mm

STEP 24

20

17

18

16

2xDrawer

STEP 25

19

18

19

17

19

16

18
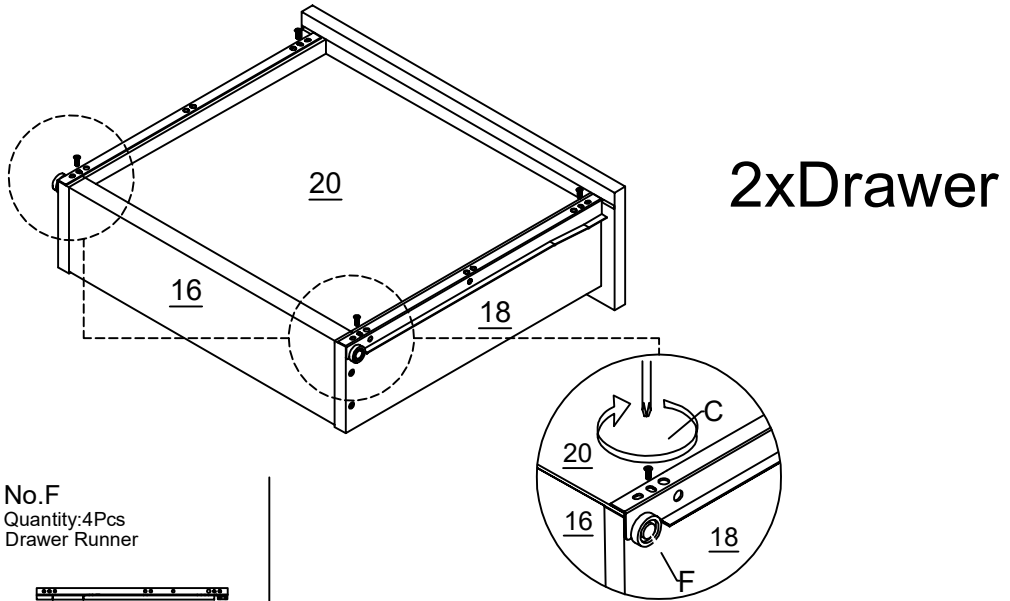
A

2xDrawer

STEP 26

2xDrawer

<u>20</u>

<u>16</u>

<u>18</u>
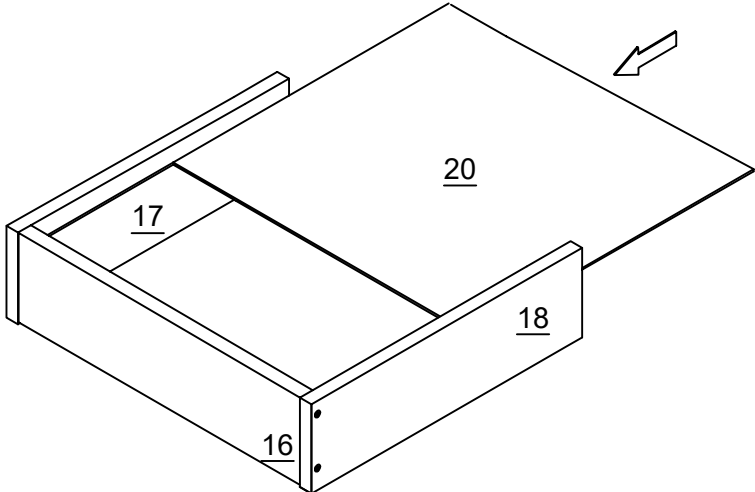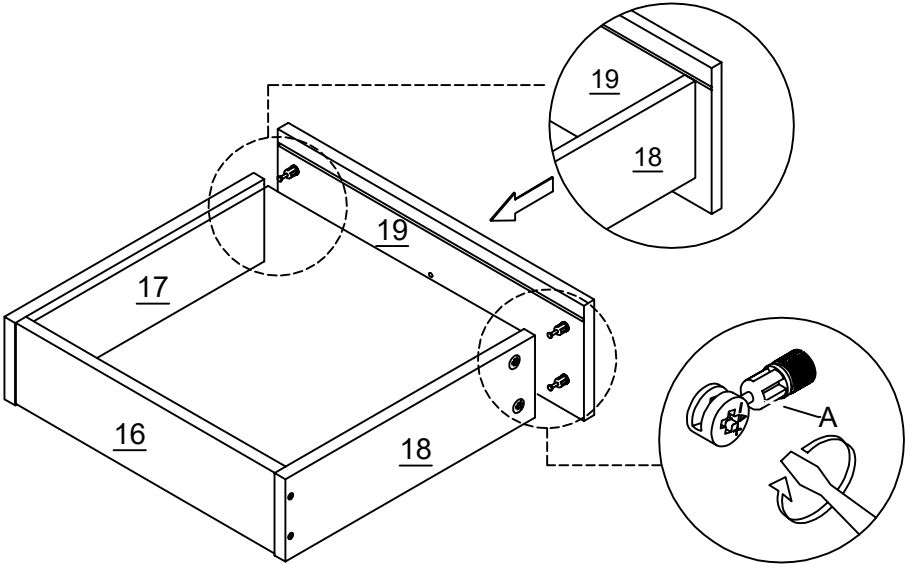
No.C
Quantity:8Pcs
Screw M3.5*14mm

No.F
Quantity:4Pcs
Drawer Runner

DRAWER RUNNERB-L/R

<u>20</u>
<u>16</u>
C
<u>18</u>
F

STEP 27

<u>19</u>

<u>18</u>

<u>20</u>

<u>16</u>

<u>17</u>

2xDrawer

H

<u>19</u>

H
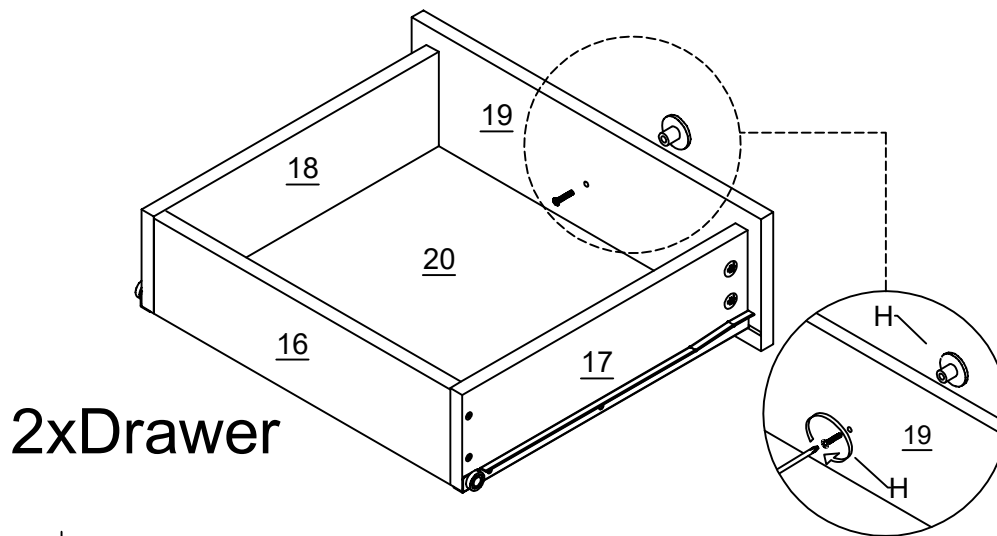
No.H
Quantity:2Pcs
Handle

STEP 28

YOUSHOULD RE-ADJUST
SCREWS AS SHOWNTO
ALIGN DOOR ONCE HINGES
HAVE BEEN ATTACHED

C
13
21
21
15 D
H
H

13
21

11
10
6
15
9
12

C
1.
D

1.VERTICAL
ADJUSTMENT
VIA SLOT IN THE
MOUNTING PLATE

2.
D

2.LATERAL
ADJUSTMENT BY
SCREW ADJUSTING

3.
D

3.FRONT-TO-BACK
BY THE SLACKING
THE HINGE ARM
MOUNTING SCREW

12
21
15
9
11
6

C
21
12
15
D
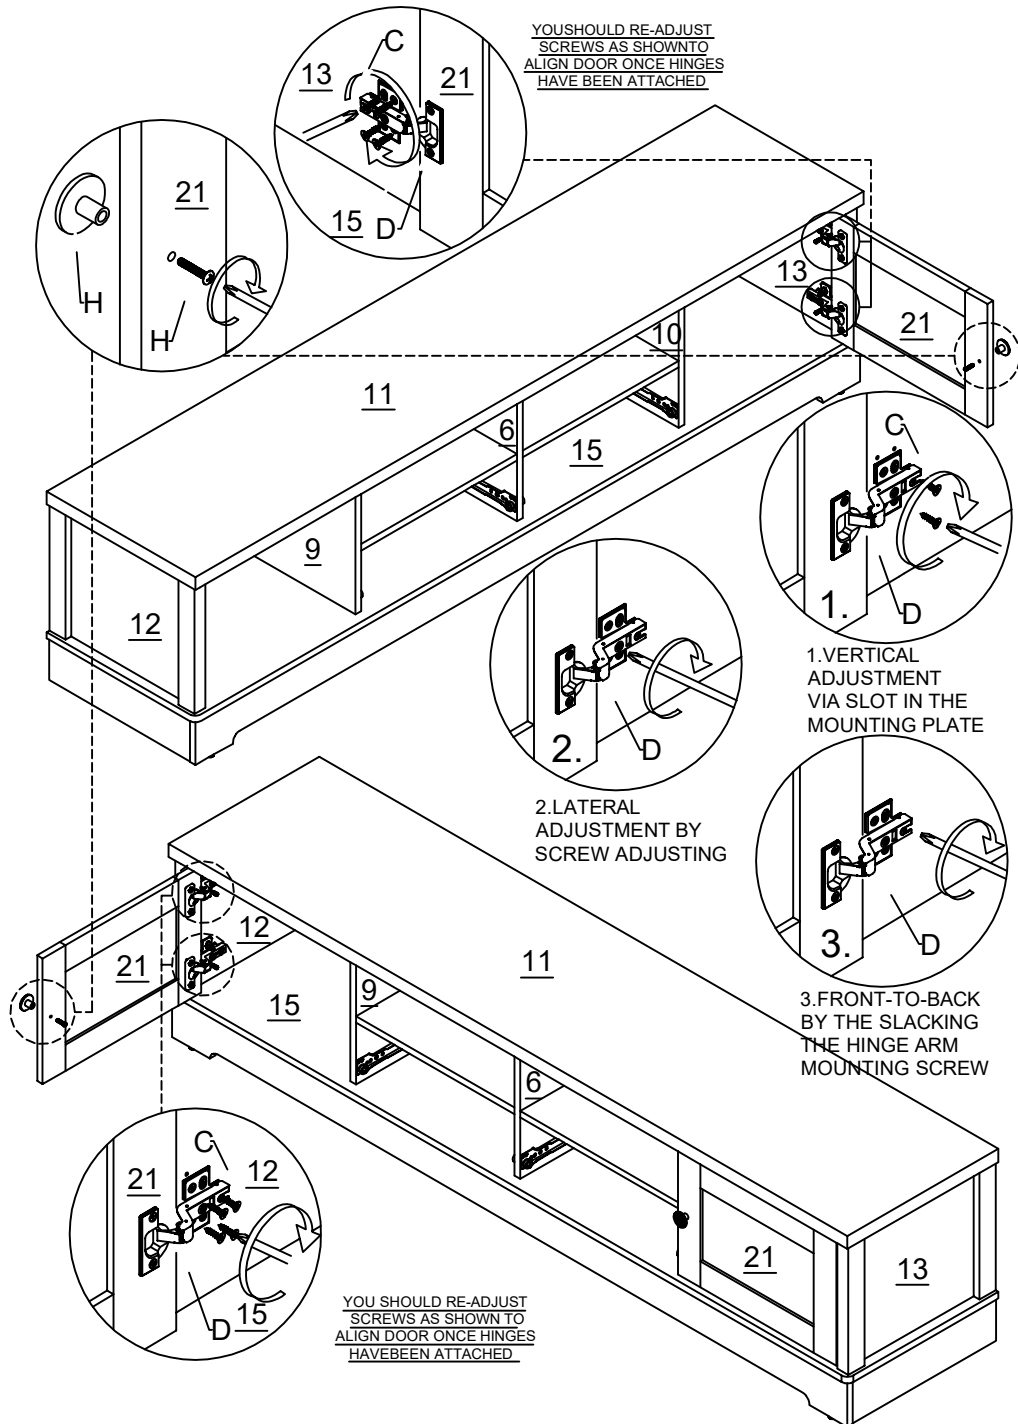
21
13

YOU SHOULD RE-ADJUST
SCREWS AS SHOWN TO
ALIGN DOOR ONCE HINGES
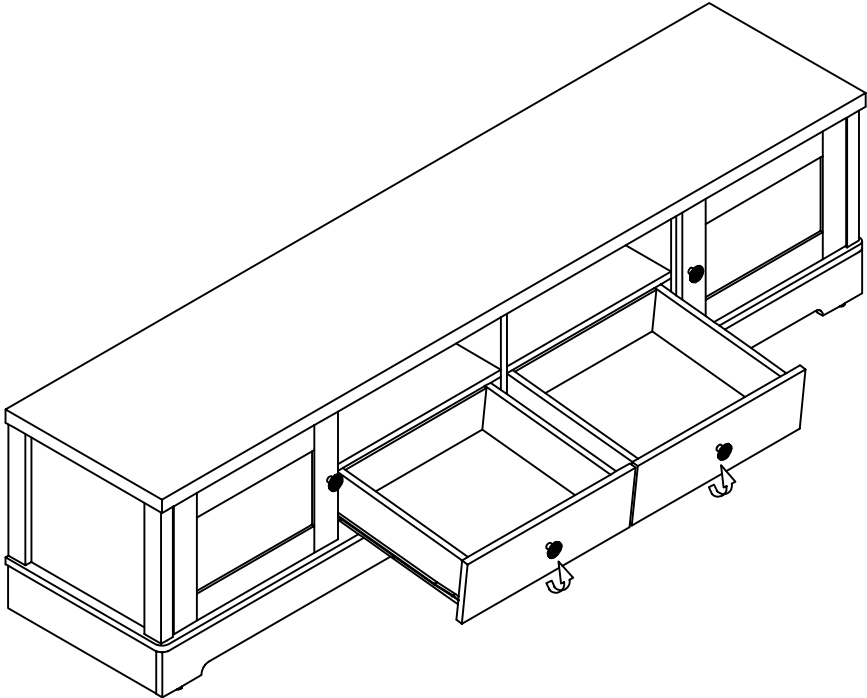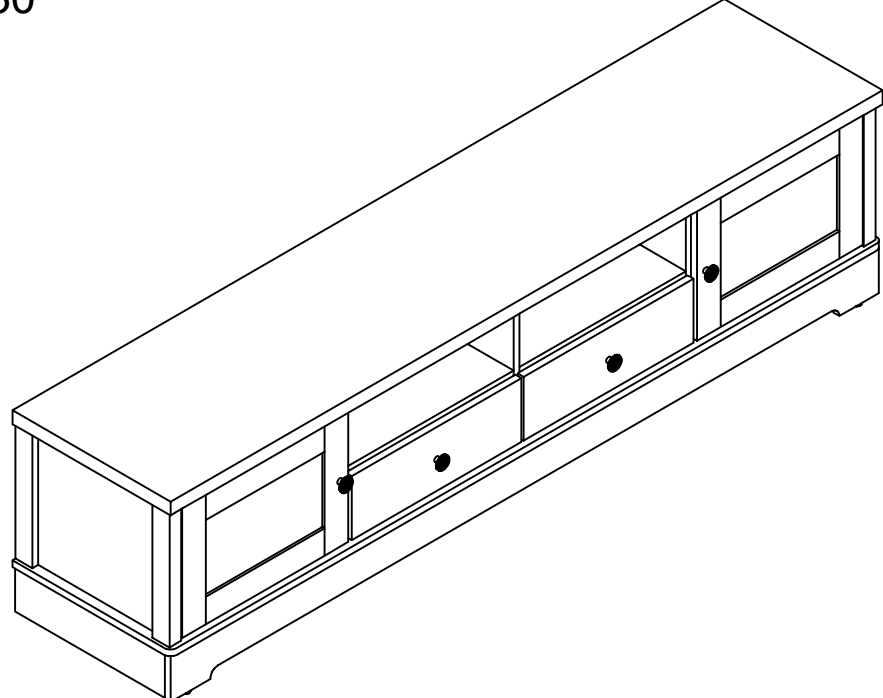HAVEBEEN ATTACHED

No.H
Quantity:2Pcs
Handle

No.C
Quantity:16Pcs
Screw M3.5*14mm

STEP 29

STEP 30

lifely.com.au

Great Job,You're done!

Don't forget to share how it looks in
your space and tag us on Instagram.

@lifelyhome#homewithlifely!