WaveLine InfoDesk Counter 8S

IFDO4CV

IFD-32
WLM-P-SCS
IFDO4CI

IFD-29

IFD-30

725(28.5")

549(21.6")

IFD-24

265(10.4")

520(20.5")

IFD-26

1000(39.4")

4714(185.6")

1086(42.76")
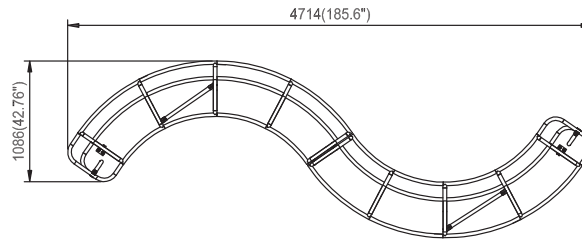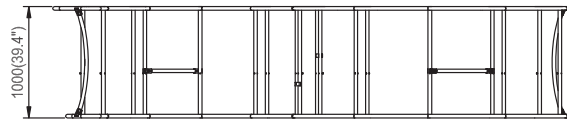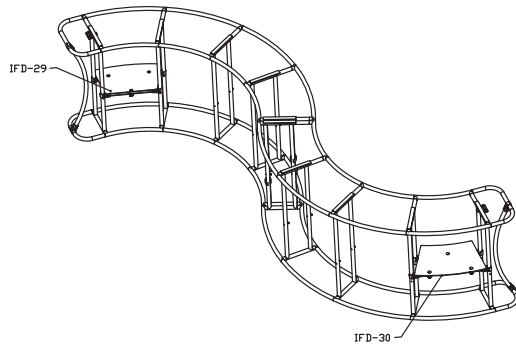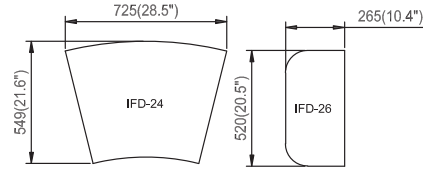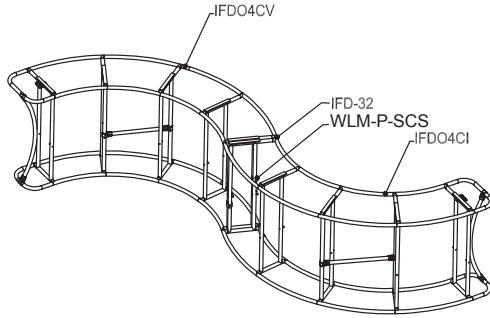
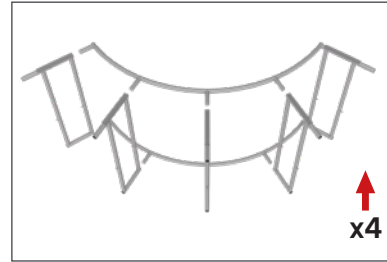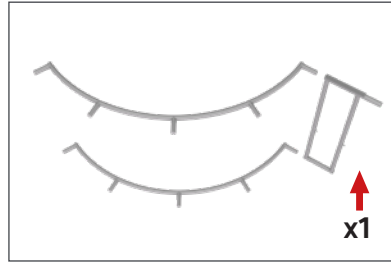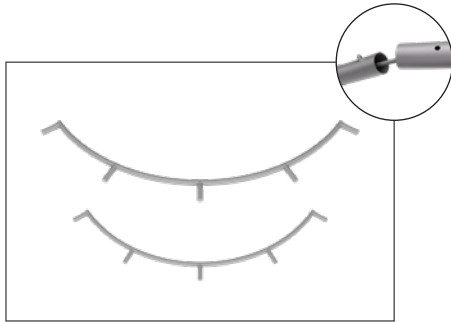| Hardware													Countertop			Graphics	Accessories			Shipping Case		
IFDO4CV	1												Yes / No			Single or Double-sided	IFD-29	1		**CA900**		
IFDO4CI	1												IFD-24	8		None	IFD-30	1		**CA500**		
WLM-P-SCS	2												IFD-26	2		Complete				**NYLON BAG**		
IFD-32	4															Split-ship						
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	Confirm		No.	Quantity	Confirm	No.	Quantity	Confirm

FRAME ASSEMBLY:
Assemble base parts and poles by pressing and pushing together.

*NOT ALL PARTS WILL BE USED:
This counter is made from x3 full kits and not all parts will be needed to complete this design.
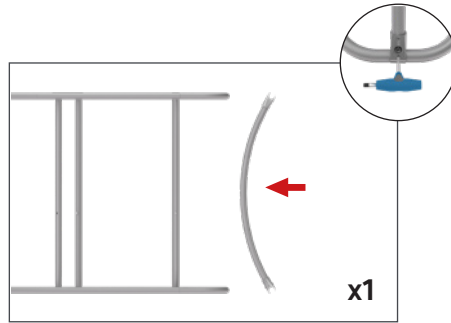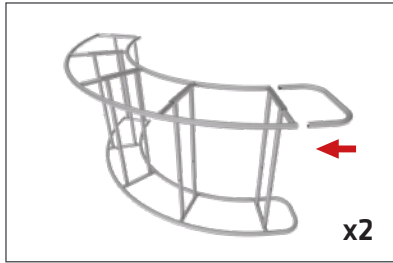
IFD-H-04CV: x1

x1

x4

x2

IFD-H-04CI: x1

x1

x4

x2

IFD-H-04CV

IFD-H-04CI

IFD-H-04CV:
Assemble end cap on left side only.
Use hand tool when shown.

x2

x1

CROSSBAR SUPPORT:
Attach across second opening from
the right.

x1

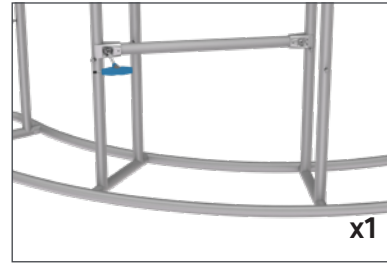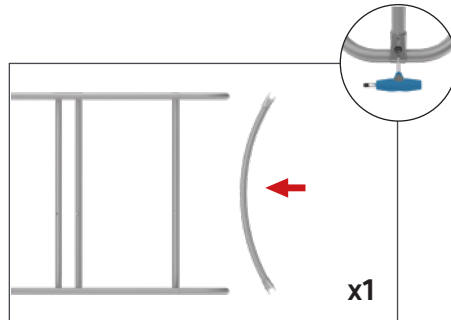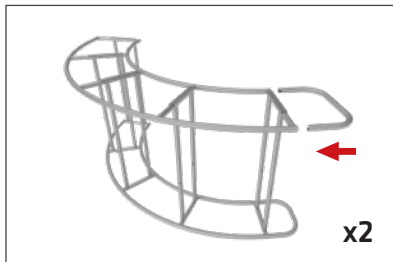**COUNTER TOP SUPPORT:**
For leveling end cap counter top.

x1

IFD-H-04CI:
Assemble end cap on right side
only. Use hand tool when shown.

x2

x1

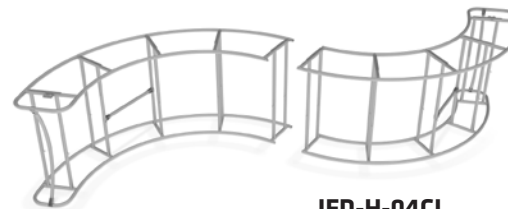**CROSSBAR SUPPORT:**
Attach across second opening from
the right.

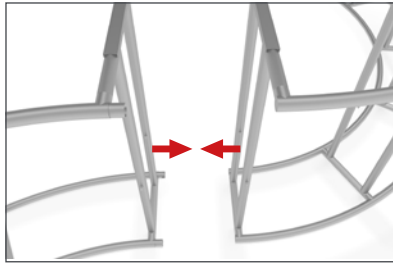x1

COUNTER TOP SUPPORT:
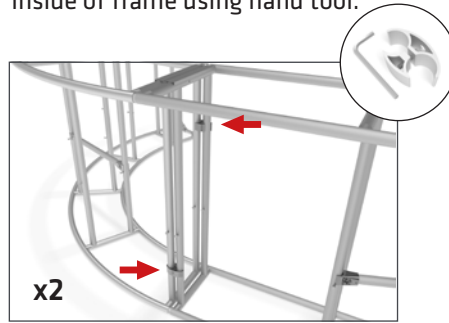For leveling end cap counter top.

x1

IFD-H-04CV

IFD-H-04CI

CONNECT FRAMES TOGETHER:
Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.
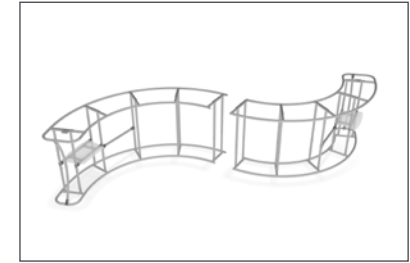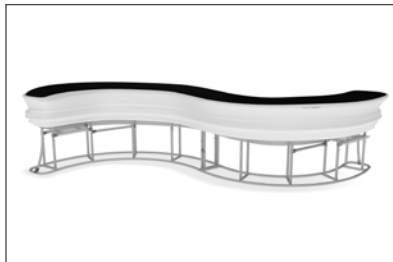

x2

WLM-P-SCS

SHELVES:
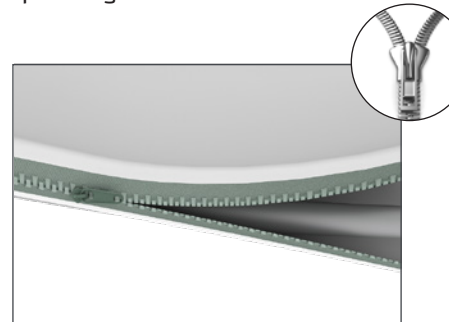(OPTIONAL) To add shelves to frame, position and level shelf on

frame before tightening clamps down with hex tool.

GRAPHIC INSTALL:
Step 1: Unzip print and slide print onto frame like a pillow case.

Step 2: Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

Step 3: Attach countertop panels to fabric counter with Velcro. Start at one end and work you way across to the other side.
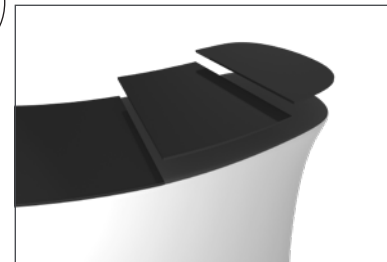
Step 4: Join counter top panels together front and back with black push-on clamps.