CRYST✠RAMA

LIGHTING THE WAY FOR SIXTY YEARS

Crystorama.com

ASSEMBLY INSTRUCTION MODEL #CLO-8000-AG

Drawing (1)
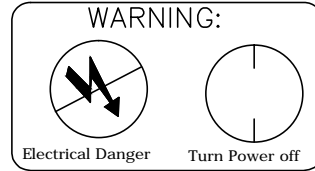
φ140 [5 1/2"]

3225.8 [127"]

1320.7 [52"]

1216.3 [47 7/8"]

A

B

C

φ828 [32 5/8"]

φ1219.7 [48"]
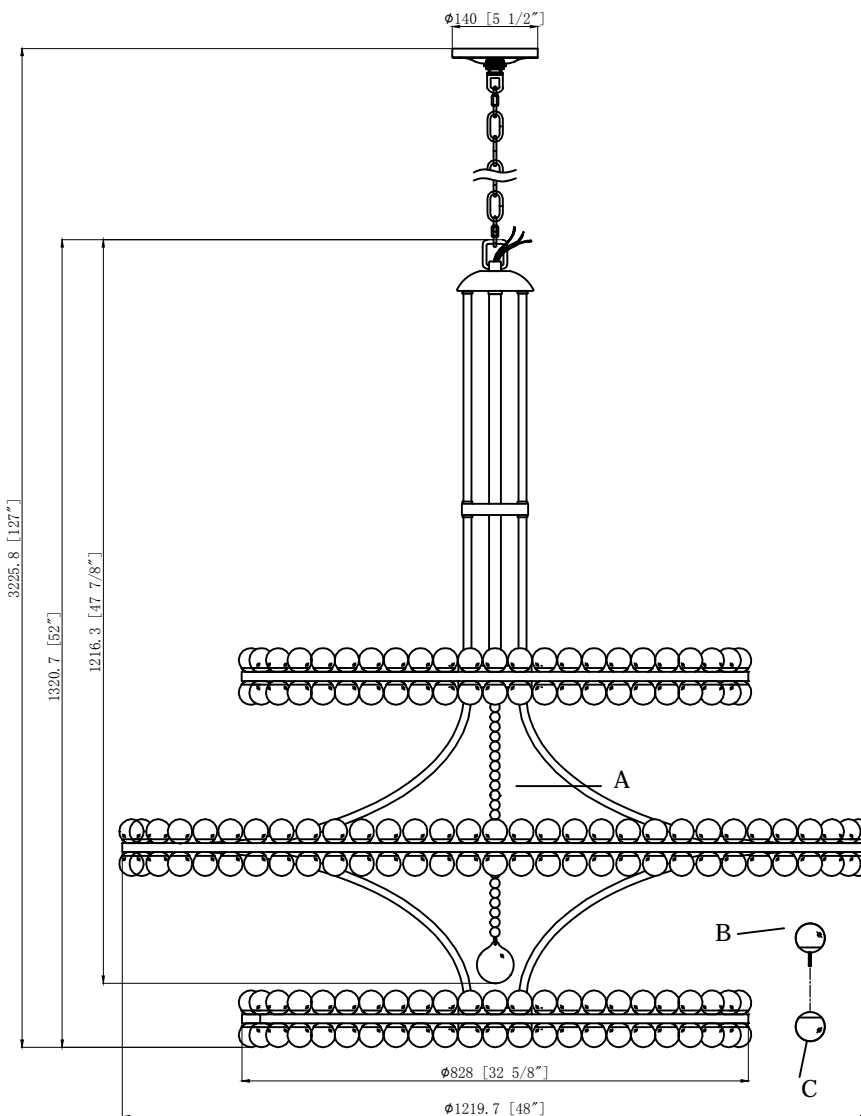
How to install :

**Do not remove the diagonal support bar (N) and
vertical support bar (O) until instructed. Both support
bars are ONLY for packaging and installation support.**

1. Put the check ring over the hex nut on top of wiring box.
2. Screw the lower rod and center stem onto the top of
   wiring box.
3. Slide the center ring over the lower rods and center stem
   and secure the center ring with hex nut and check ring.
4. Screw the upper rods onto the center.
5. Place the top metal plate over the upper rods and secure
   it with hex nuts.
6. Pull the wire from center stem through the hickey until
   taut and put the top cap over it and secure with fixture
   loop.
7. Insert each long threaded crystal ball through the
   bottom of the ring,then secure it from the top with the
   crystal ball (without nipple).
8. Remove Diagonal Support Bar (N) and Vertical Support
   Bar(O) by twisting the screws with a screwdriver then
   install the final crystal balls to fill the hole in the ring.

How to install :

1. Place the upper rod kit over the distributor box on
   the top of the upper ring and plug the wires together.
2. Secure the upper rod kit onto the distributor box
   using the screws and wrench provided.
3. Put the crystal strand in the center of the fixture.
4. Screw the crystal balls onto the frame as illustrated.
5. Refer to the next page for safety cable installation.

CRYSTAL SETS:

A= ⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤⬤ Ø16mmx26+Ø60mmx1

B= Ø40mmx188, Crystal ball with long thread
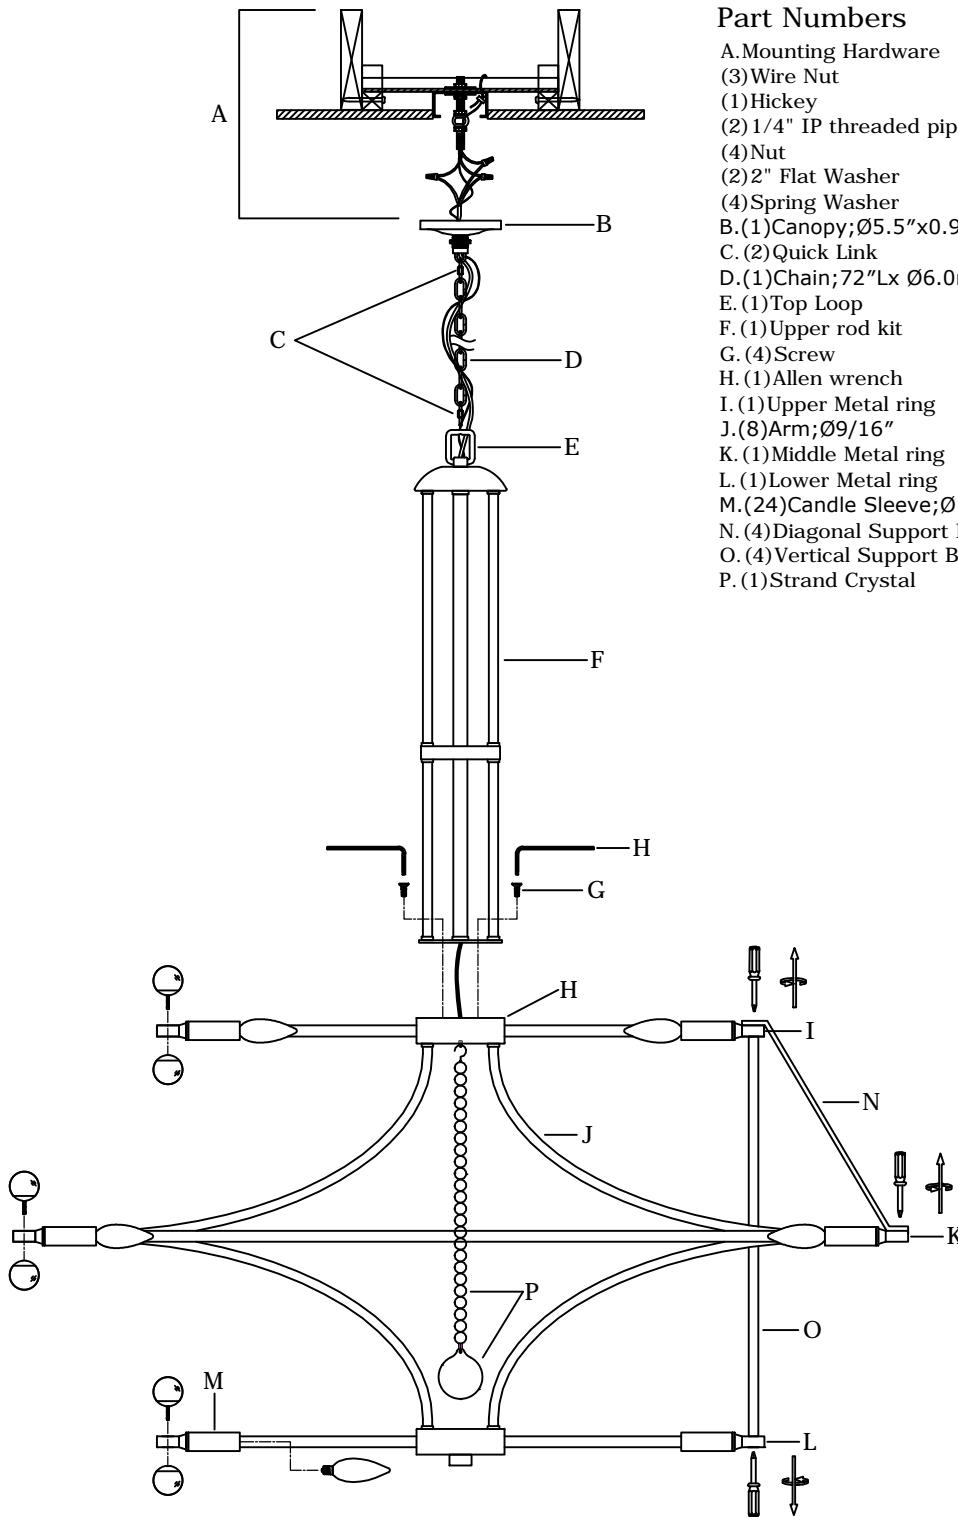
C= Ø40mmx188, Crystal ball

CRYST✠RAMA

Crystorama.com

PART NUMBER MODEL #CLO-8000-AG

Part Number

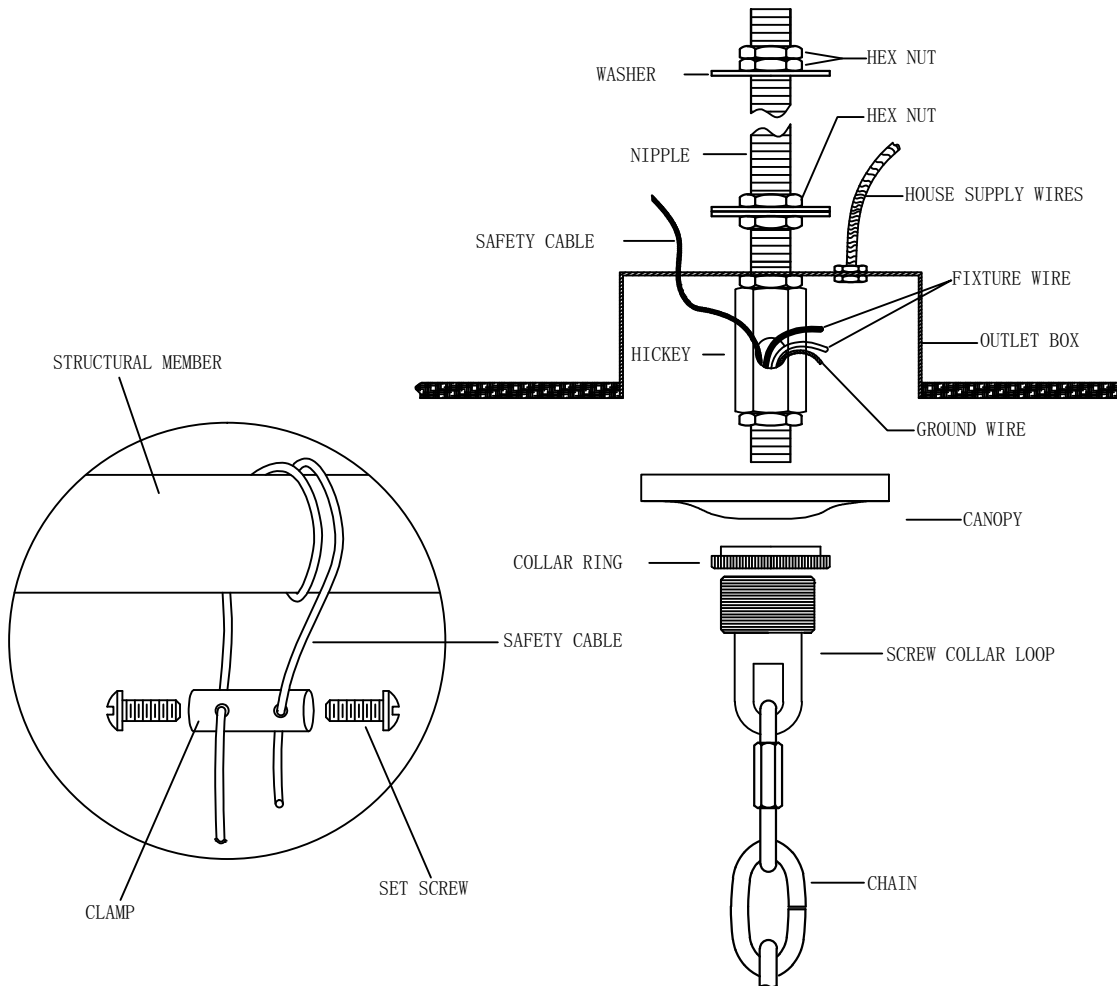### Part Numbers

A. Mounting Hardware
(3) Wire Nut
(1) Hickey
(2) 1/4" IP threaded pipe
(4) Nut
(2) 2" Flat Washer
(4) Spring Washer
B. (1) Canopy; Ø5.5"x0.98"h; XME8000AGCAN5.5IN
C. (2) Quick Link
D. (1) Chain; 72"Lx Ø6.0mmT; XME8000AGCHA6.0MM
E. (1) Top Loop
F. (1) Upper rod kit
G. (4) Screw
H. (1) Allen wrench
I. (1) Upper Metal ring
J. (8) Arm; Ø9/16"
K. (1) Middle Metal ring
L. (1) Lower Metal ring
M. (24) Candle Sleeve; Ø1"x2.8"h; XME8000AGCDL2.8IN
N. (4) Diagonal Support Bar (Remove during Installation)
O. (4) Vertical Support Bar (Remove during installation)
P. (1) Strand Crystal

CRYST✛RAMA

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #CLO-8000-AG

SAFETY CABLE INSTALLATION INSTRUCTIONS

WASHER — HEX NUT

NIPPLE — HEX NUT

SAFETY CABLE — HOUSE SUPPLY WIRES

STRUCTURAL MEMBER

FIXTURE WIRE

HICKEY — OUTLET BOX

GROUND WIRE

SAFETY CABLE

CANOPY

COLLAR RING

SCREW COLLAR LOOP

SET SCREW

CLAMP

CHAIN

IMPORTANT:
FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS
OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX.

SUGGESTED INSTALLATION:
1. Start with 1/4 IPS on one end securely mounted to a beam or a structural member. The other end
   should protrude through the center of the outlet, as shown.
2. Assemble the screw collar loop, nipple, hex nuts and hickey to center 1/4 IPS support pipe and adjust
   overall length to allow the collar ring to hold the canopy flush to the ceiling. When the adjustments have
   been completed, Secure the hex nut, as shown.
3. Attach the chain to the fixture loop. Slide the screw collar ring over the upper end of the chain, through
   the canopy (Finished side down). Open the end link of chain and lift the fixture to attach to the screw
   collar loop and secure the link.
4. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop,
   exiting through the side of hickey. Proceed to attach the fixture ground wire to house ground
   wire using wire connector. Using wire connectors, connect the house white wire to the fixture
   supply wire(white or ribbed side);connect the house black (or red) wire to the fixture supply
   wire(black or smooth side). Wrap all connectors with approved electrical tape. Wrap safety
   cable around outlet box brace and pull cable taut. Secure cable with the clamp and(2)set screws
   provided, as shown.
5. Push the CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into
   the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the
   CANOPY LOOP. Tighten until snug.