BUTTER SOFA

STANDARD

grado·
www.gradodesign.com

| 2x | 1x | 8x | 32x | 1x |

410

2160

680

970
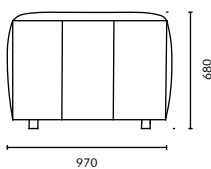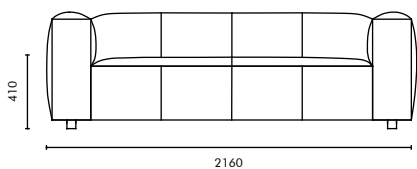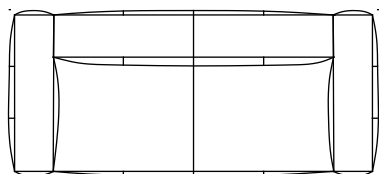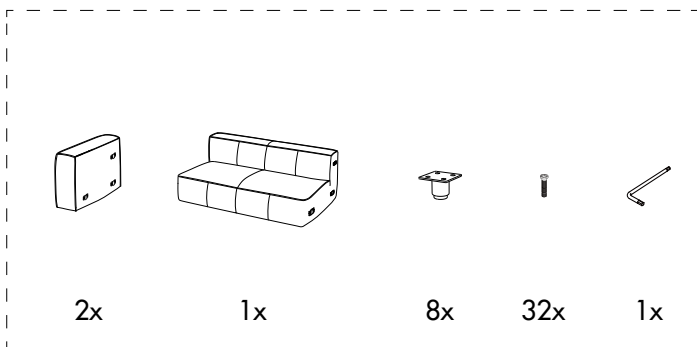
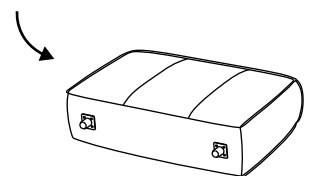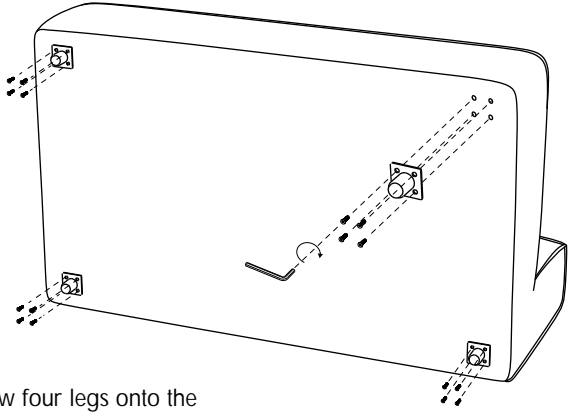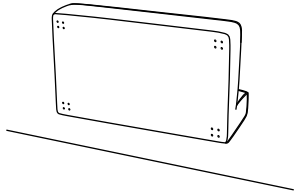**A** Place the armrest on a clean and smooth surface like the following pic shows.
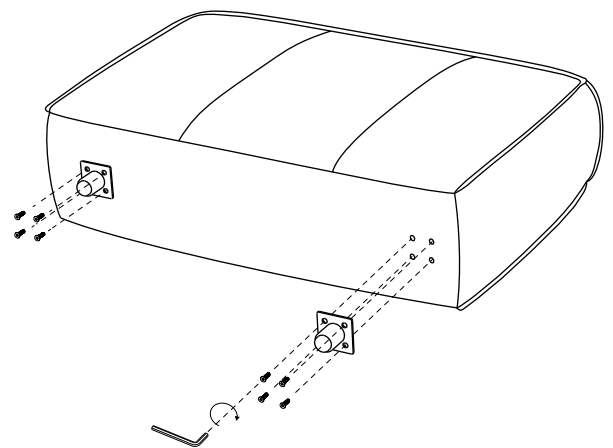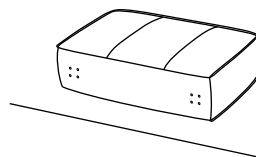
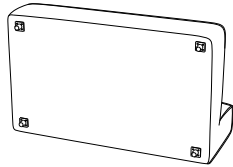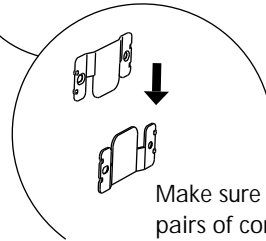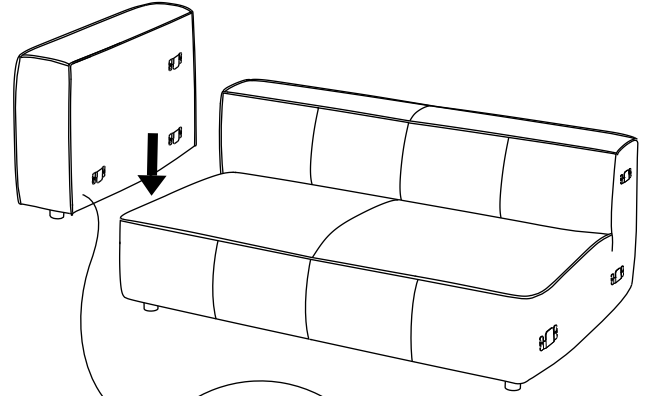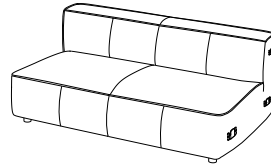Screw two legs onto the armrest with the Allen wrench.

2x

B Place the sofa lying on its back on a clean and smooth surface.

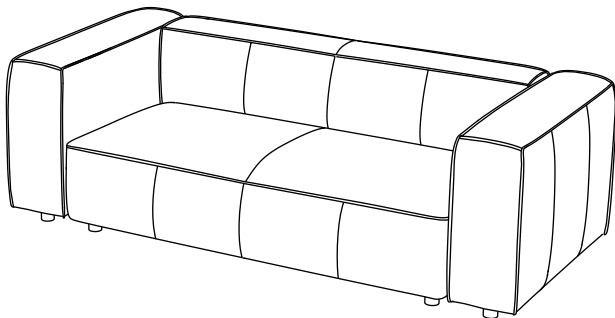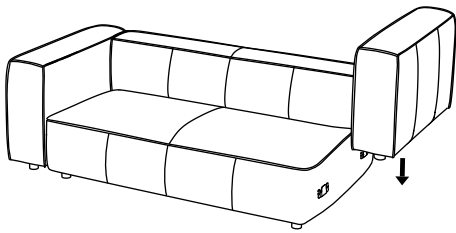
Screw four legs onto the
seat with the Allen wrench.

C Place the sofa on the floor. Lift the armrest to interlock
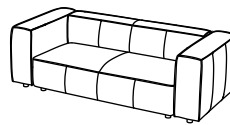the connectors.

Make sure the 3
pairs of connectors
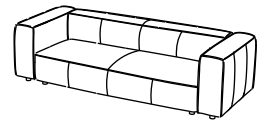are all locked.

D Attach the other armrest to the seat in the same way.

Finish!

SKUs:

3 Seater
BUT-SF-3S

4 Seater
BUT-SF-4S