Installation Instruction

Before You Begin

1. Shut off the main water supply.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. To avoid the faucet from jamming, DO flush the water pipe before installation.
4. After installation, make sure every joint is safely sealed (NO LEAKAGE).
5. Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left and cold water pipe connecting to the right.
6. It is recommended that installation of the product be done by a professional plumber.

Cleaning & Maintenance

To keep product clean and shiny follow the instruction below.
1. Flush with clean water and dry with soft cloth only.
2. Do not use any detergent, polisher, sane-cloth, or a scraper.
3. Do not use acid detergent.

Installation

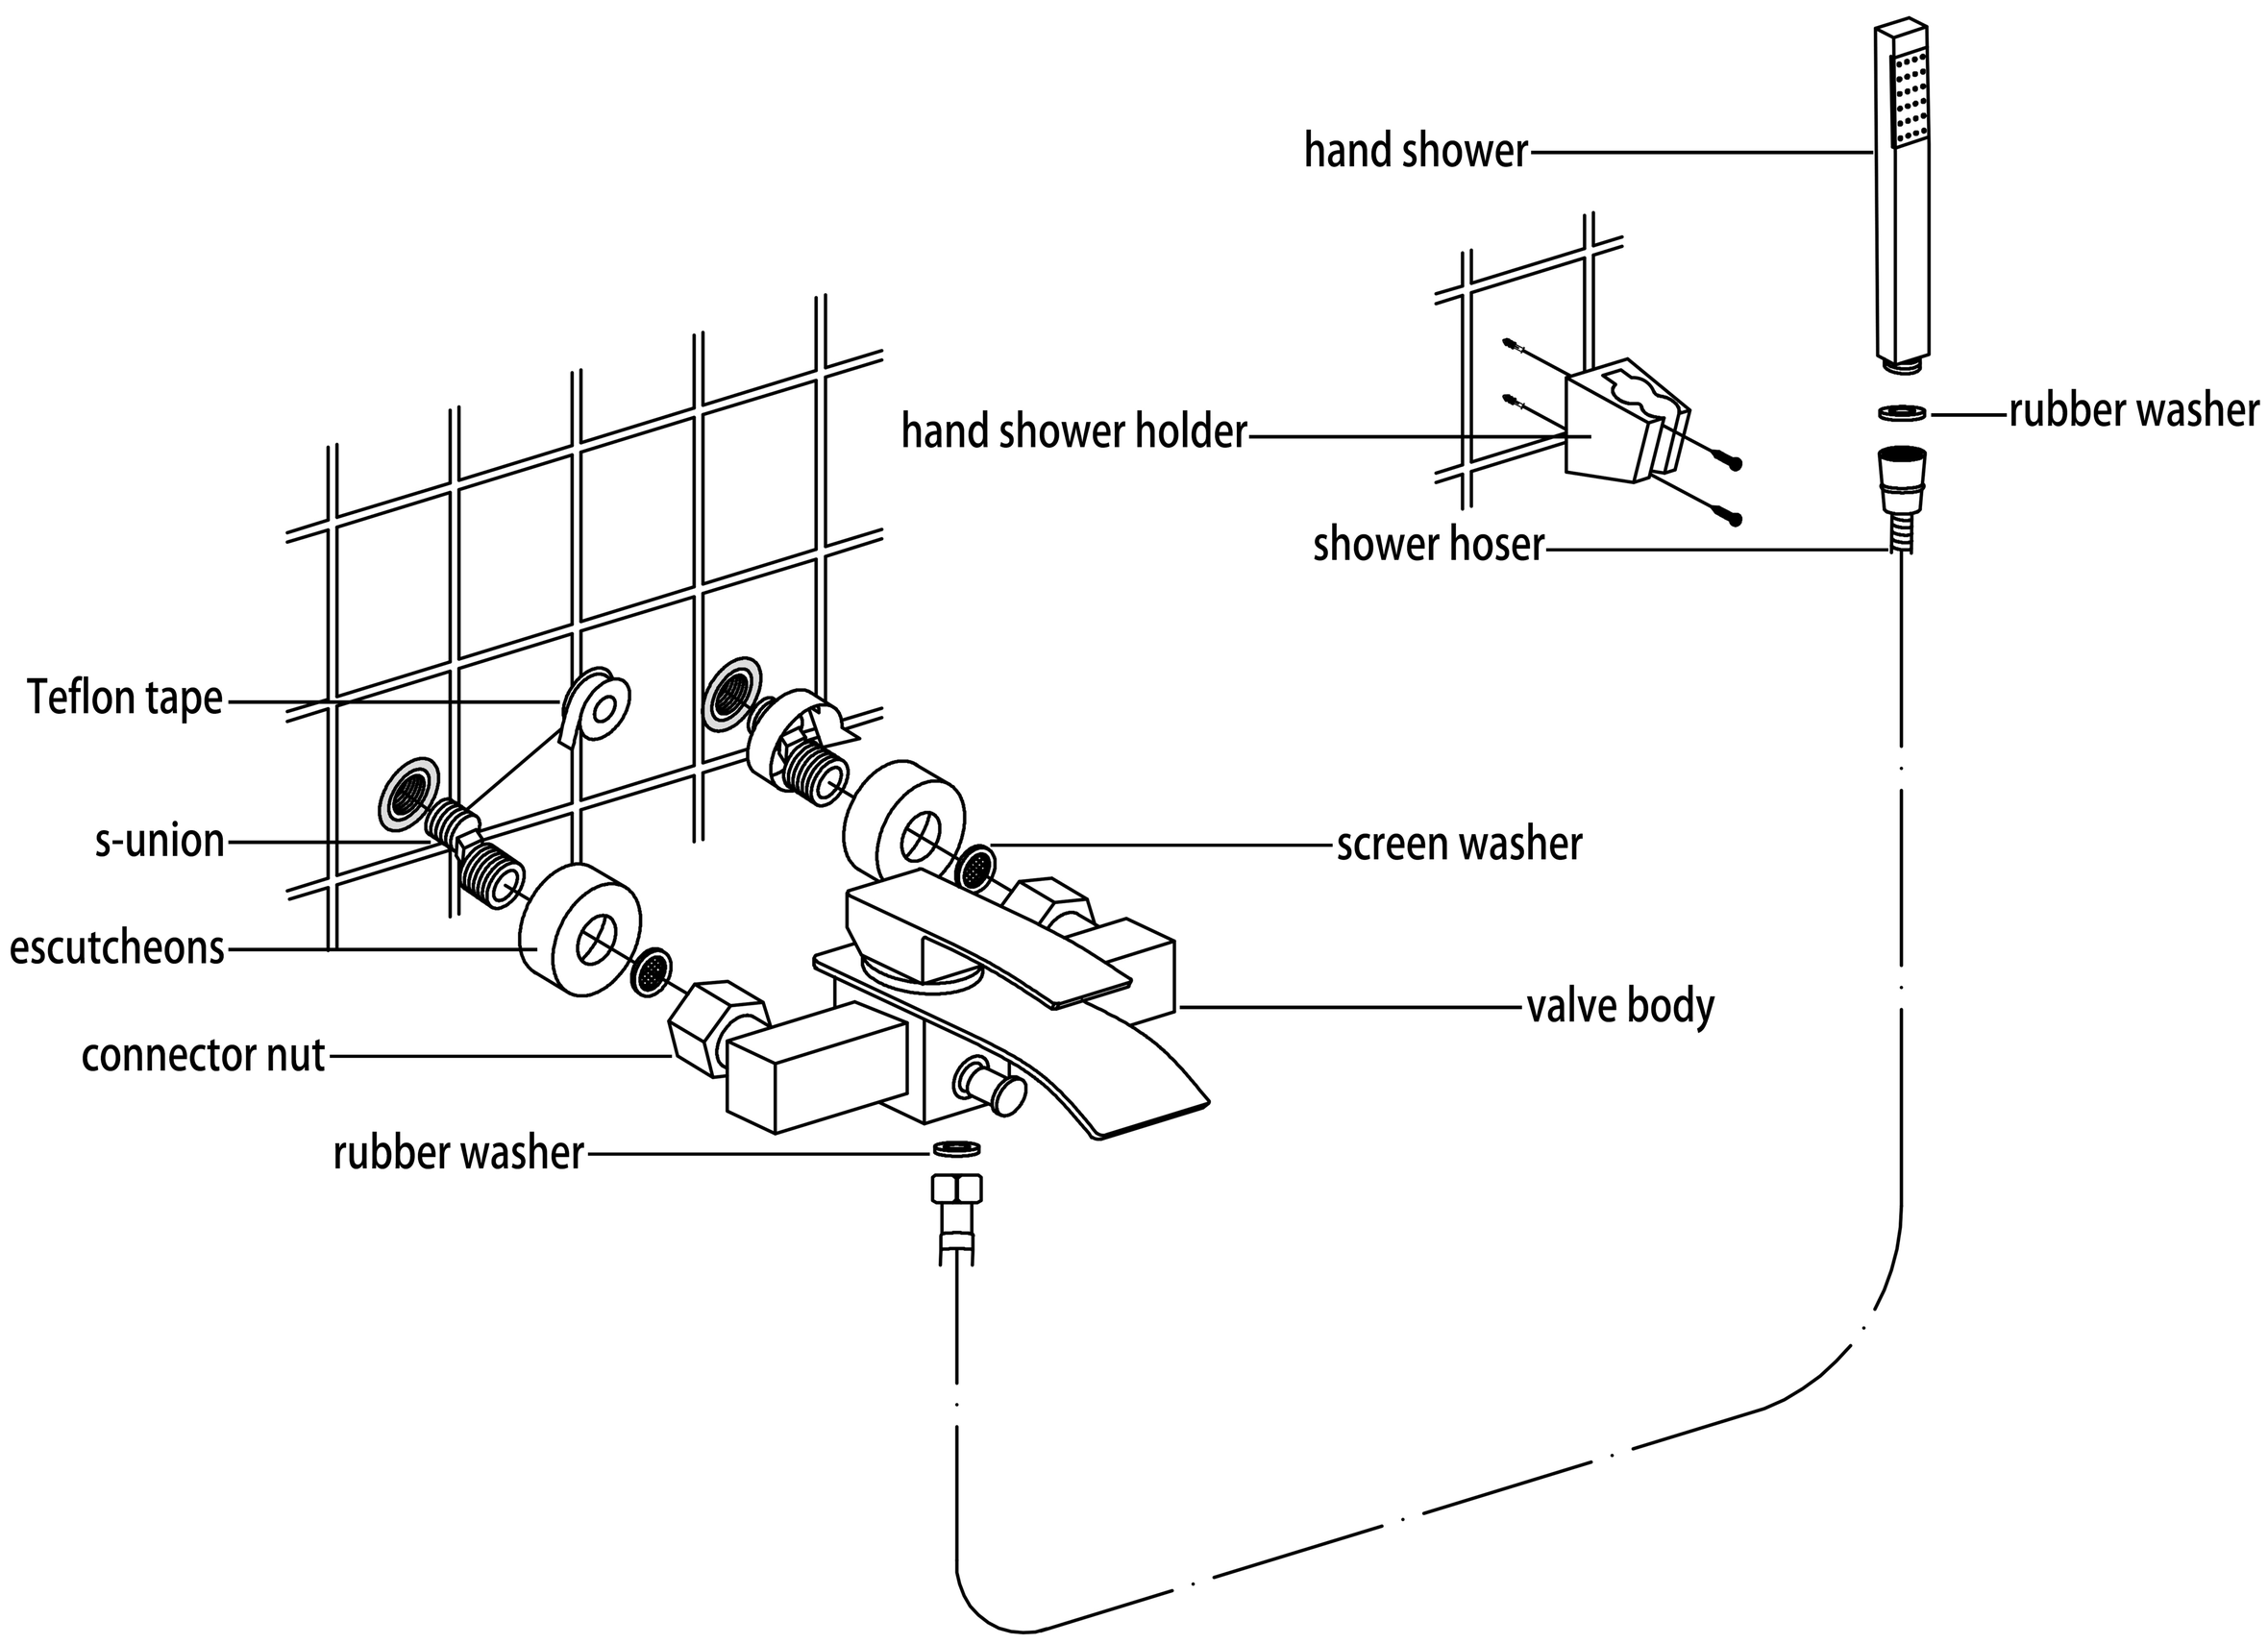

1. Wrap the threads of the s-union with Teflon tape.
2. Screw the s-union into the female fittings of water supplies. Make sure that the s-union are level.
3. Place the escutcheons onto the s-union. Add screen washer and install connector nuts of the valve body onto the s-unions.
4. Connect the shower hose to the hand shower and the valve body. Make sure to add rubber washer to both ends.
5. Attach the hand shower holder to the wall with screws. Then, place the hand shower into the shower holder.