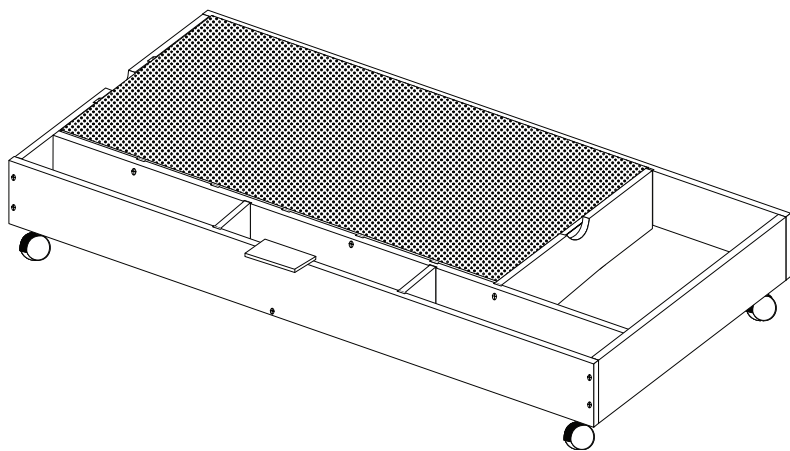# Milliard™

Hideaway Organizer

MANUAL

PRECAUTION: ALWAYS READ AND FOLLOW INSTRUCTIONS BEFORE USE. ALWAYS USE THE UNIT ACCORDING TO THE MANUFACTURERS GUIDELINES. ONLY USE THE UNIT IN A MANNER AS INTENDED BY MANUFACTURER.

Welcome to the family!

THANK YOU FOR PURCHASING OUR UNDERBED BRICK ORGANIZER
AND TRUSTING MIL LIARD WITH PROVIDING
YOURSELF AND YOUR LOVED ONES WITH THE UTMOST
COMFORT AND SUPPORT IN YOUR HOME.
AS A FAMILY BRAND THAT STARTED BACK IN 2009 WE'VE
DEDICATED OURSELVES TO CAREFULLY CRAFTING LINES
OF PRODUCTS TO ELEVATE YOUR HOME.
QUALITY AND FAIR PRICING IS OUR PROMISE TO YOU.
IF IT'S NOT GOOD ENOUGH FOR OUR HOME,
IT'S NOT GOOD ENOUGH FOR YOURS.

DID YOUR UNIT COME WITH ANY DAMAGED OR MISSING PARTS?

We're here to help.

OUR TEAM OF DEDICATED CUSTOMER CARE PROFESSIONALS ARE READY TO HELP YOU WITH ANY QUESTIONS OR CONCERNS YOU MAY HAVE.

FOR IMMEDIATE ATTENTION, CALL MONDAY-THURSDAY 9:OOAM-5:OOPM & FRIDAY 9:OOAM-1:OOPM.

OR YOU CAN LEAVE US A VOICE MESSAGE OR EMAIL, AND WE GUARANTEE YOU WILL HEAR BACK FROM US WITHIN ONE BUSINESS DAY.
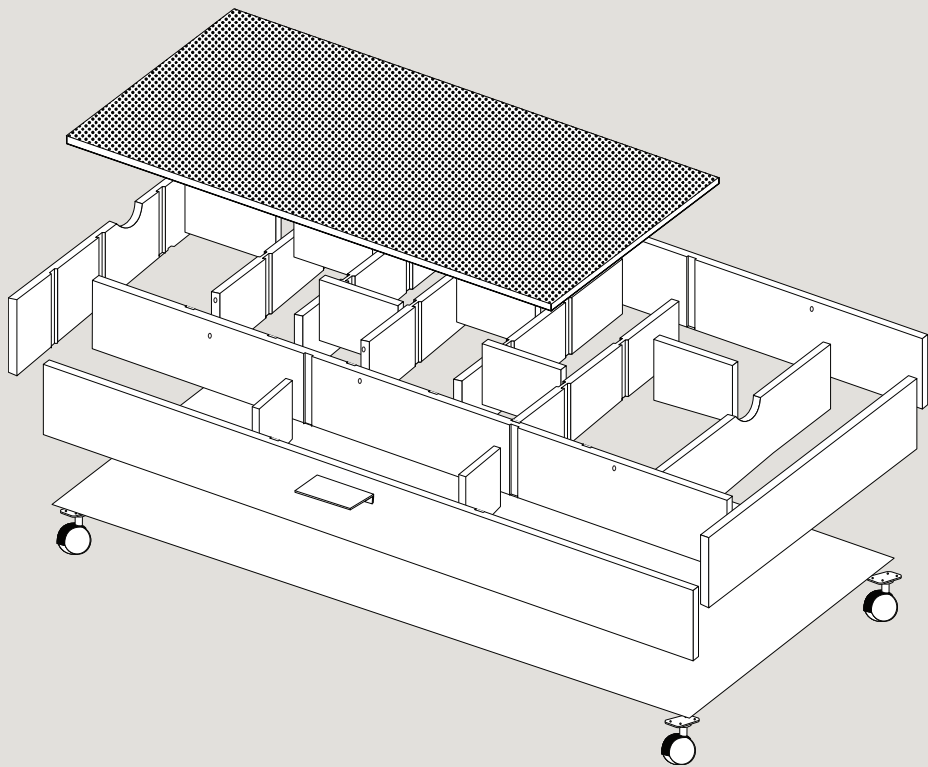
PHONE: 866-686-4891

EMAIL: INFO@MILLIARDBRANDS.COM

MAINTENANCE:
TO KEEP THE UNIT CLEAN, PERIODICALLY DUST AND WIPE IT WITH A DAMP CLOTH. FOR MORE EXTENSIVE CLEANING, USE A MILD CLEANSER AND A SOFT CLOTH.

Exploded View

Parts

1 X1
LEFT OUTER PANEL
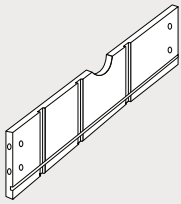
2 X2
REMOVABLE DIVIDER
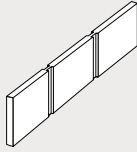
3 X1
RIGHT DIVIDER
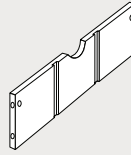
4 X2
CENTER DIVIDER
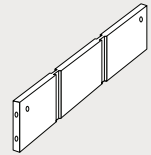
5 X1
RIGHT OUTER PANEL
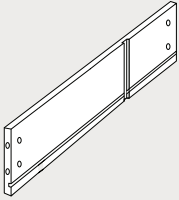
6 X10
SMALL DIVIDER

7 X2
SMALL FRONT DIVIDER

8 X1
BOTTOM SUPPORT

9 X1
FRONT PANEL
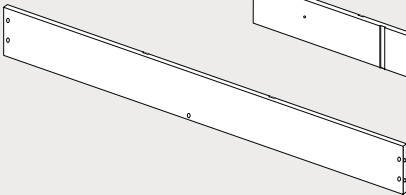
10 X1
DIVIDER PANEL
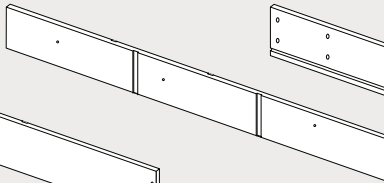
11 X1
BACK PANEL
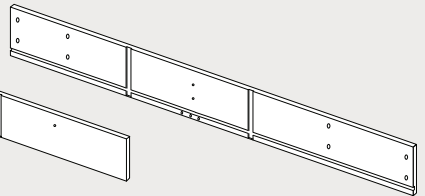
12 X1
BRICK PANEL
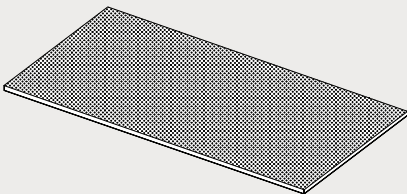
13 X1
BOTTOM PANEL

Hardware

A X16

B X16

C X10

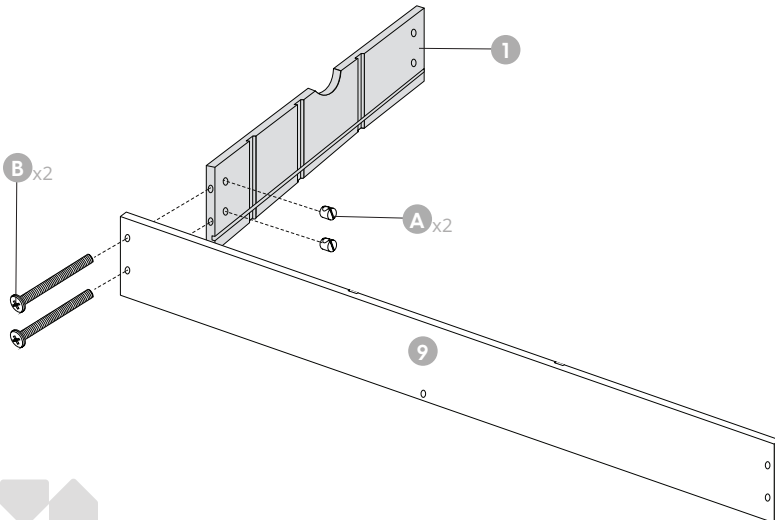**D** X2

E X1

F X5

G X1
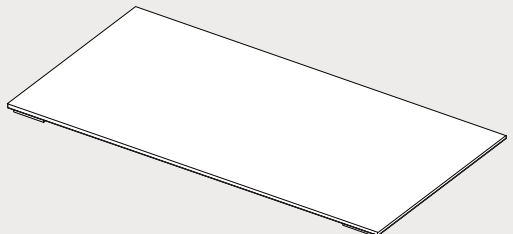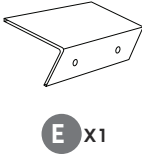
Assembly Instructions

A X2

B X2

- **INSERT NUTS (A) INTO THE LEFT OUTER PANEL (1).**
- **ATTACH THE LEFT OUTER PANEL (1) TO THE FRONT PANEL (9) USING BOLTS (B).**
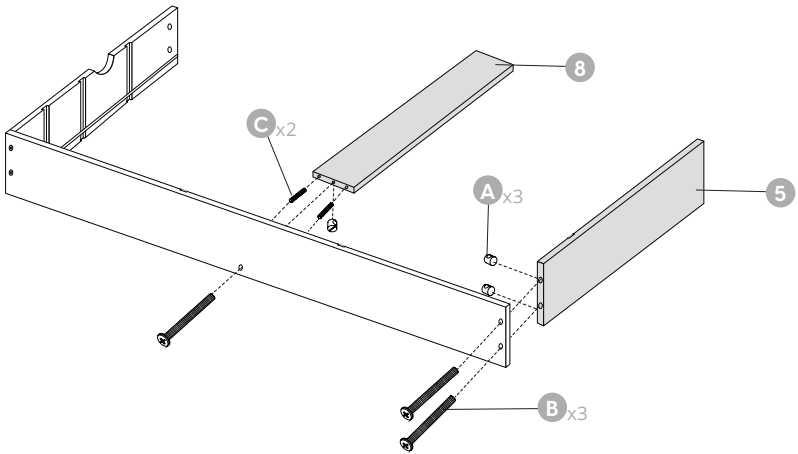
1

B x2

A x2

9

A
X3

B
X3

C
X2

- INSERT NUTS (A) INTO THE RIGHT OUTER PANEL (5).
- INSERT A NUT (A) AND DOWEL PINS (C) INTO THE BOTTOM SUPPORT (8).
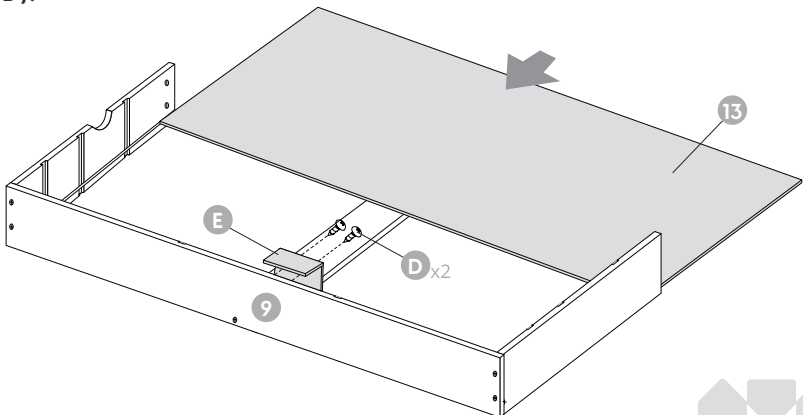- ATTACH THE RIGHT OUTER PANEL (5) AND BOTTOM SUPPORT (8) TO THE FRONT PANEL (9) USING A BOLTS (B).

C x2
8
A x3
5
B x3

D
X2

E
X1

- SLIDE IN THE BOTTOM PANEL (13).
- ATTACH THE HANDLE (E) TO THE FRONT PANEL (9) USING SCREWS (D).

13
E
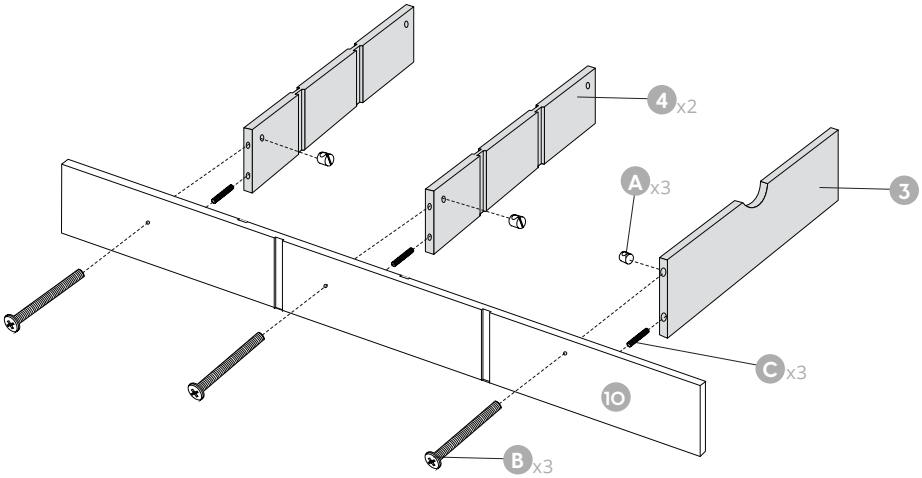D x2
9

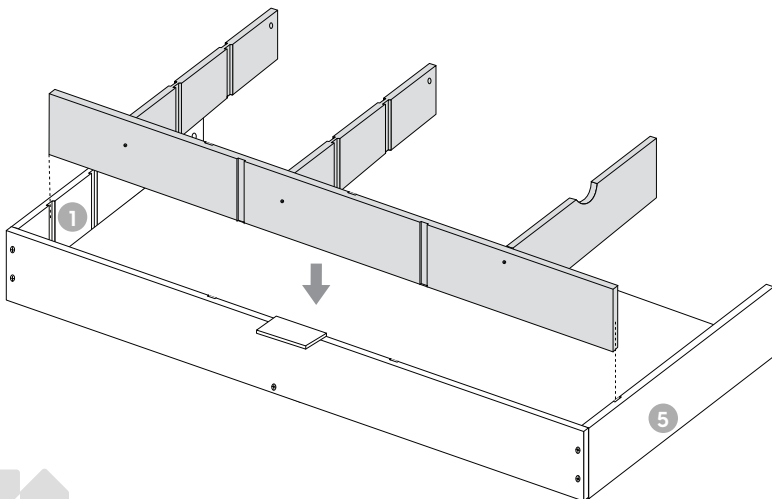| A X3		B X3		C X3	

- INSERT NUTS (A) AND DOWEL PINS (C) INTO THE CENTER DIVIDERS (4) AND RIGHT DIVIDER (3).
- ATTACH THE CENTER DIVIDERS (4) AND RIGHT DIVIDER TO THE DIVIDER PANEL (10) USING A BOLT (B).

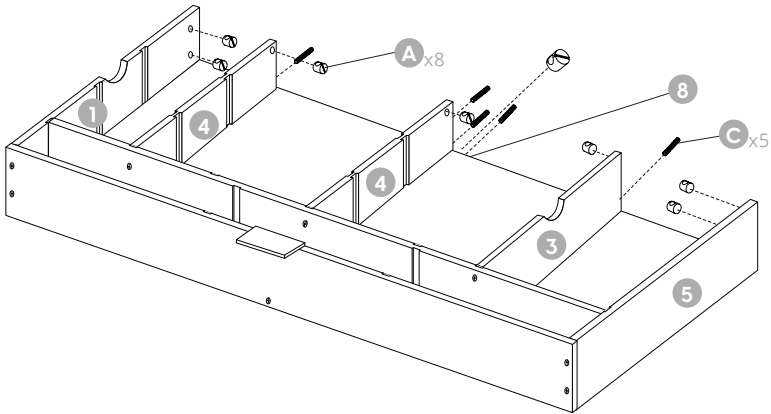LIFT THE ASSEMBLY FROM STEP 4 AND SLIDE IT BETWEEN THE OUTER PANELS (1)(5)

A
X8

C
X5

· INSERT NUTS (A) INTO THE LEFT AND RIGHT OUTER PANELS (5), CENTER DIVIDERS (4), RIGHT DIVIDER (3) AND BOTTOM SUPPORT (8).
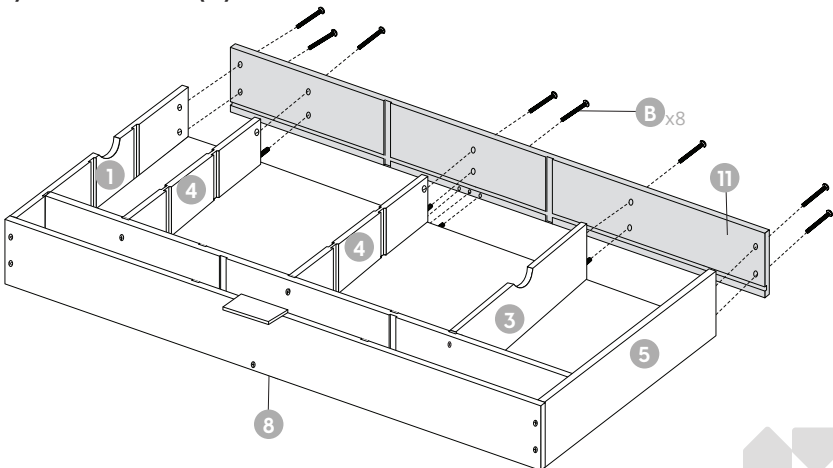· INSERT DOWEL PINS INTO THE BOTTOM SUPPORT (8), RIGHT DIVIDER (3) AND CENTER DIVIDERS (4).

B
X8

ATTACH THE BACK PANEL (11) TO THE LEFT AND RIGHT OUTER PANELS (1)(5), CENTER DIVIDERS (4), RIGHT DIVIDER (3) AND BOTTOM SUPPORT (8) USING BOLTS (B).
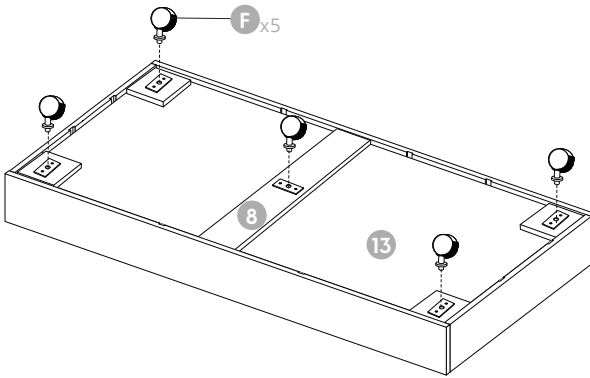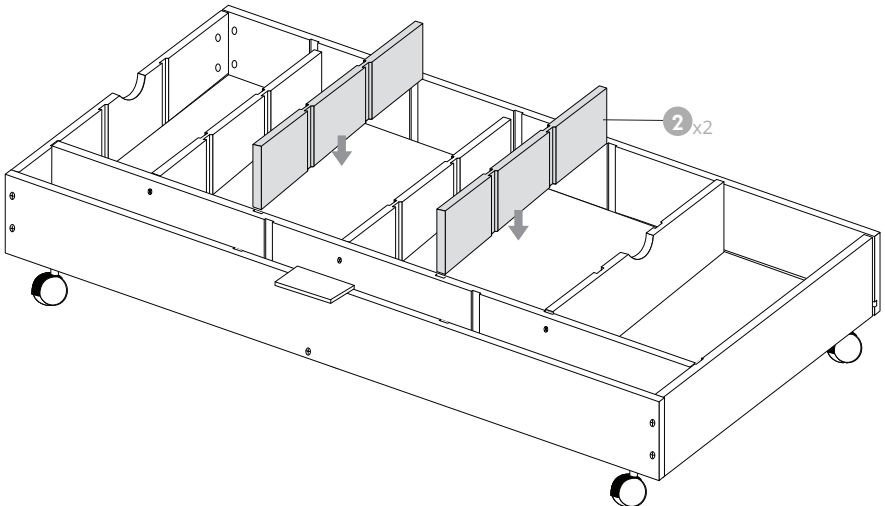
F
X5

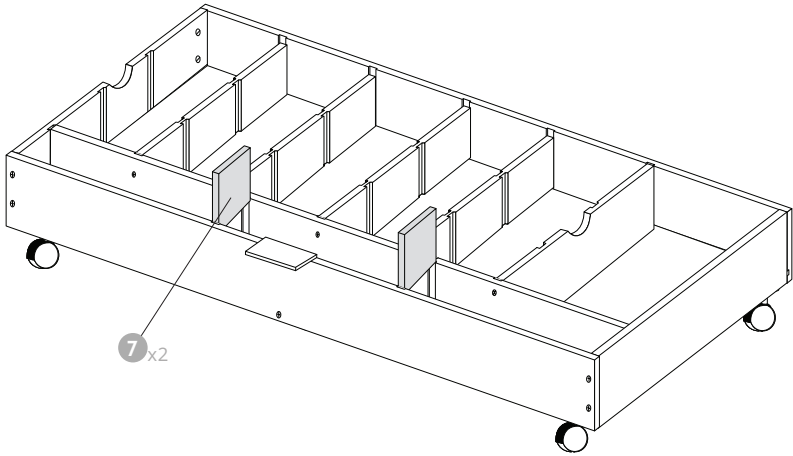**FLIP THE UNIT UPSIDE DOWN AND ATTACH THE WHEELS (F) TO THE BOTTOM PANEL (13) AND BOTTOM SUPPORT (8).**

F x5

8

13

SLIDE IN THE REMOVABLE DIVIDERS (2).

2 x2

DIVIDERS CAN BE REMOVED AS NEEDED

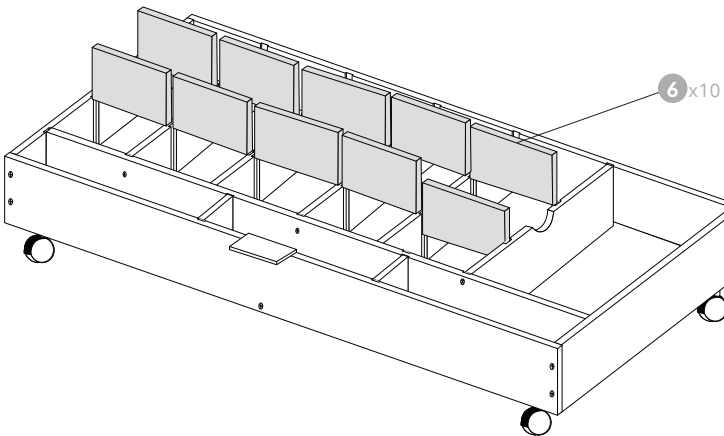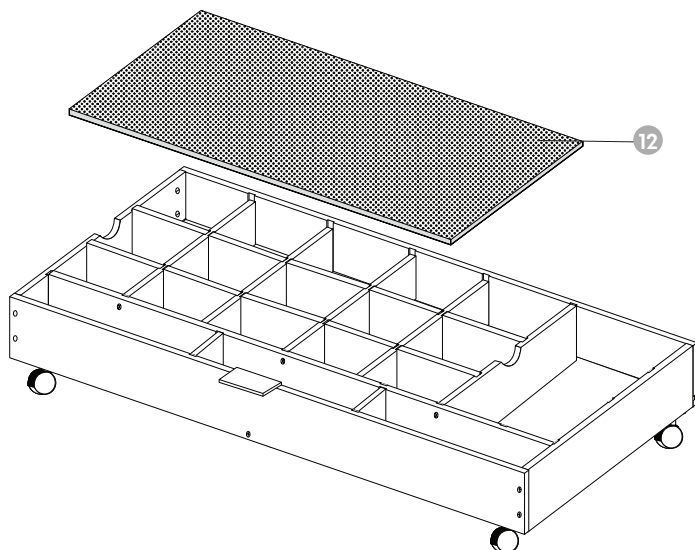**SLIDE IN THE SMALL FRONT DIVIDERS (7).**
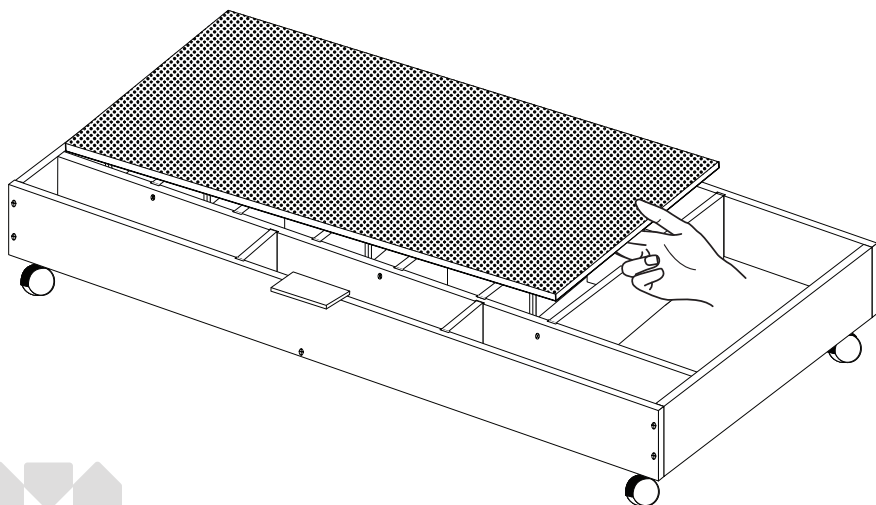

7 x2

SLIDE IN THE SMALL DIVIDERS (6).

6 x10

FINALLY, PLACE THE BRICK PANEL (12) ON TOP OF THE UNIT.

TO FLIP THE BOARD TO THE OTHER SIDE, SLIP YOUR FINGERS INTO THE CUTOUT ON EITHER END OF THE BOARD, LIFT AND FLIP.

Thank you again!

Milliard™