Self-Cleaning
Hand shower
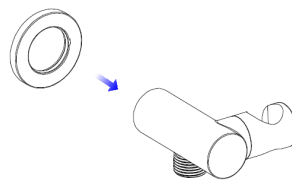
Revolution SHOWERS

ø120

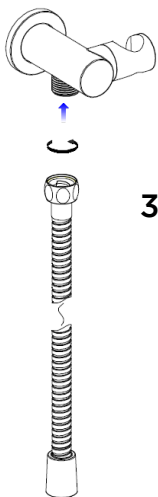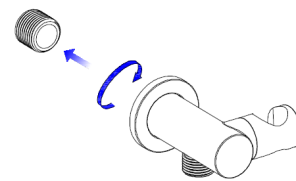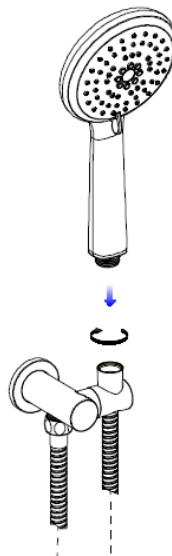220

40.5

ø50

ø28

*G1/2
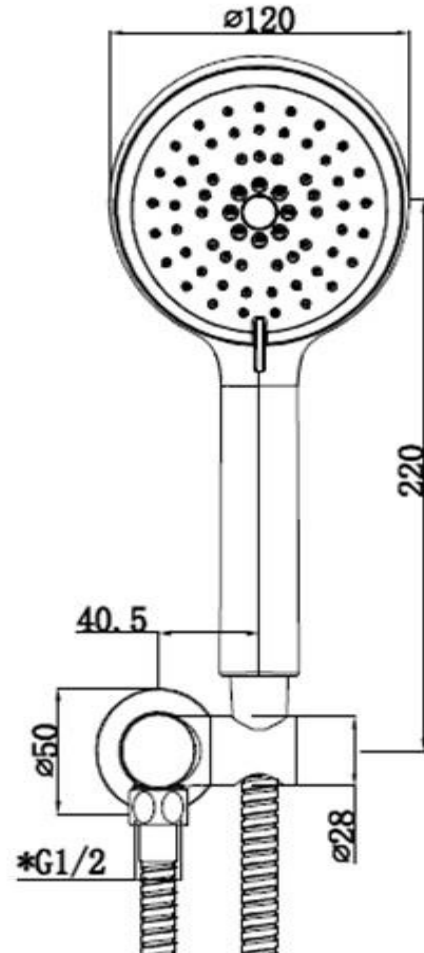
Installation Guide: SCS2

1. Apply teflon tape

2. Push on cover plate and screw on wall bracket

3. Screw on the hose

4. Screw on the hand shower