| Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.
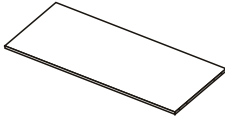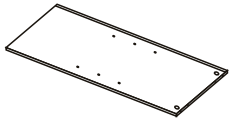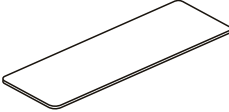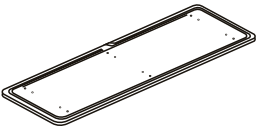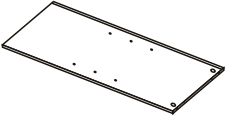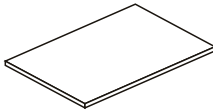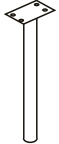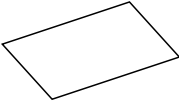
Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

CARTON CONTENTS:

Hardware:

Ax6	Bx6	Cx12	Dx8	Ex16	Fx4	Gx2	Hx8
Ix8	Jx2	Kx2	Lx8	Mx2	Nx8	Ox1	

Panels:

① x1	② x1	③ x1	④ x1	⑤ x1
⑥ x2	⑦ x2	⑧ x4	⑨ x2	

LuxenHöme

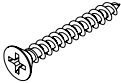| Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Tools required for assembly: Philips screwdriver and flathead screwdriver (if using power tools, use with care).

1:00
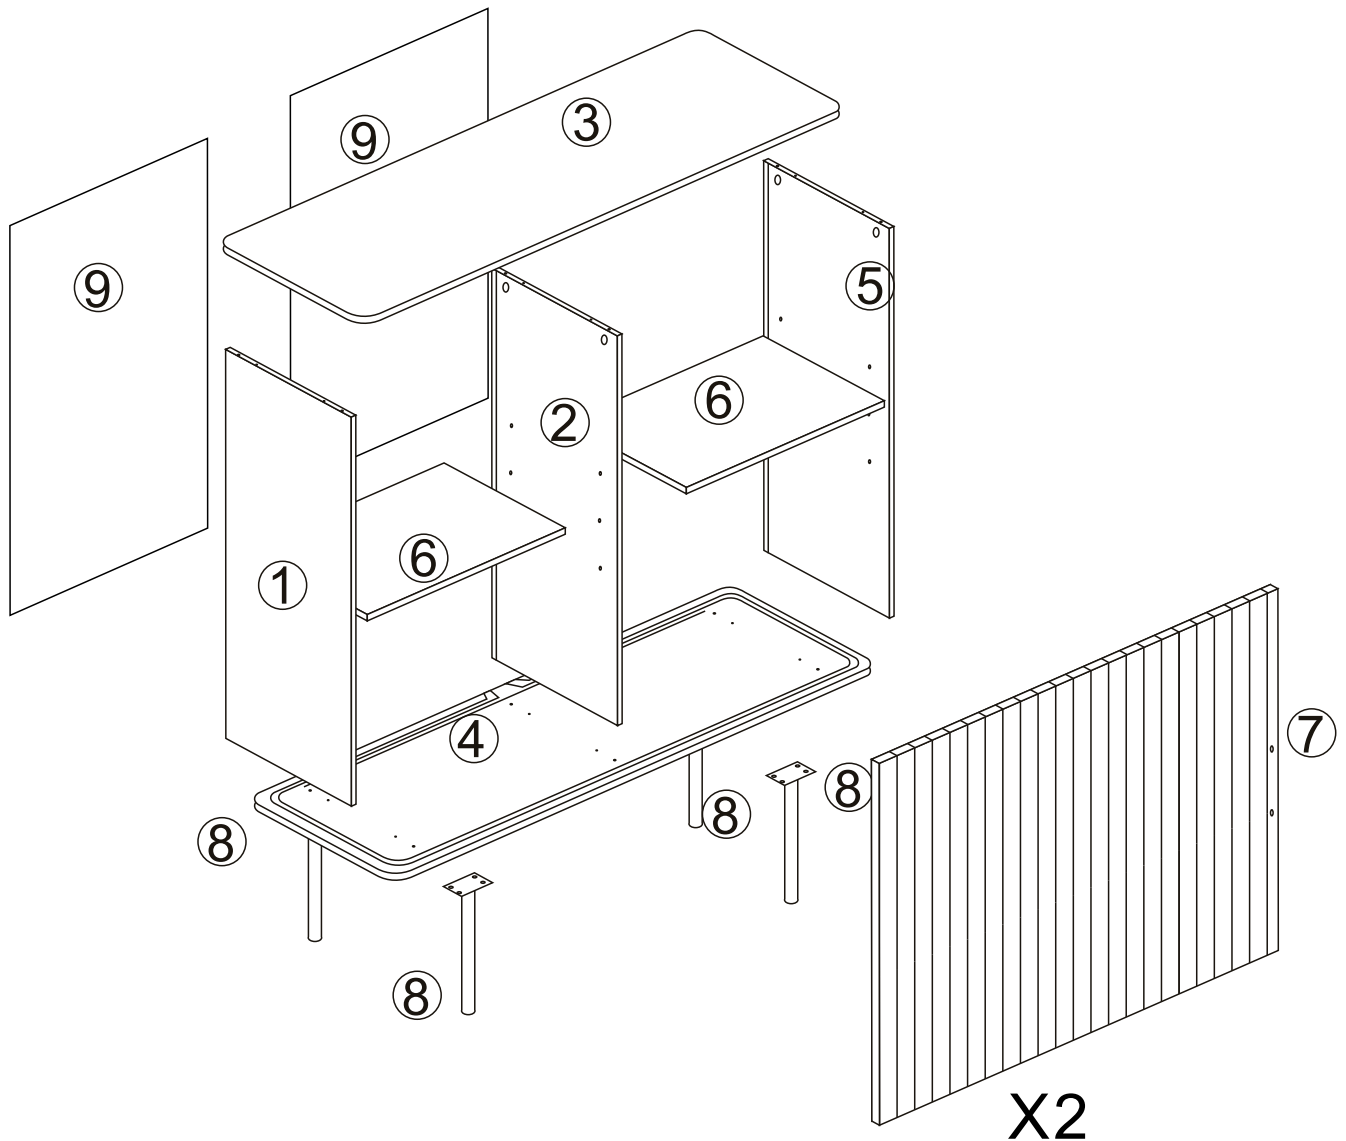
Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Step 1： Insert quickfit screws (A) into part 3, as shown.

Ax6

A

③

Warning : To avoid scratch , make sure to put the panel on clean and soft surface .
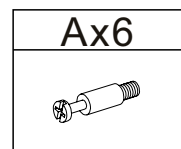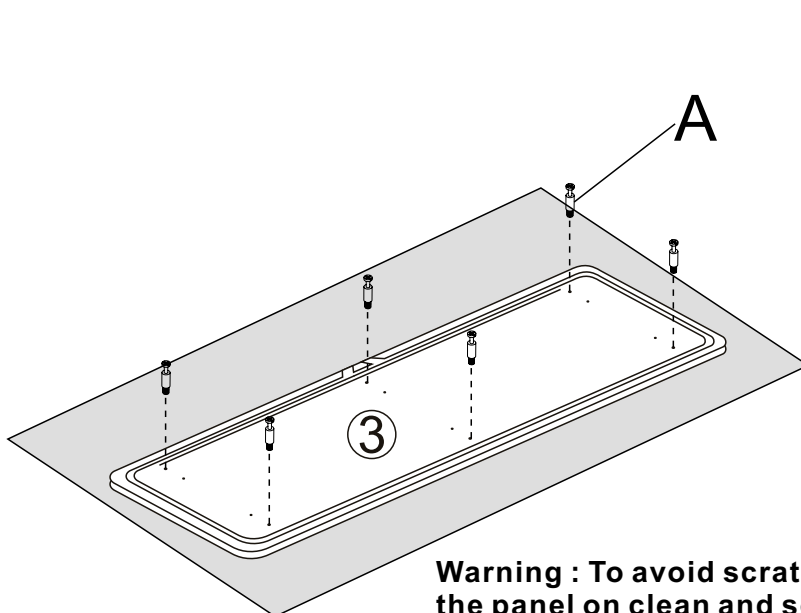
Step 2: Insert wooden dowels (C) into part 3, as shown.
Insert cam locks (B) into parts 1, 2 and 5, as shown.
Fit parts 1, 2 and 5 to part 3.
Turn cam locks clockwise to tighten.

Bx6

Cx6

①

②

⑤

B

C

③
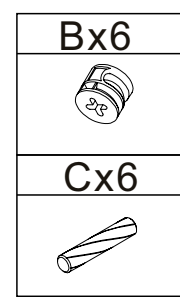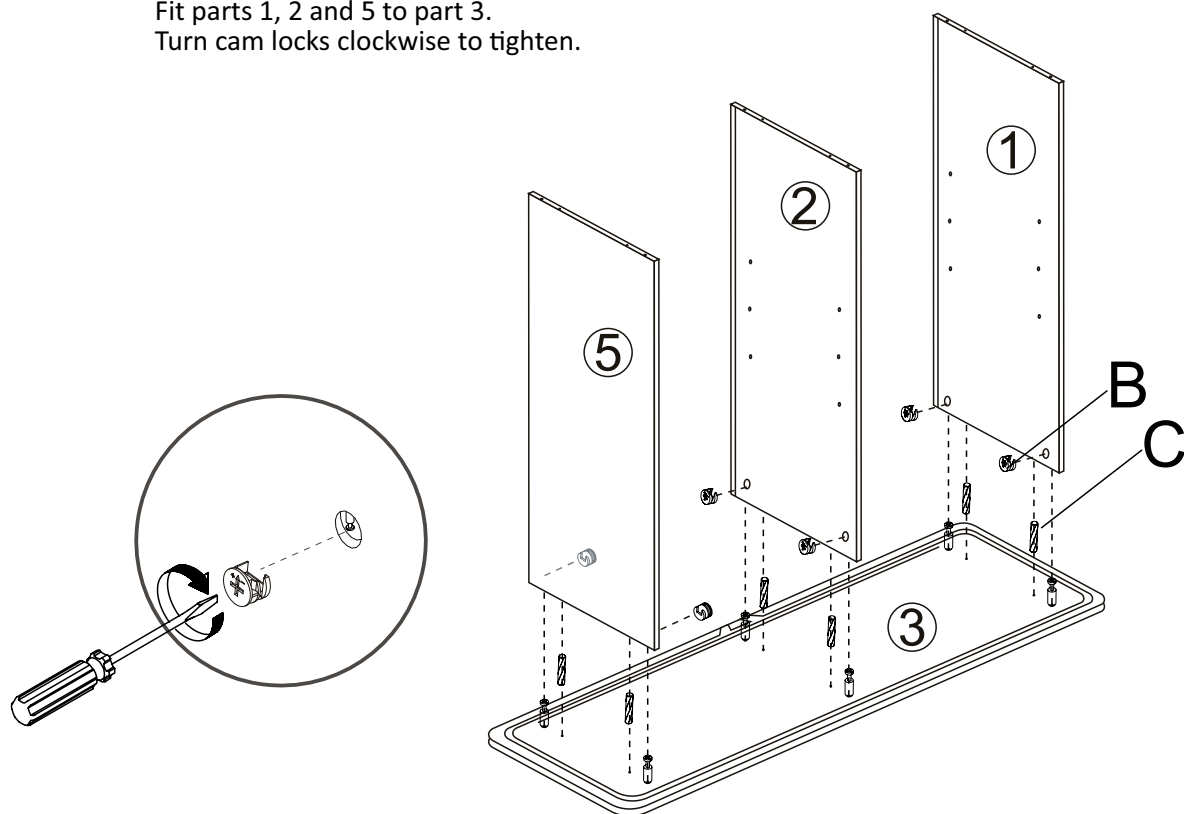
Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Step 3: Insert parts 9 into grooves between parts 1, 2, 3 and 5, as shown.
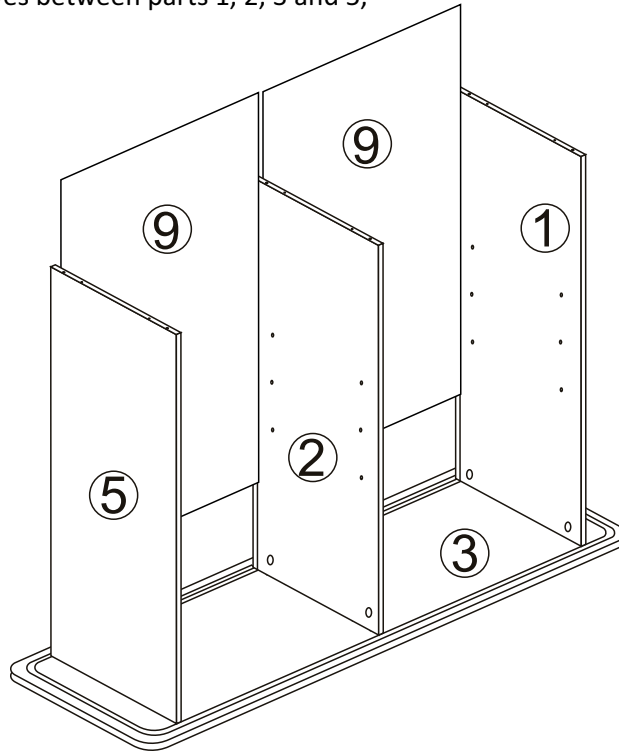
Step 4: Insert wooden dowels (C) into parts 1, 2 and 5, as shown.
Fix part 4 to parts 1, 2 and 5 with screws (D), as shown.

Cx6
Dx6

Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

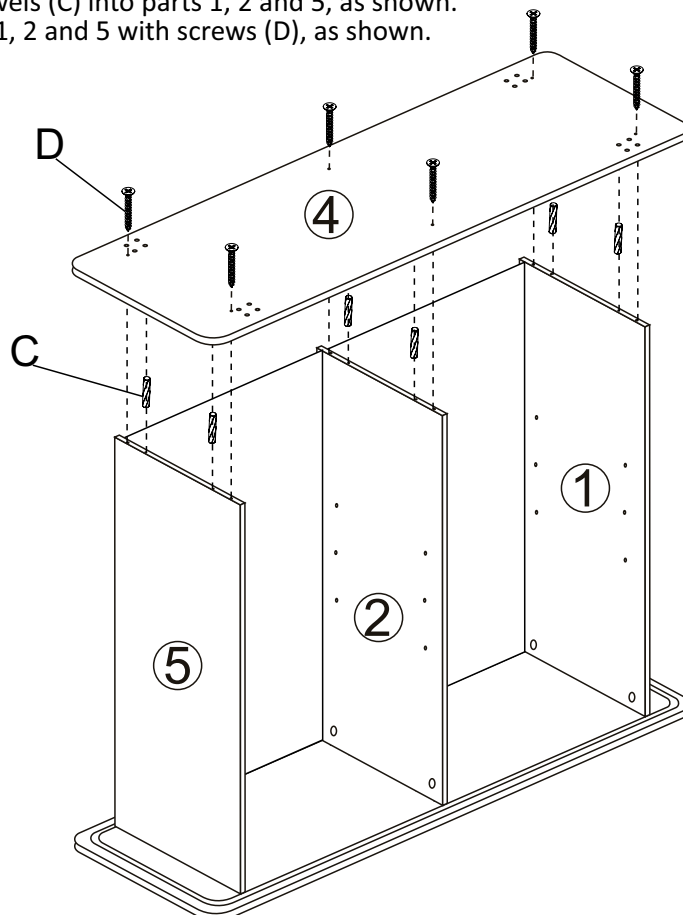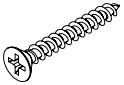**Step 5:** Fix legs 8 to part 4 using screws (E) and allen key (O), as shown.
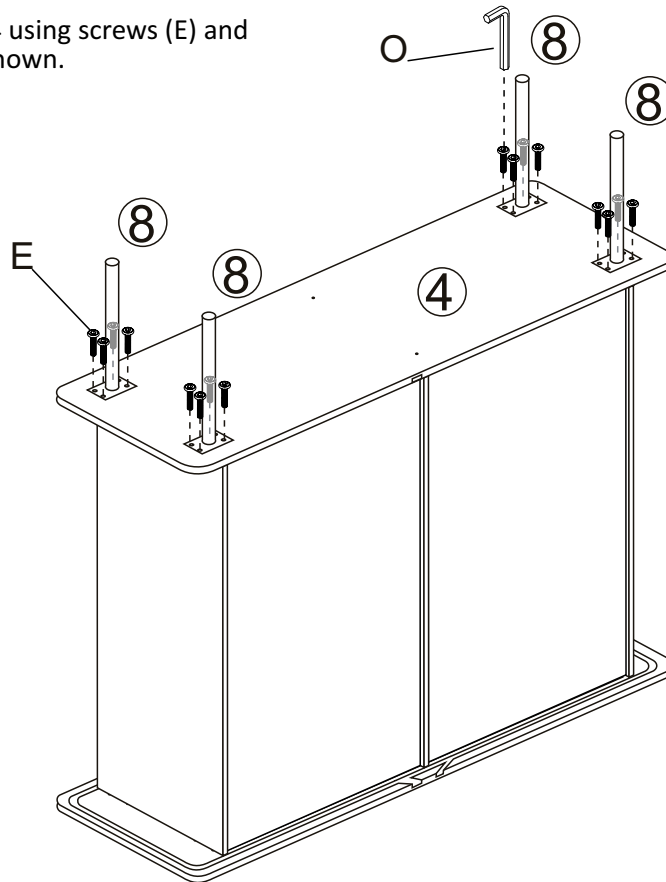
Ex16
Ox1

Step 6: Secure backing panel 9 by fixing wedges (H) using screws (I), as shown.
Fix wall straps (K) to part 3 using washers (L) and screws (J), as shown.
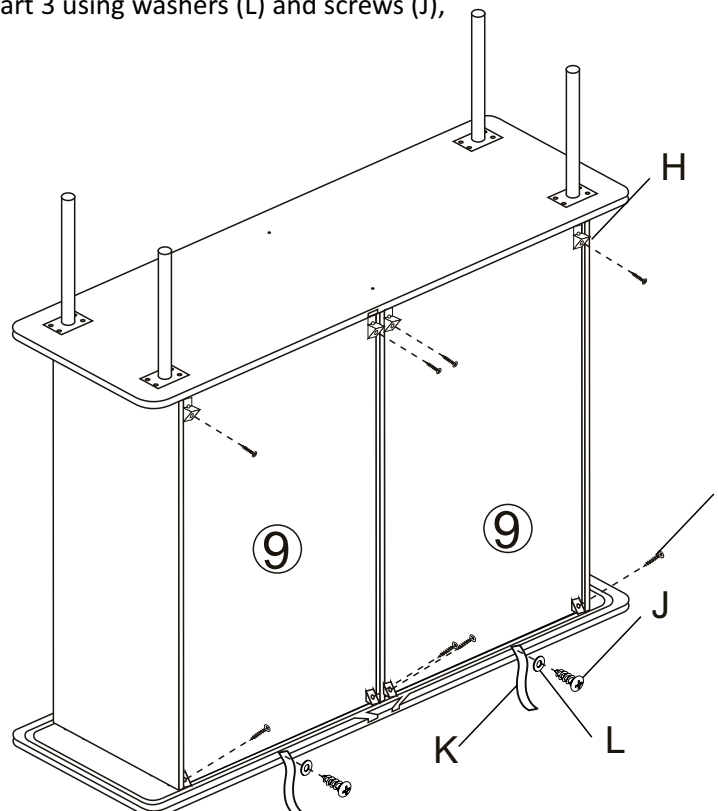
Hx8
Ix8
Jx2
Kx2
Lx2

Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Step 7: Fit shelf supports (N) into desired position in the assembled unit.
Place shelves 6 on top of shelf supports, as shown.

Nx8

N

⑥

⑥

Step 8: Fix handles (G) to doors 7 using washers (L) and screws (F), as shown.

Fx4

Gx2

Lx4

F L

G

⑦   x2
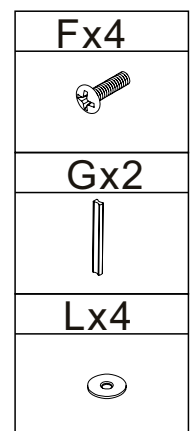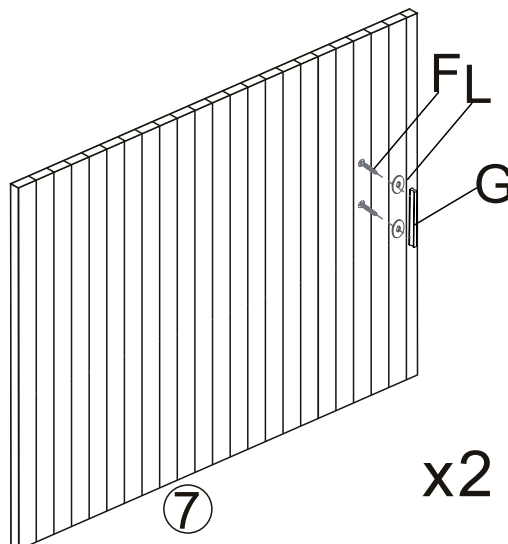
Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

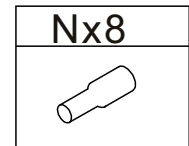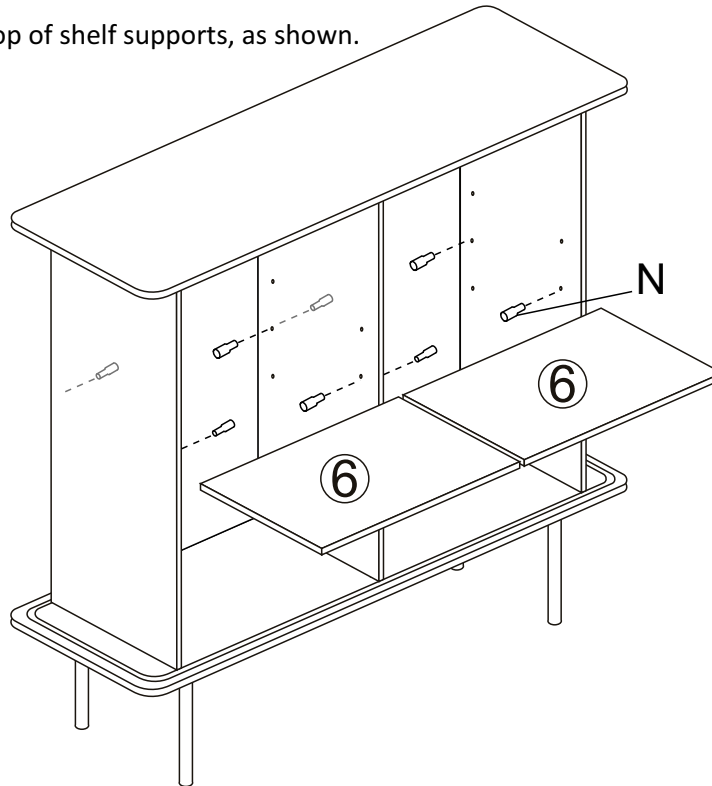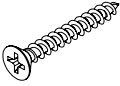**Step 9:** Insert doors 7 into grooves between top and botom from back, as shown.

BACK
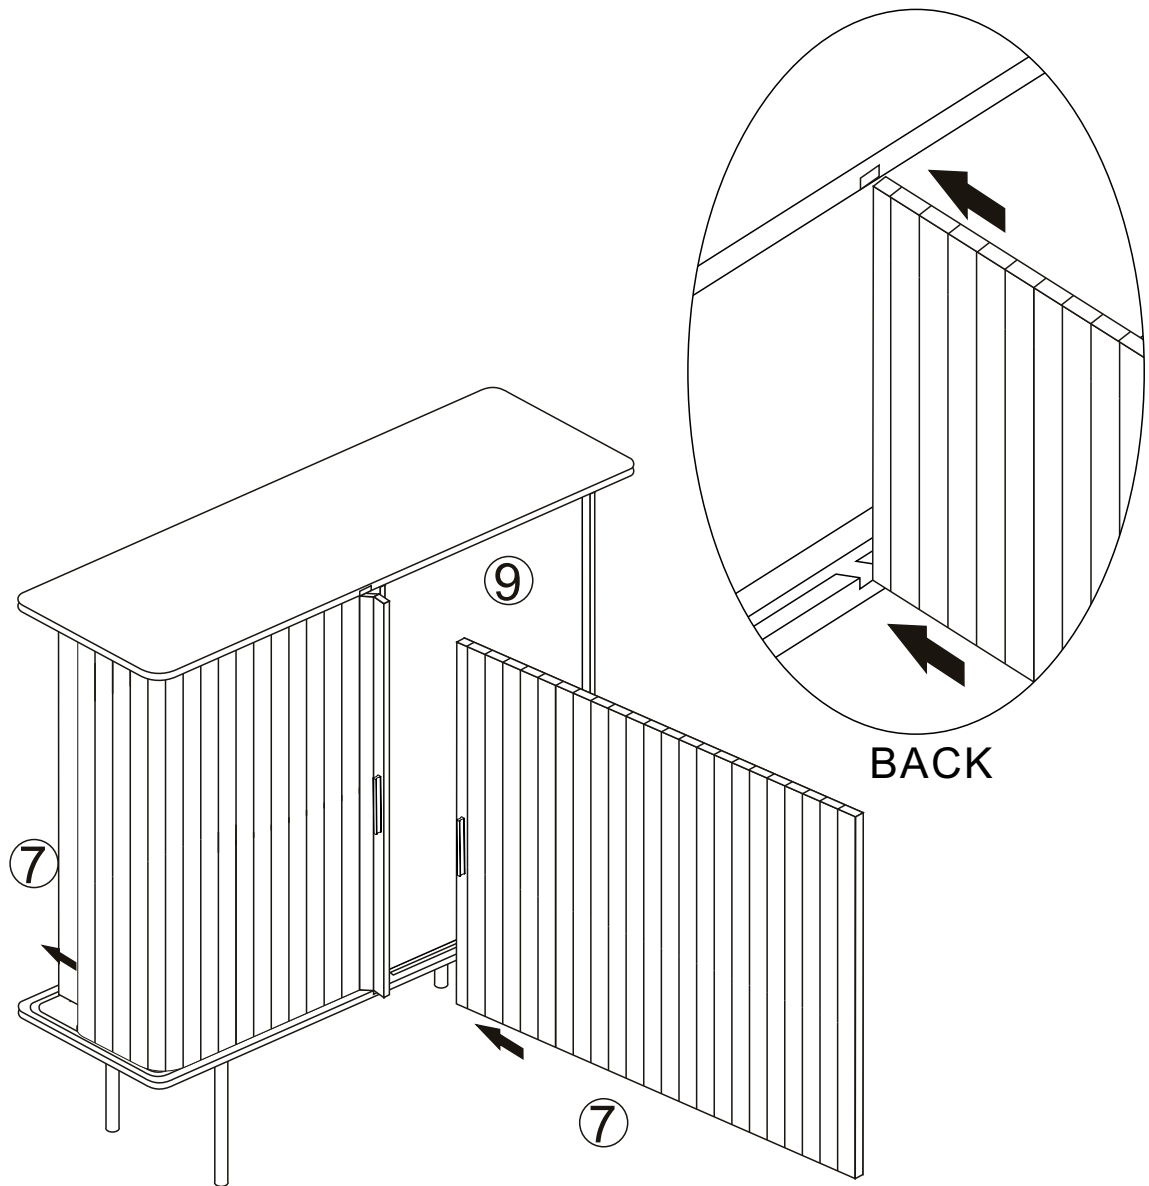
Product Name:	Natural Finish Wood 2-Door 35.43 In. Wide Storage Cabinet
SKU #:	WHIF1980

Step 10: For extra stability, it is recommended that you fix your cabinet to the wall using hardwares (D, L and M), as shown.
Screws (D) are fixed through washers (L) and wall straps and into the wall plugs (M).
Should you choose not to affix the product to the wall, serious injury may be caused if the product tips o er.
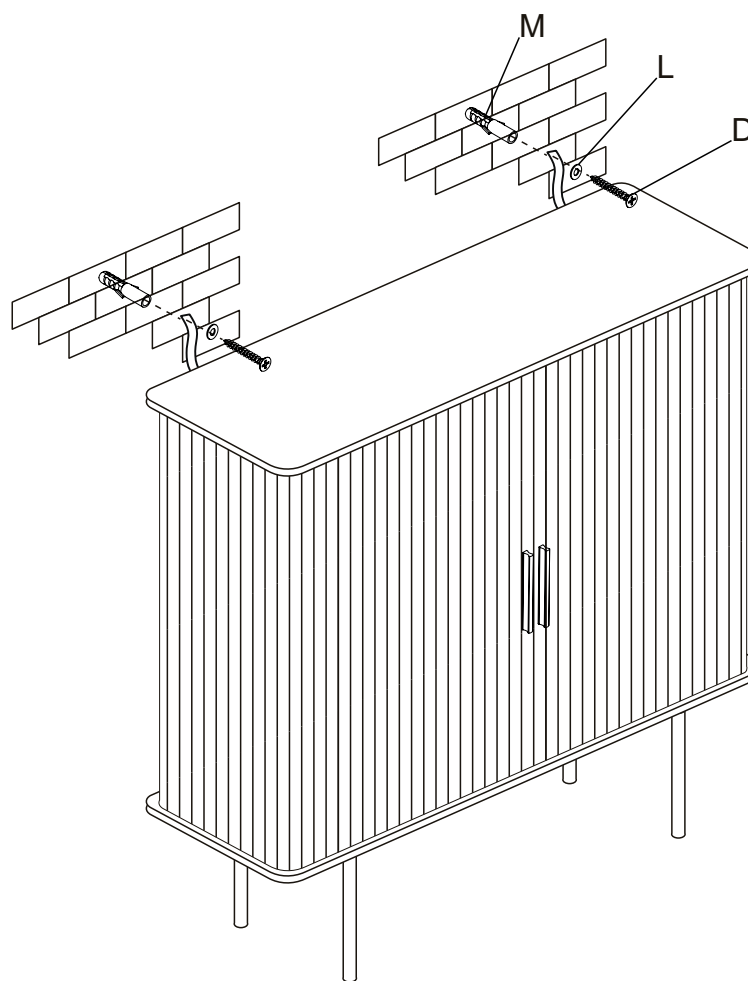
Dx2
Lx2
Mx2

⚠ **Warning:** DO NOT sit or stand on the Cabinet as this may damage the product and cause serious bodily injury.