GEN_VMT

EN

Penray 02 Tiles

Installation Manual

reddot winner 2020

V/COUSTIC

| Material Needed

EN

Included

PENRAY 02_tiles | 1.56m2

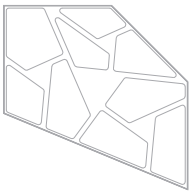

tiles 02.1 | 3 uni.

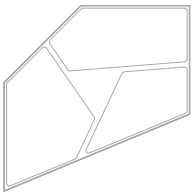

tiles 02.2 | 3 uni.

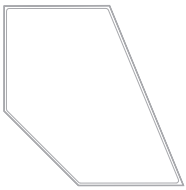

tiles 02.3 | 3 uni.

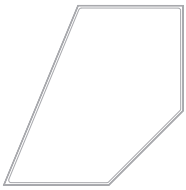

tiles 02.4 | 3 uni.

Not included

Level

Measuring Tape

Box Cutter



Flexi Glue Ultra

EN

1_

Apply Flexi Glue Ultra on the back of the acoustic panel, near the edges and in the center. Do not wait longer than 5 minutes after applying the glue to attach the panel to the wall.

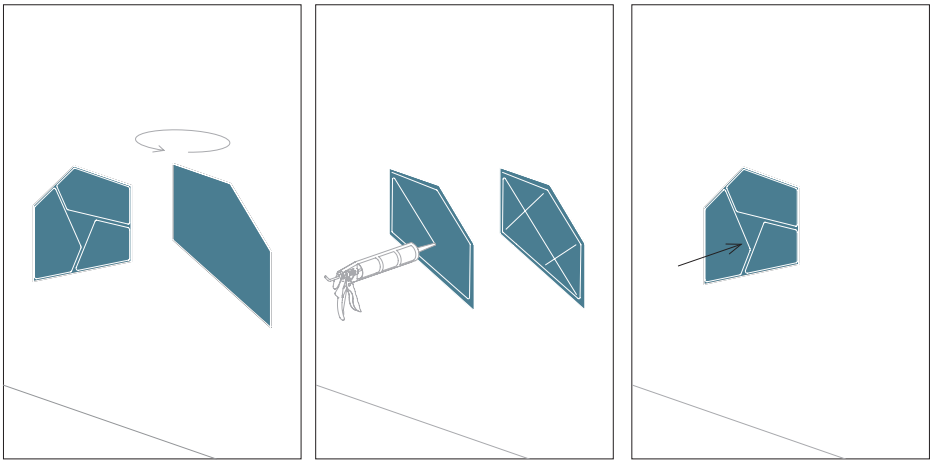

2_

Place the panel on the suitably chosen position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

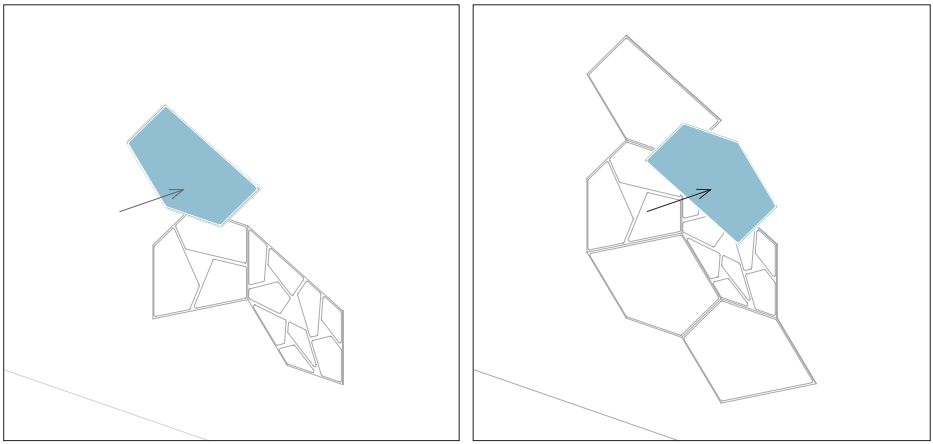

!

For the installation of Gen Tiles on the ceiling, we recommend using Flexi Glue Ultra.
To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding.

Do not apply Gen Tiles behind radiators or too close to a heat source.

Possible setup examples

One box (12 tiles)

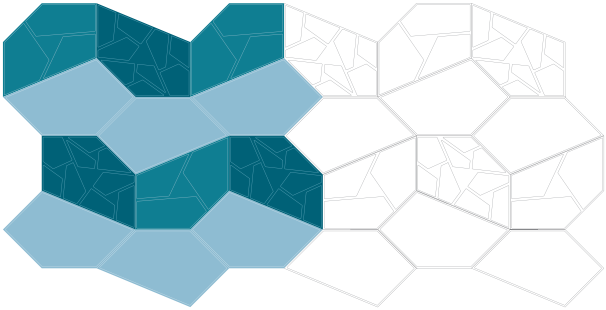

One box (12 tiles)

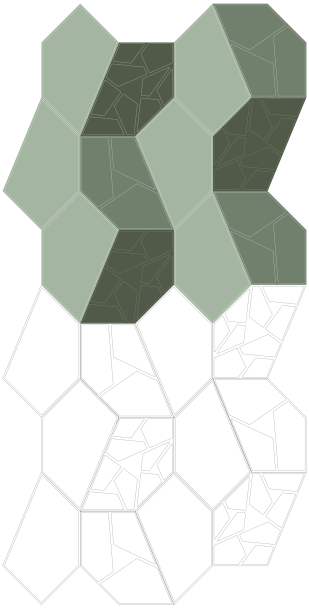

EN

One box (12 tiles)

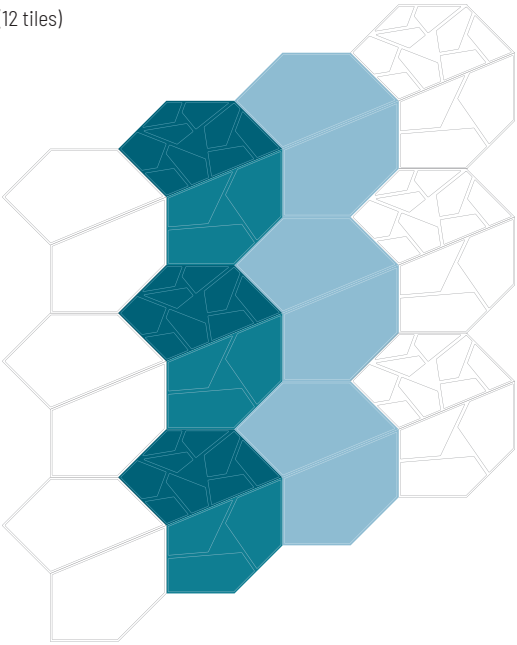

One box (12 tiles)

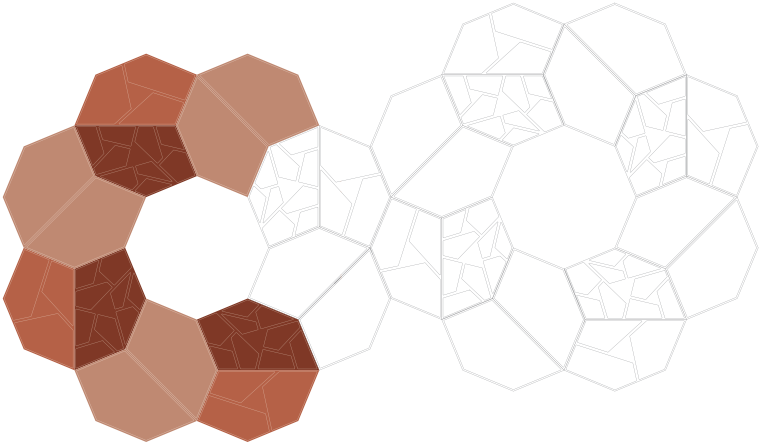

One box of each color (36 tiles)

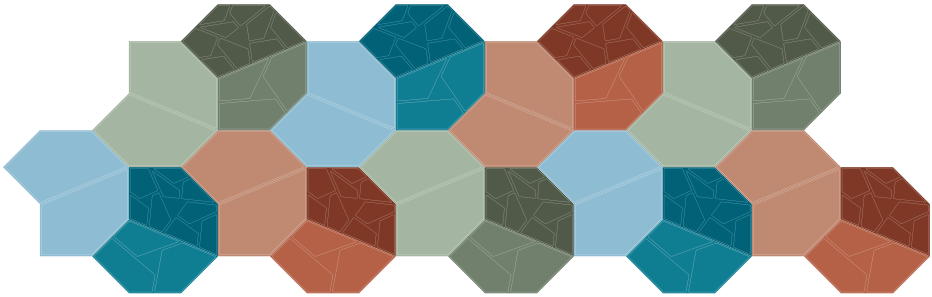

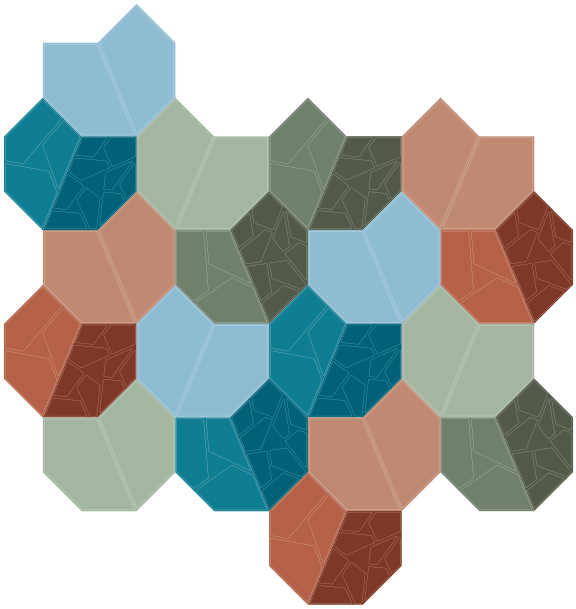

EN

V/COUSTIC

Main Office, R&D & Logistics
Avenida do Pólo 3, Nº 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office
Rua Quinta do Bom Retiro Nº 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales
E sales@vicoustic.com

www.vicoustic.com

© Vicoustic, 2021 | V6

No parts of this document might be copied and/or published without written consent of Vicoustic.