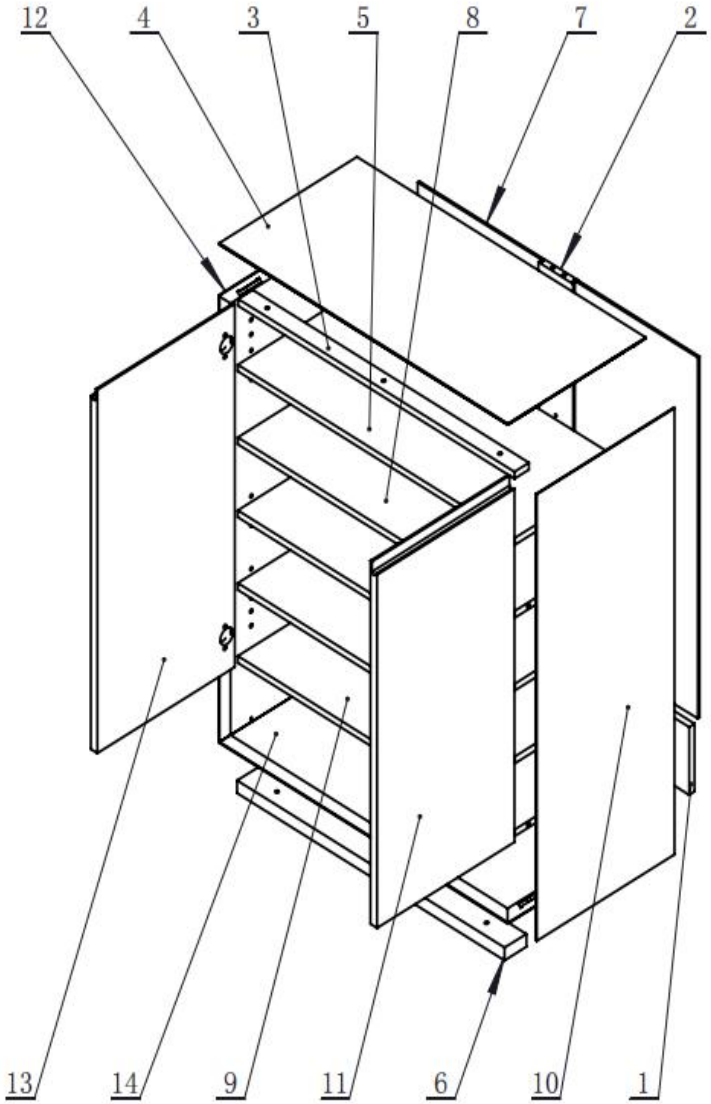

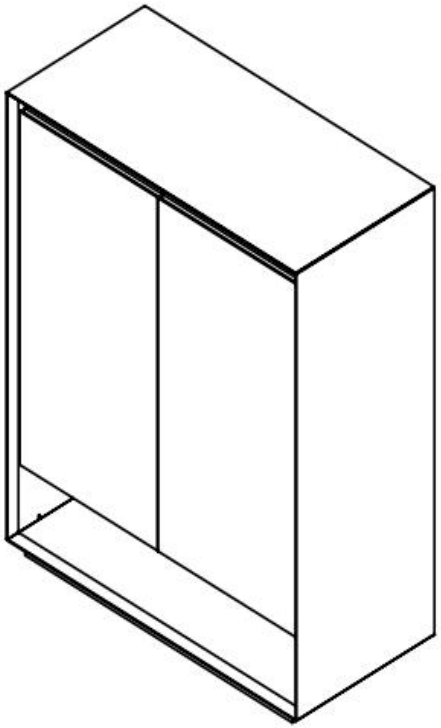

Itme	Name	Spec.	Qty
1	Backplane	762X149	1
2	Backing strip	785X96	1
3	Door-retaining strips	760X40	1
4	Top plane	794X379	1
5	Slip Sheet	762X317	3
6	Leg strip	735X60	2
7	Soft Backplane	793X342	2
8	Fixed Clapboard	762X317	1
9	Clapboard	762X344	1
10	Right side plate	981X379	1
11	Right Door panel	798X378	1
12	Left side plate	981X379	1
13	Left Door panel	798X378	1
14	Base plate	794X379	1

6、

a. Paste ⑪ at the holes of fasteners on the visible surface of each plate.

b. The wall of the cabinet is installed with ⑧. The ② is fixed on the wall with ⑨.

The installation is complete.

Hardware List

No.	Name	Picture	Qty.	No.	Name	Picture	Qty.	No.	Name	Picture	Qty.
①	Large tapping buckle bar		17	⑦	Chrome plated cylindrical partition nail rod		15	⑬	M6*35 hexagonal semi-round head screw		4
②	Large buckle wheel		17	⑧	φ8*35 expansion rubber plug		2	⑭	Dia. 6 flat washer		7
③	8*35 Wood tip		4	⑨	M5*60 cross countersunk head galvanized self-tapping nails		2	⑮	hex wrench		1
④	hinge		4	⑩	air hole		2	⑯	Plastic nail		4
⑤	M4*12 cross countersunk nickel plated screw		16	⑪	Furniture sticker	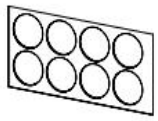	17	⑰			
⑥	M4*14 cross countersunk self-tapping nails (nickel-plated)		8	⑫	M6*20 hexagonal semi-round head screw		3	⑱			

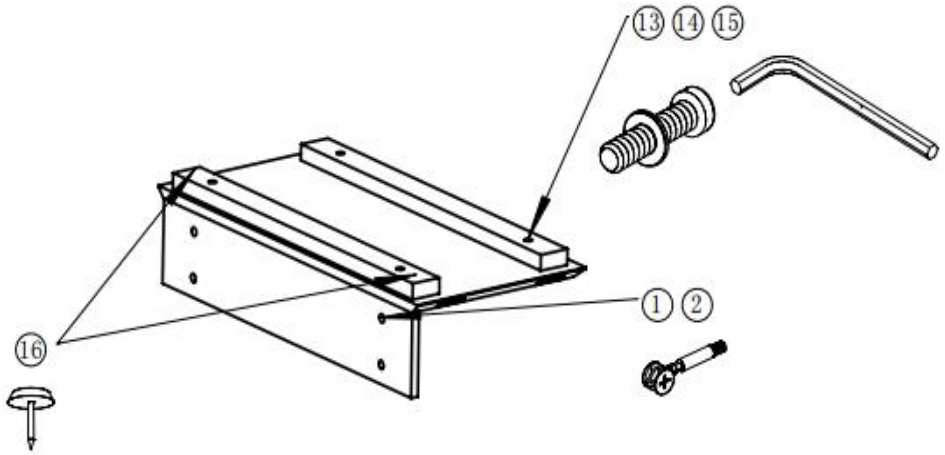

1、
a. The 6 installed ⑯ evenly.
b. The 14 adopts ⑬,⑭ and ⑮ to connect the 6.
c. The 14 adopts ② and ① to connect the 1.

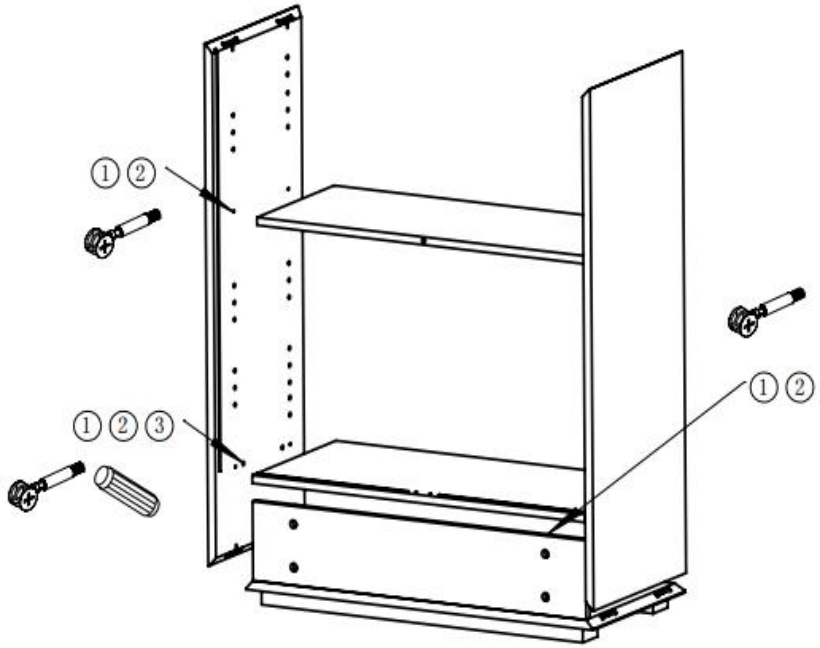

2、
a. The 8 and 9 adopts ②,① and ③ to connect the10 and 12.
b. The 1 adopts ② and ① to connect the 9; The 10 and 12 to connect the 14.

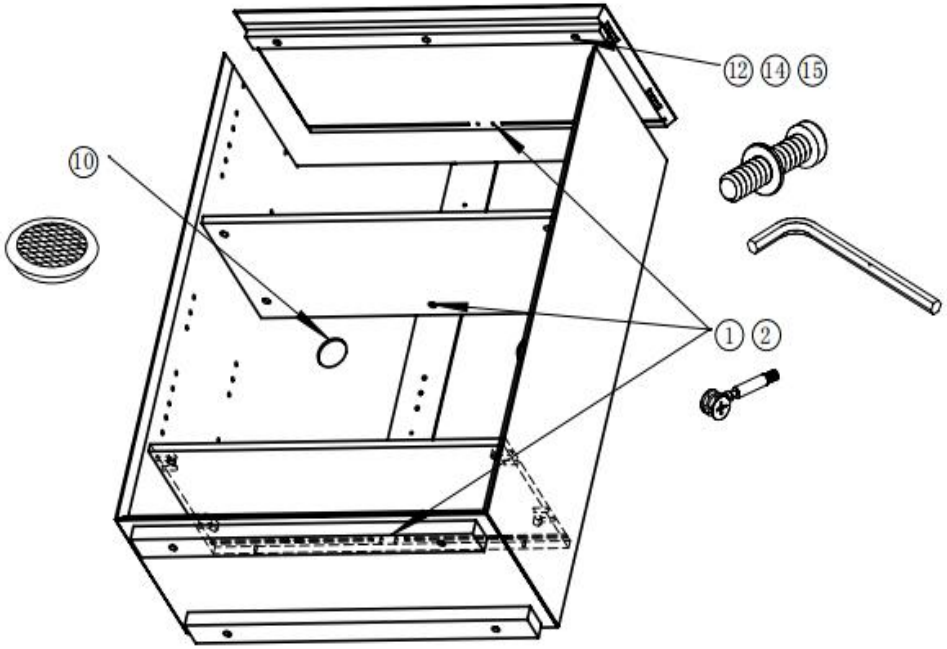

3、
a. The 2 adopts ② and ① to connect the 8 and 9; then Insert the 7.
b. The 4 adopts ⑫ and ⑭ to connect the 3;
c. The 1 adopts ② and ① to connect the 4;
d. The ⑩ are installed on the 7.

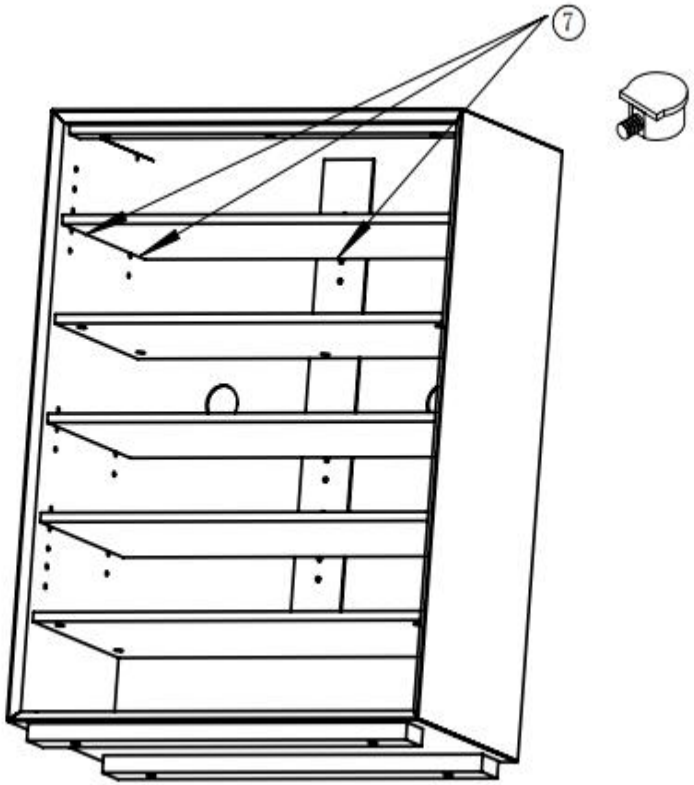

4、The 10 and 12 to install the ⑦ in the corresponding position, and put the 5 on it

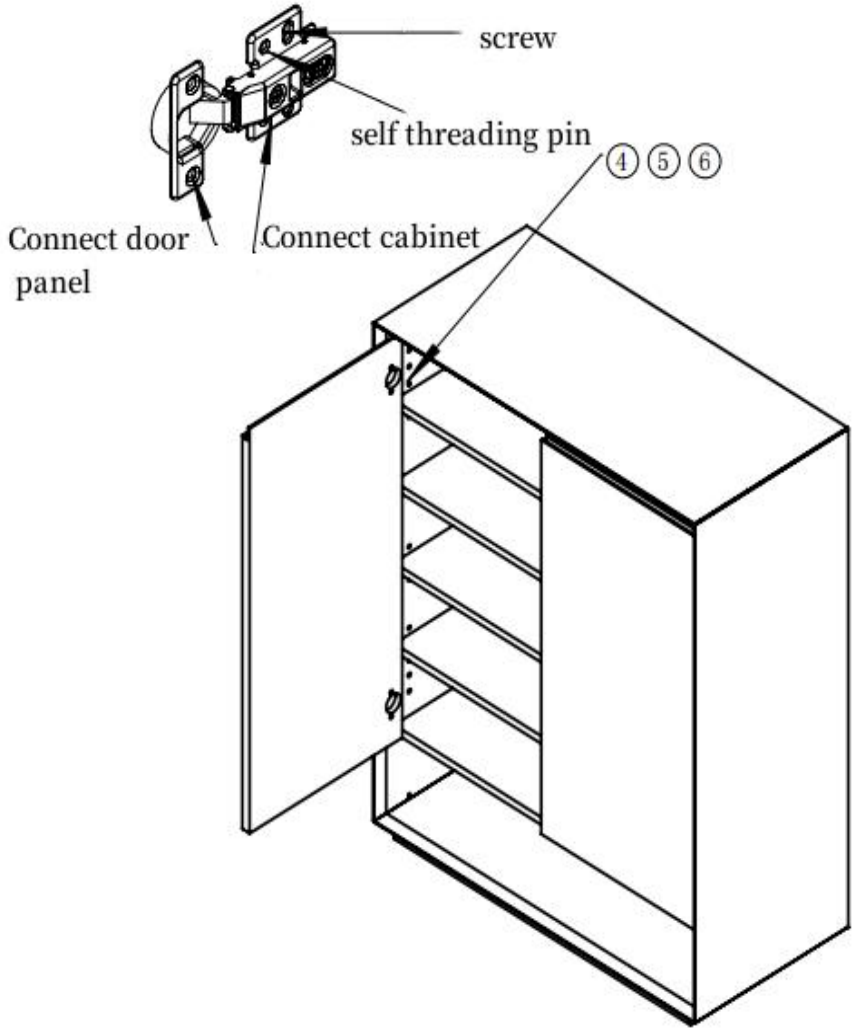

5、
a. Each hinge ④ adopts two ⑤ installed on the corresponding position of the 11 and 13.
b. After each hinge are fixed on each door panel, then use ⑤ and ⑥ to connect the corresponding side panels of the cabinet.