Horizon Quadro A
2P workstation

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Tools Required: Power screwdriver; Allen key set (provided)

👤👤 2 persons required for installation
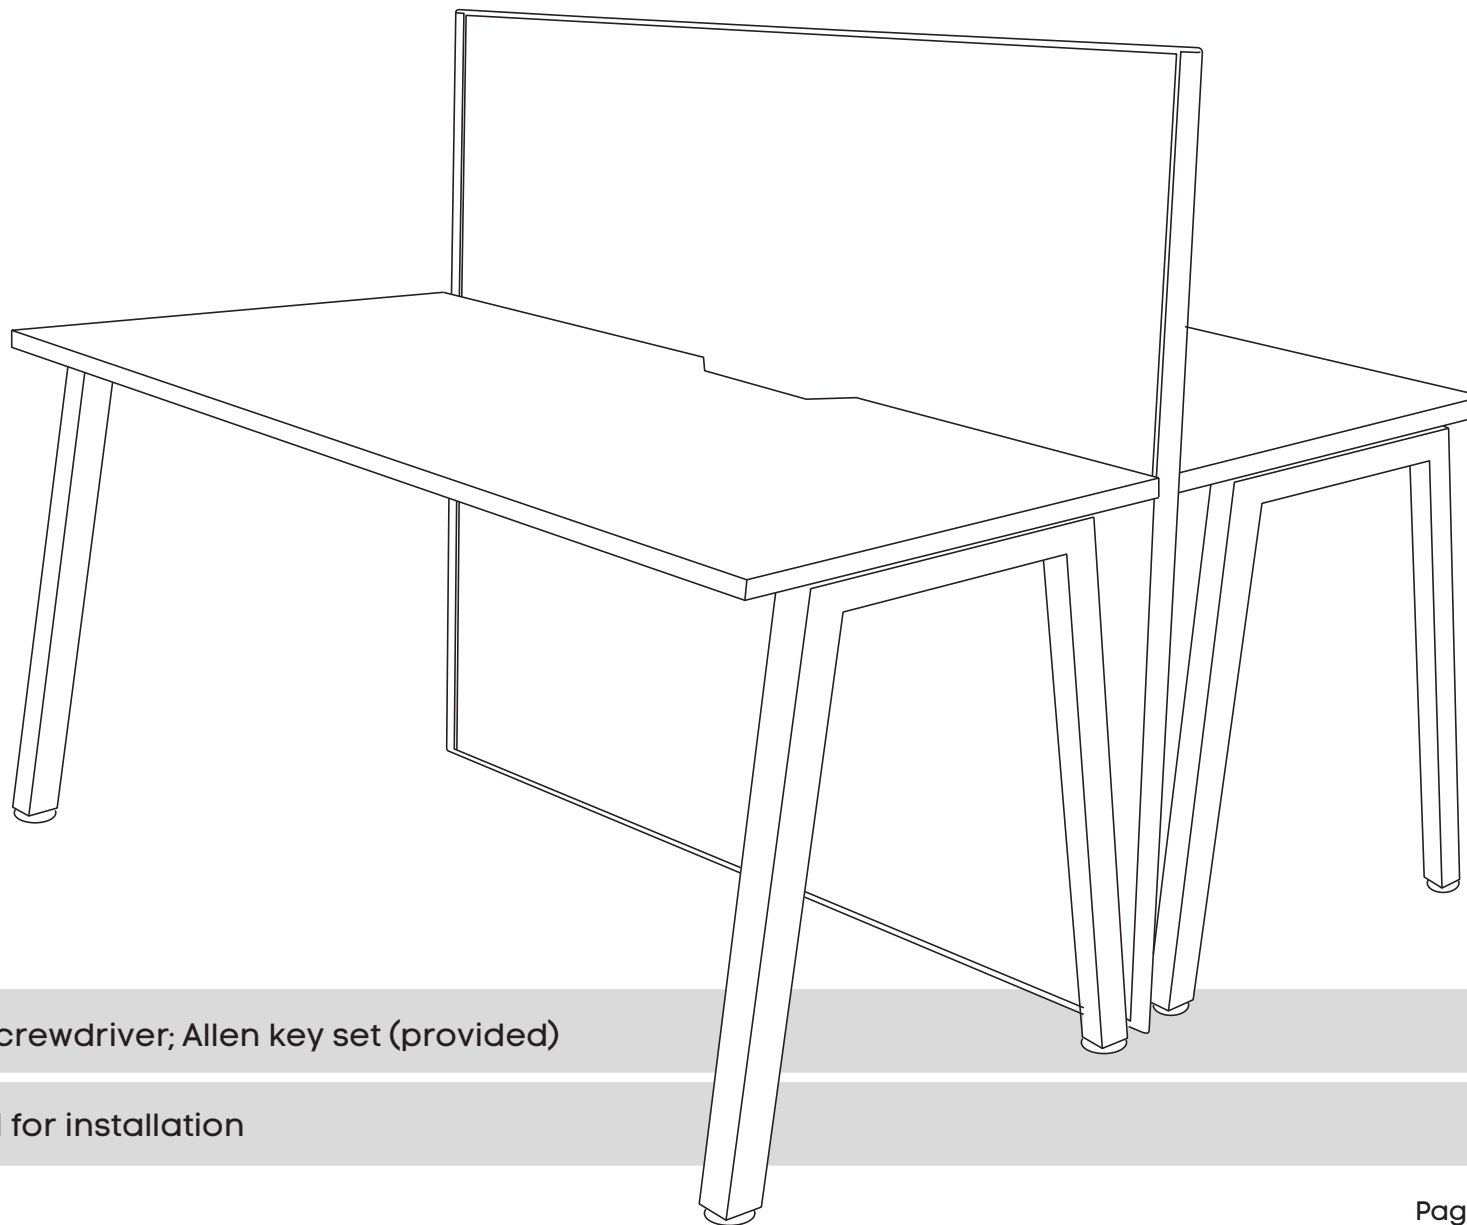
ASSEMBLY INSTRUCTIONS
Horizon Quadro A
2P workstation
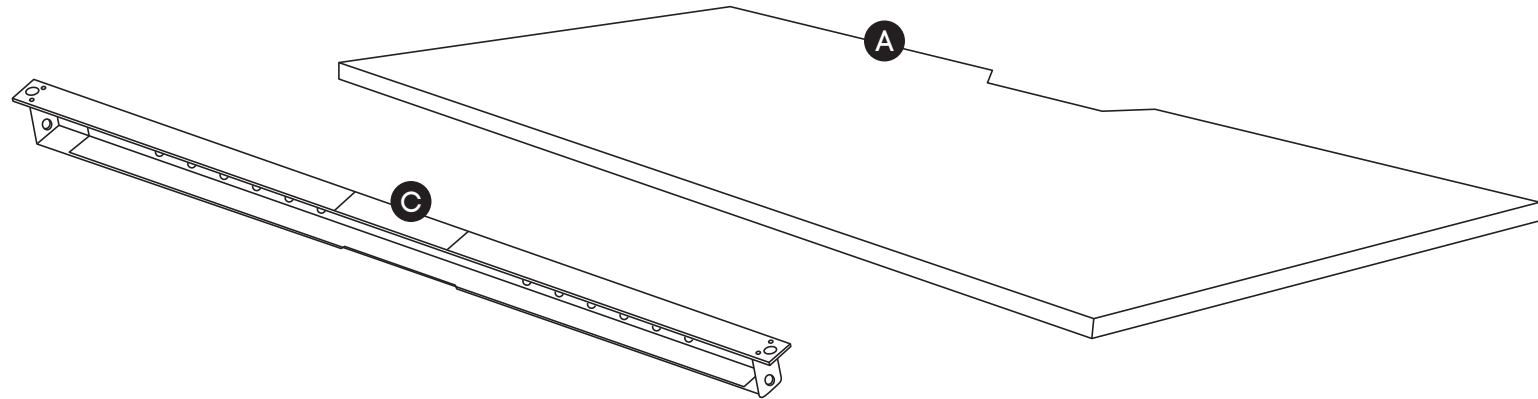
Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm
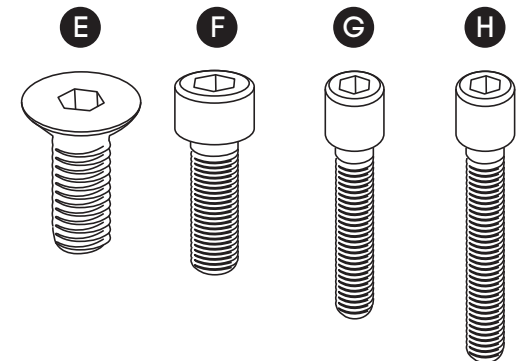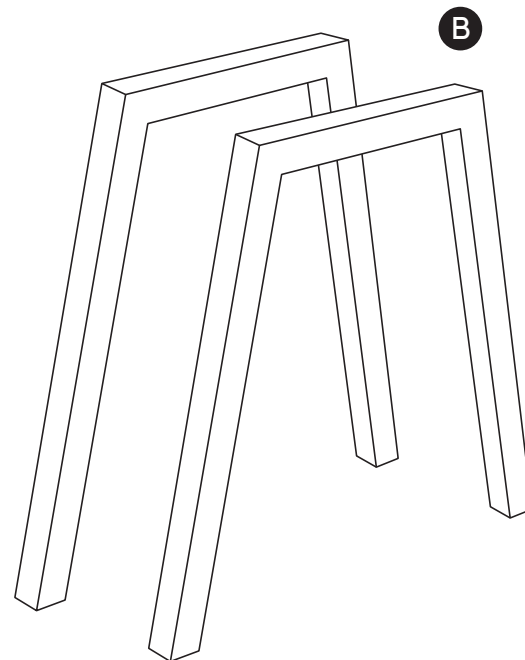
jason.l
your office furniture mate

COMPONENTS

A   Table top x2

B   Leg Quadro A x4

C   Beam x2

D   Plastic bracket x8

SCREWS

E   M8x20MM CSK x4

F   M8x20MM Socket head x4

G   M6x20MM Socket head x8

H   M6x30MM Socket head x8

I   Allen key x2

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 01

G

Using Allen Key provided, attach 2 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(G)** Socket head screw.

STEP 02

F

Using Allen Key provided, attach M8x20MM Socket head **(F)**- screw socket half way into leg for all legs **(B).**

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 03

Adjust extendable beam **(C)** to desired length using markers and secure beam at that length using screws provided

2000
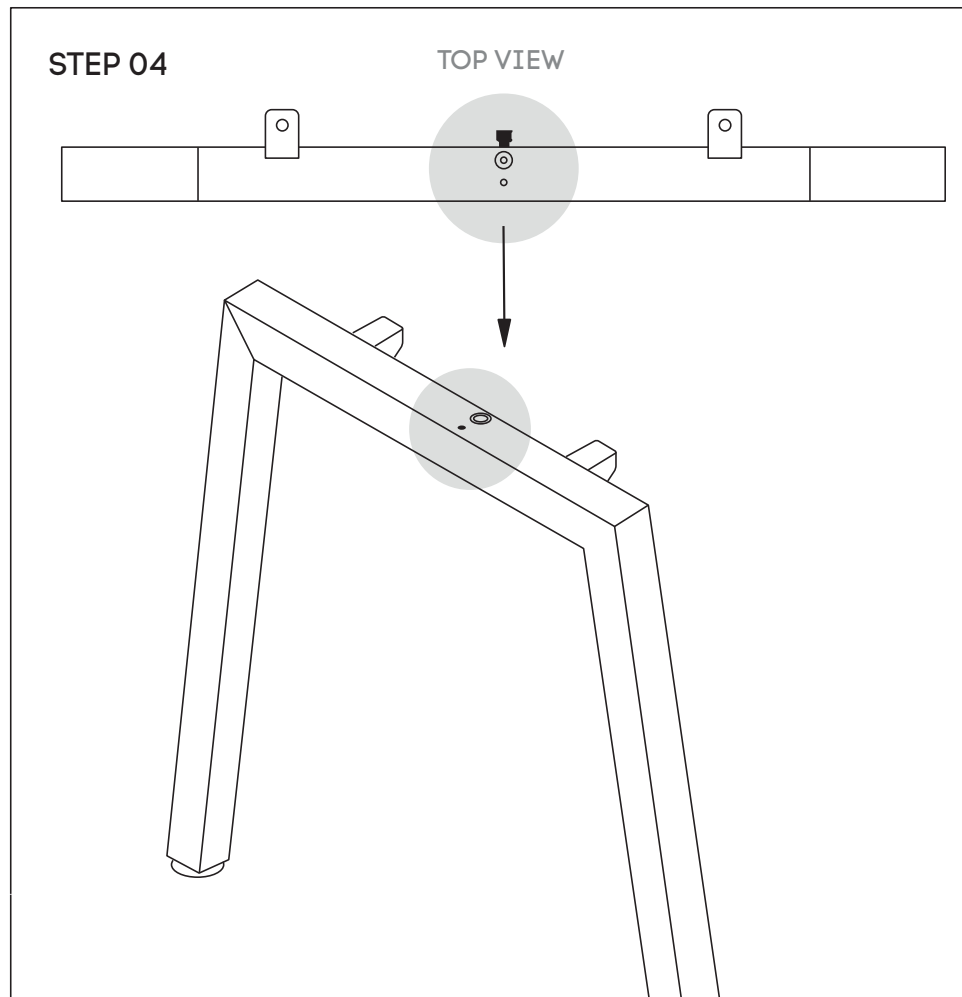1900
1800
1700
1600
1500
1400
1300
1200

50   50

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 04

TOP VIEW

STEP 05

E

E

Attach beam **(C)** to legs **(B)** using nut insert in legs.
See point attached
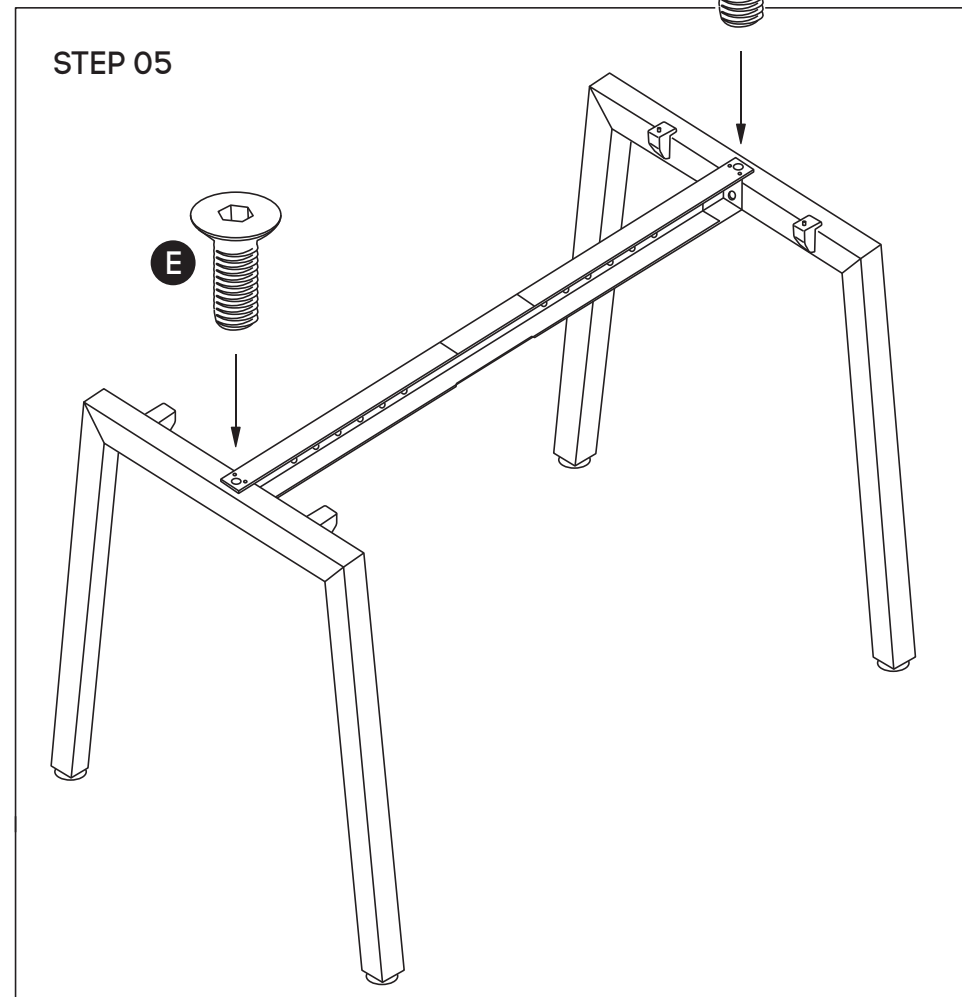
Frame looks like this. Using Allen Key, attach beam **(C)** with Socket **(E)**

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

STEP 06

H

TABLE TOP
BOTTOM VIEW

nut insert

nut insert

nut insert

nut insert
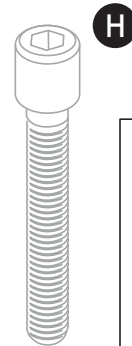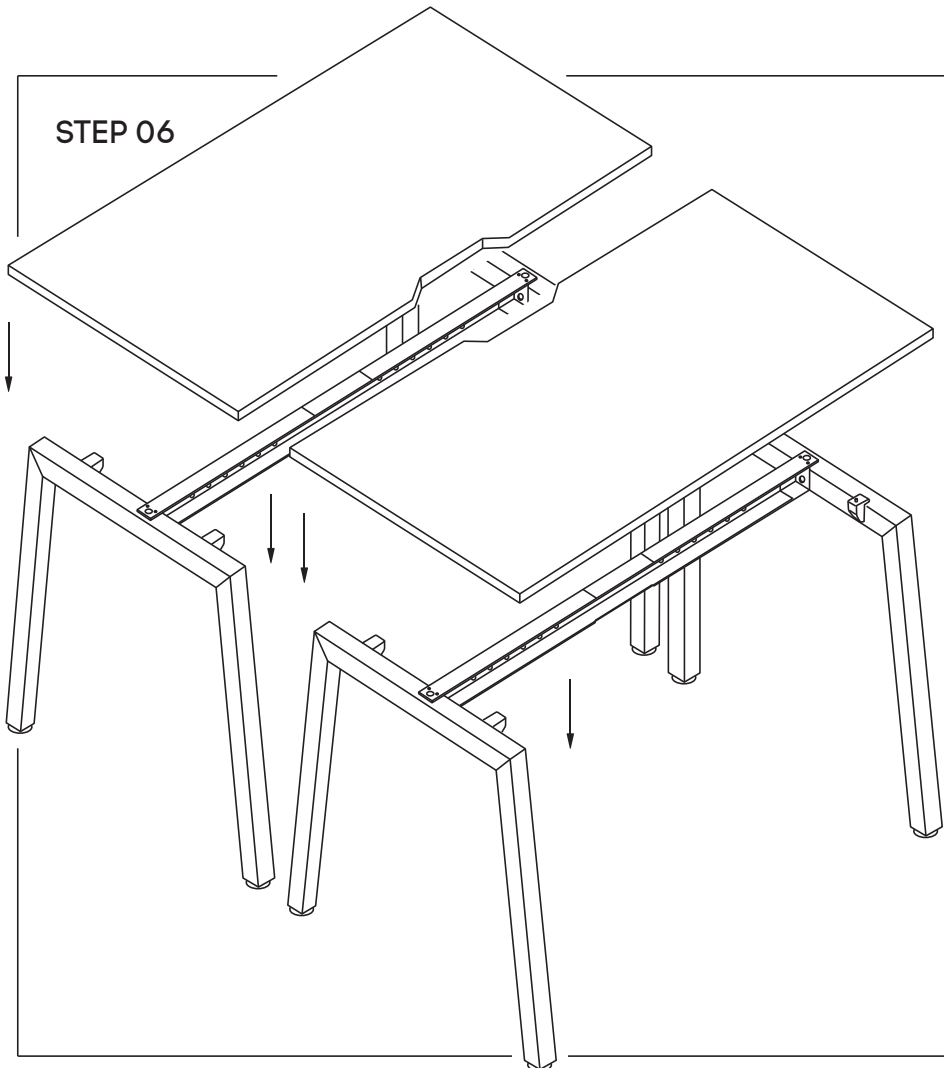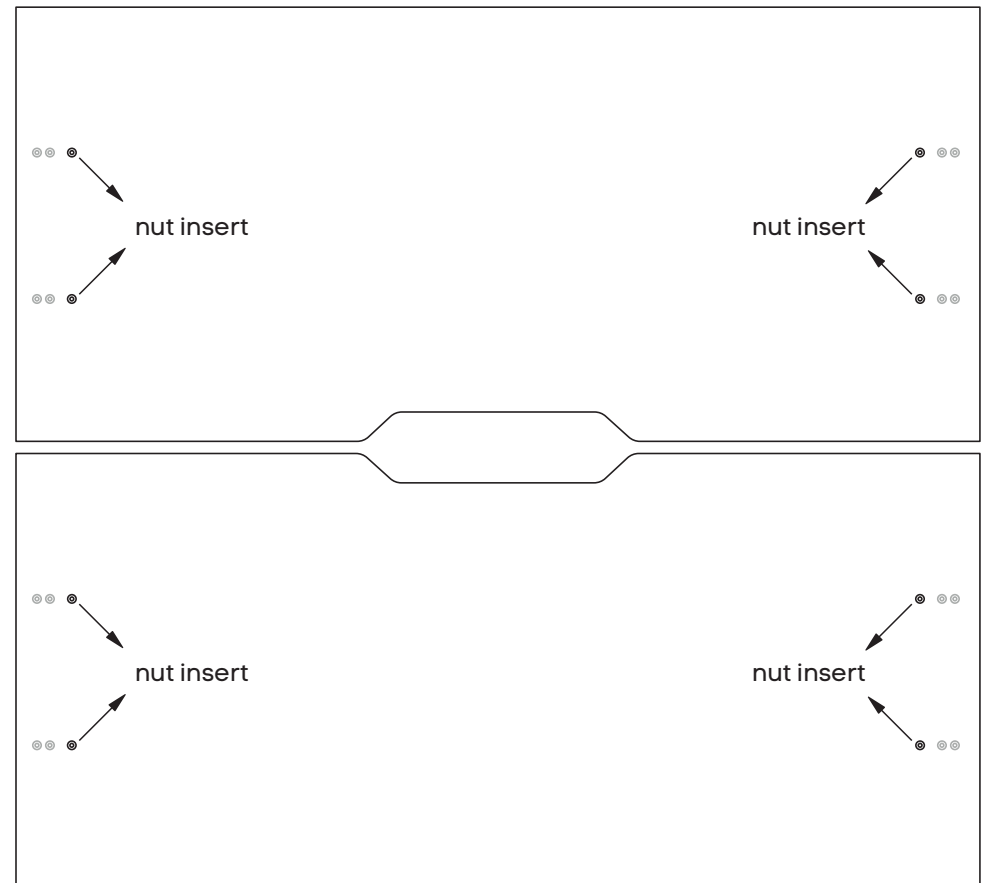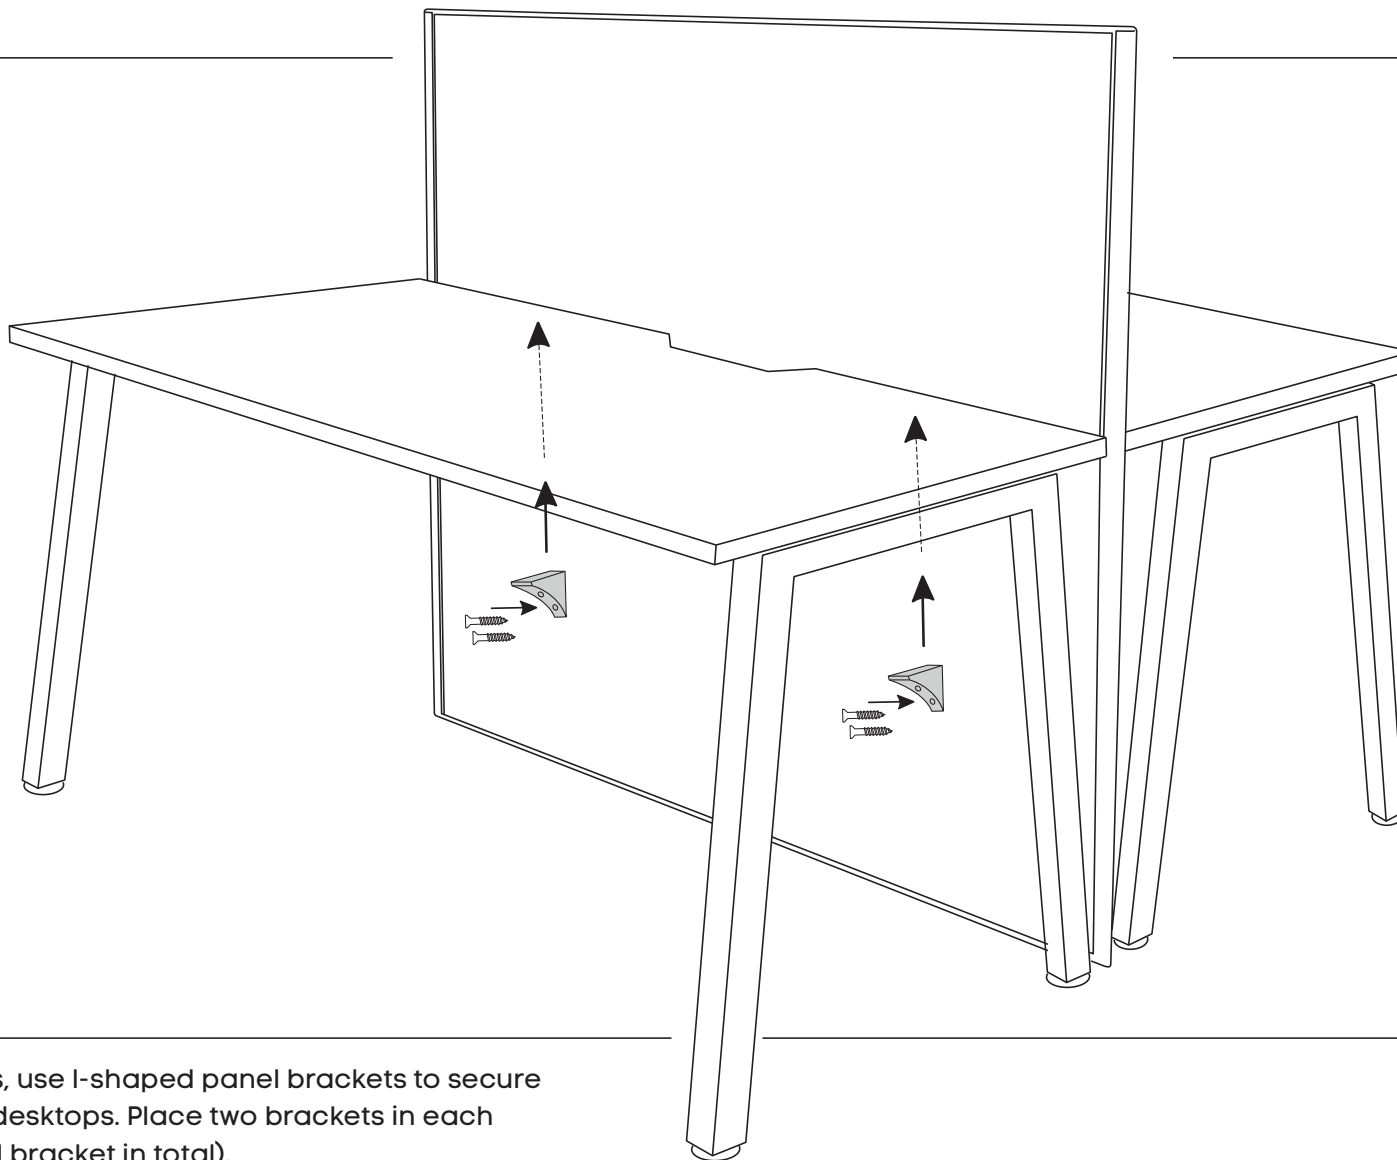
Place desktops ontop of frame - with cutout at the back of the desk. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(H)** sockets attached tops to frame.

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 07

Under the desktops, use I-shaped panel brackets to secure the screens to the desktops. Place two brackets in each screen (4 L-Shaped bracket in total).