ASSEMBLY INSTRUCTIONS
Horizon Quadro A
6P workstation
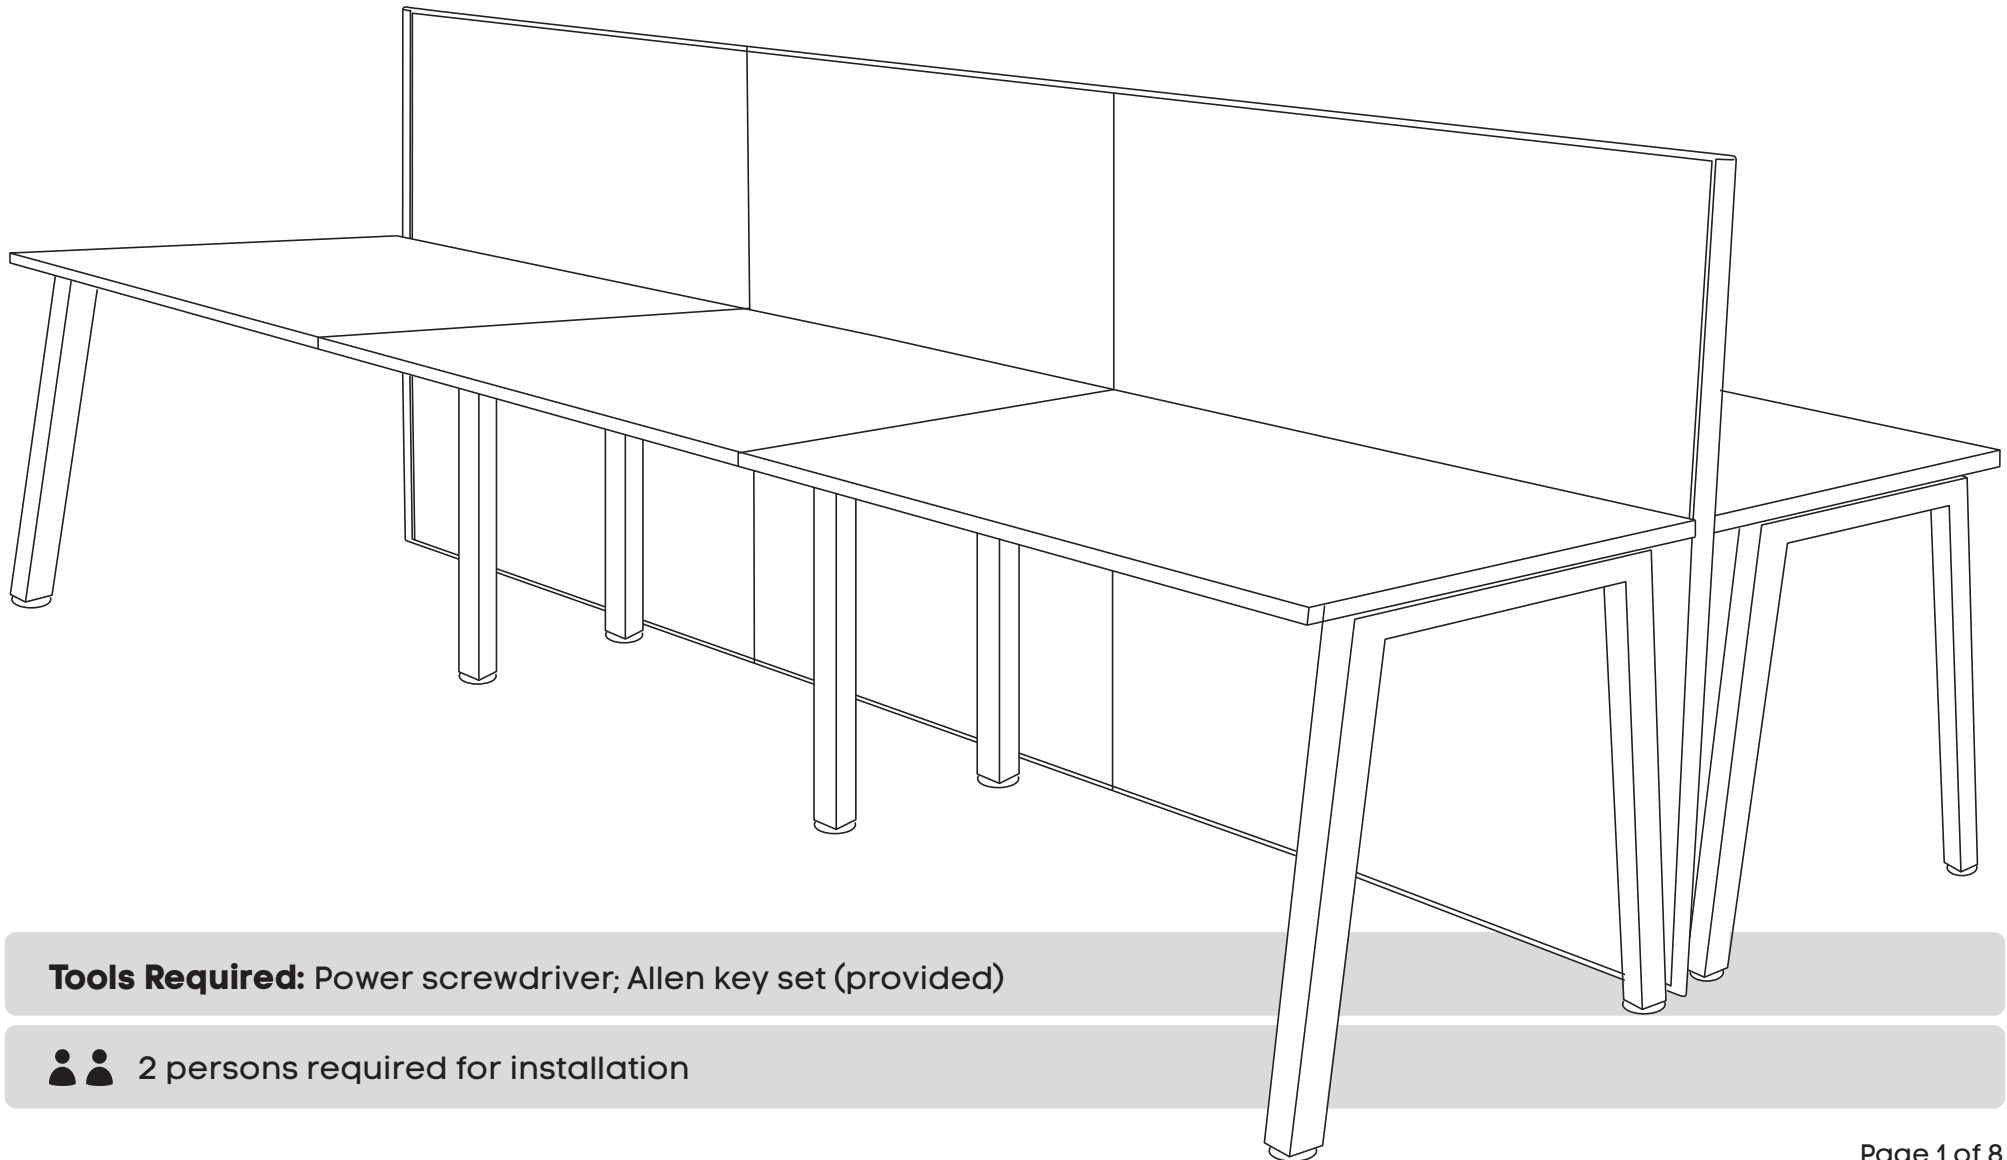
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Tools Required: Power screwdriver; Allen key set (provided)

👤👤 2 persons required for installation

ASSEMBLY INSTRUCTIONS
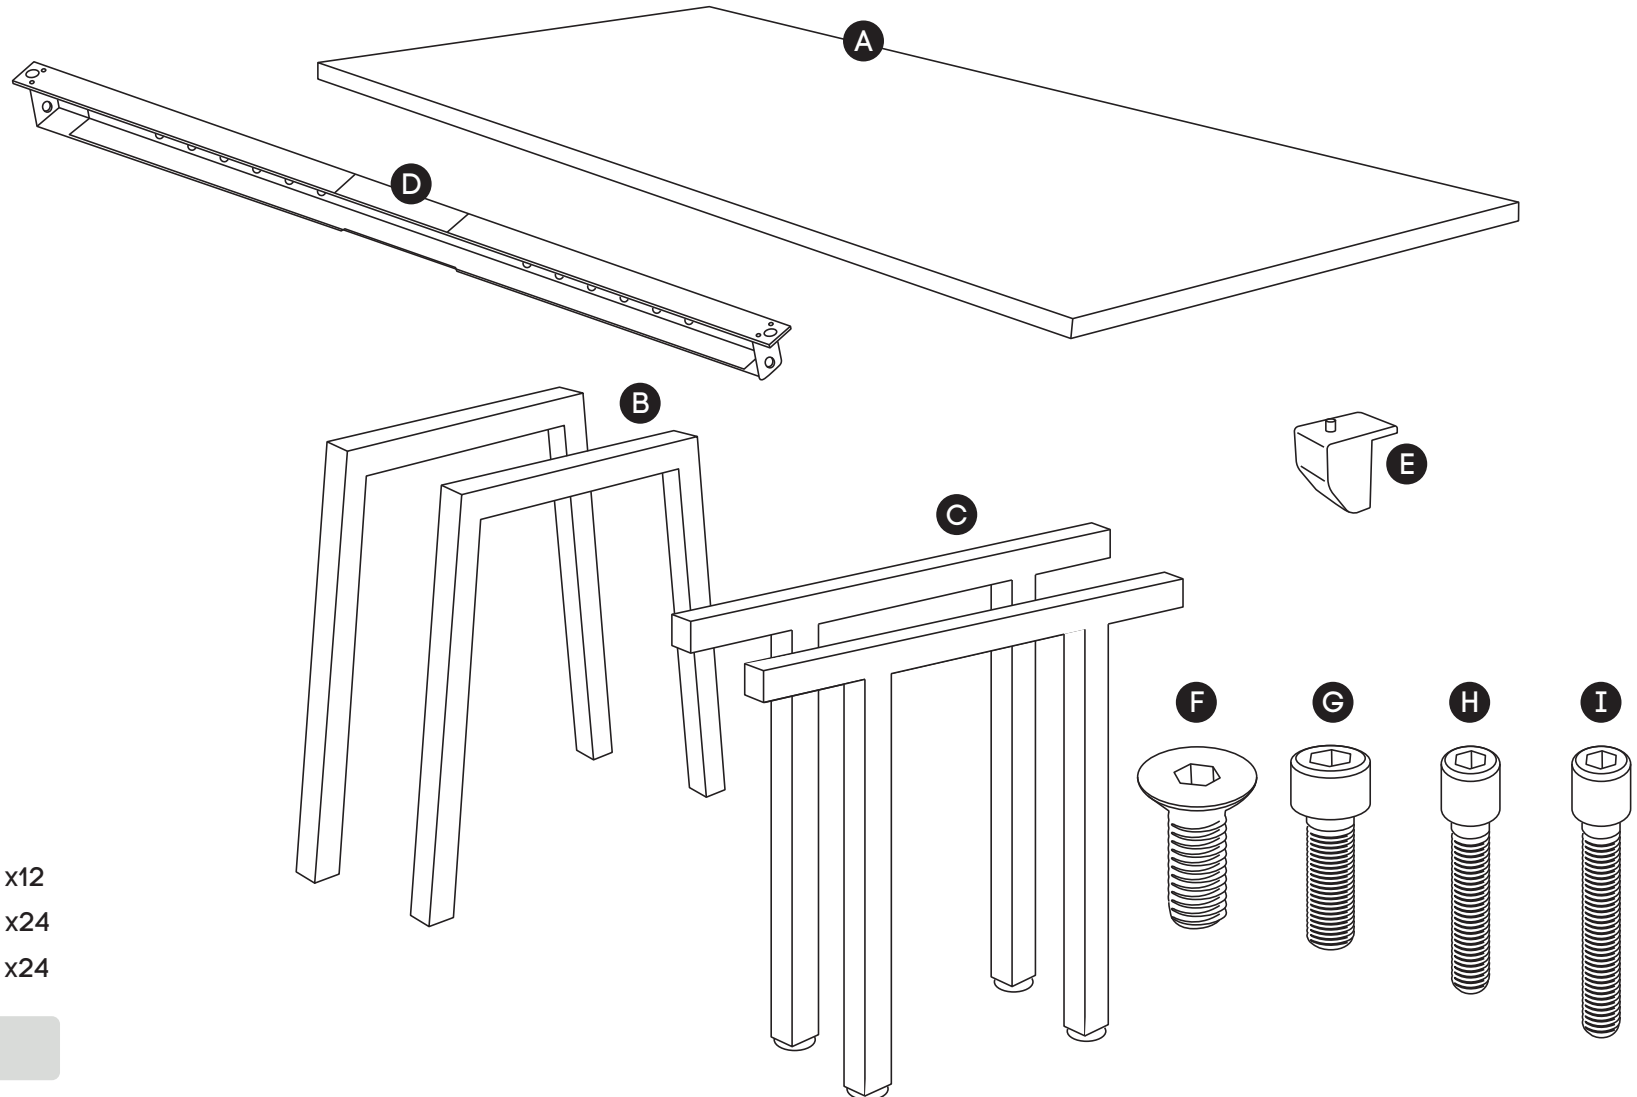# Horizon Quadro A
6P workstation

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

jason.l
your office furniture mate

COMPONENTS

A   Table top x6

B   Leg Quadro A x2

C   Connector frame x2

D   Beam x8

E   Plastic bracket x24

SCREWS

F   M8x20MM CSK x12

G   M8x20MM Socket head x12

H   M6x20MM Socket head x24

I   M6x30MM Socket head x24

J   Allen key x2

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

STEP 01

H

STEP 02

G

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for all legs **(B)** and into Connector frame **(C)**.

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 03

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided
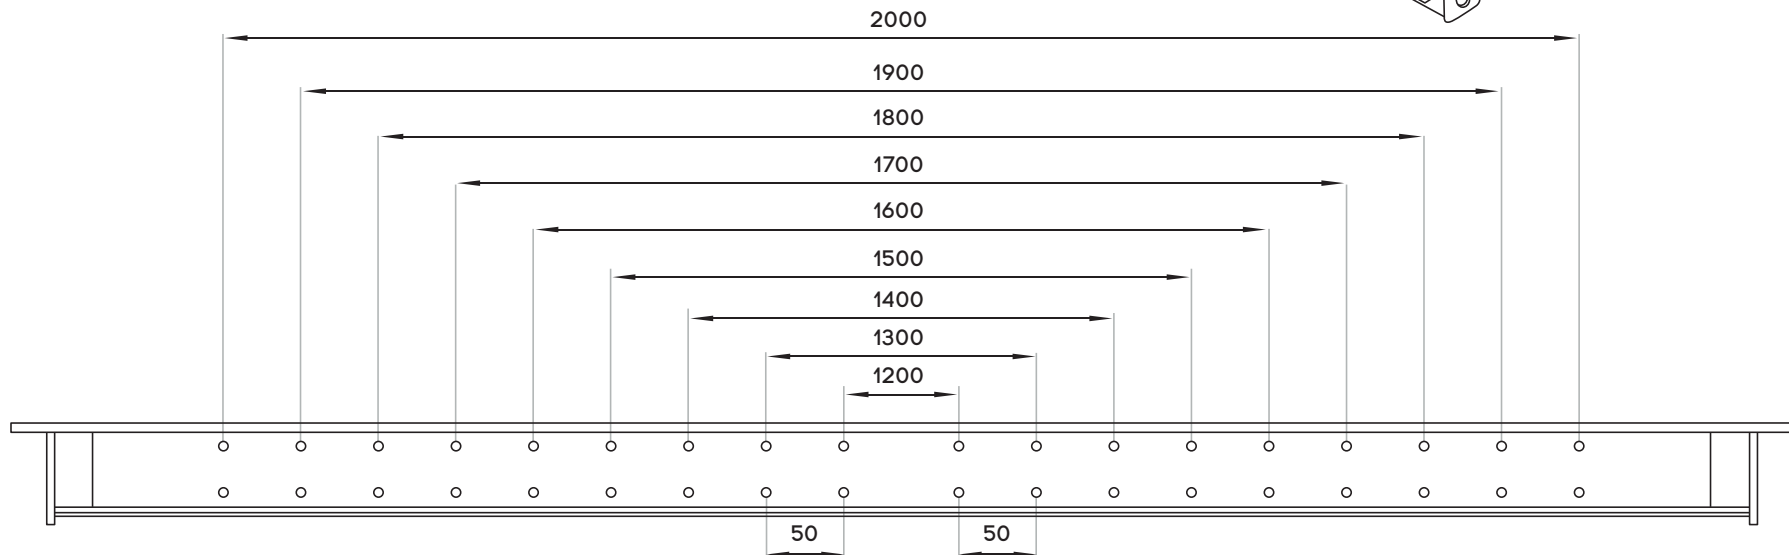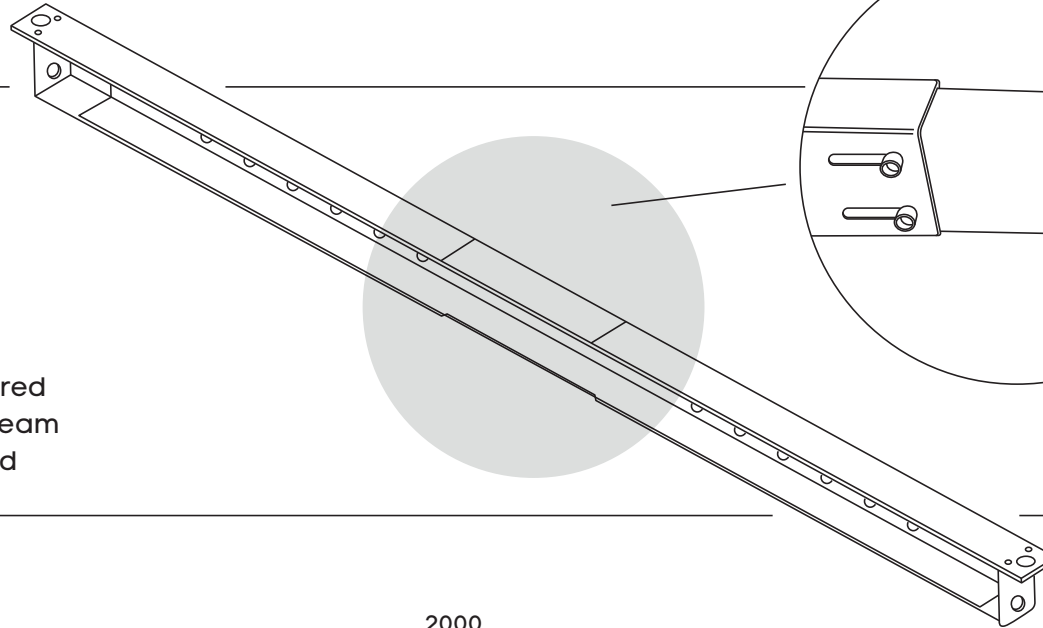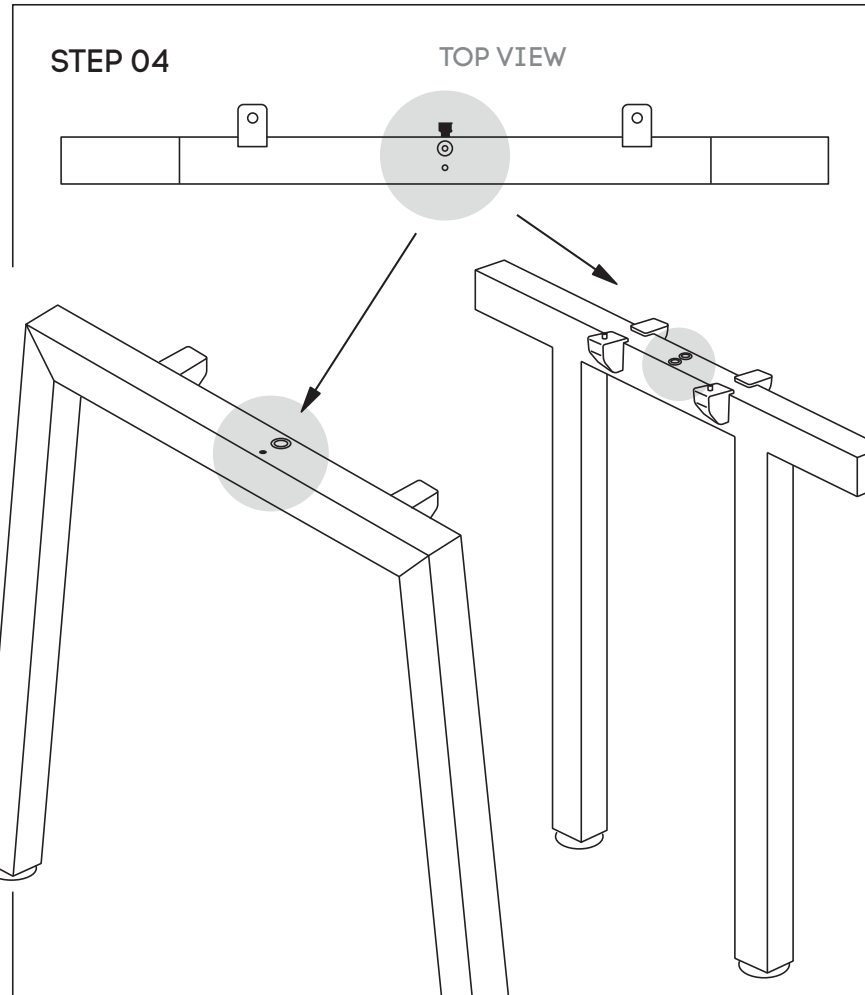

2000
1900
1800
1700
1600
1500
1400
1300
1200

50   50

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 04   TOP VIEW

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached

STEP 05

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 06

I

TABLE TOP
BOTTOM VIEW

Place desktops ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(I)** sockets attach tops to frame.

ASSEMBLY INSTRUCTIONS
Horizon Quadro A 6P workstation

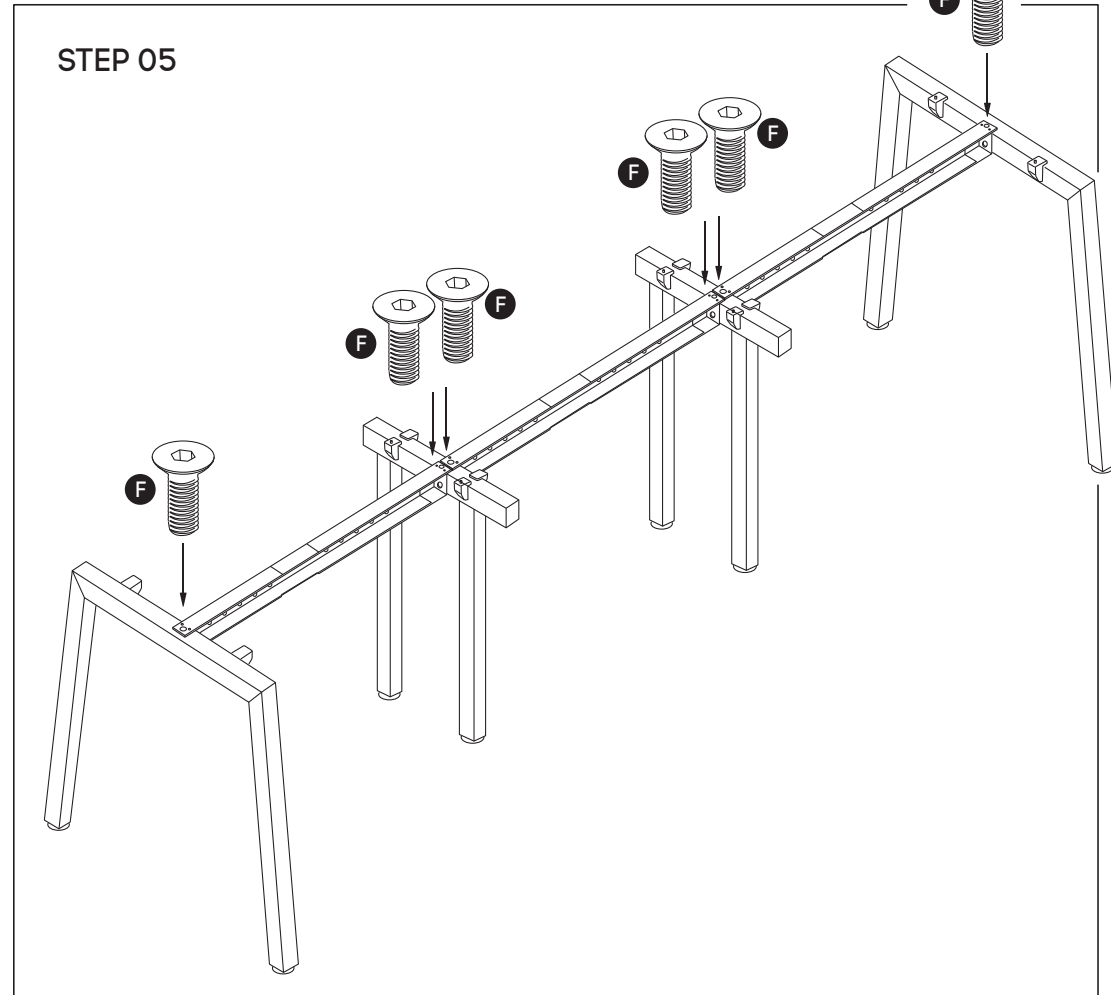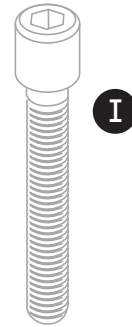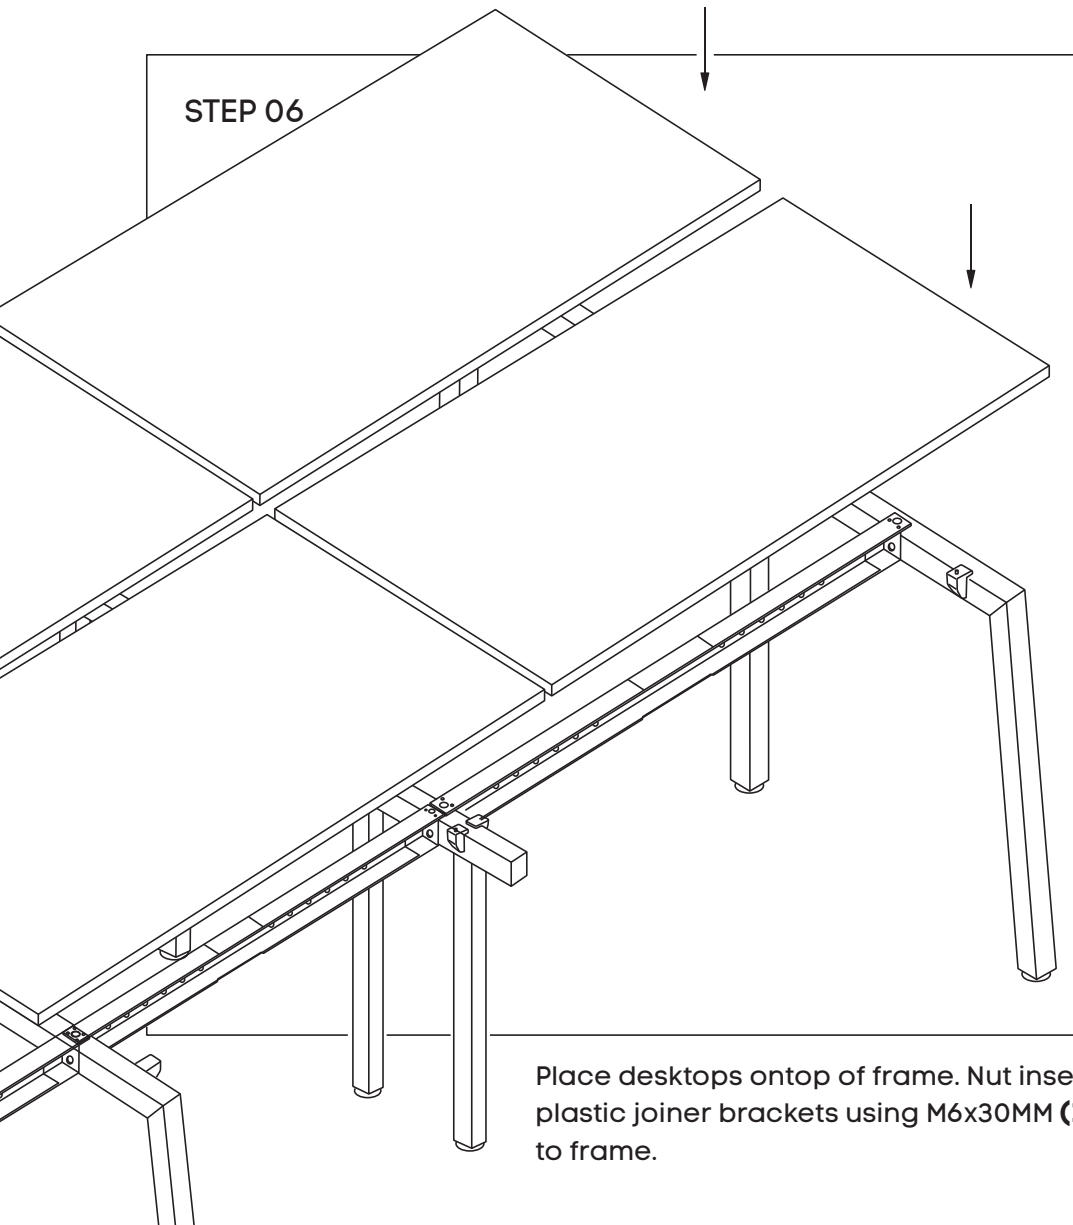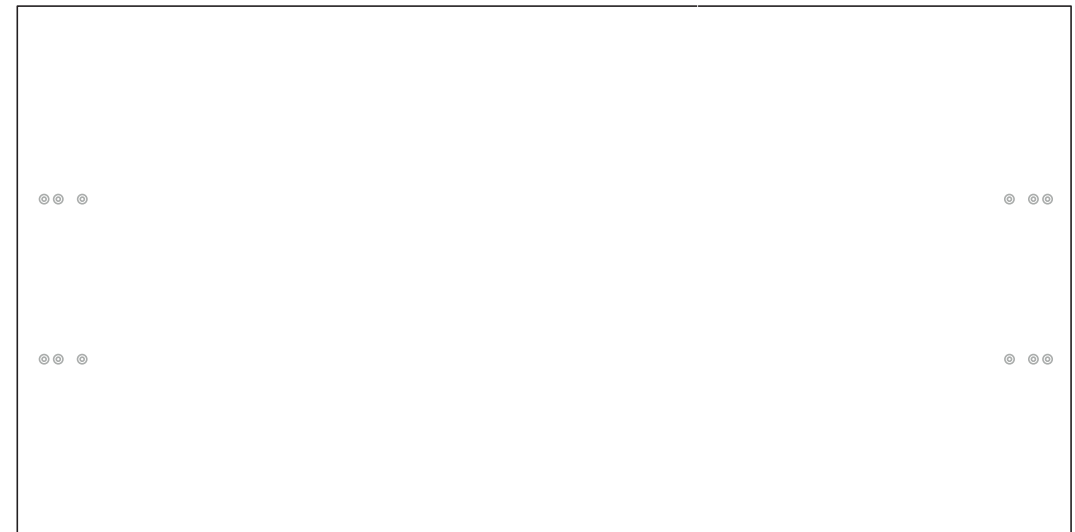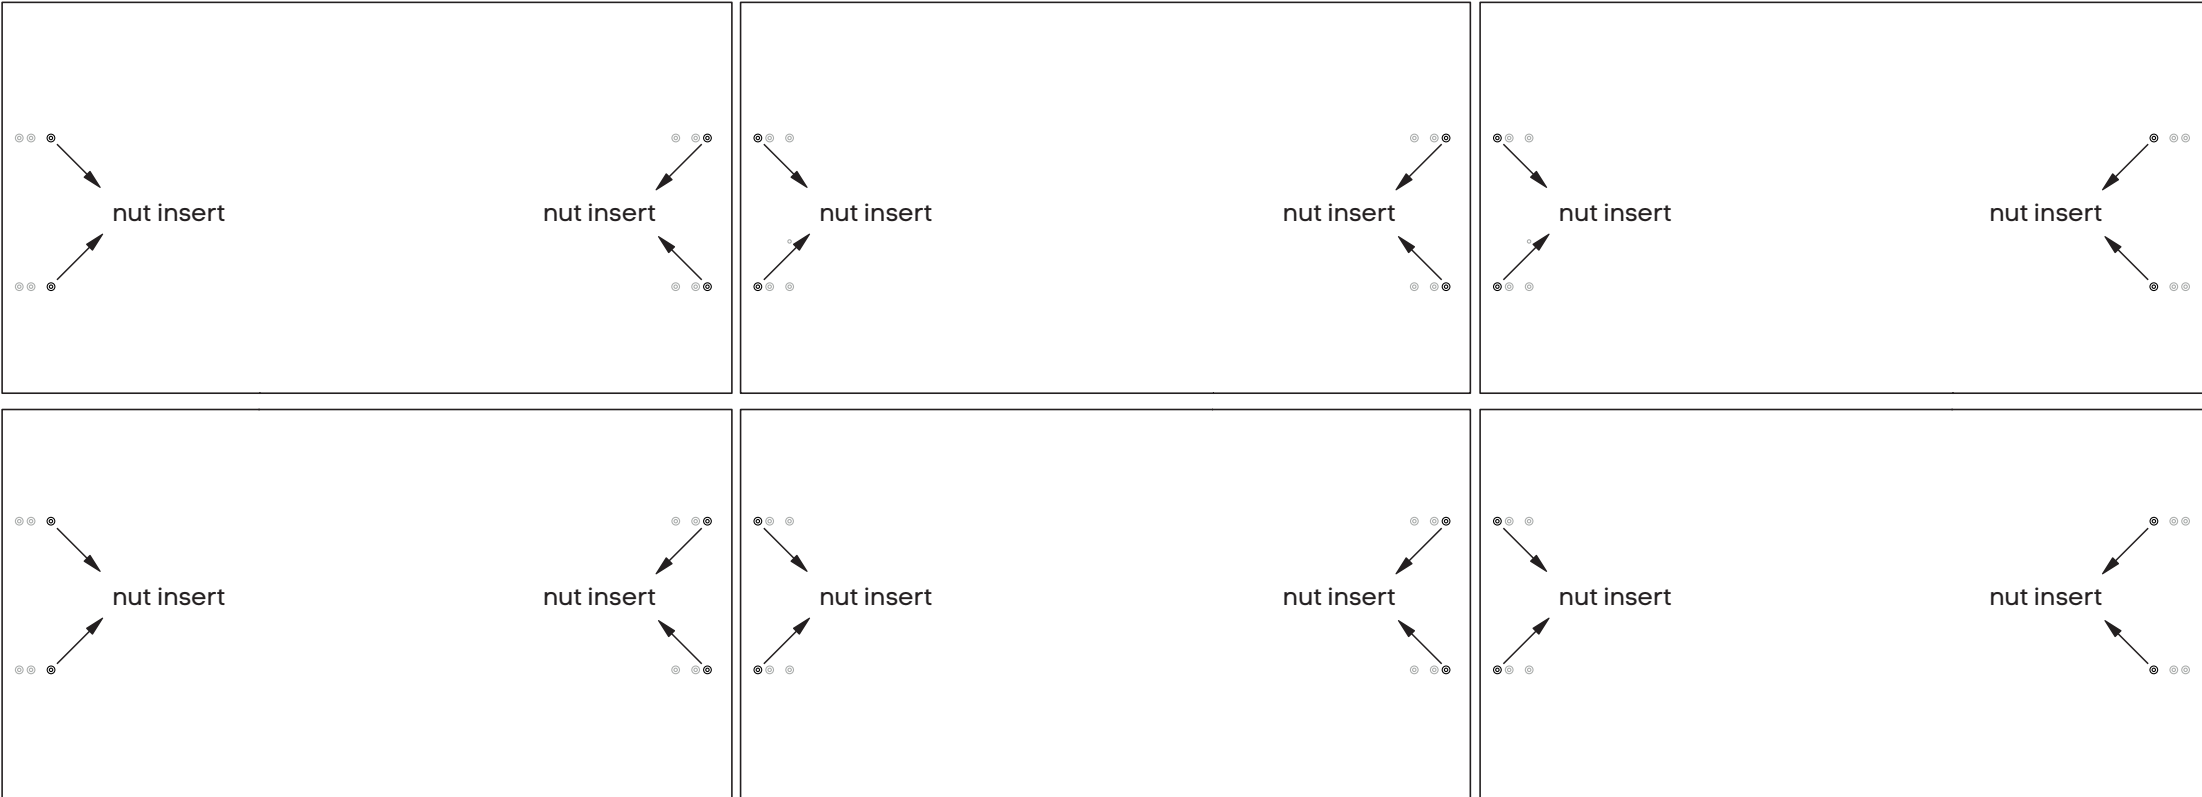Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

TABLE TOPS
BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

nut insert   nut insert

nut insert   nut insert

nut insert   nut insert

nut insert   nut insert

nut insert   nut insert

nut insert   nut insert

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 07

Using an Allen key remove top 2 caps from all screens uprights.
Bring two partition towards one another and slide the 2 way
connector rod - down between the two screen uprights.

Under the desktops, use I-shaped panel brackets to secure
the screens to the desktops. Place two brackets in each
screen (4 L-Shaped bracket in total).