# Horizon Quadro Square 2P Run workstation

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

**www.jasonl.com.au**

**Need help!**
Call us on
**1300 527 665**

**jason.l**
your office furniture mate

**Tools Required:** Power screwdriver; Allen key set (provided)

👤👤 2 persons required for installation
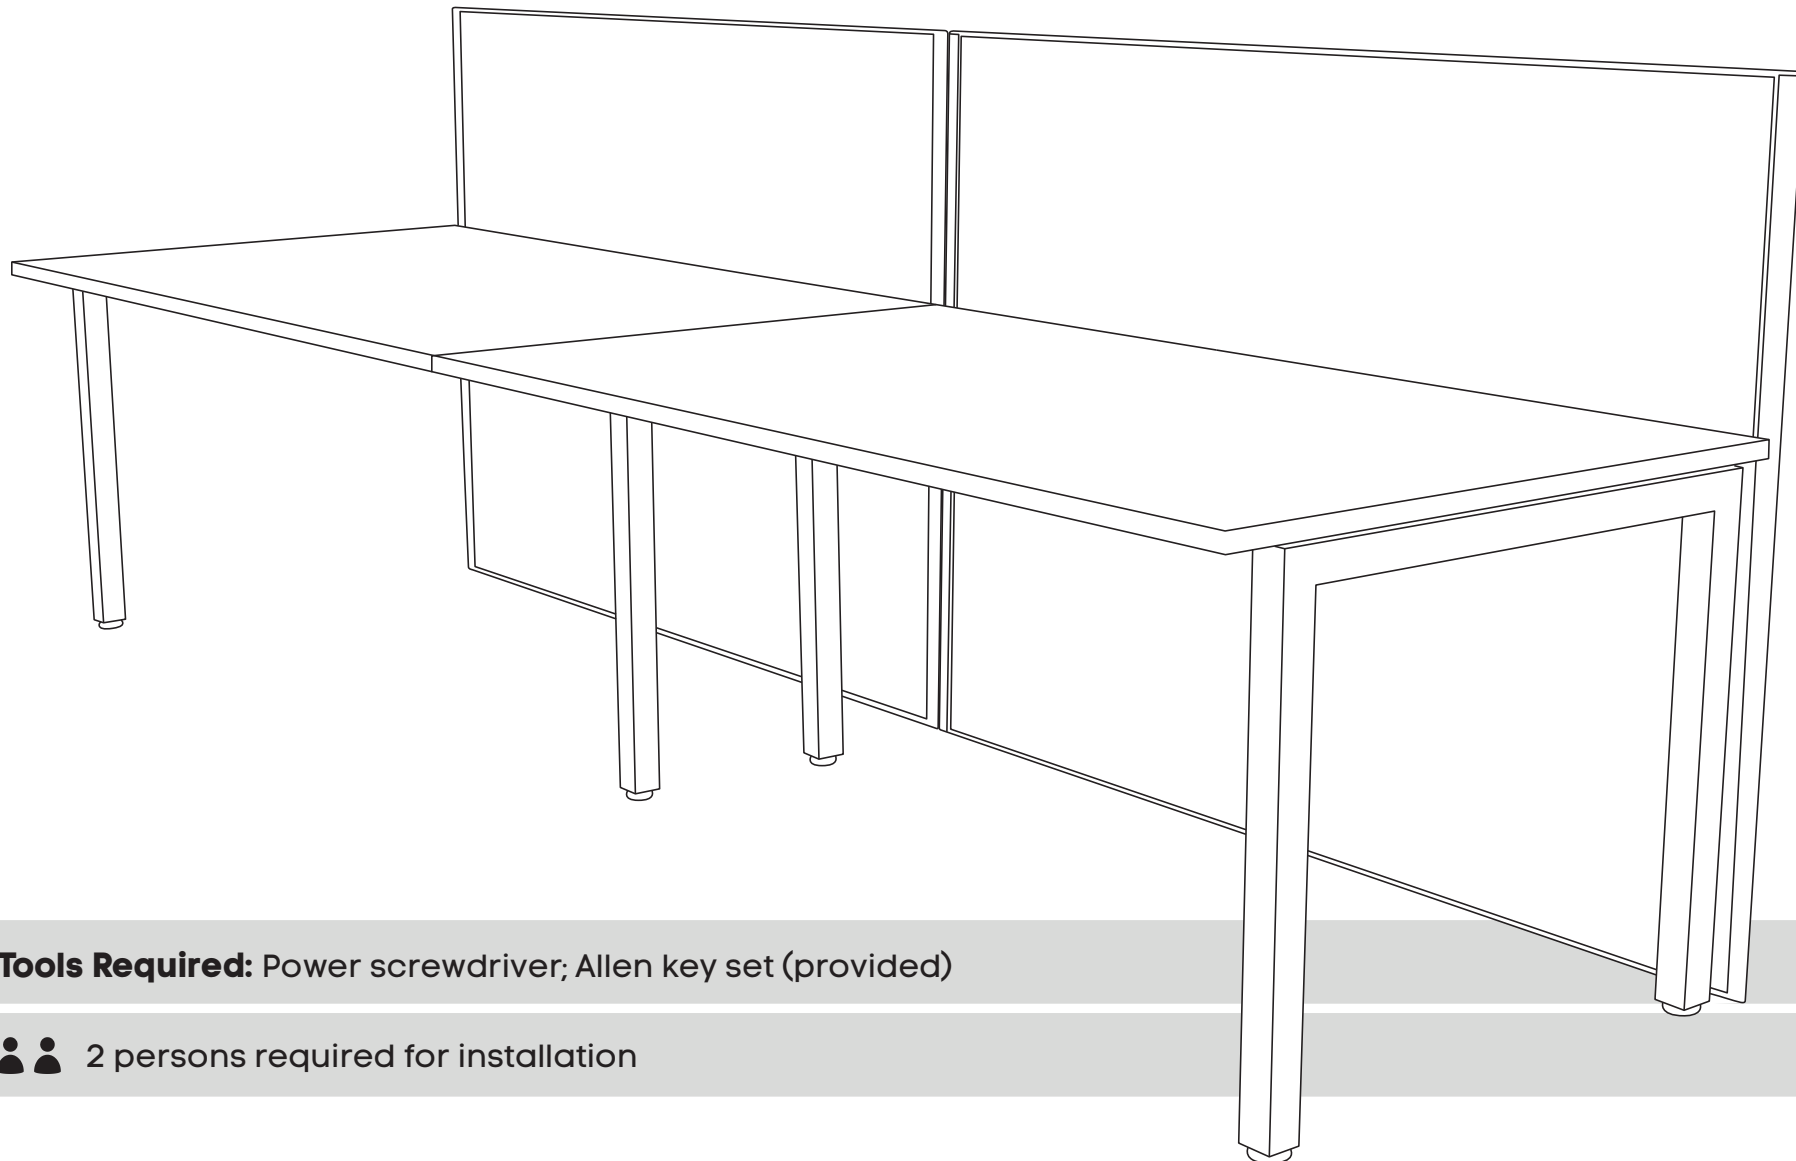
# ASSEMBLY INSTRUCTIONS
# Horizon Quadro Square 2P Run workstation
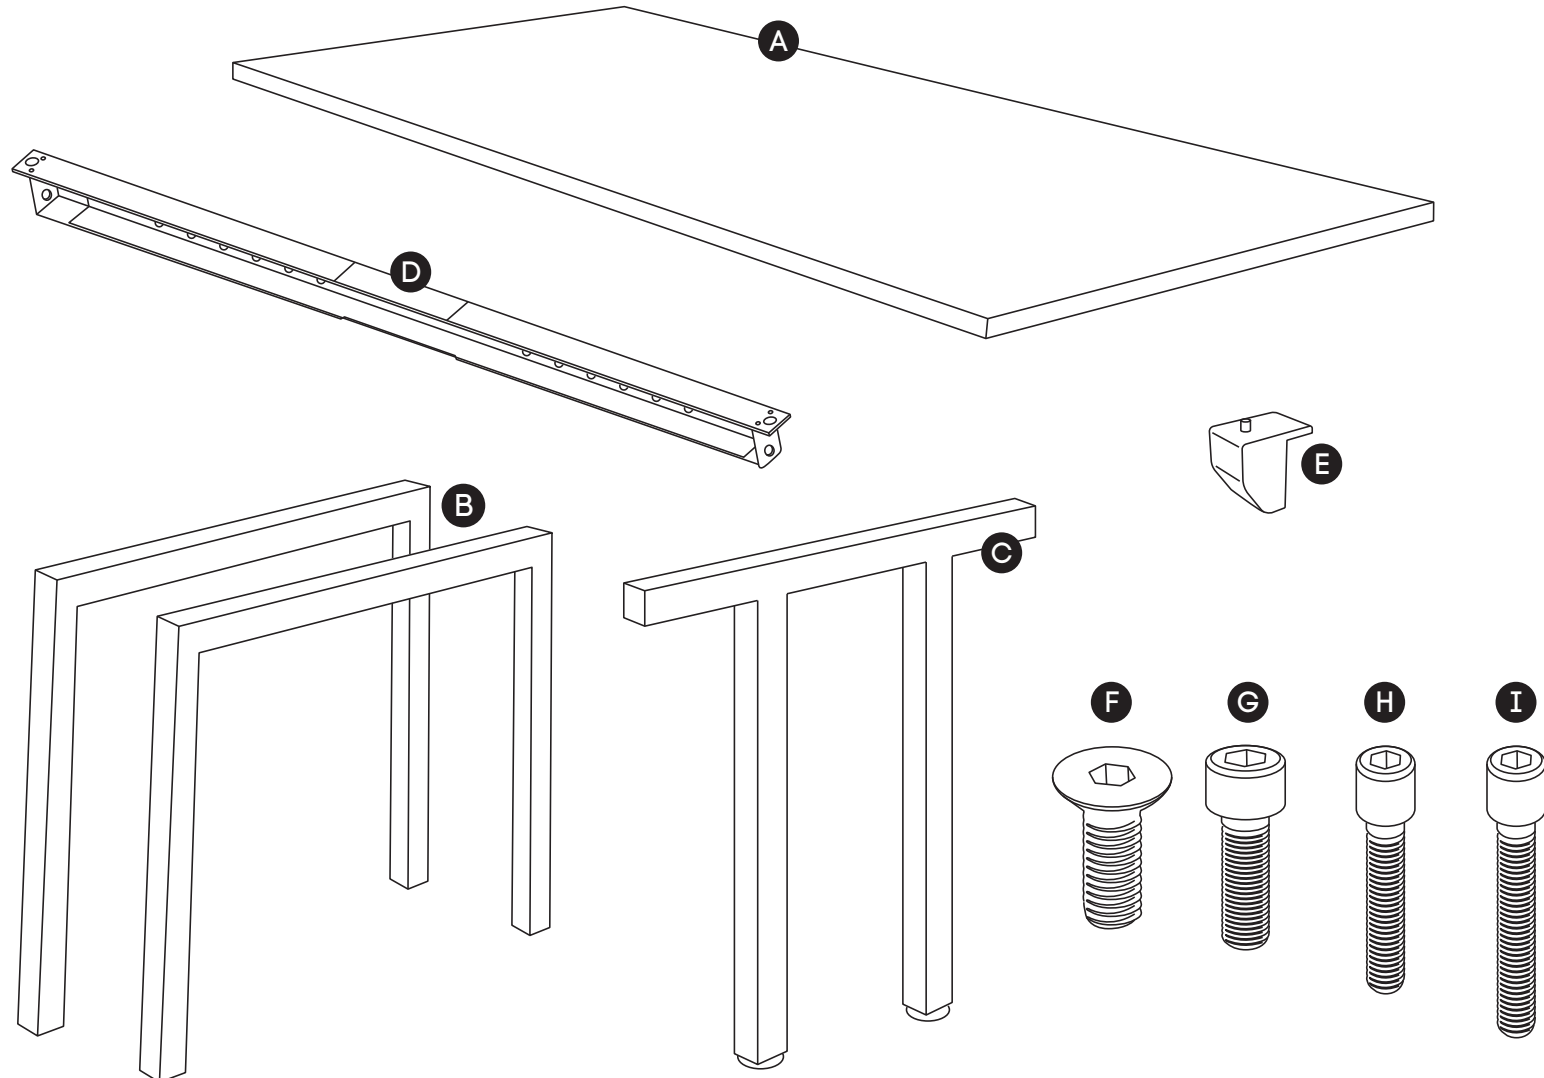
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

**jason.l**
your office furniture mate

## COMPONENTS

A    Table top x2

B    Leg Quadro Square x2

C    Connector frame x1

D    Beam x2

E    Plastic bracket x8

## SCREWS

F    M8x20MM CSK x4

G    M8x20MM Socket head x4

H    M6x20MM Socket head x8

I    M6x30MM Socket head x8

J    Allen key x2

# Horizon Quadro Square 2P Run workstation

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

**www.jasonl.com.au**

**Need help!**
Call us on
**1300 527 665**

**jason.l**
your office furniture mate

## STEP 01



Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.

## STEP 02



Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)** and into Connector frame **(C)**.

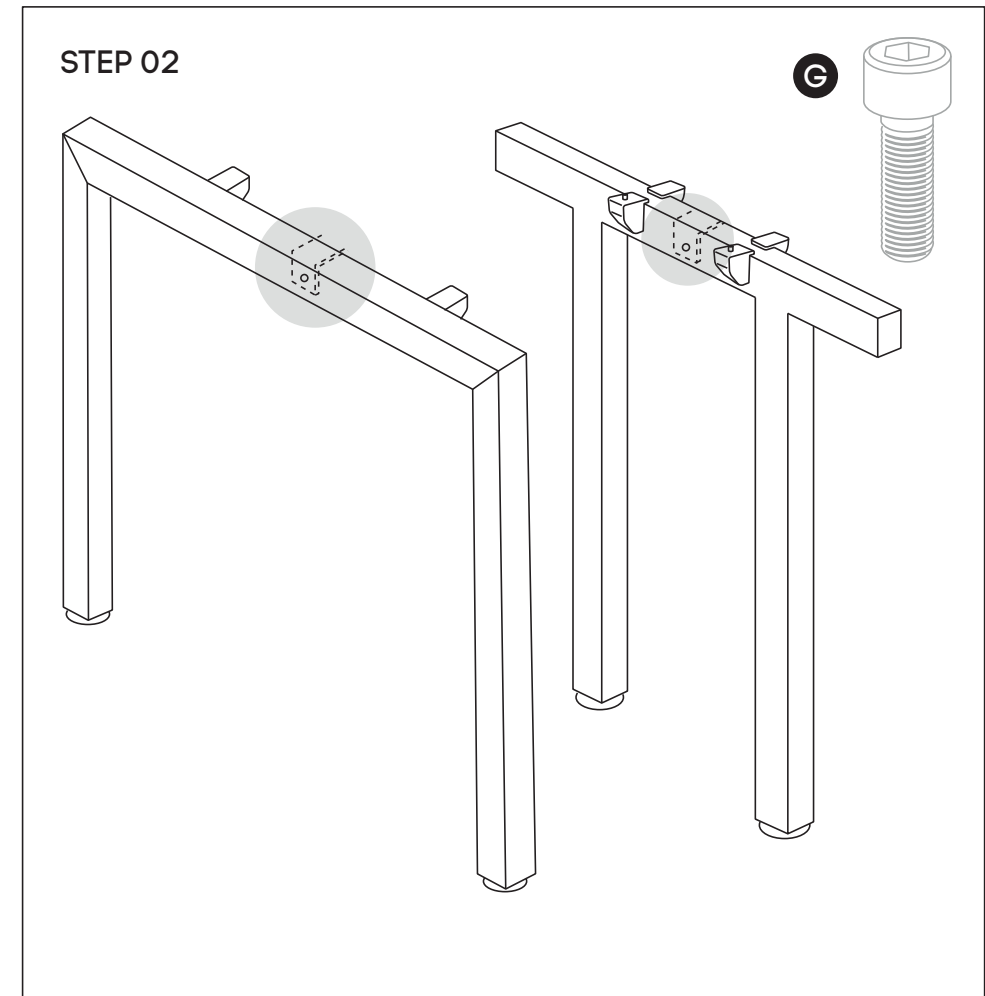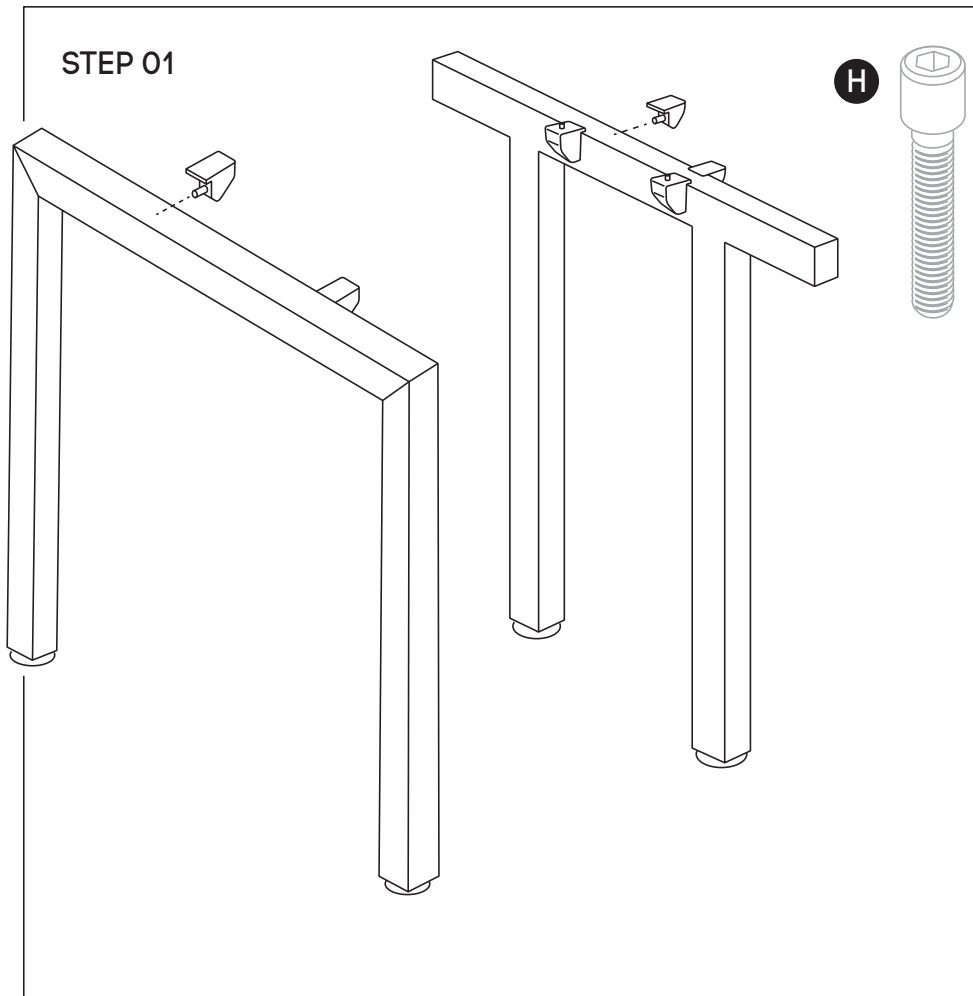# Horizon Quadro Square 2P Run workstation

**www.jasonl.com.au**

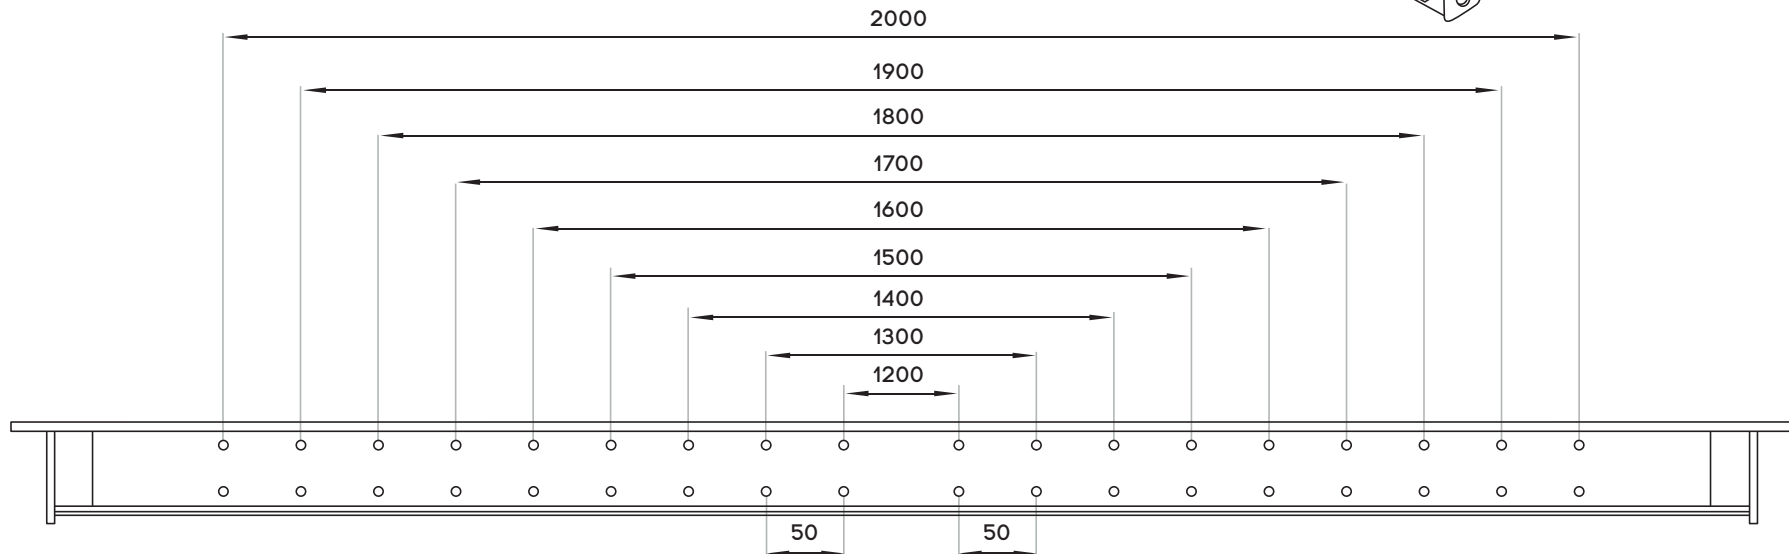**Need help!**
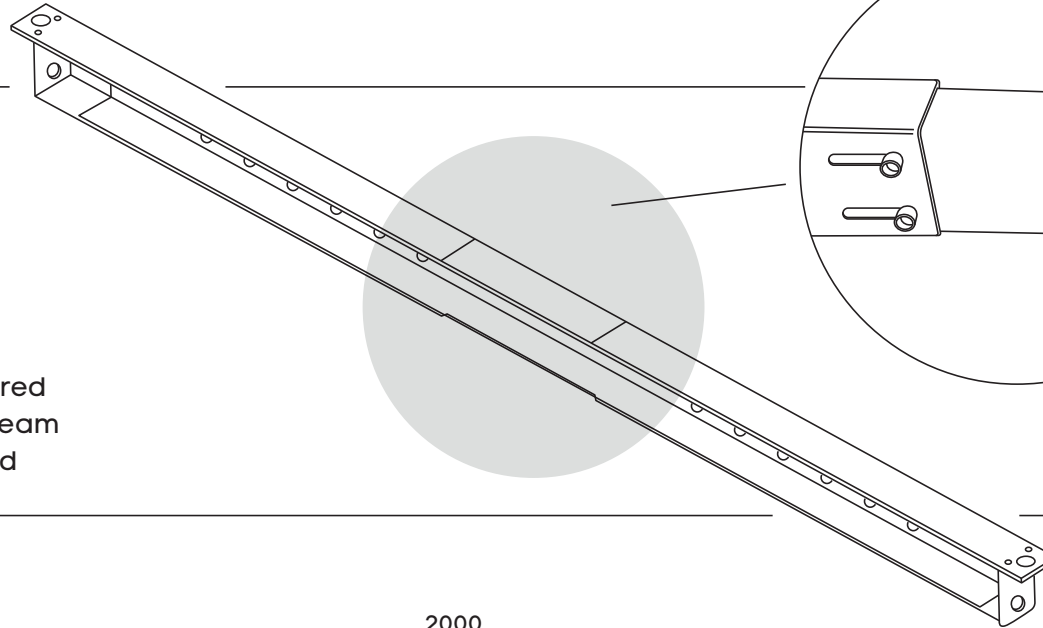Call us on
**1300 527 665**

**jason.l**
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

## STEP 03

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

2000
1900
1800
1700
1600
1500
1400
1300
1200

50        50

# ASSEMBLY INSTRUCTIONS
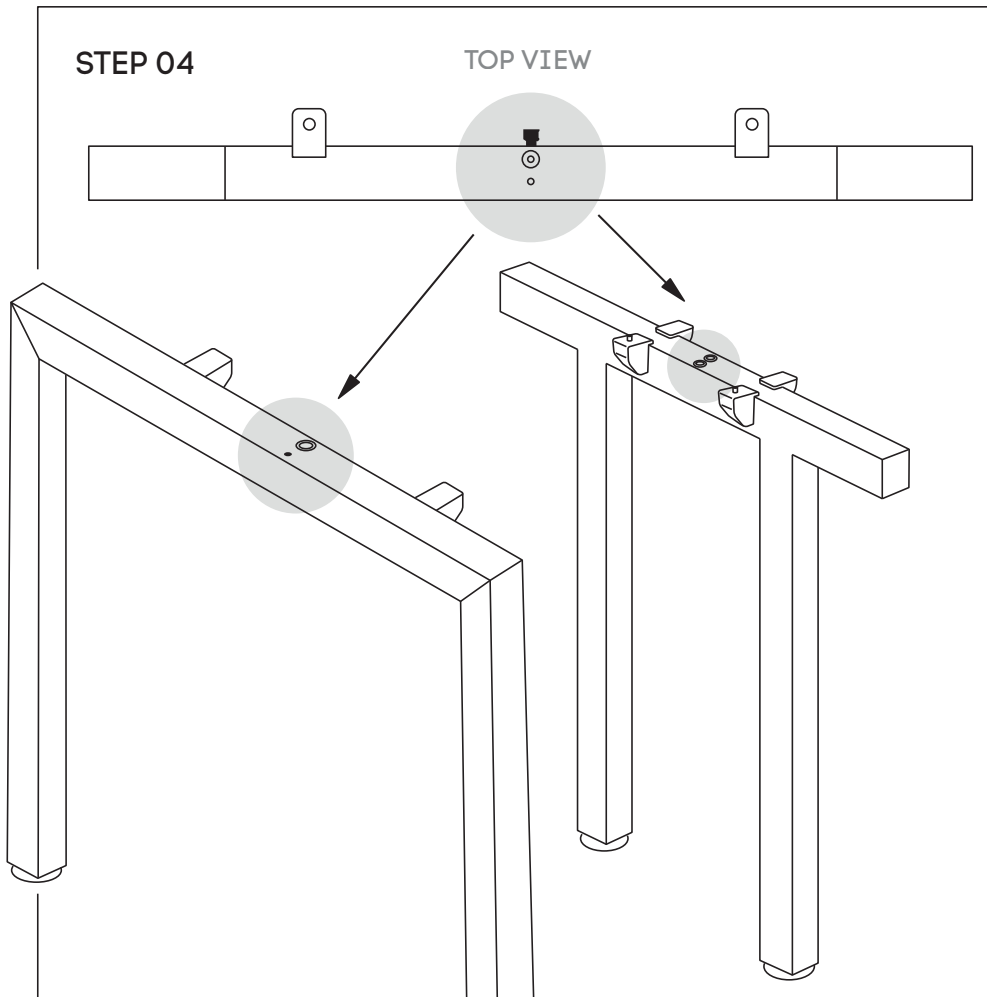# Horizon Quadro Square
# 2P Run workstation

**www.jasonl.com.au**

**Need help!**
Call us on
**1300 527 665**

**jason.l**
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

STEP 04

TOP VIEW

STEP 05



Attach beam **(D)** to legs **(B)** and Connector frame **(C)**
using nut insert in legs. See point attached
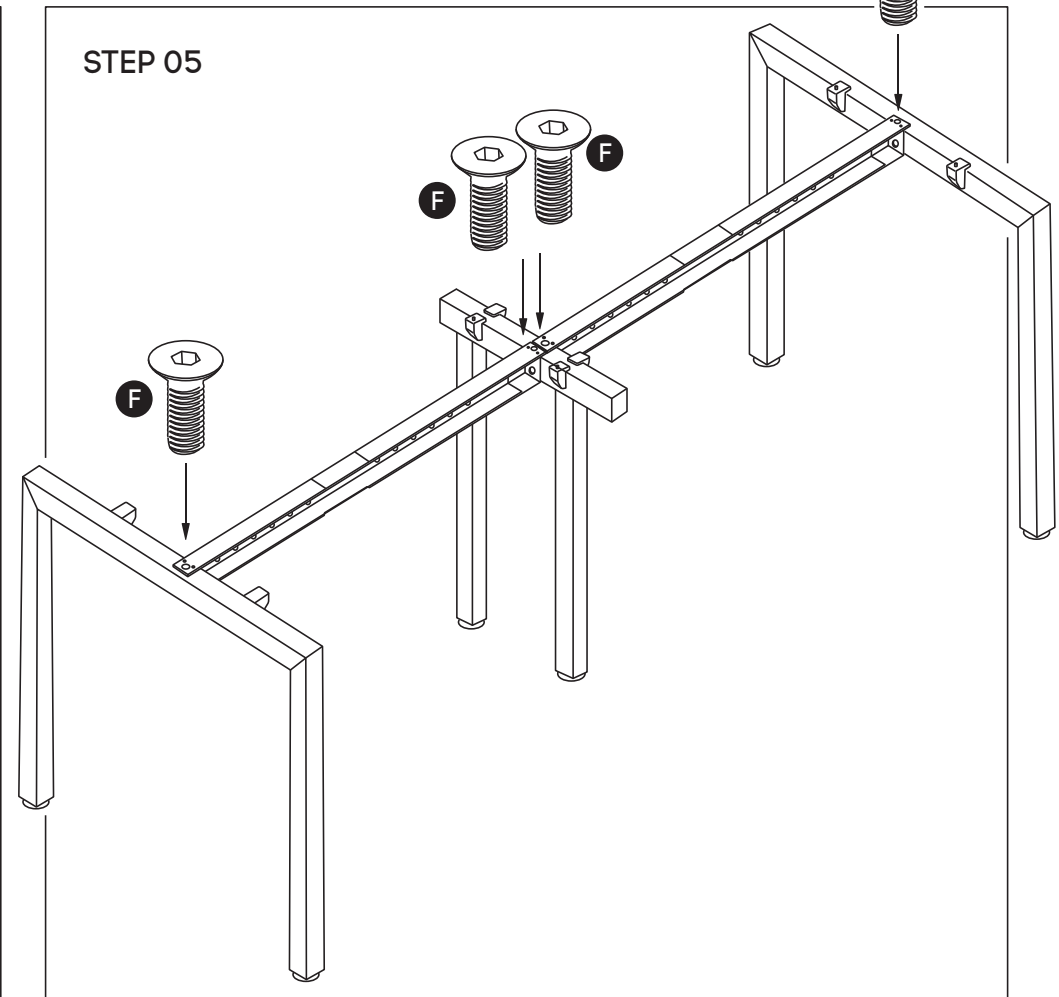
Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

# Horizon Quadro Square 2P Run workstation

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

**www.jasonl.com.au**

**Need help!**
Call us on
**1300 527 665**

**jason.l**
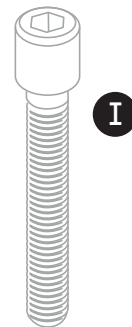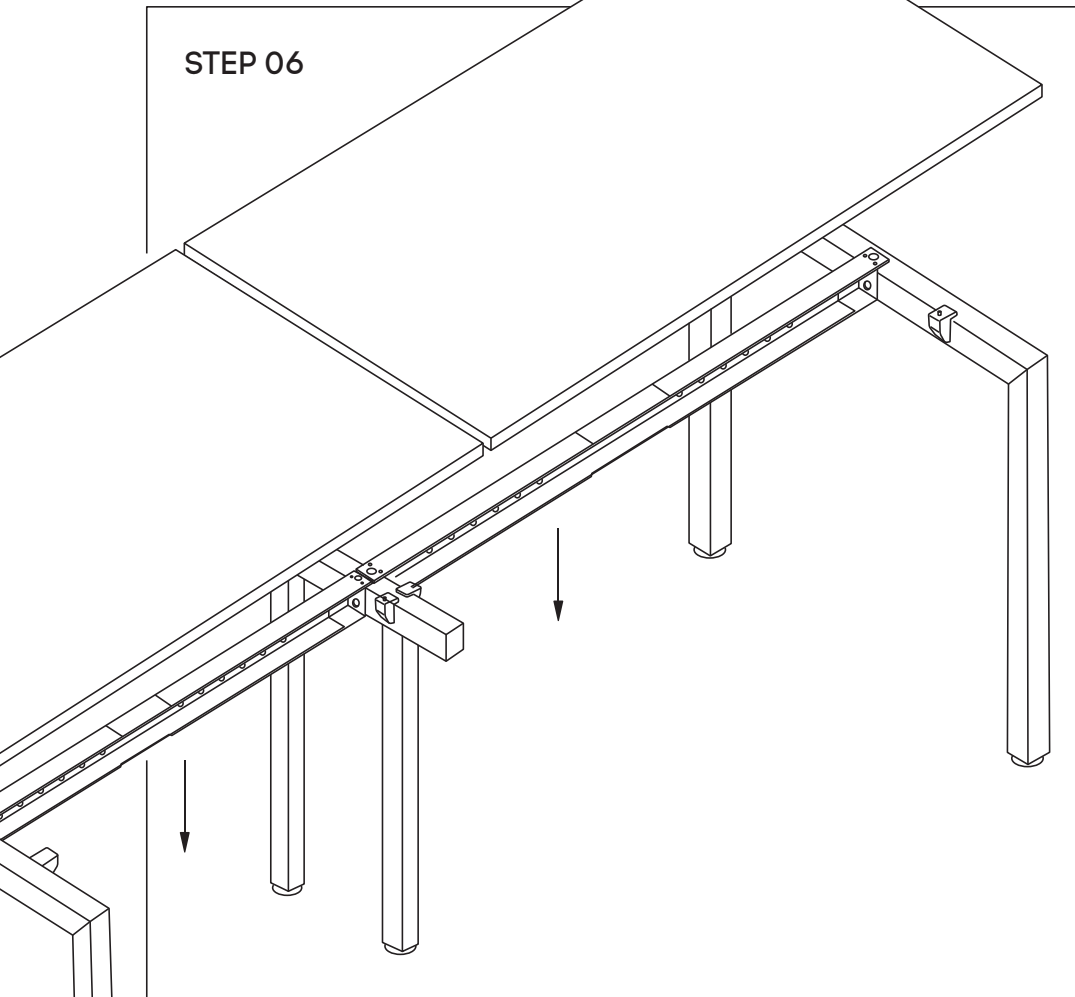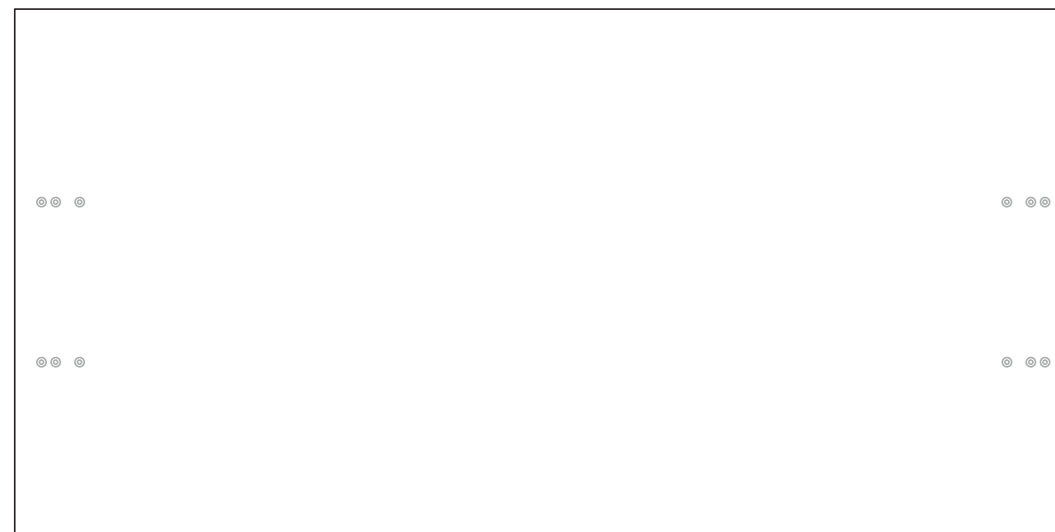your office furniture mate

**STEP 06**

**I**

TABLE TOP
BOTTOM VIEW

Place desktops ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(I)** sockets attach tops to frame.
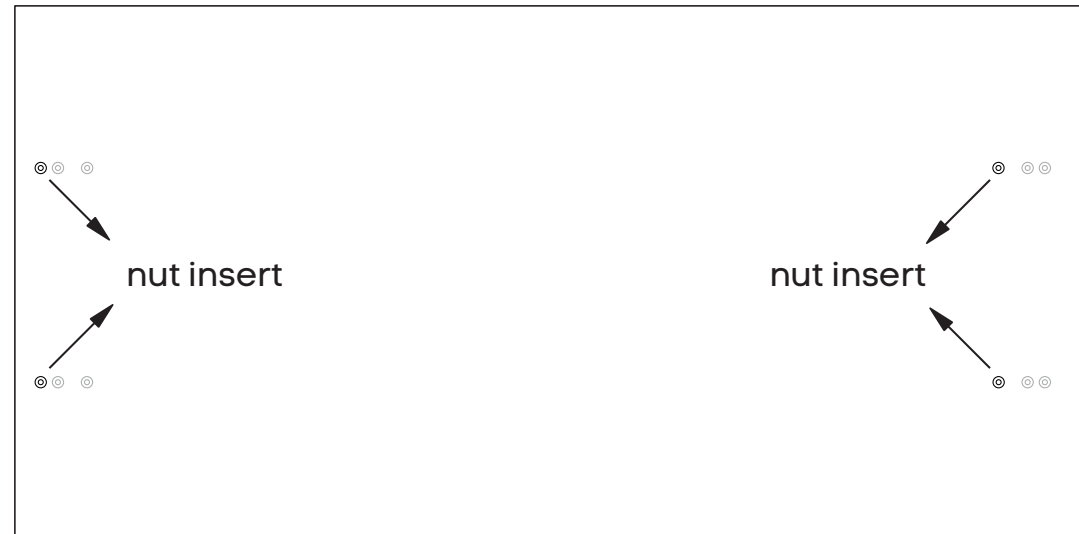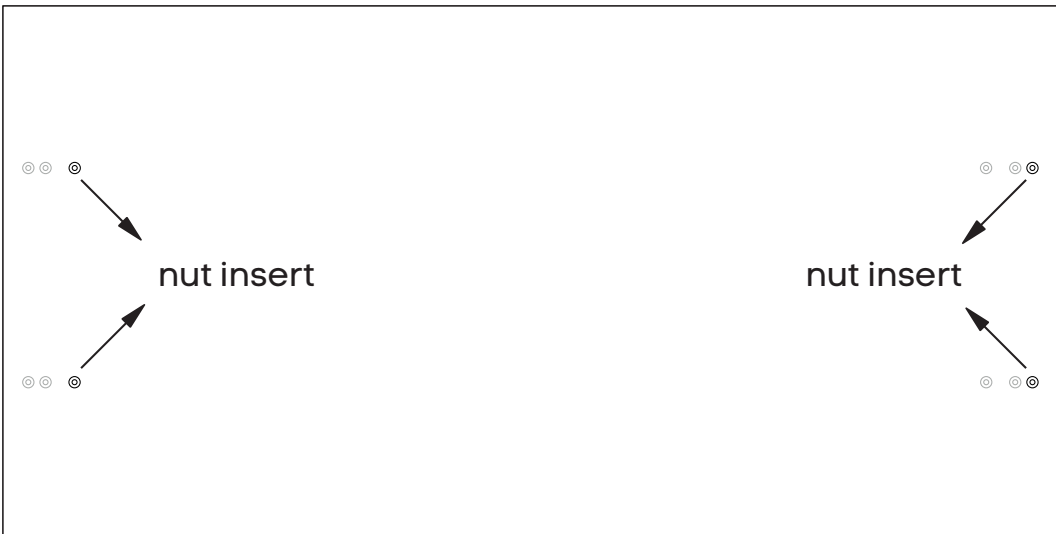
**www.jasonl.com.au**

**Need help!**
Call us on
**1300 527 665**

**jason.l**
your office furniture mate

TABLE TOPS
BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

nut insert

nut insert

nut insert

nut insert

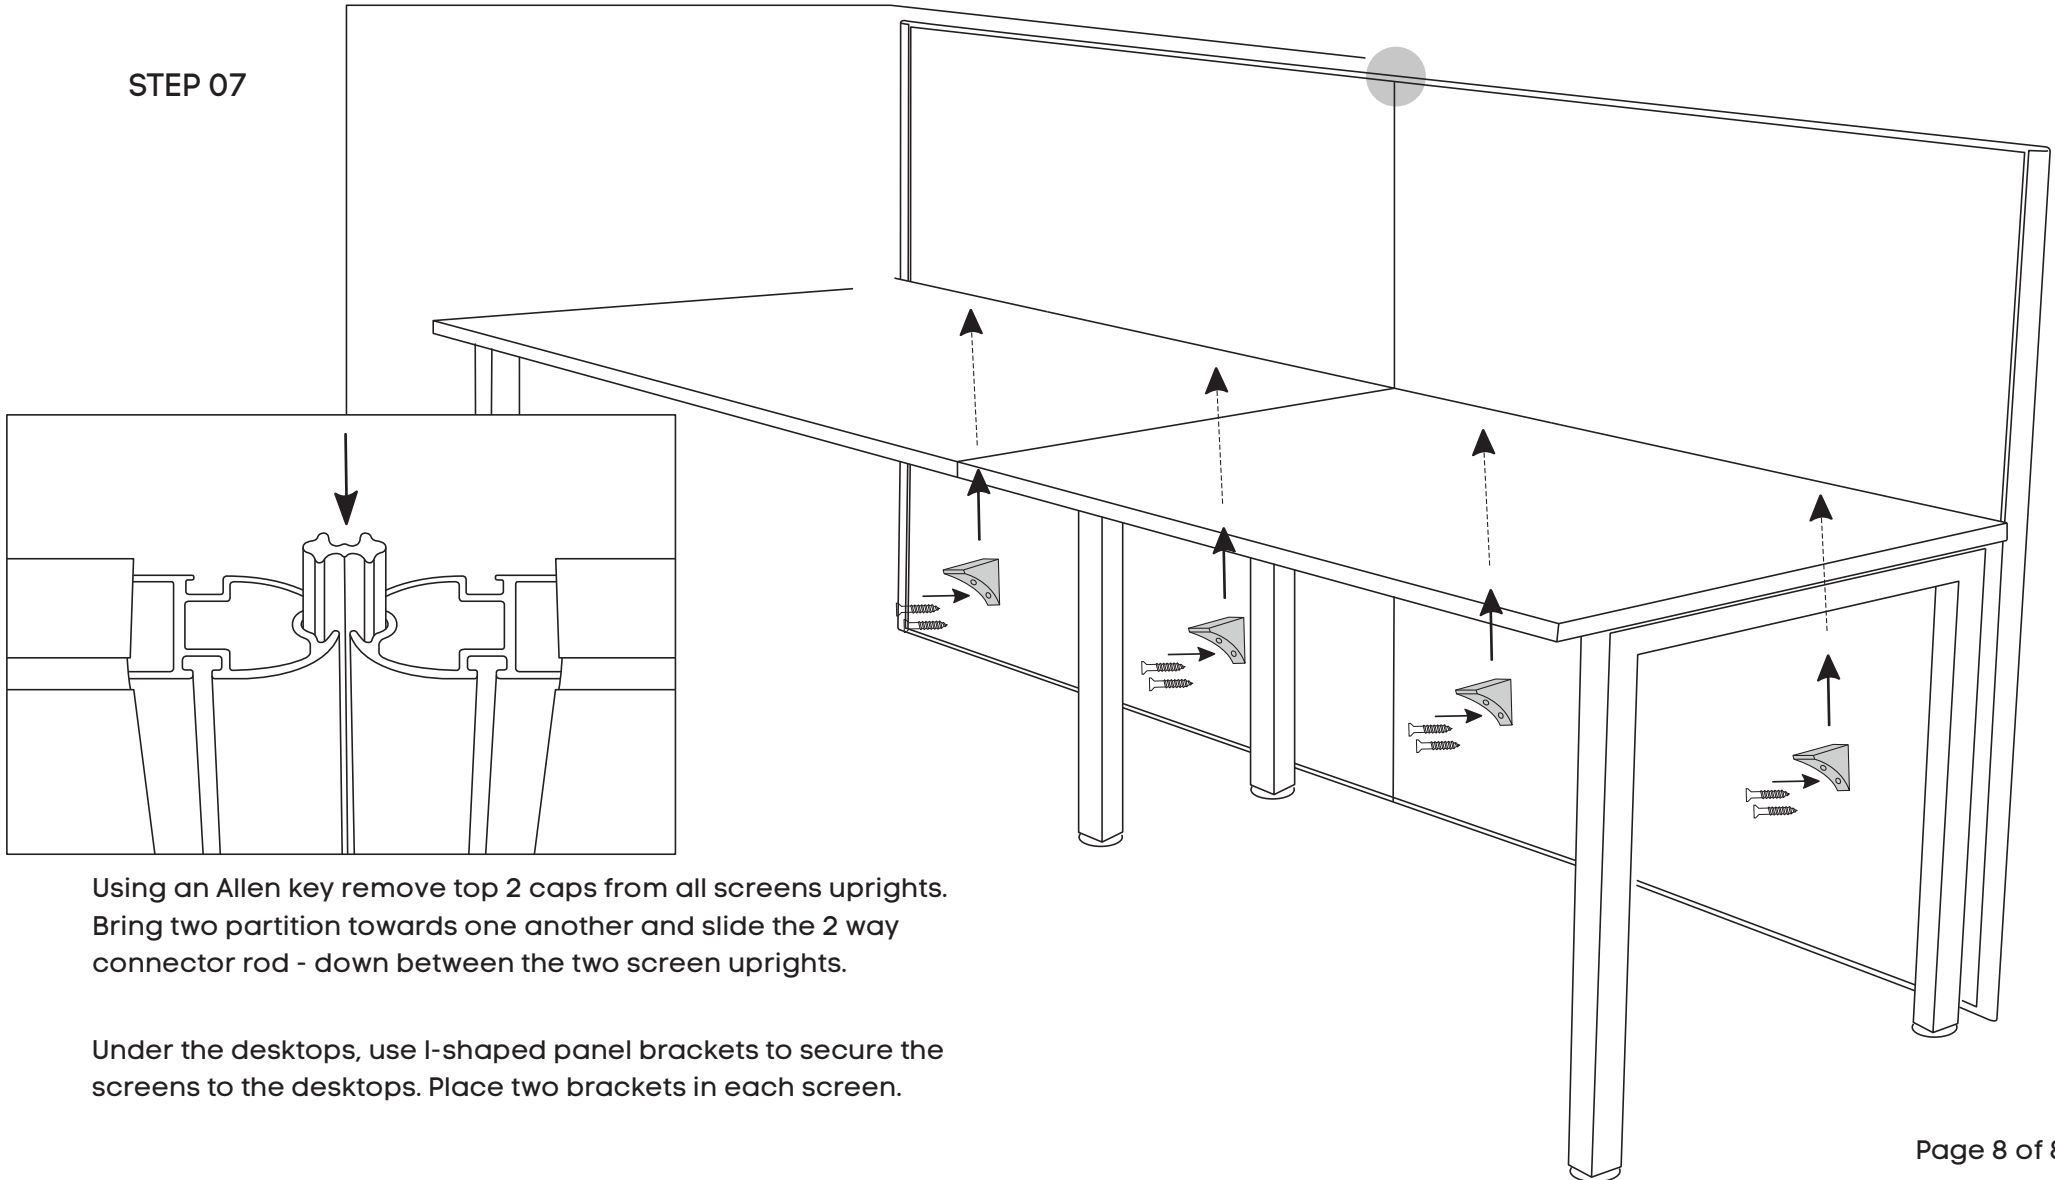# Horizon Quadro Square 2P Run workstation

**Need help!**
Call us on
**1300 527 665**

**jason.l**
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

STEP 07

Using an Allen key remove top 2 caps from all screens uprights.
Bring two partition towards one another and slide the 2 way
connector rod - down between the two screen uprights.

Under the desktops, use l-shaped panel brackets to secure the
screens to the desktops. Place two brackets in each screen.