ASSEMBLY INSTRUCTIONS
Quadro A leg
Counter table
Radius Corners

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1800x1100 mm

Tools Required: Power screwdriver; Allen key set (provided)

👤👤 2 persons required for installation
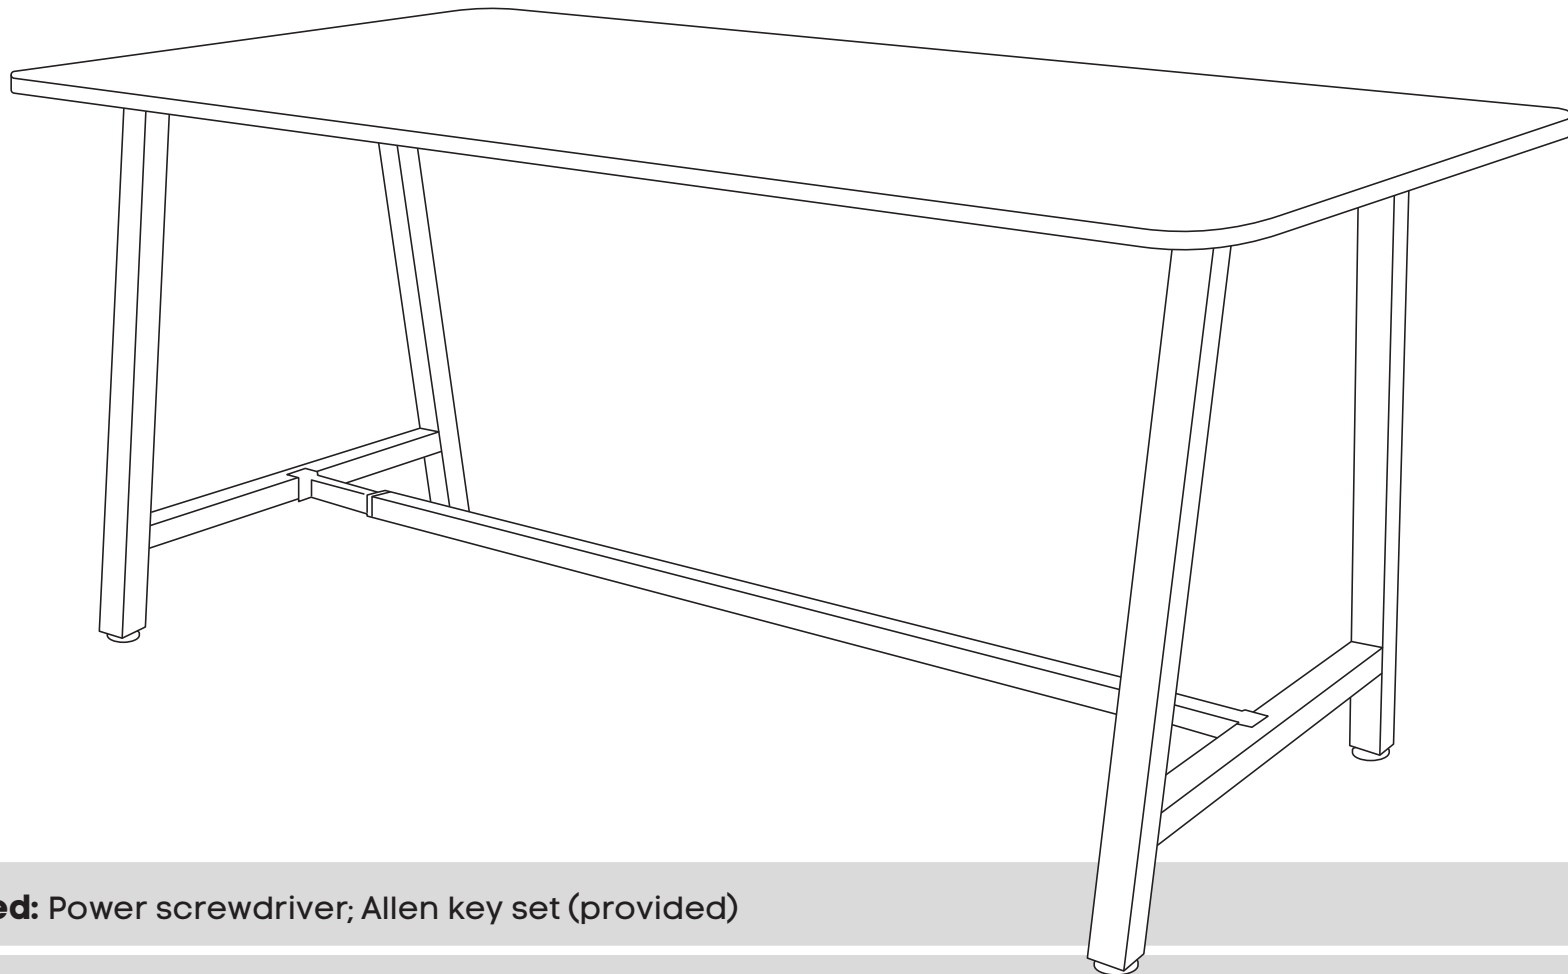
ASSEMBLY INSTRUCTIONS
Quadro A leg Counter table Radius Corners

Need help!
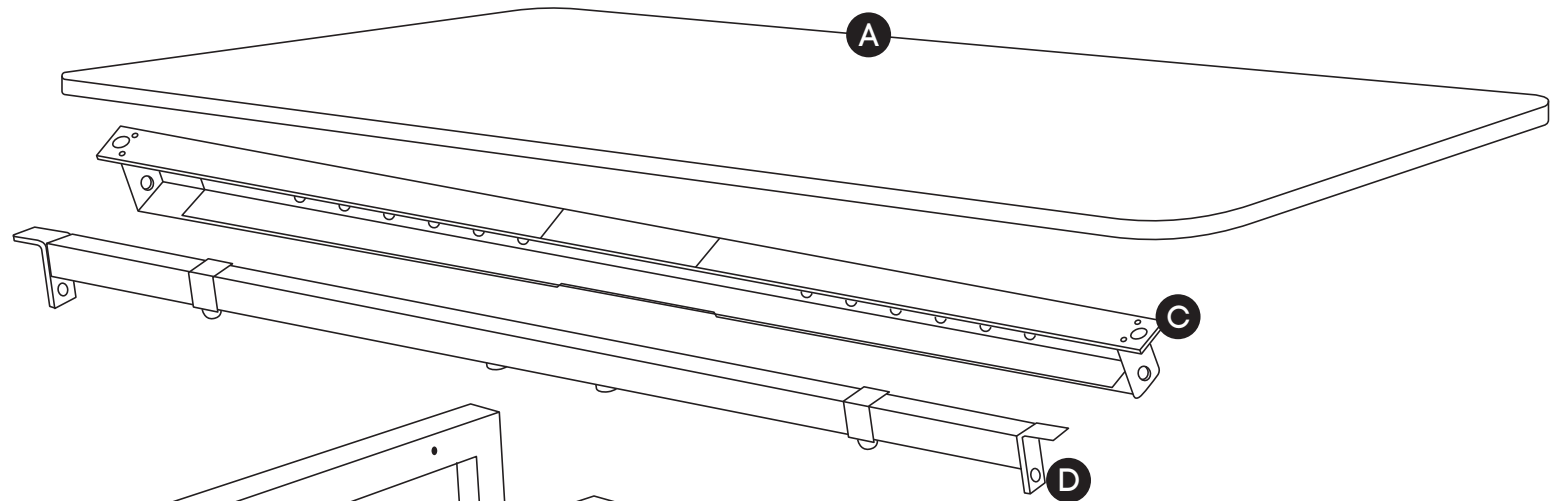Call us on
1300 527 665

**jason.l**
your office furniture mate

Sizes: 1800x1100 mm

COMPONENTS

A   Table top x1
B   Leg Quadro A x2
C   Upper Beam x1 *
D   Lower Beam x1
E   Plastic bracket x4
F   Feet x4

SCREWS

G   M8x20MM CSK x4
H   M8x20MM Socket head x4
I   M6x20MM Socket head x4
J   M6x30MM Socket head x4

K   Allen key x2

* Colour of the beam is always black, regardless desk frame colour.

Quadro A leg Counter table Radius Corners

Need help!
Call us on
1300 527 665

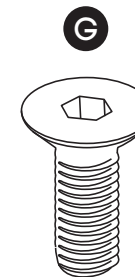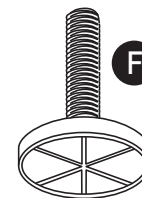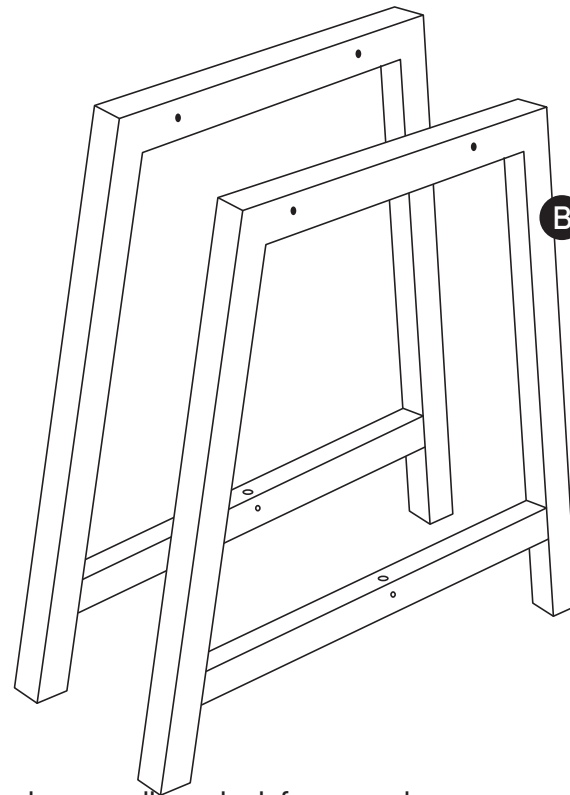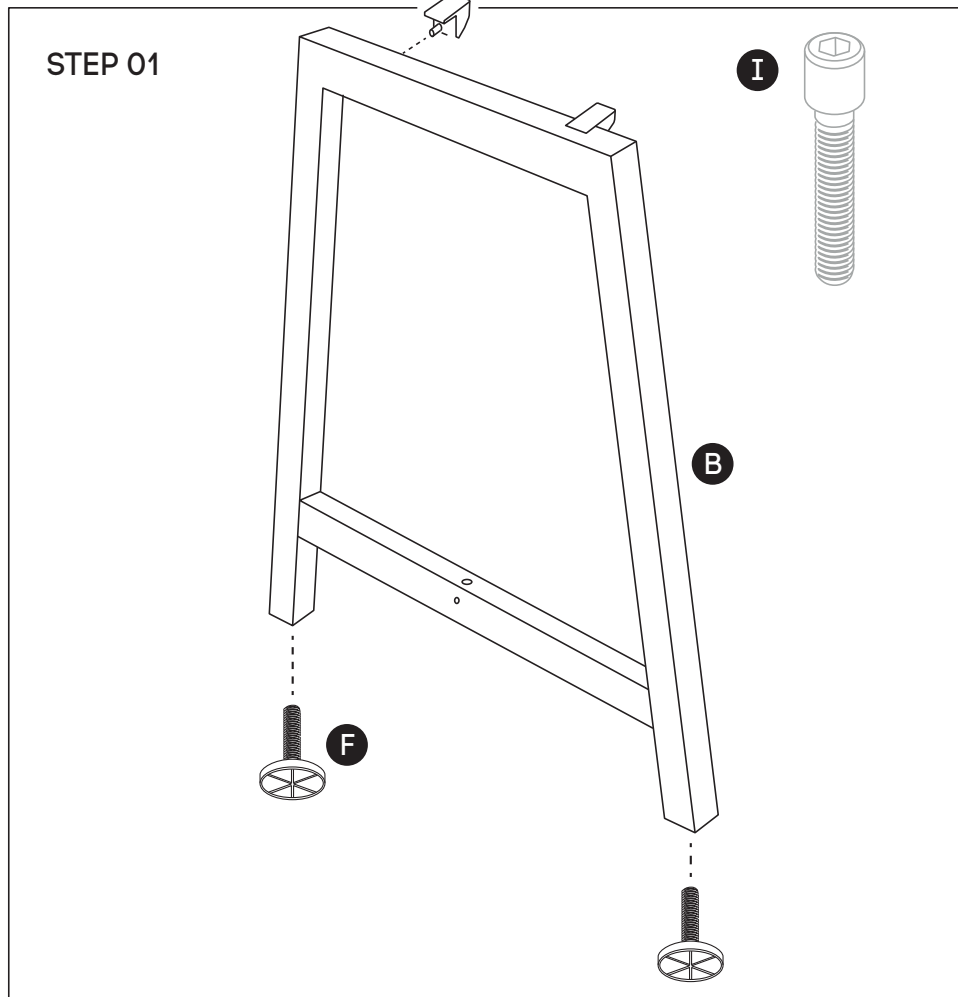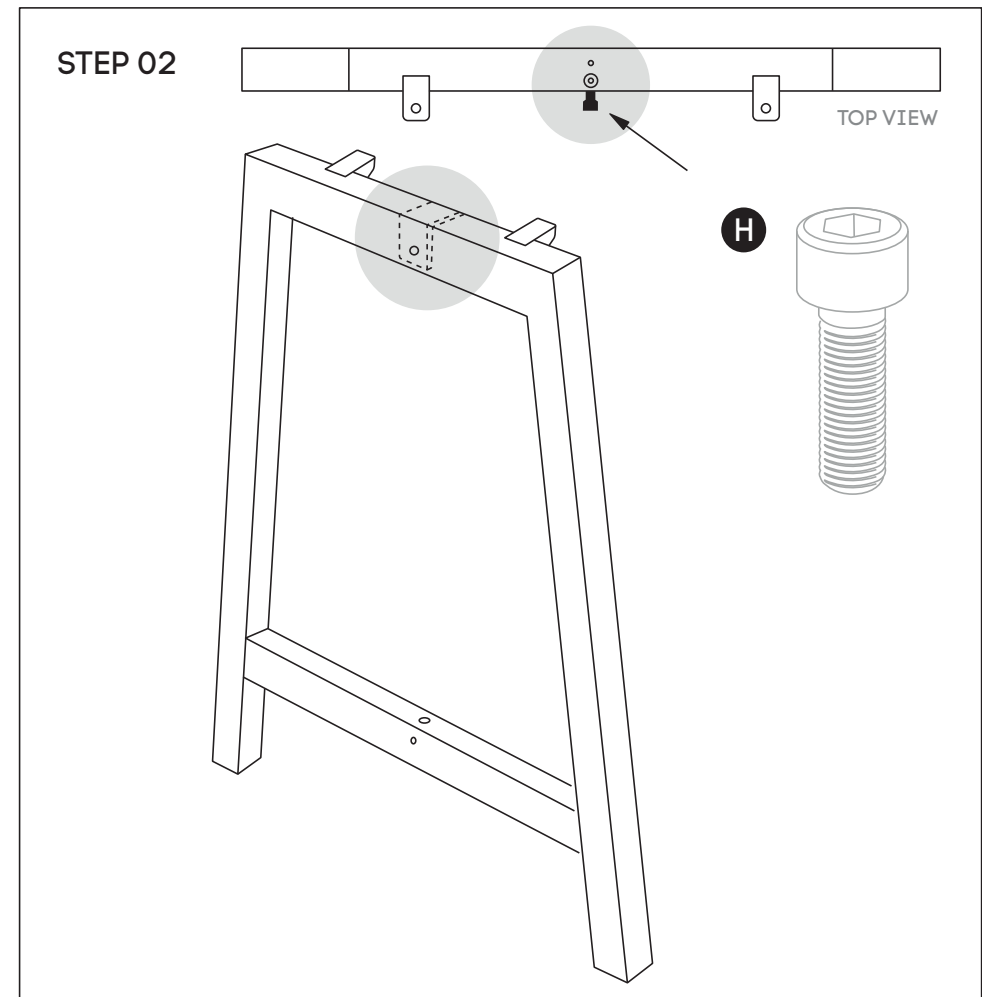**jason.l**
your office furniture mate

Sizes: 1800x1100 mm

STEP 01

Using Allen Key provided, attach 2 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(I)** Socket head screw. Screw the feets **(F)** to the bottom of each leg **(B)**

STEP 02

TOP VIEW

Using Allen Key provided, attach M8x20MM Socket head **(H)**-screw socket half way into leg for both legs **(B)**

ASSEMBLY INSTRUCTIONS
Quadro A leg Counter table Radius Corners

Need help!
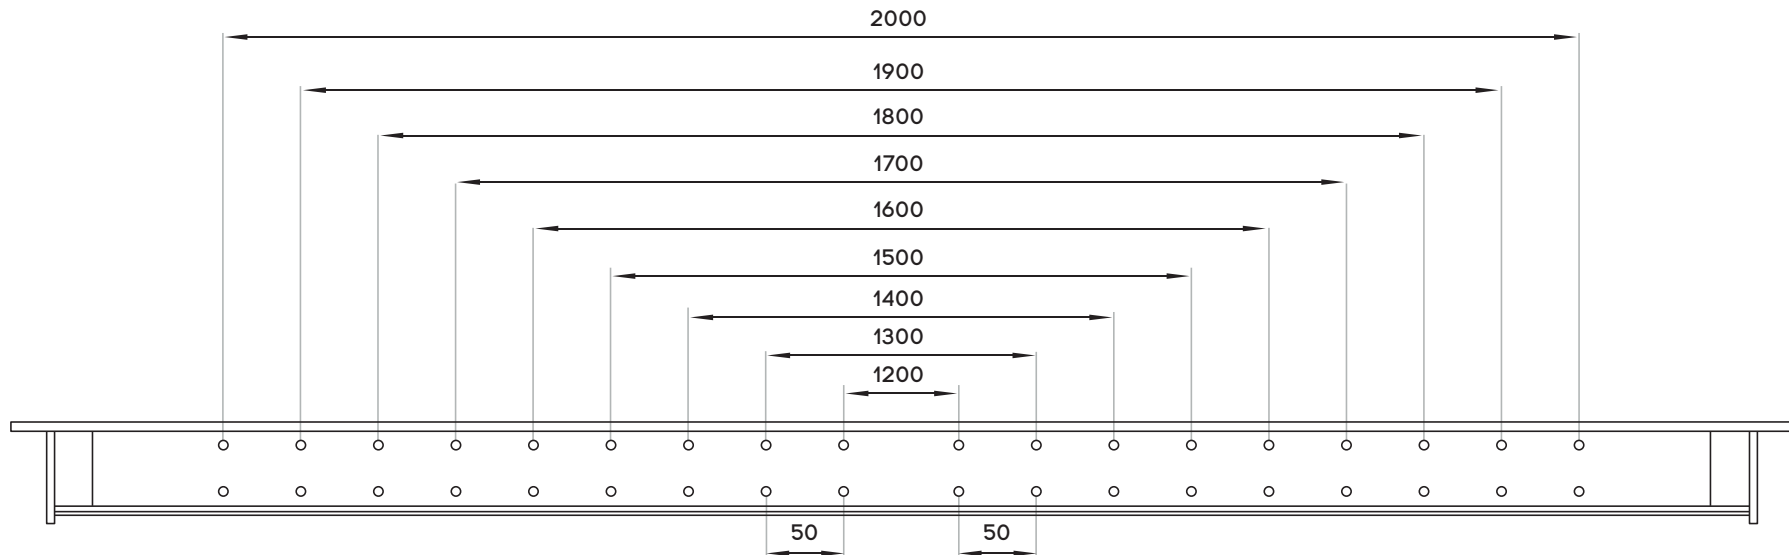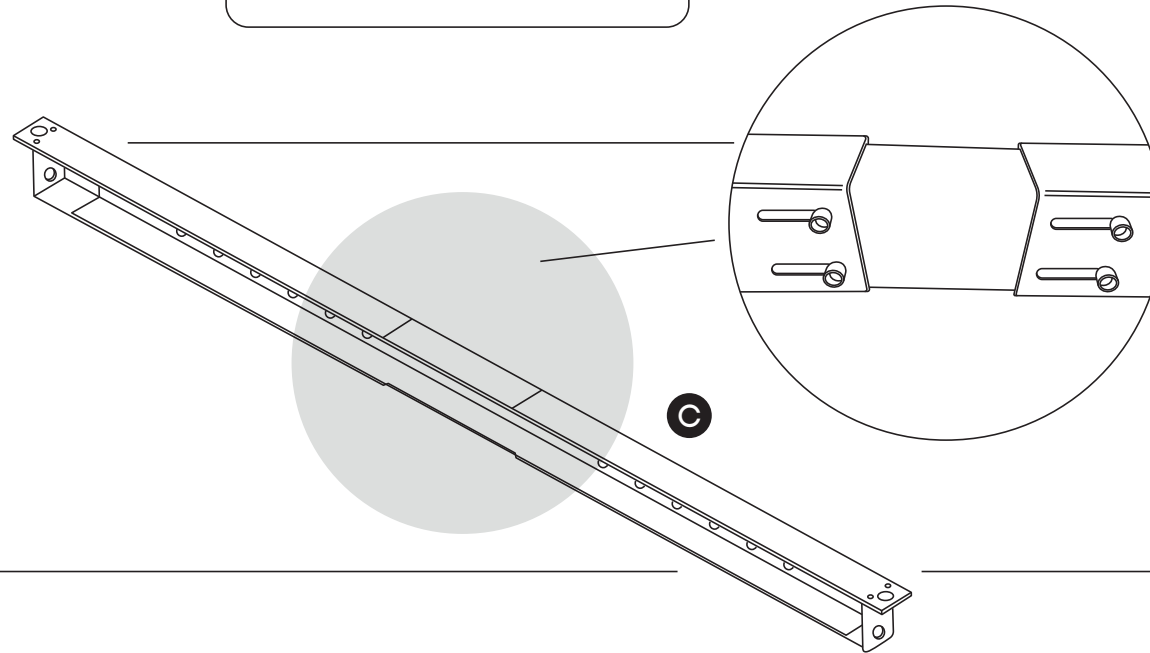Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1800x1100 mm

STEP 03

Adjust extendable beam **(C)** to desired length using markers and secure beam at that length using screws provided

2000
1900
1800
1700
1600
1500
1400
1300
1200

50   50

Quadro A leg Counter table Radius Corners

www.jasonl.com.au

Need help!
Call us on
1300 527 665
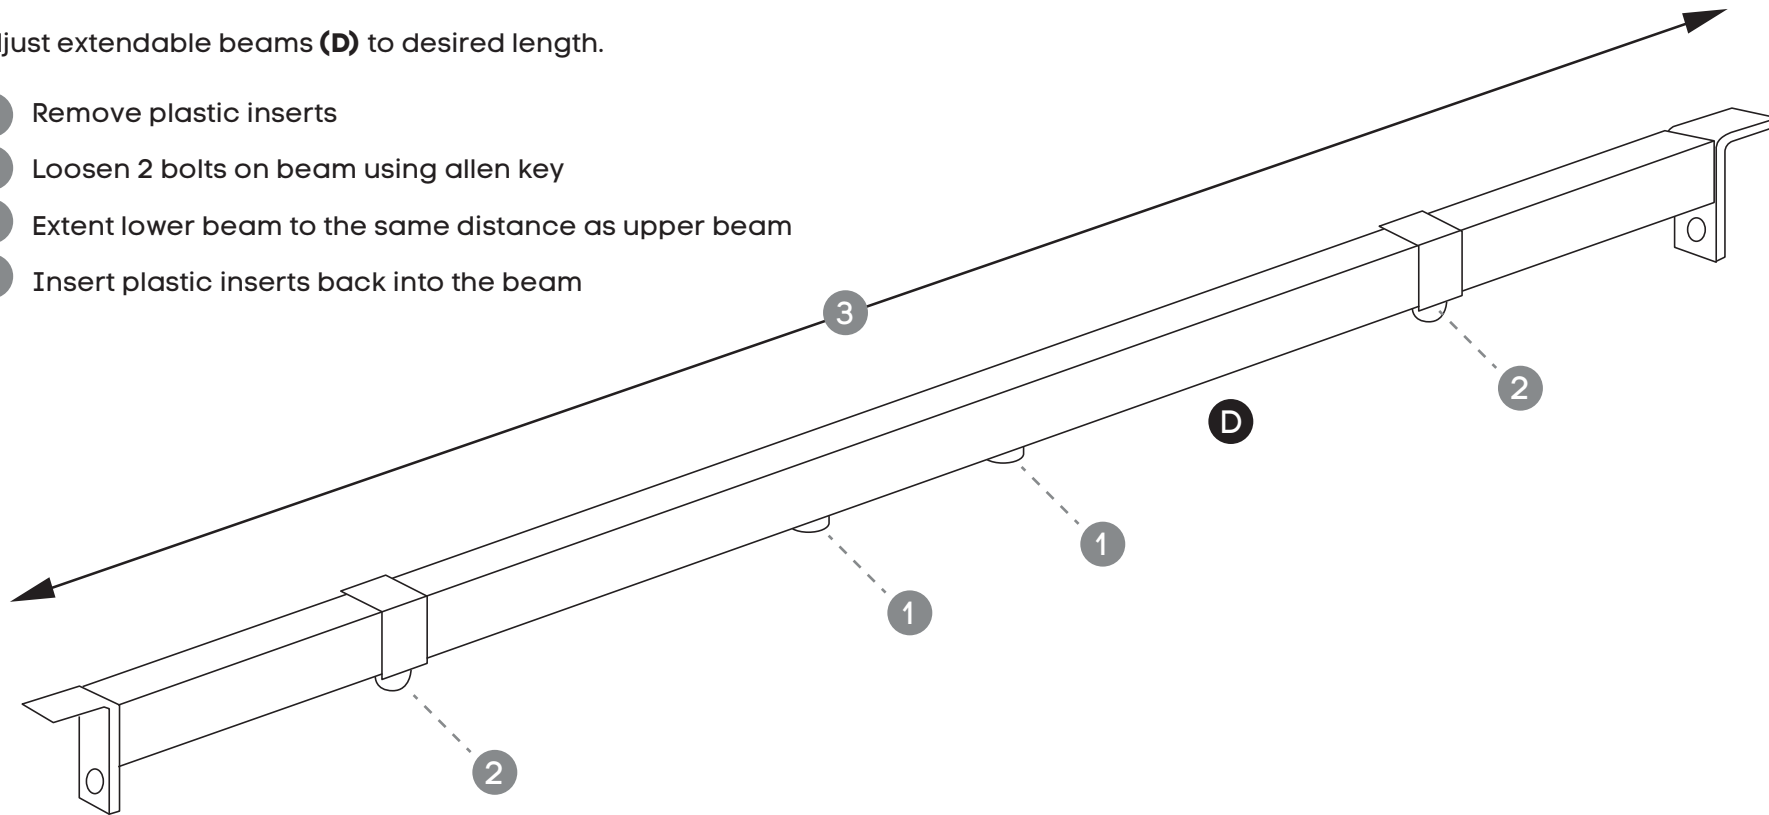
jason.l
your office furniture mate

Sizes: 1800x1100 mm

STEP 04

Adjust extendable beams **(D)** to desired length.

1. Remove plastic inserts
2. Loosen 2 bolts on beam using allen key
3. Extent lower beam to the same distance as upper beam
4. Insert plastic inserts back into the beam

Quadro A leg
Counter table
Radius Corners

www.jasonl.com.au
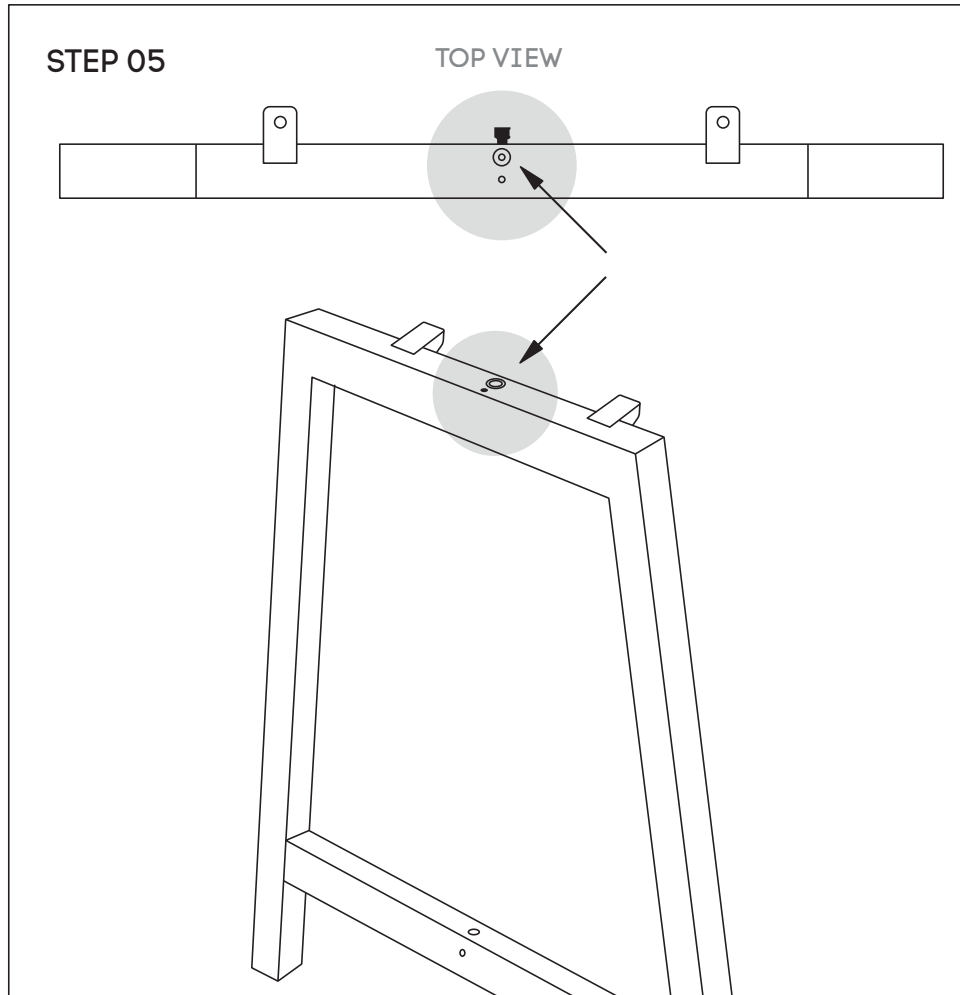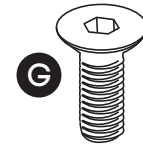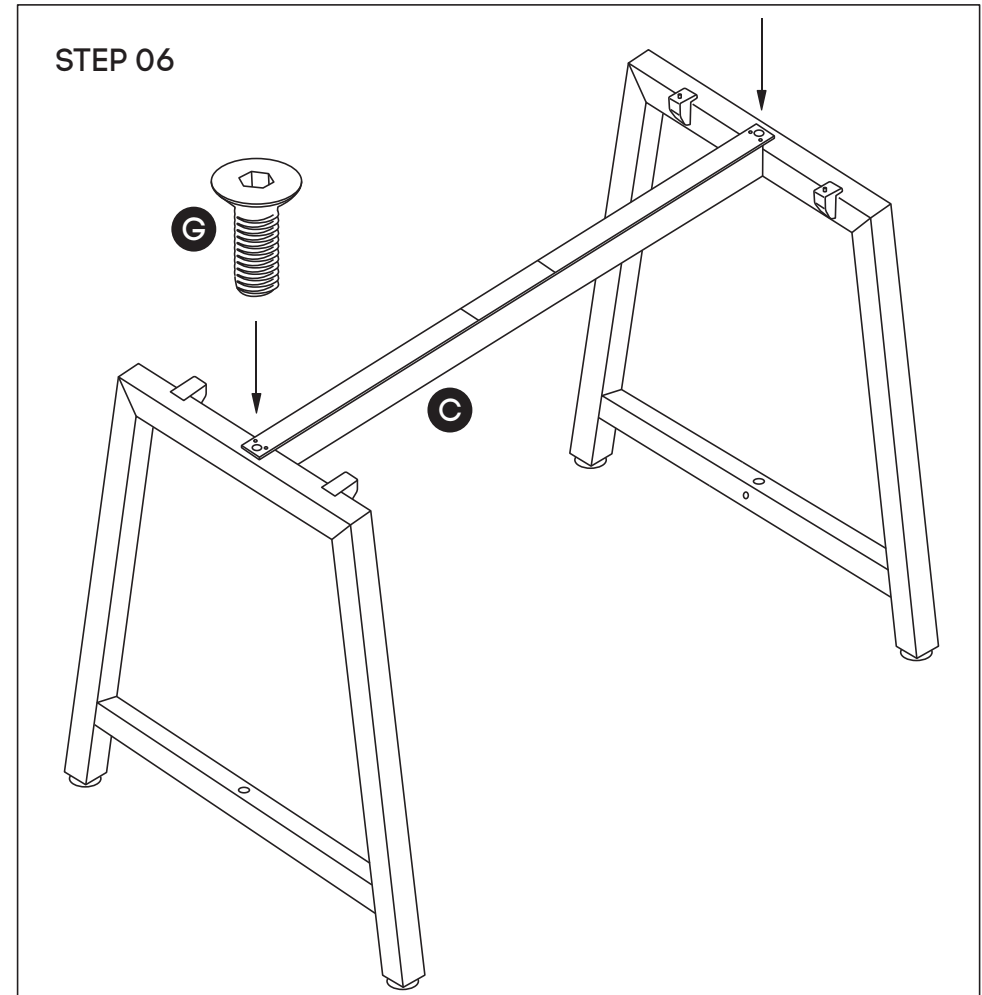
Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1800x1100 mm

STEP 05

TOP VIEW

G

STEP 06

G

C

Attach Upper Beam **(C)** to legs **(B)** using nut insert in legs.
See point attached

Frame looks like this. Using Allen Key, attach Upper Beam **(C)**
with Sockets **(G).**

Quadro A leg
Counter table
Radius Corners

Sizes: 1800x1100 mm

STEP 07
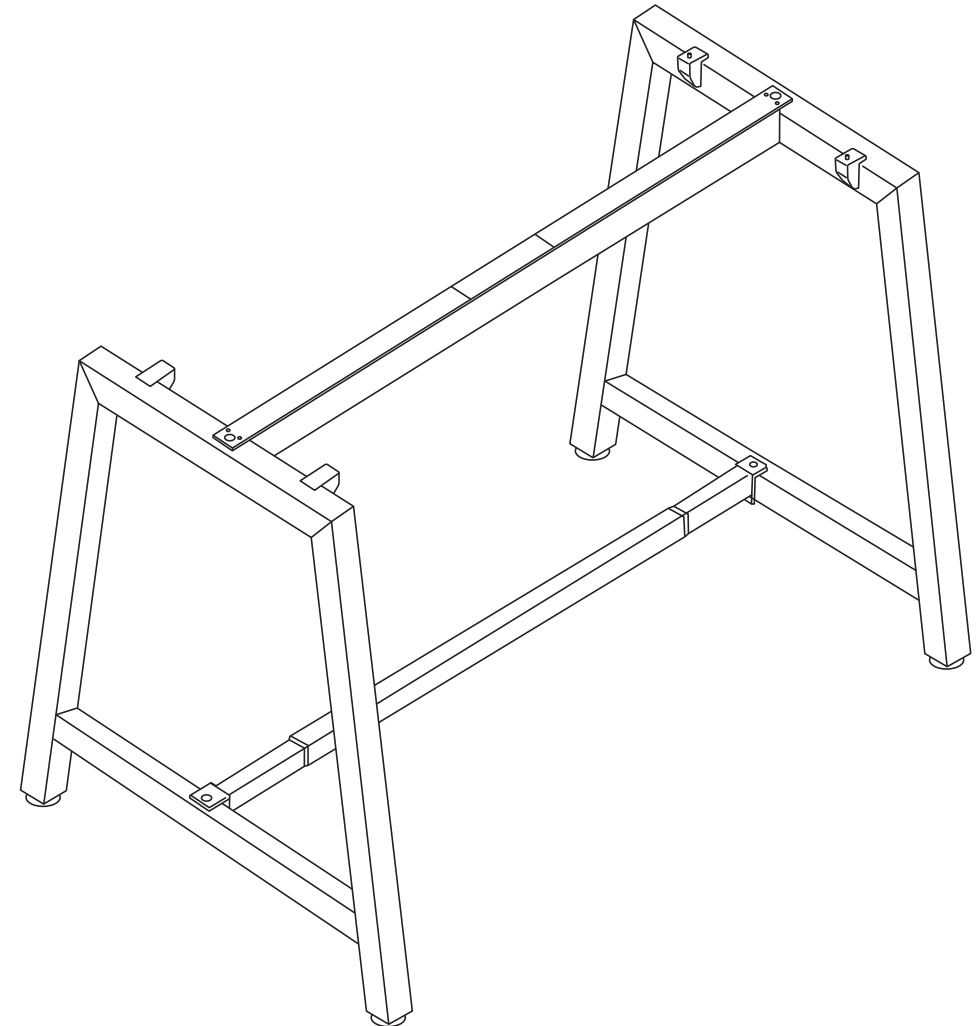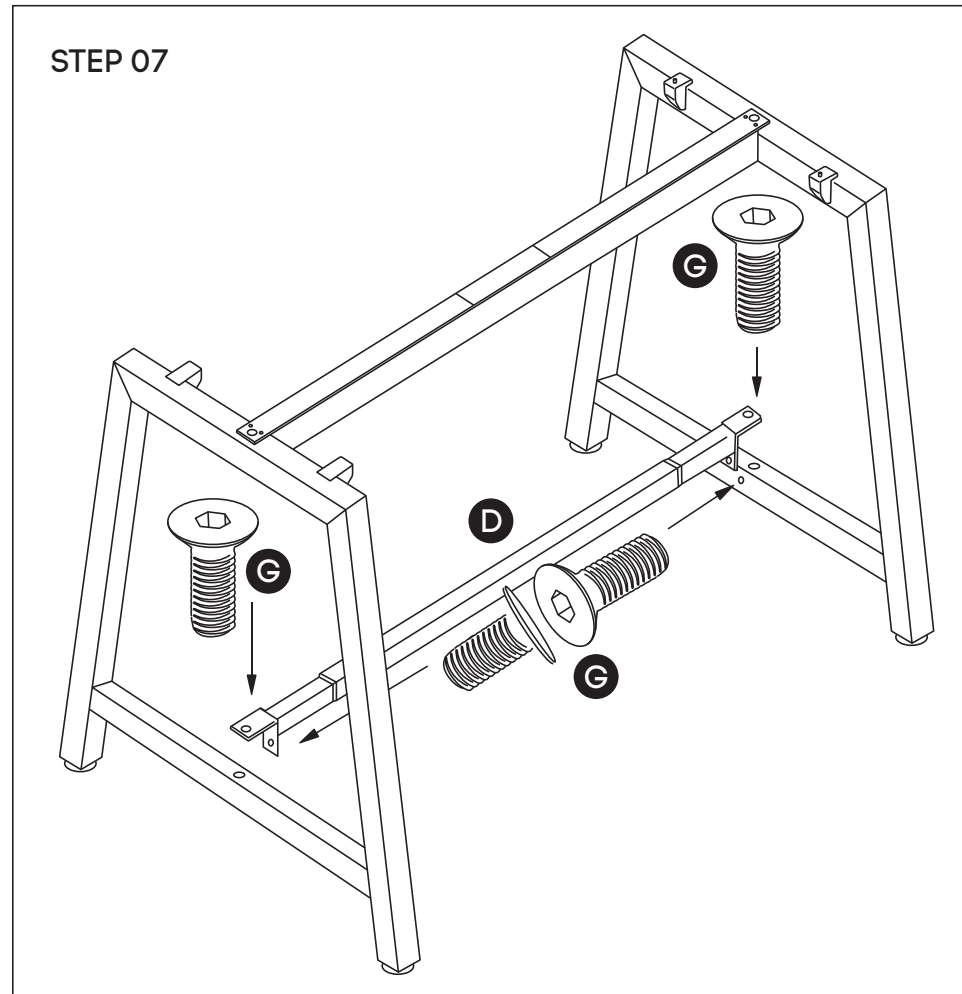
Frame looks like this. Using Allen Key. Tighen Sockets **(G)** on the Lower Beam **(D)** using Allen Key **(J)**. Insert plastic spacers to improve regidity. Attach two Sockets **(G)** to the side of the lower side beams (as shown in the picture).

Quadro A leg Counter table Radius Corners

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1800x1100 mm
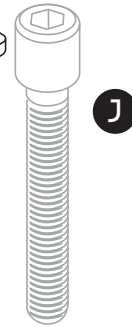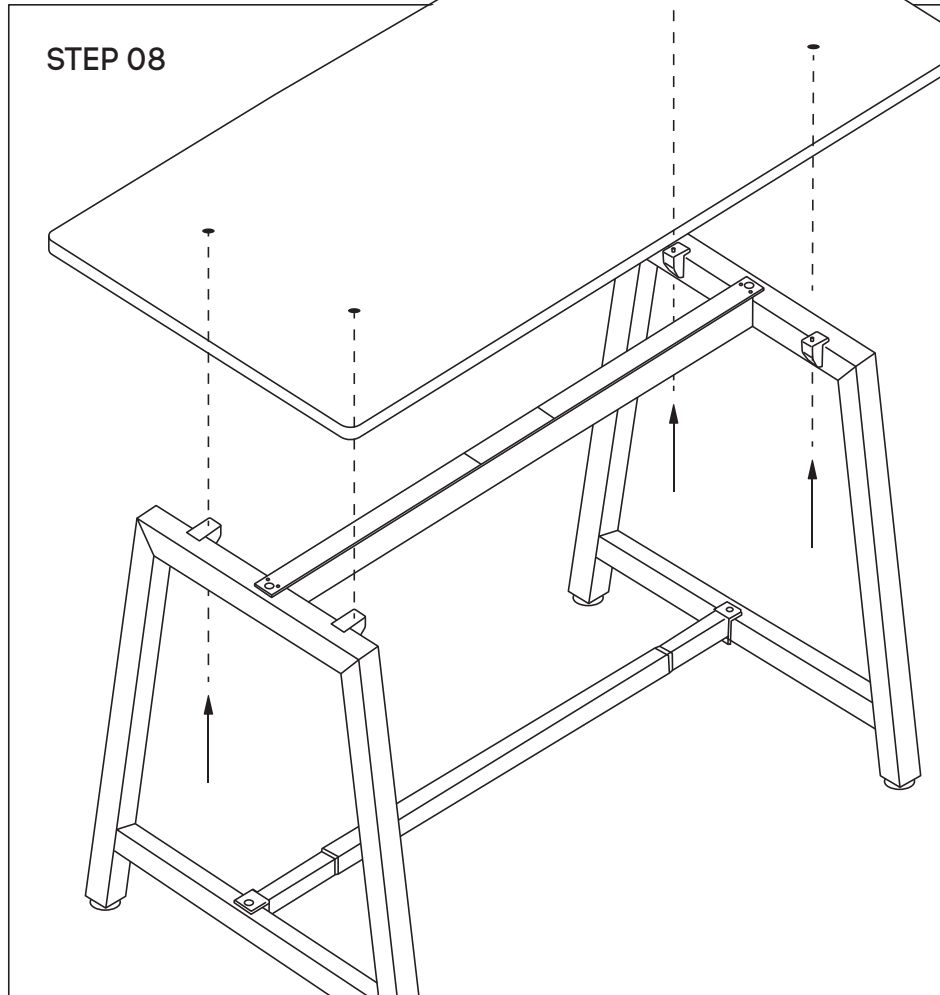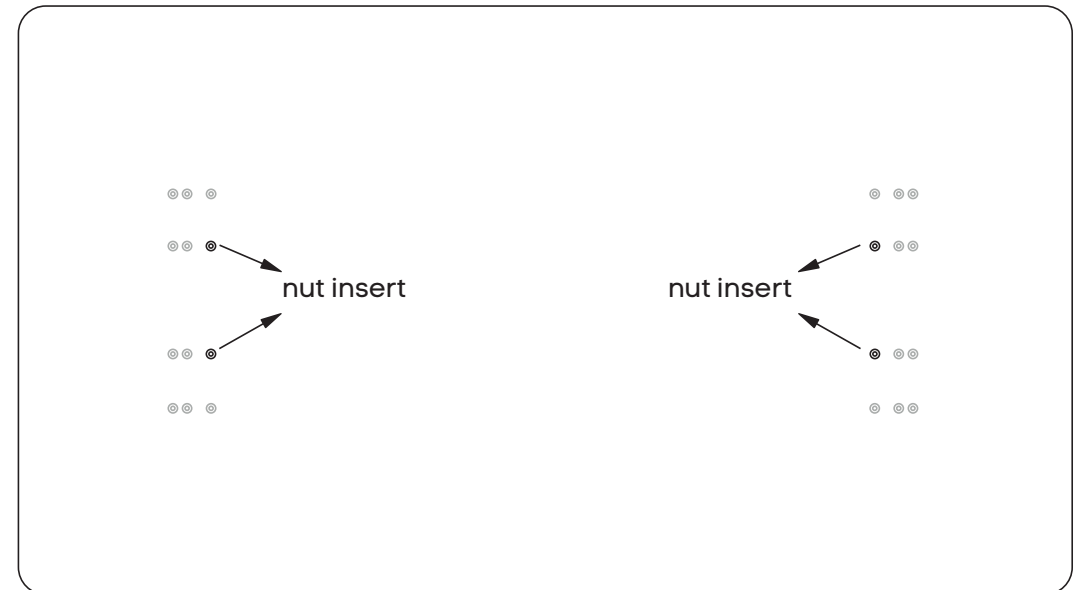
STEP 08

J

TABLE TOP
BOTTOM VIEW

nut insert   nut insert

Place desktop on top of frame. Please tighten screws using M6x30MM (**J**) into the underneath of the tops.