Quadro Loop Desk

jason.l
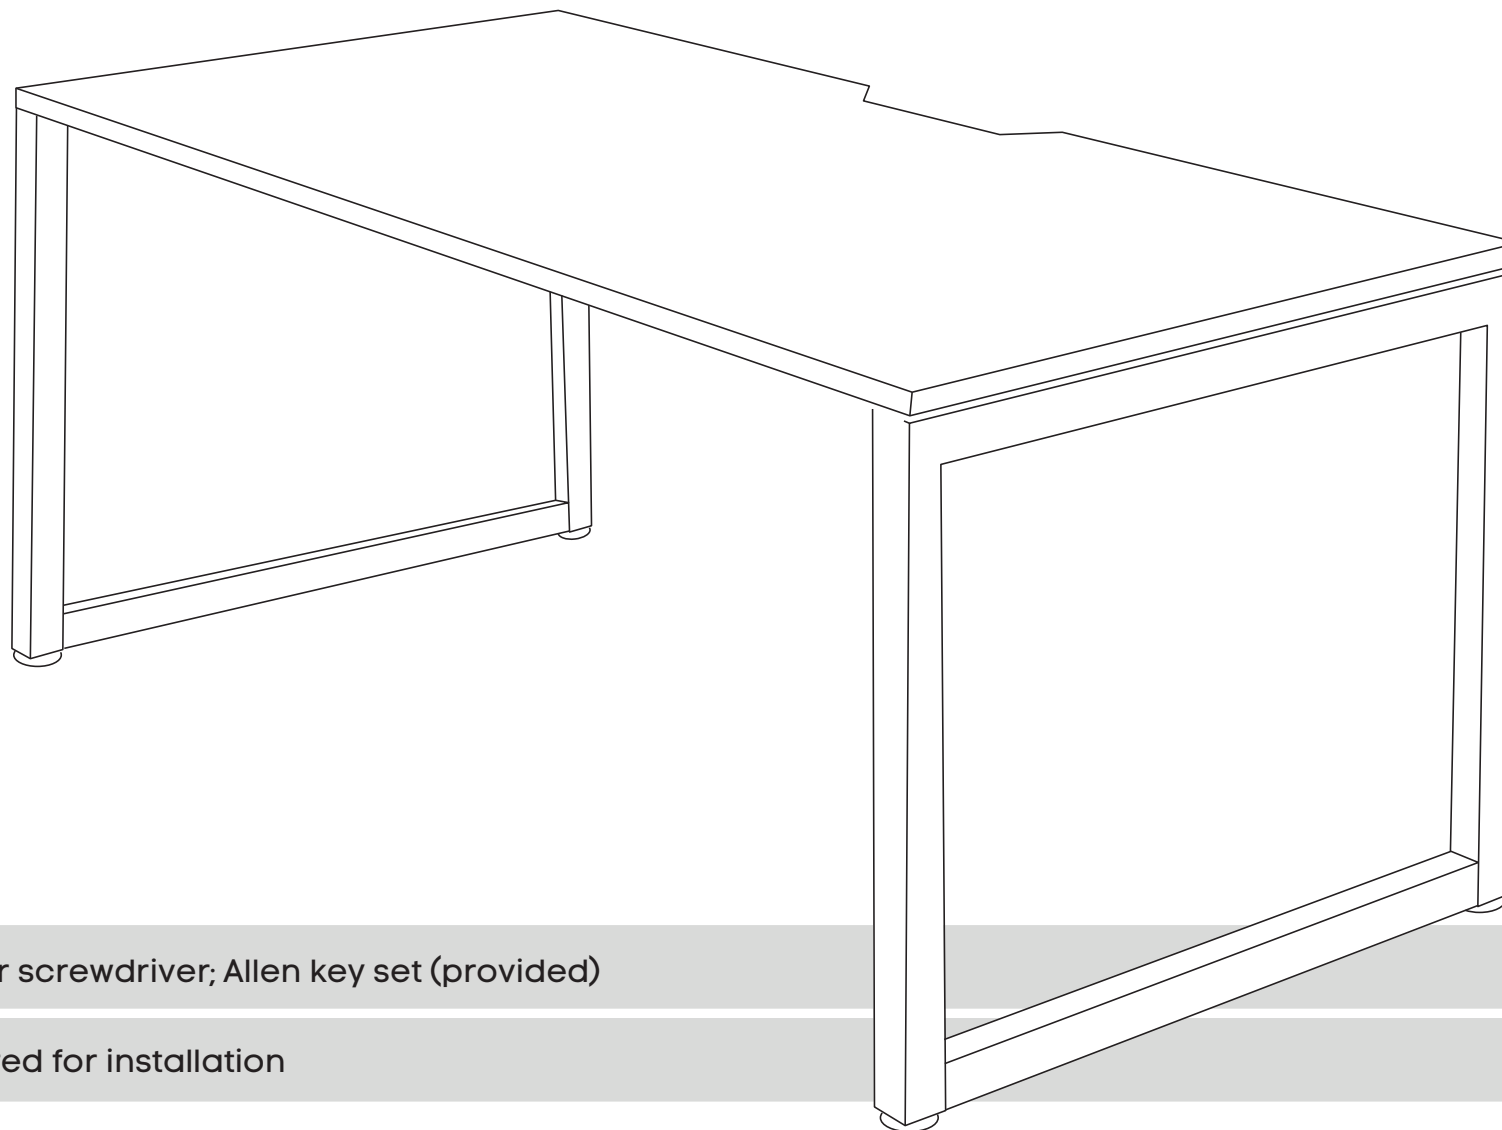
Sizes:
1400x800
1600x800

Tools Required: Power screwdriver; Allen key set (provided)

2 persons required for installation

Quadro Loop Desk

jason.l

COMPONENTS

A   Table top x1

B   Legs Quadro x2

C   Legs Quadro Loop x2

D   Beam x1 *

E   Plastic bracket x4

SCREWS

F   M8x20MM CSK x2

G   M8x20MM Socket head x2

H   M6x20MM Socket head x4

I   M6x30MM Socket head x4
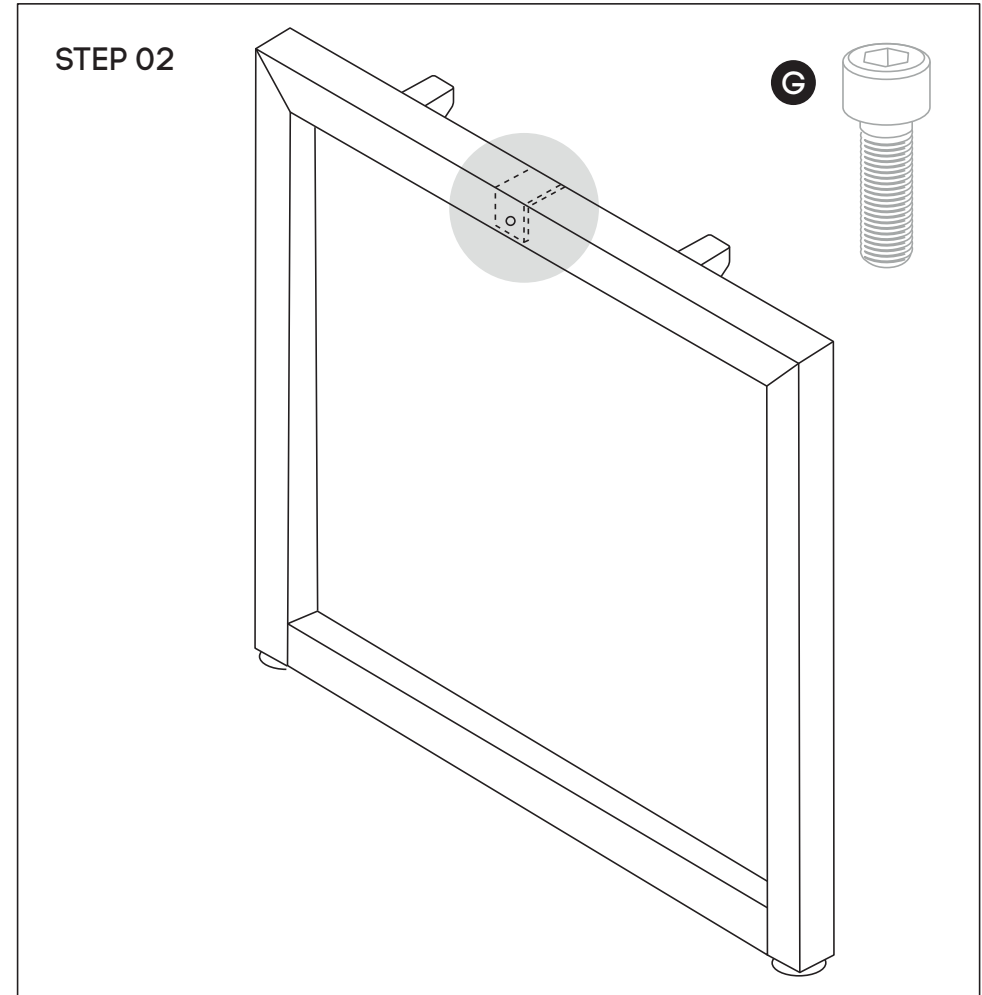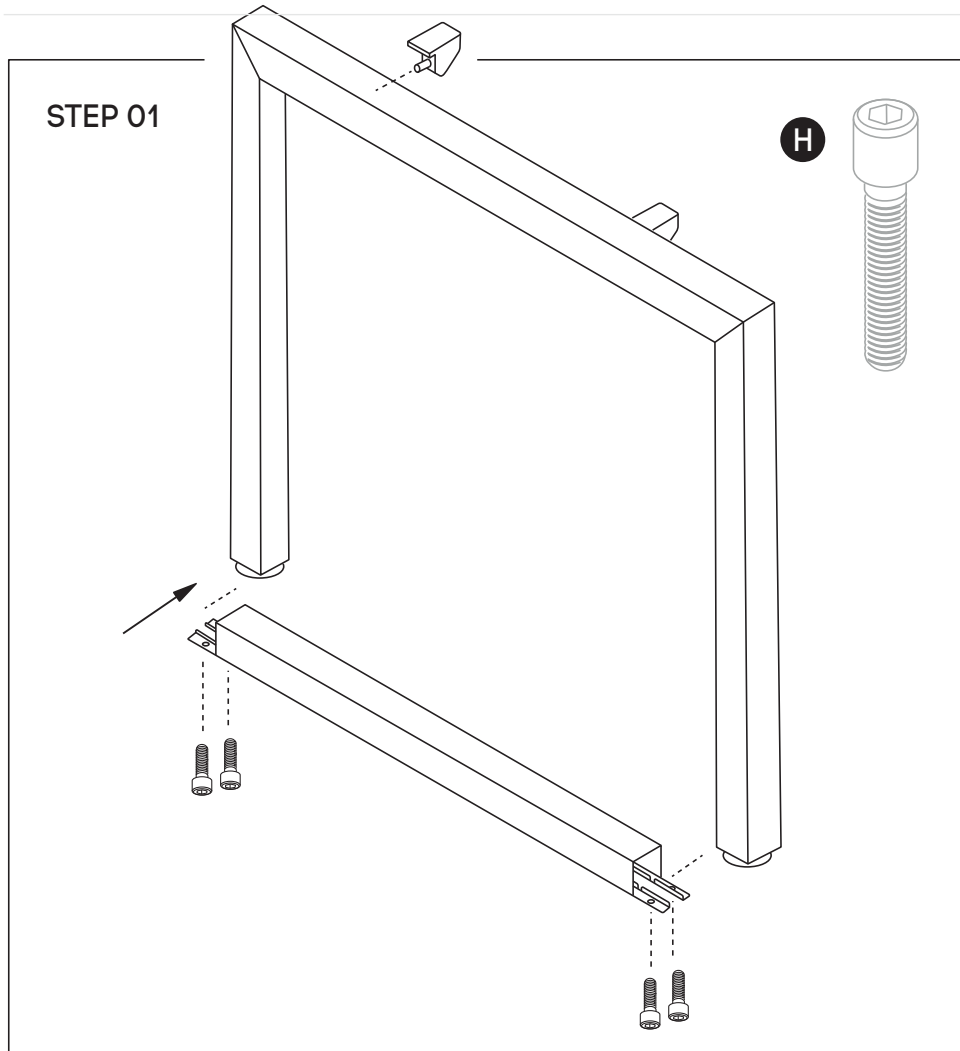
J   Allen key x2

* Colour of the beam is always black, regardless desk frame colour.

Quadro Loop Desk

jason.l

STEP 01

H

STEP 02

G

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Connect Loop Legs **(C)** to Bottom of Quadro Legs **(B)** by using 4 bolts per leg.

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)**
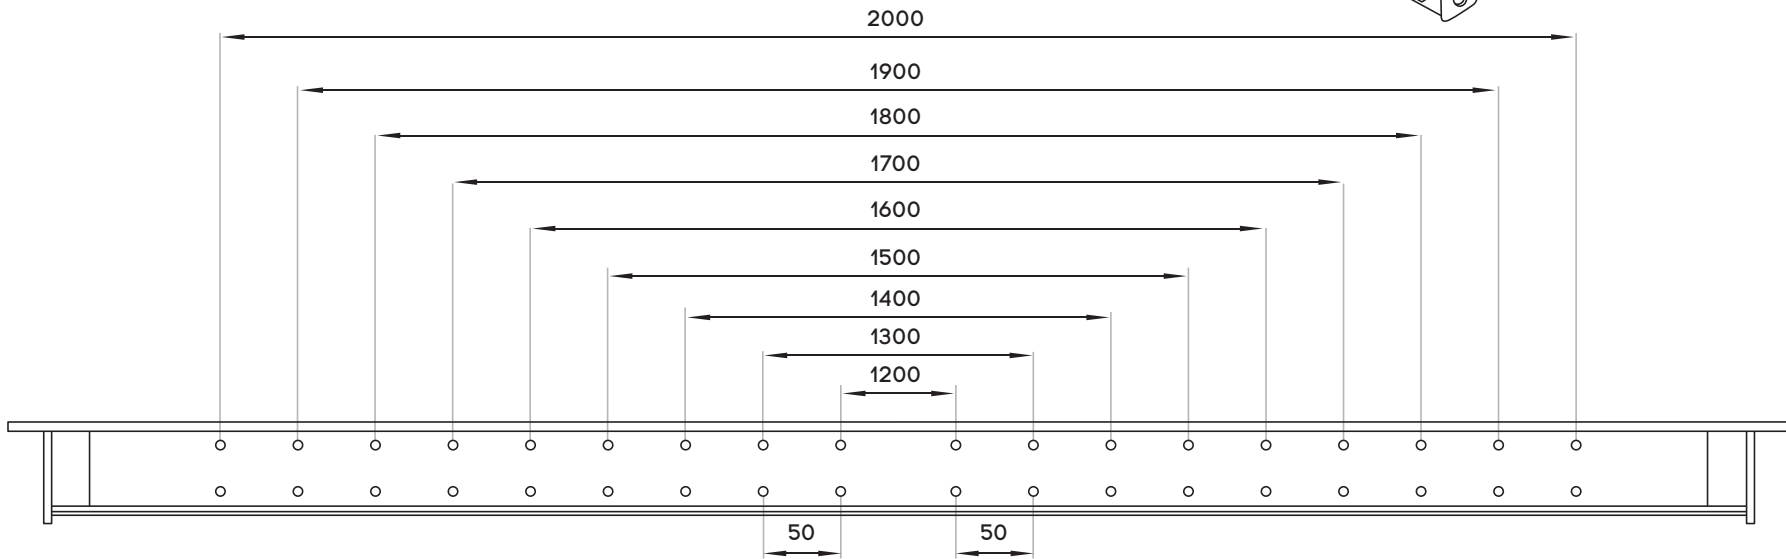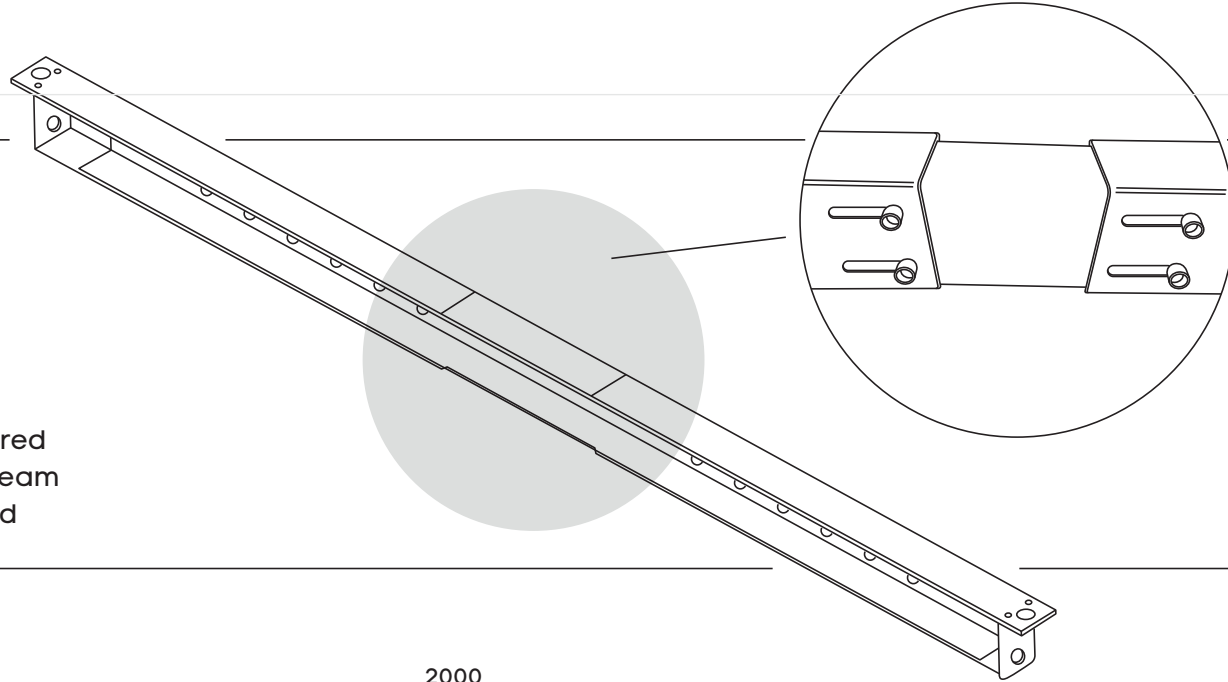
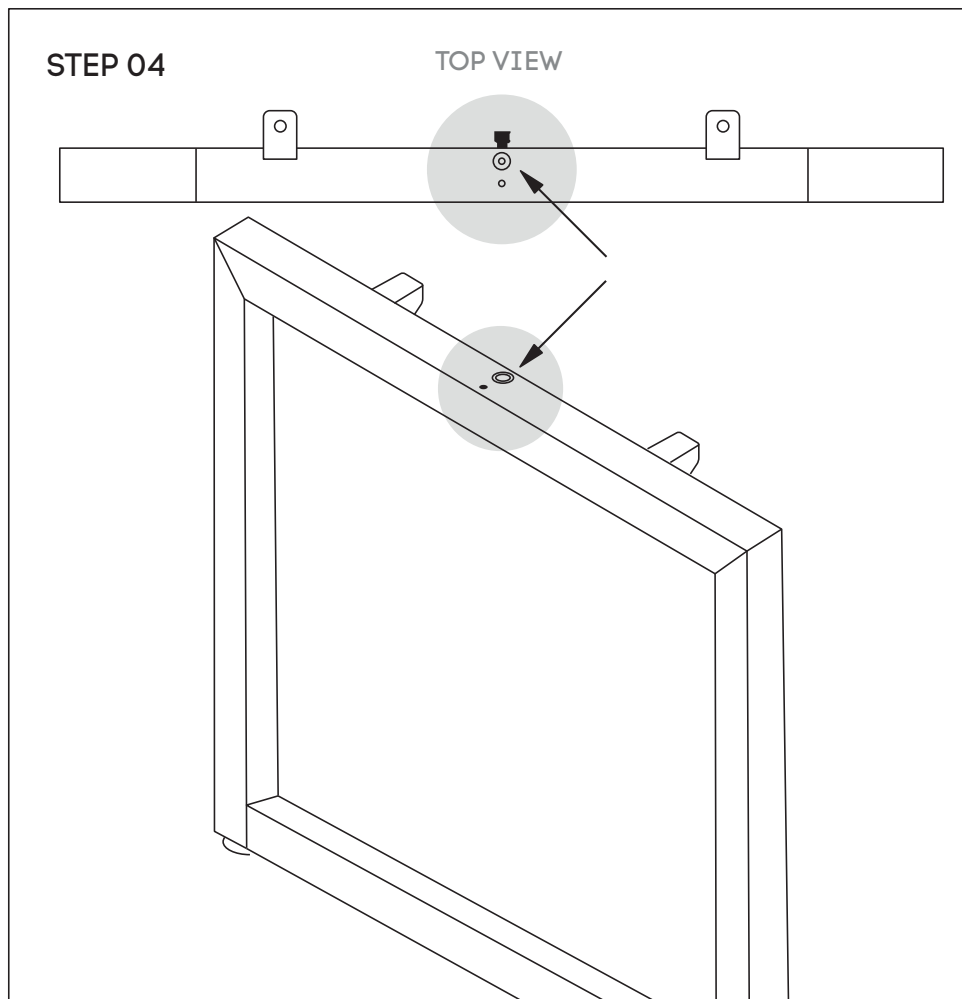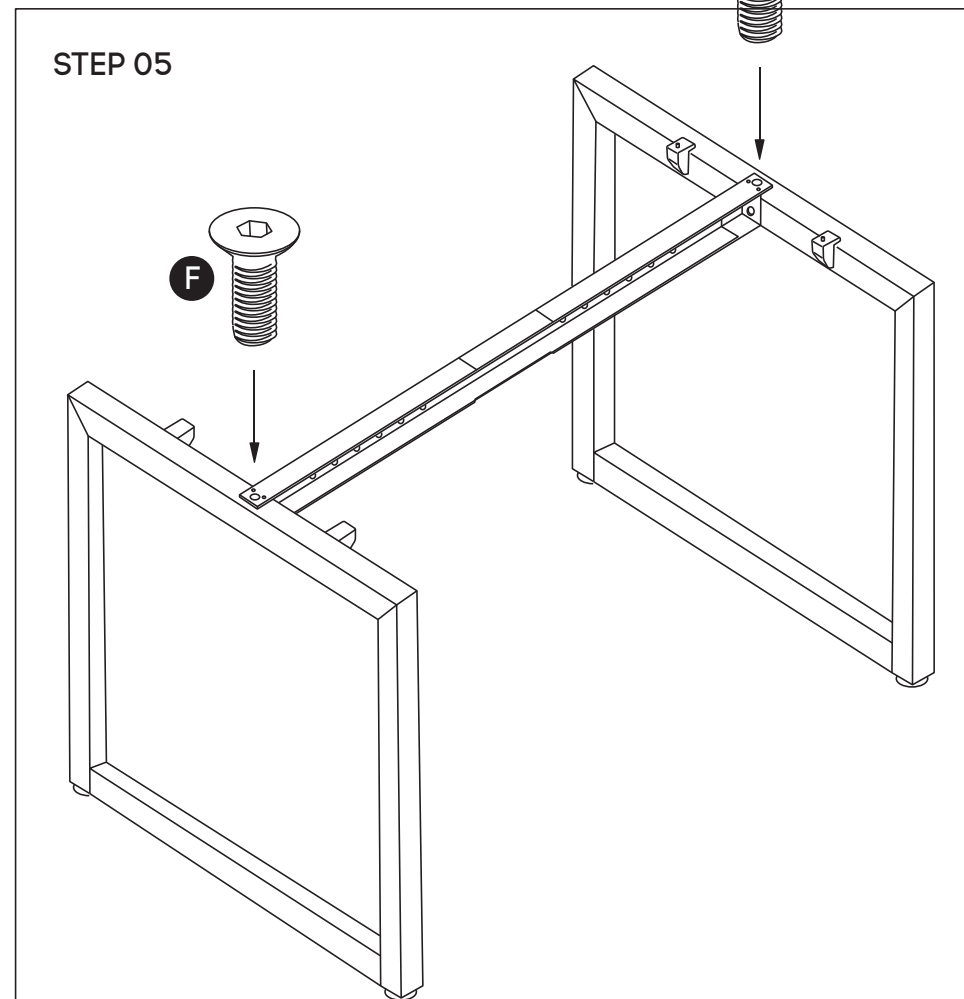**Need help!** | Call us on **1300 527 665**

Quadro Loop Desk

jason.l

STEP 03

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

2000

1900

1800

1700

1600

1500

1400

1300

1200

50   50

Quadro Loop Desk

jason.l

STEP 04

TOP VIEW

Attach beam **(D)** to legs **(B)** using nut insert in legs.
See point attached

STEP 05

F

F

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

Quadro Loop Desk

jason.l

STEP 06

I

TABLE TOP
BOTTOM VIEW

nut insert

nut insert
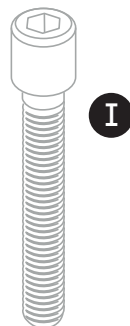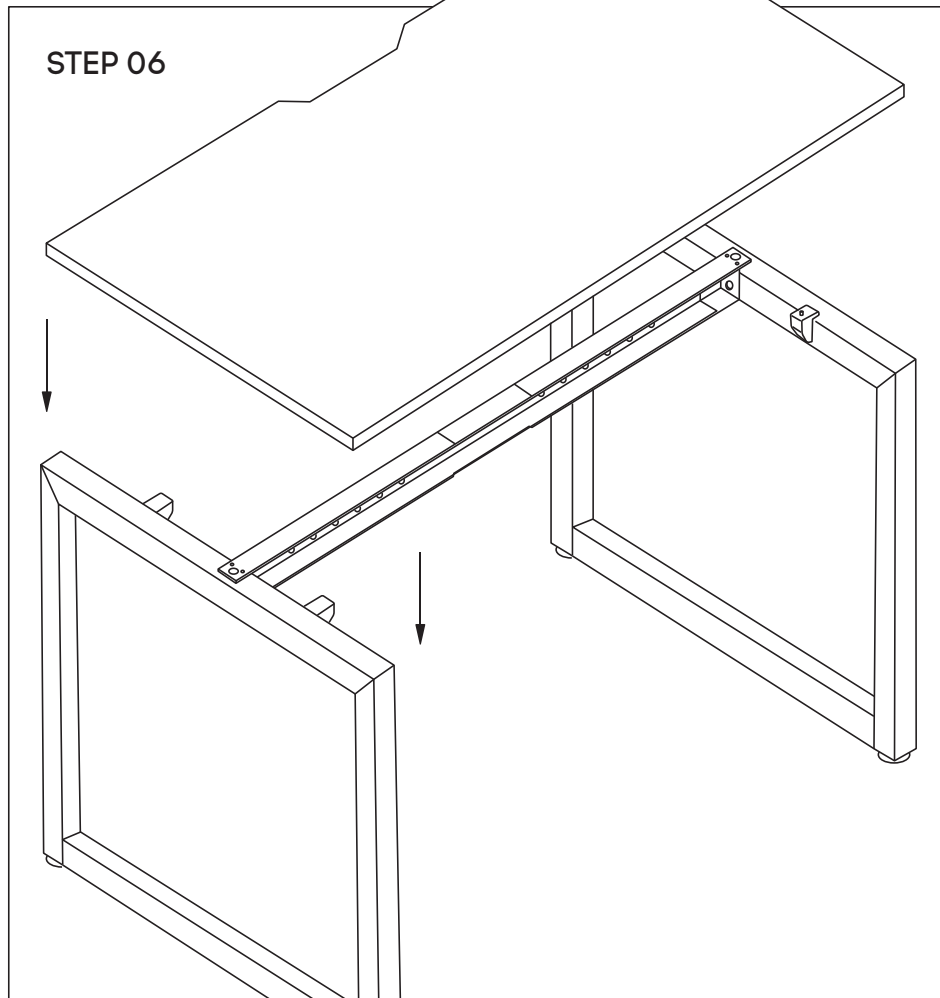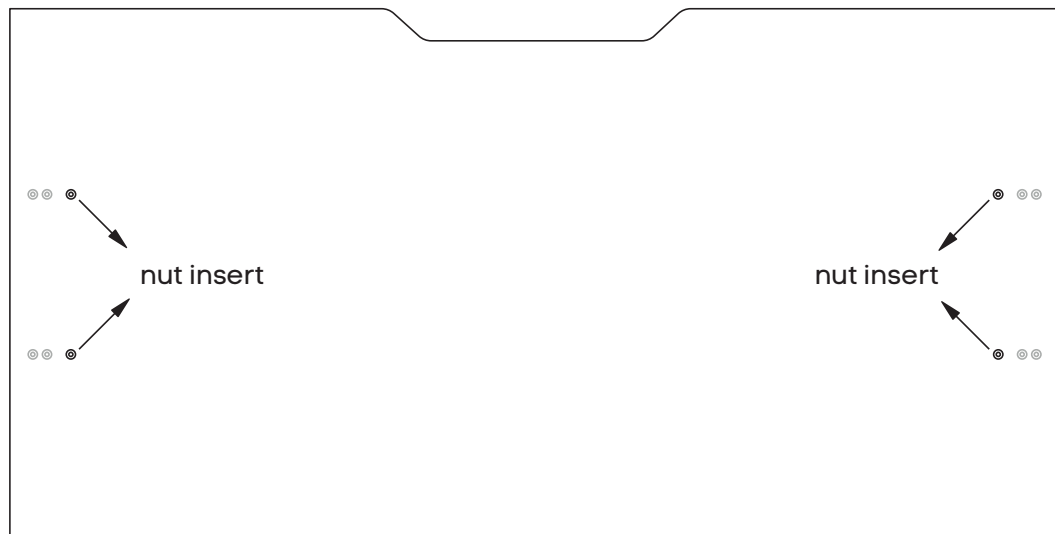
Place desktop ontop of frame - with cutout at the back of the desk. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(I)** sockets attached top to frame.