ASSEMBLY INSTRUCTIONS
Quadro Square
3P Run workstation
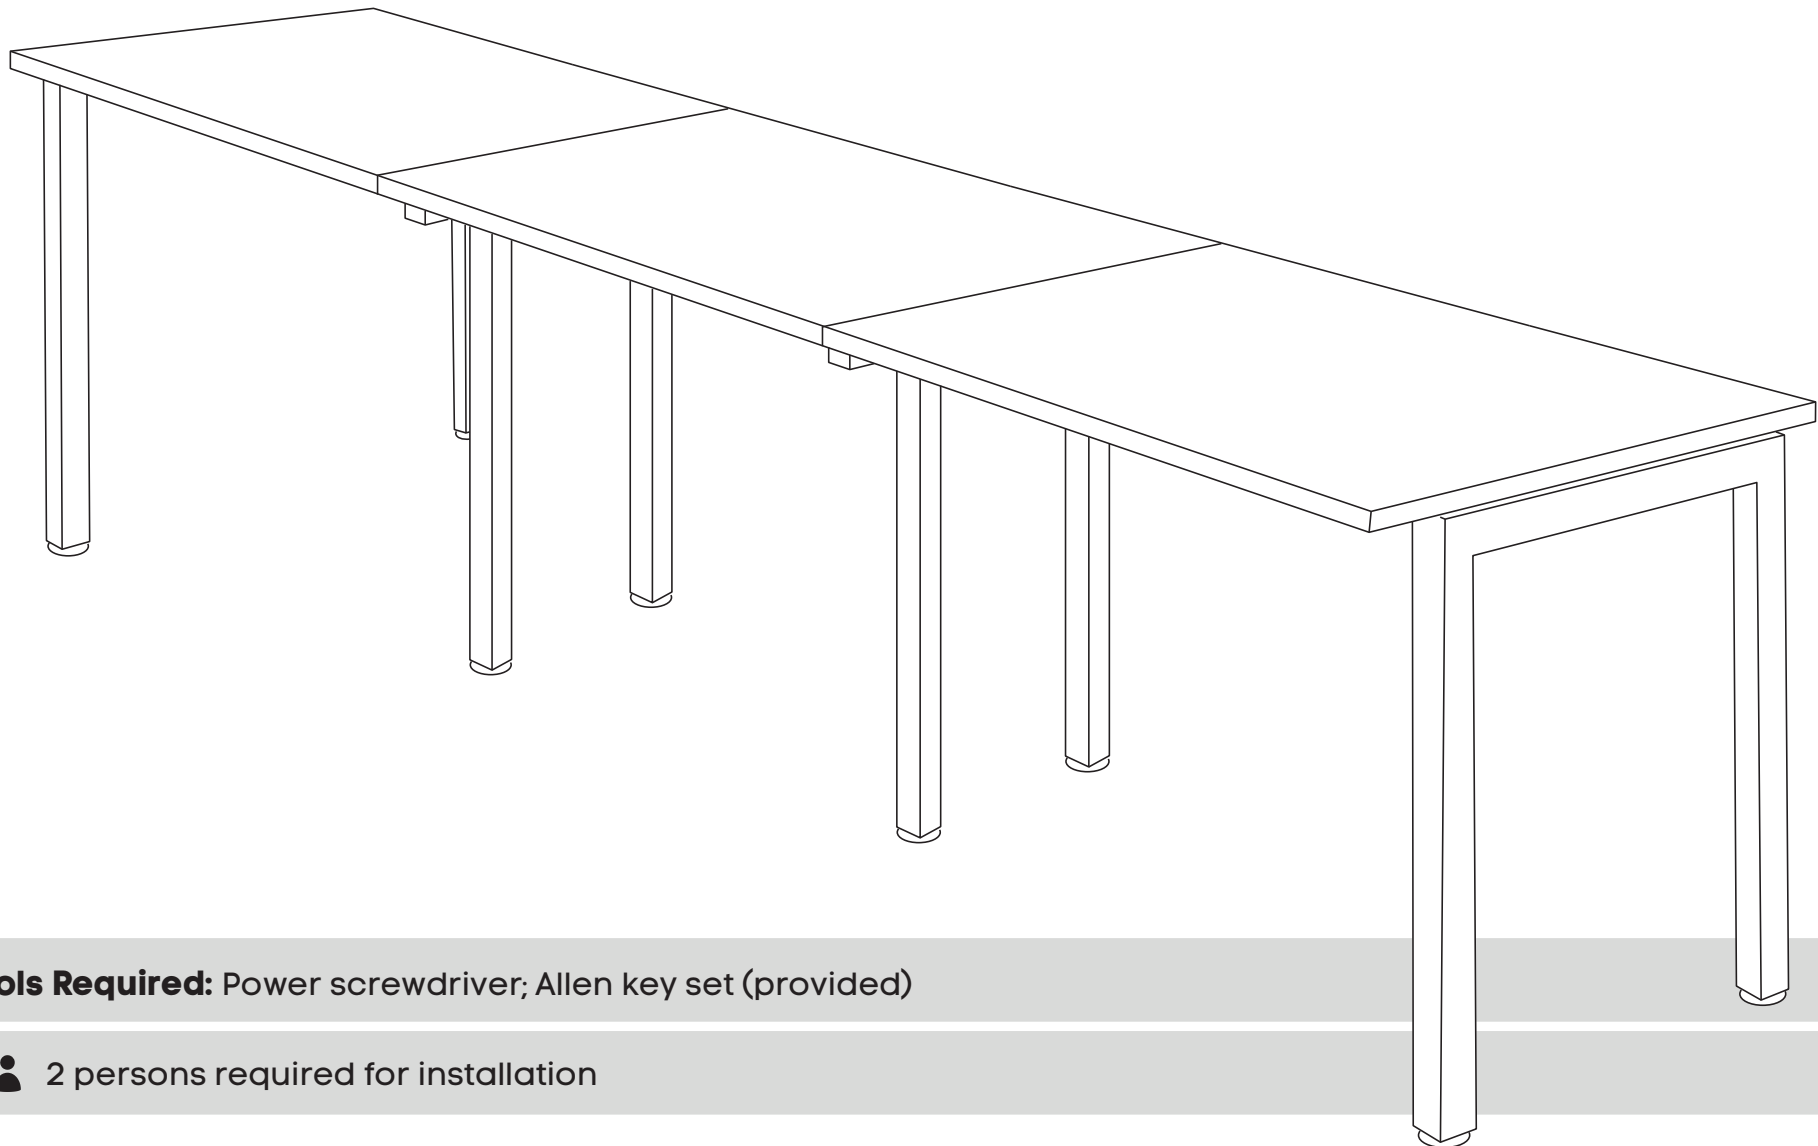
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Tools Required: Power screwdriver; Allen key set (provided)

👤👤 2 persons required for installation

Quadro Square 3P Run workstation

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

Need help!
Call us on
1300 527 665

www.jasonl.com.au

jason.l
your office furniture mate

COMPONENTS

A   Table top x3

B   Leg Quadro Square x2

C   Connector frame x2

D   Beam x3 *****

E   Plastic bracket x12

SCREWS

F   M8x20MM CSK x6

G   M8x20MM Socket head x6

H   M6x20MM Socket head x12

I   M6x30MM Socket head x12

J   Allen key x2

* Colour of the beam is always black, regardless desk frame colour.
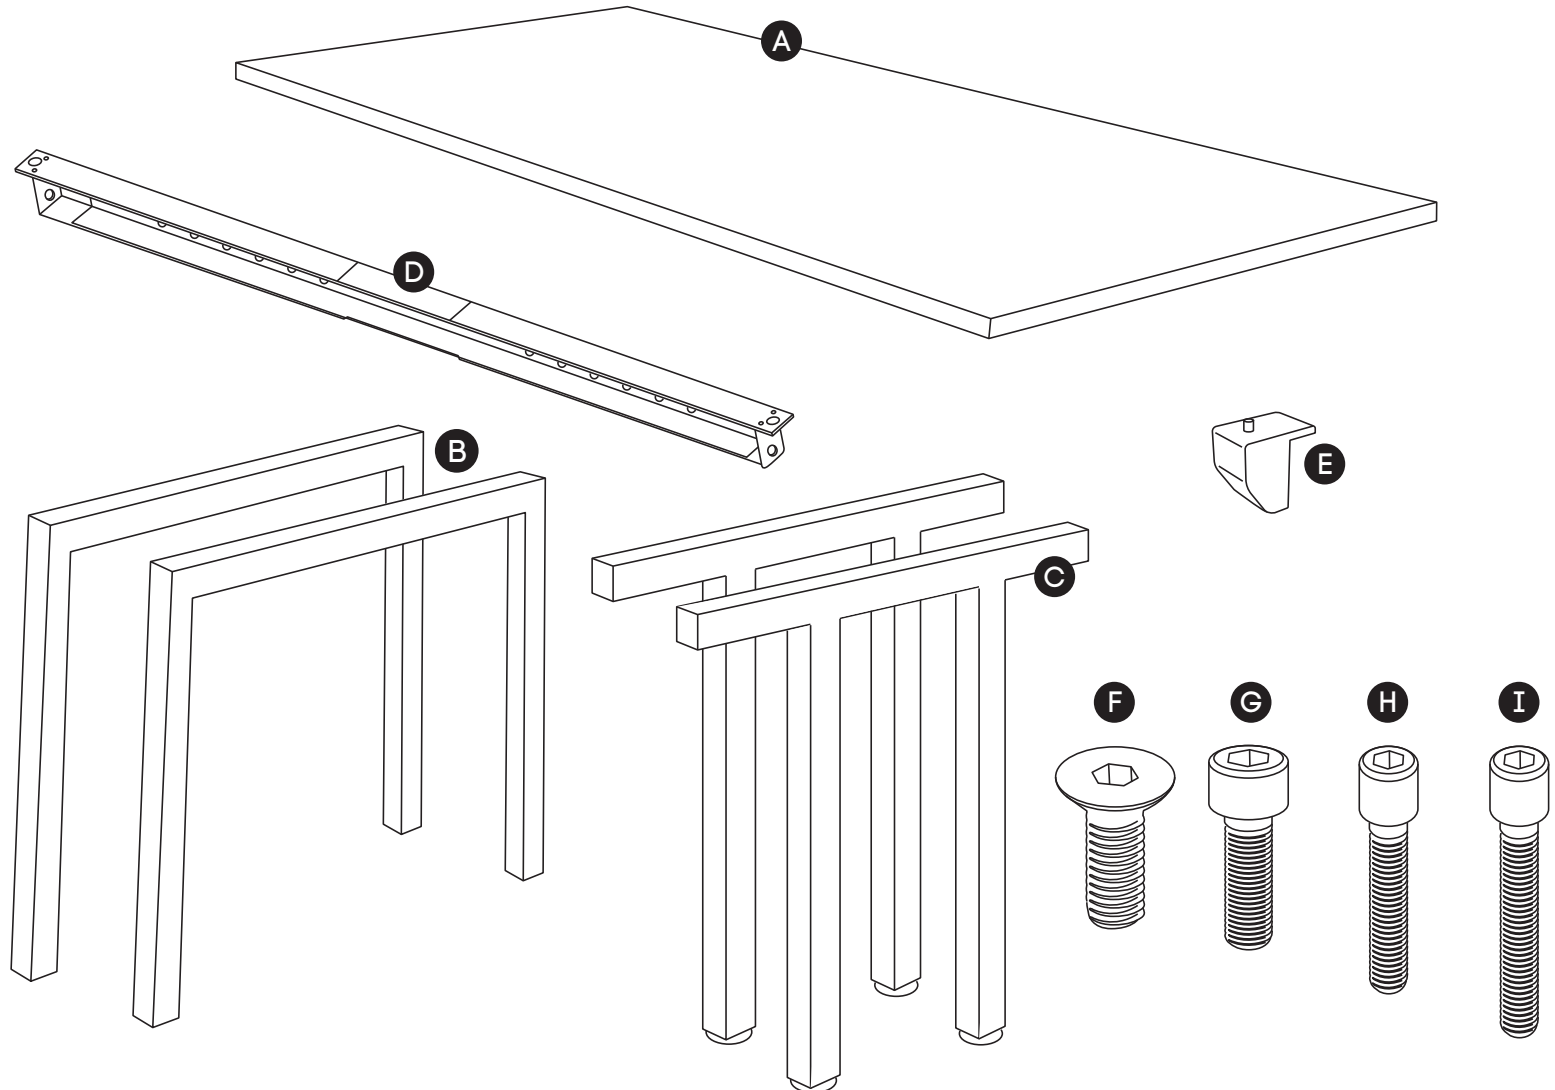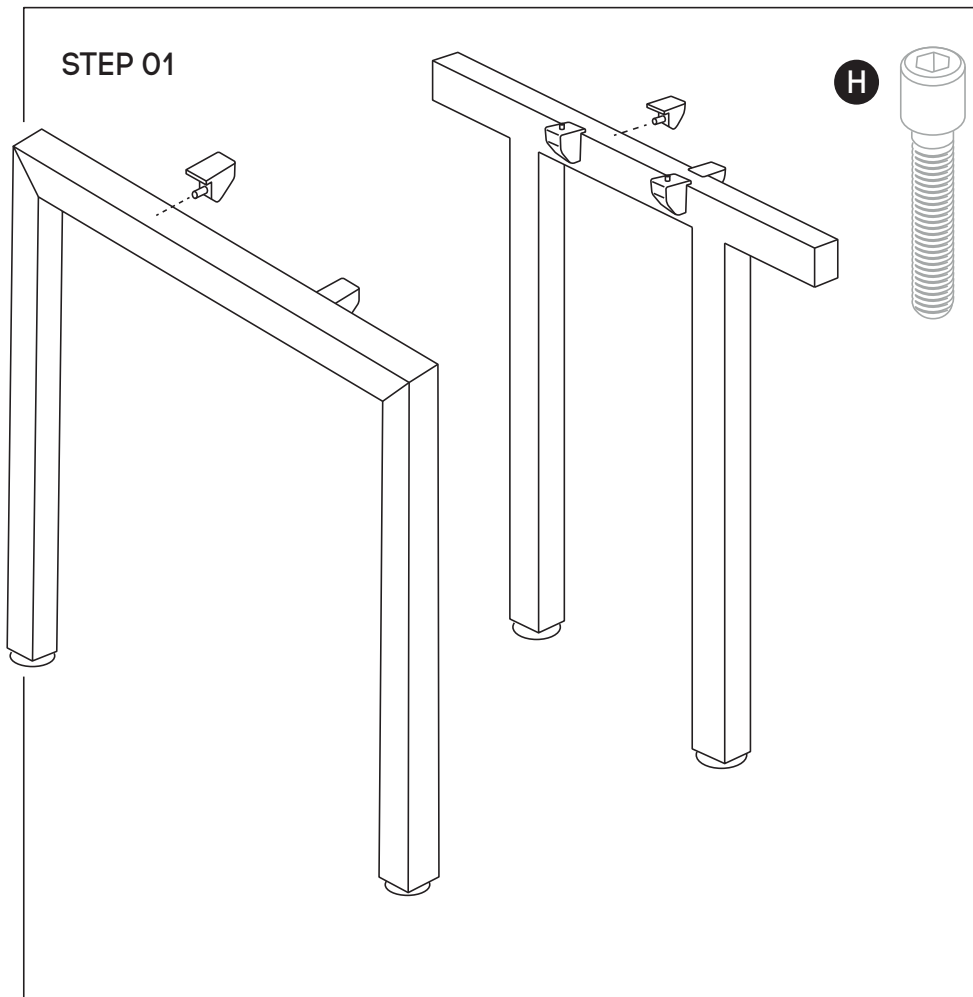
Quadro Square
3P Run workstation

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
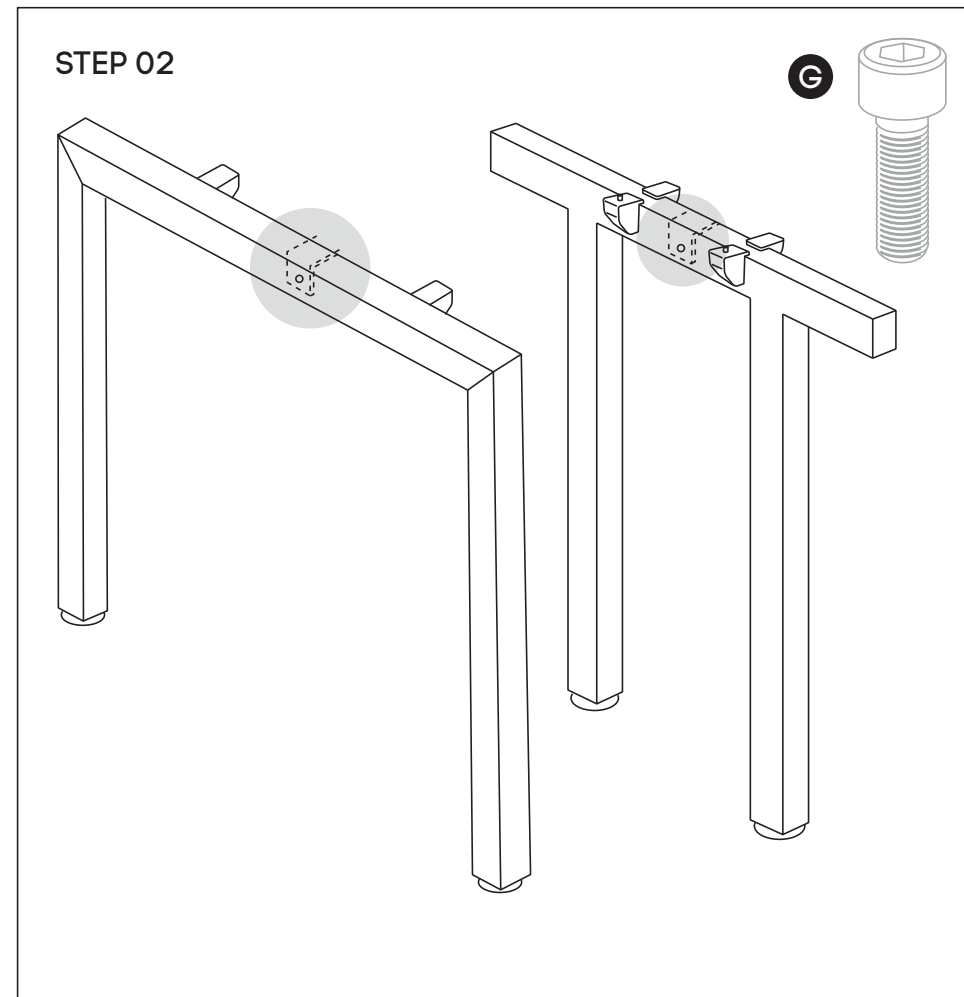your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

STEP 01

H

STEP 02

G

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)** and into Connector frame **(C)**.

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

STEP 03

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

2000
1900
1800
1700
1600
1500
1400
1300
1200

50   50

Quadro Square
3P Run workstation
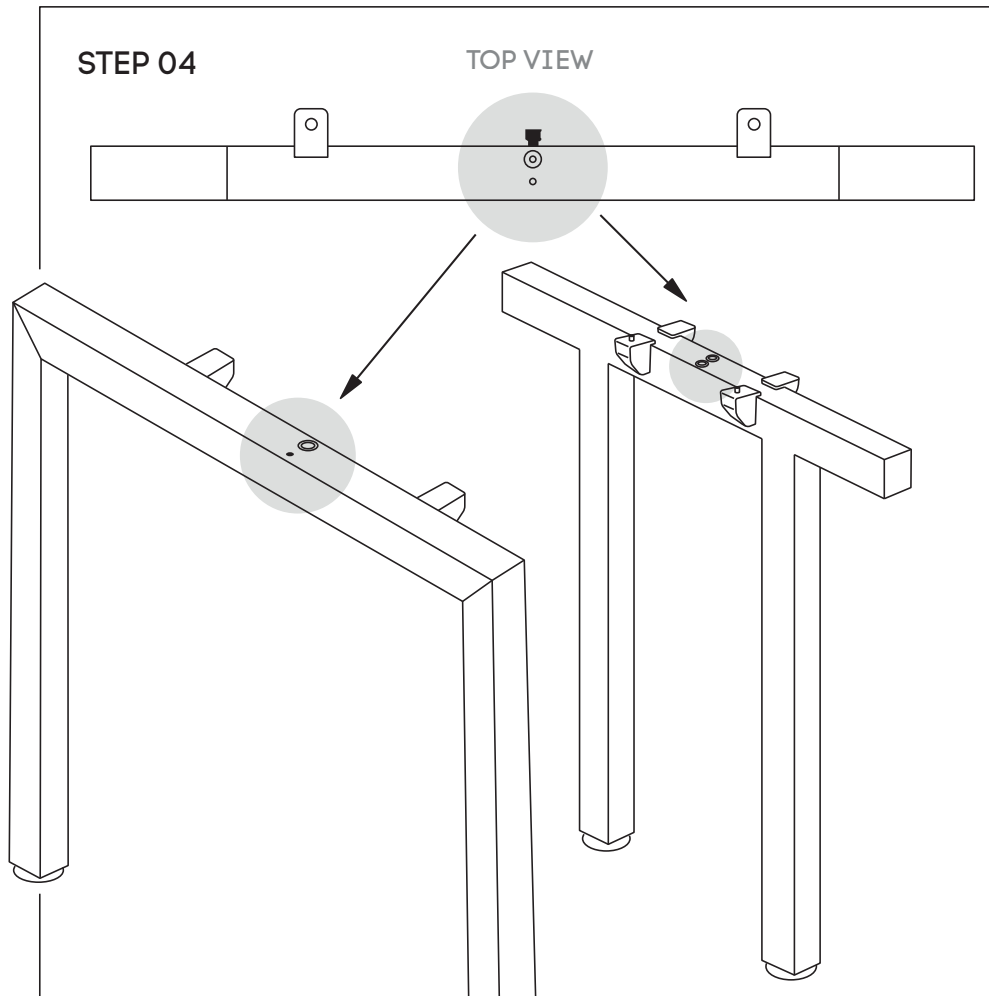
Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

STEP 04

TOP VIEW

STEP 05

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached
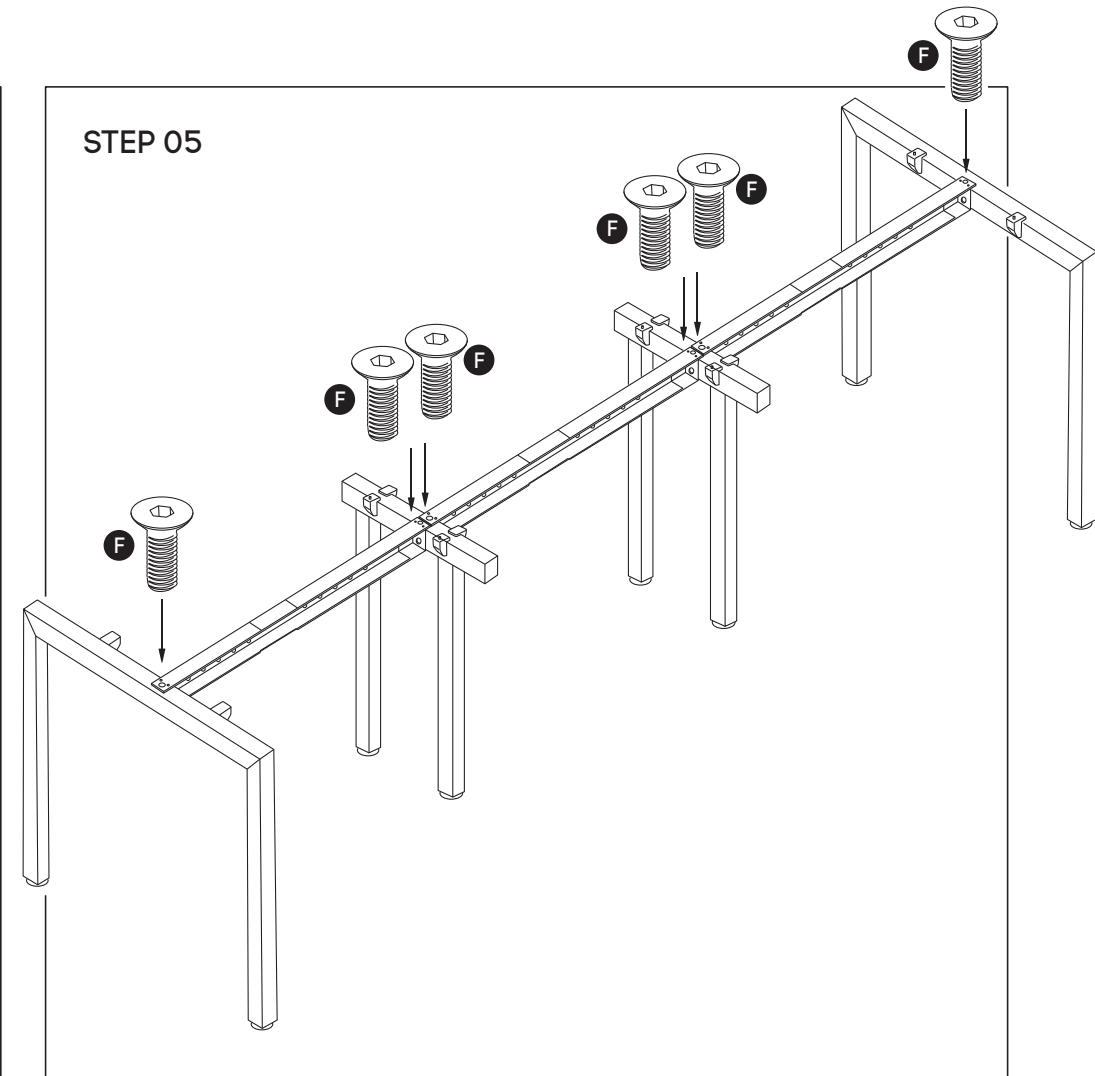
Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

Quadro Square
3P Run workstation

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm
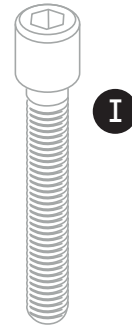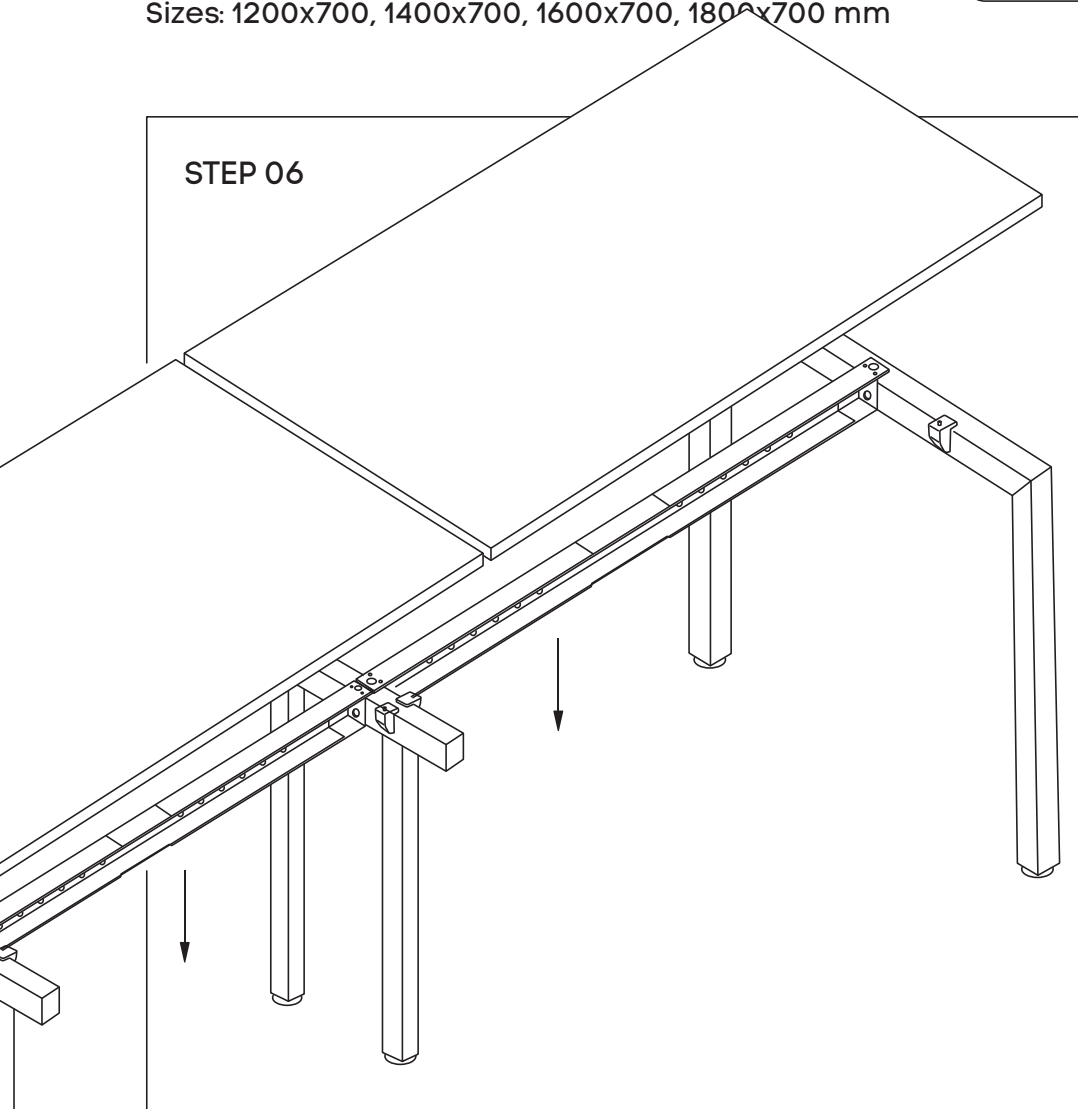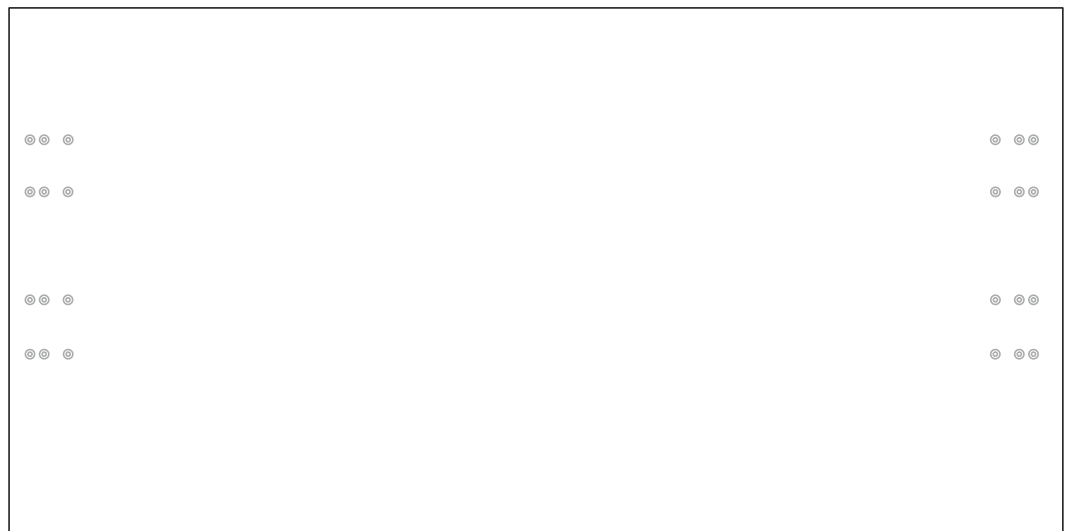
STEP 06

I

TABLE TOPS
BOTTOM VIEW

Place desktops ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(I)** sockets attach tops to frame.

www.jasonl.com.au

Need help!
Call us on
1300 527 665

jason.l
your office furniture mate

TABLE TOPS
BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

nut insert   nut insert

nut insert   nut insert

nut insert   nut insert