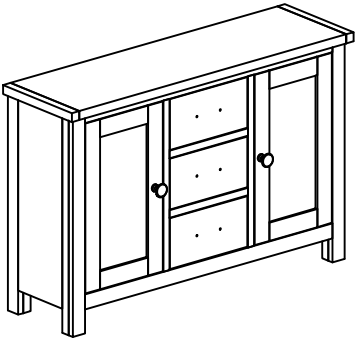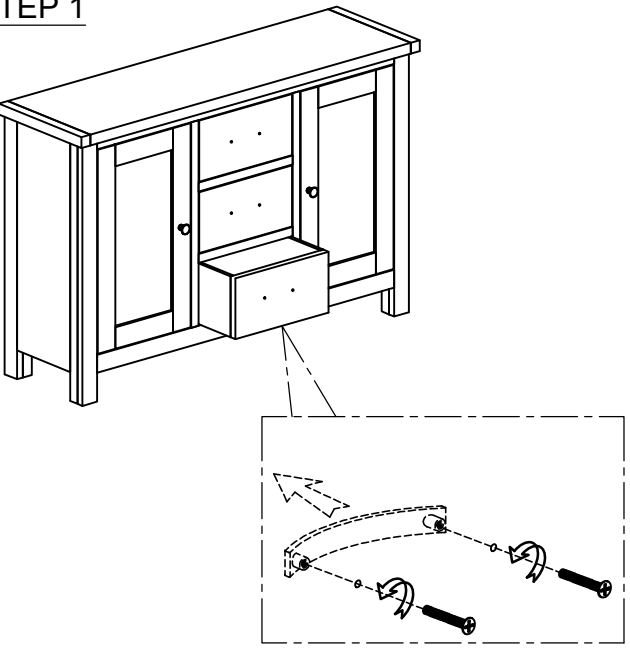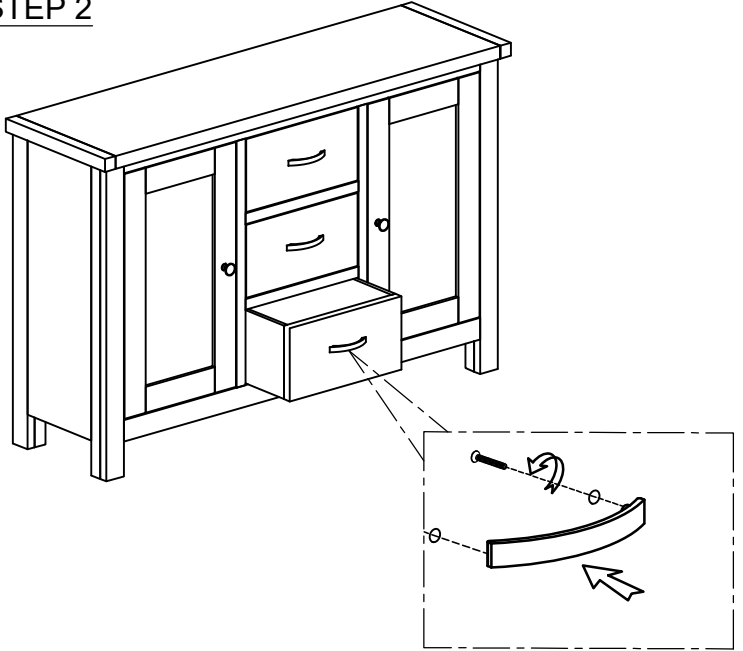# ASSEMBLY INSTRUCTION
G4696 - WIDE SIDEBOARD

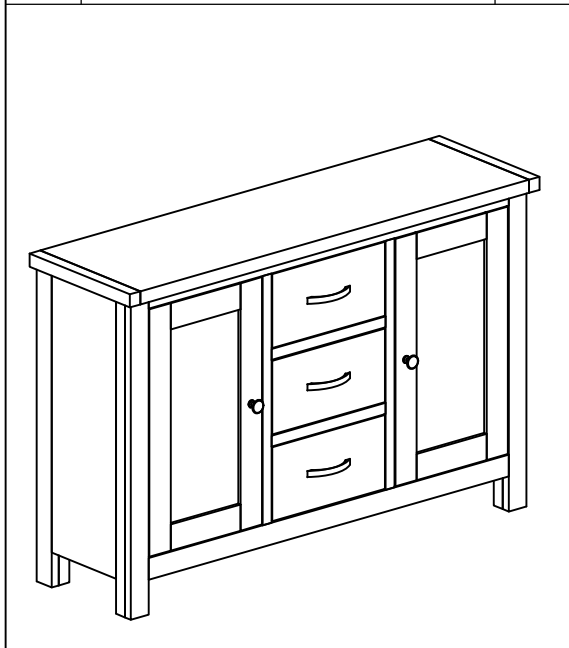| No	Name of Component	Q.ty
A		1
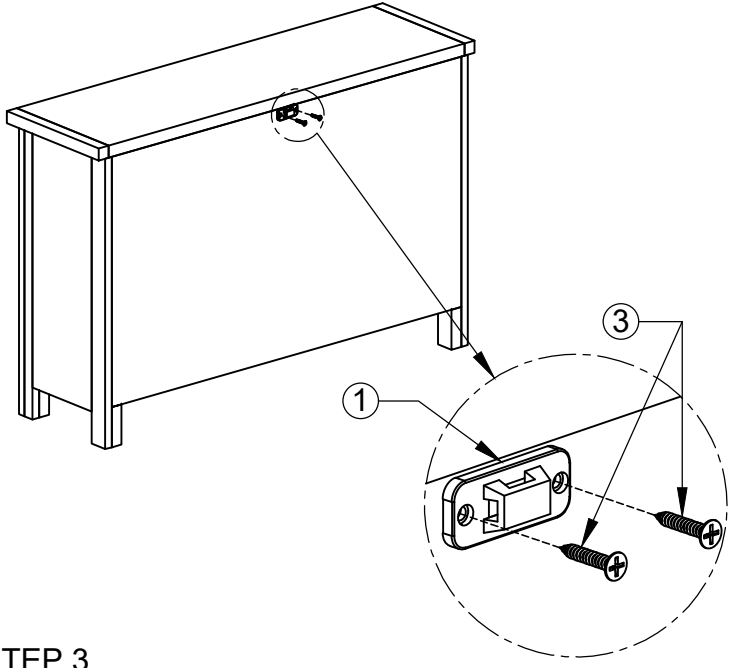
No	Name of Hardware	Q.ty
1	Bracket	2
2	Tie	1
3	Screw Ø4 x 20	2

STEP 1

STEP 2

STEP 3

FINAL