Honda
GROM
Fender Eliminator Kit
Part # 013-374
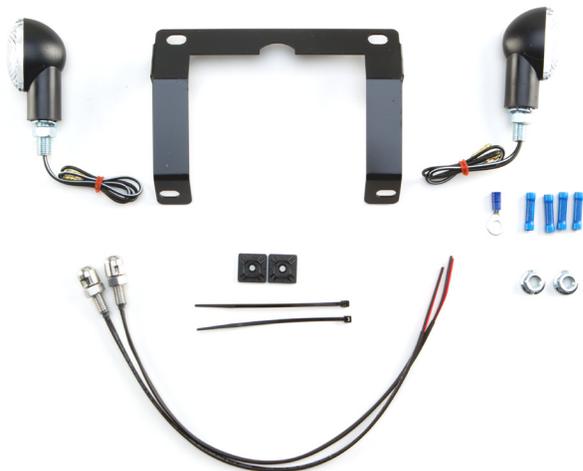
Parts List

Qty.	Description	Part Number
1	Fender Bracket	005-37404B
2	Lighted License Plate Bolt	005-8504LT2
1	Turn Signals (set of 2)	005-88T2
4	Butt Splice Connectors	005-BS1614
1	Ring Terminal	005-RT16-14
2	Zip Tie	005-ZT458B
2	Zip Tie Tab	005-ZTM4
2	8mm Flange Nut	005-FN8
1	TBR Sticker Kit	015-10212

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a center stand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

Warranty

Installation Instructions

1. Remove seat.
2. Locate fender wires and unplug from main harness.
3. Remove the 4 bolts securing the OEM fender to motorcycle.
4. Remove fender assembly.
5. Cut OEM wires on fender assembly back 8" (inches) from the connector plug.
6. Attach turn signals and plate lights to TBR fender and attach using the OEM bolts and supplied 8mm flange nuts to motorcycle.
7. Route wires through center hole and plug into main harness.
8. Attach plate light bolt wires to OEM wiring.
   Red (TBR) to Green (OEM)
   Black (TBR) to Yellow (OEM)
9. Attach TBR turn signals to OEM Wiring.
   Solid Black (TBR) to Ground (using supplied ring connector)
   Black/White (TBR) to Orange (OEM) LEFT
   Black/White (TBR) to Blue (OEM) RIGHT
10. Use zip-tie tabs and zip-ties to keep wires away from exhaust.
11. Double check all your work.
12. Re-install seat.