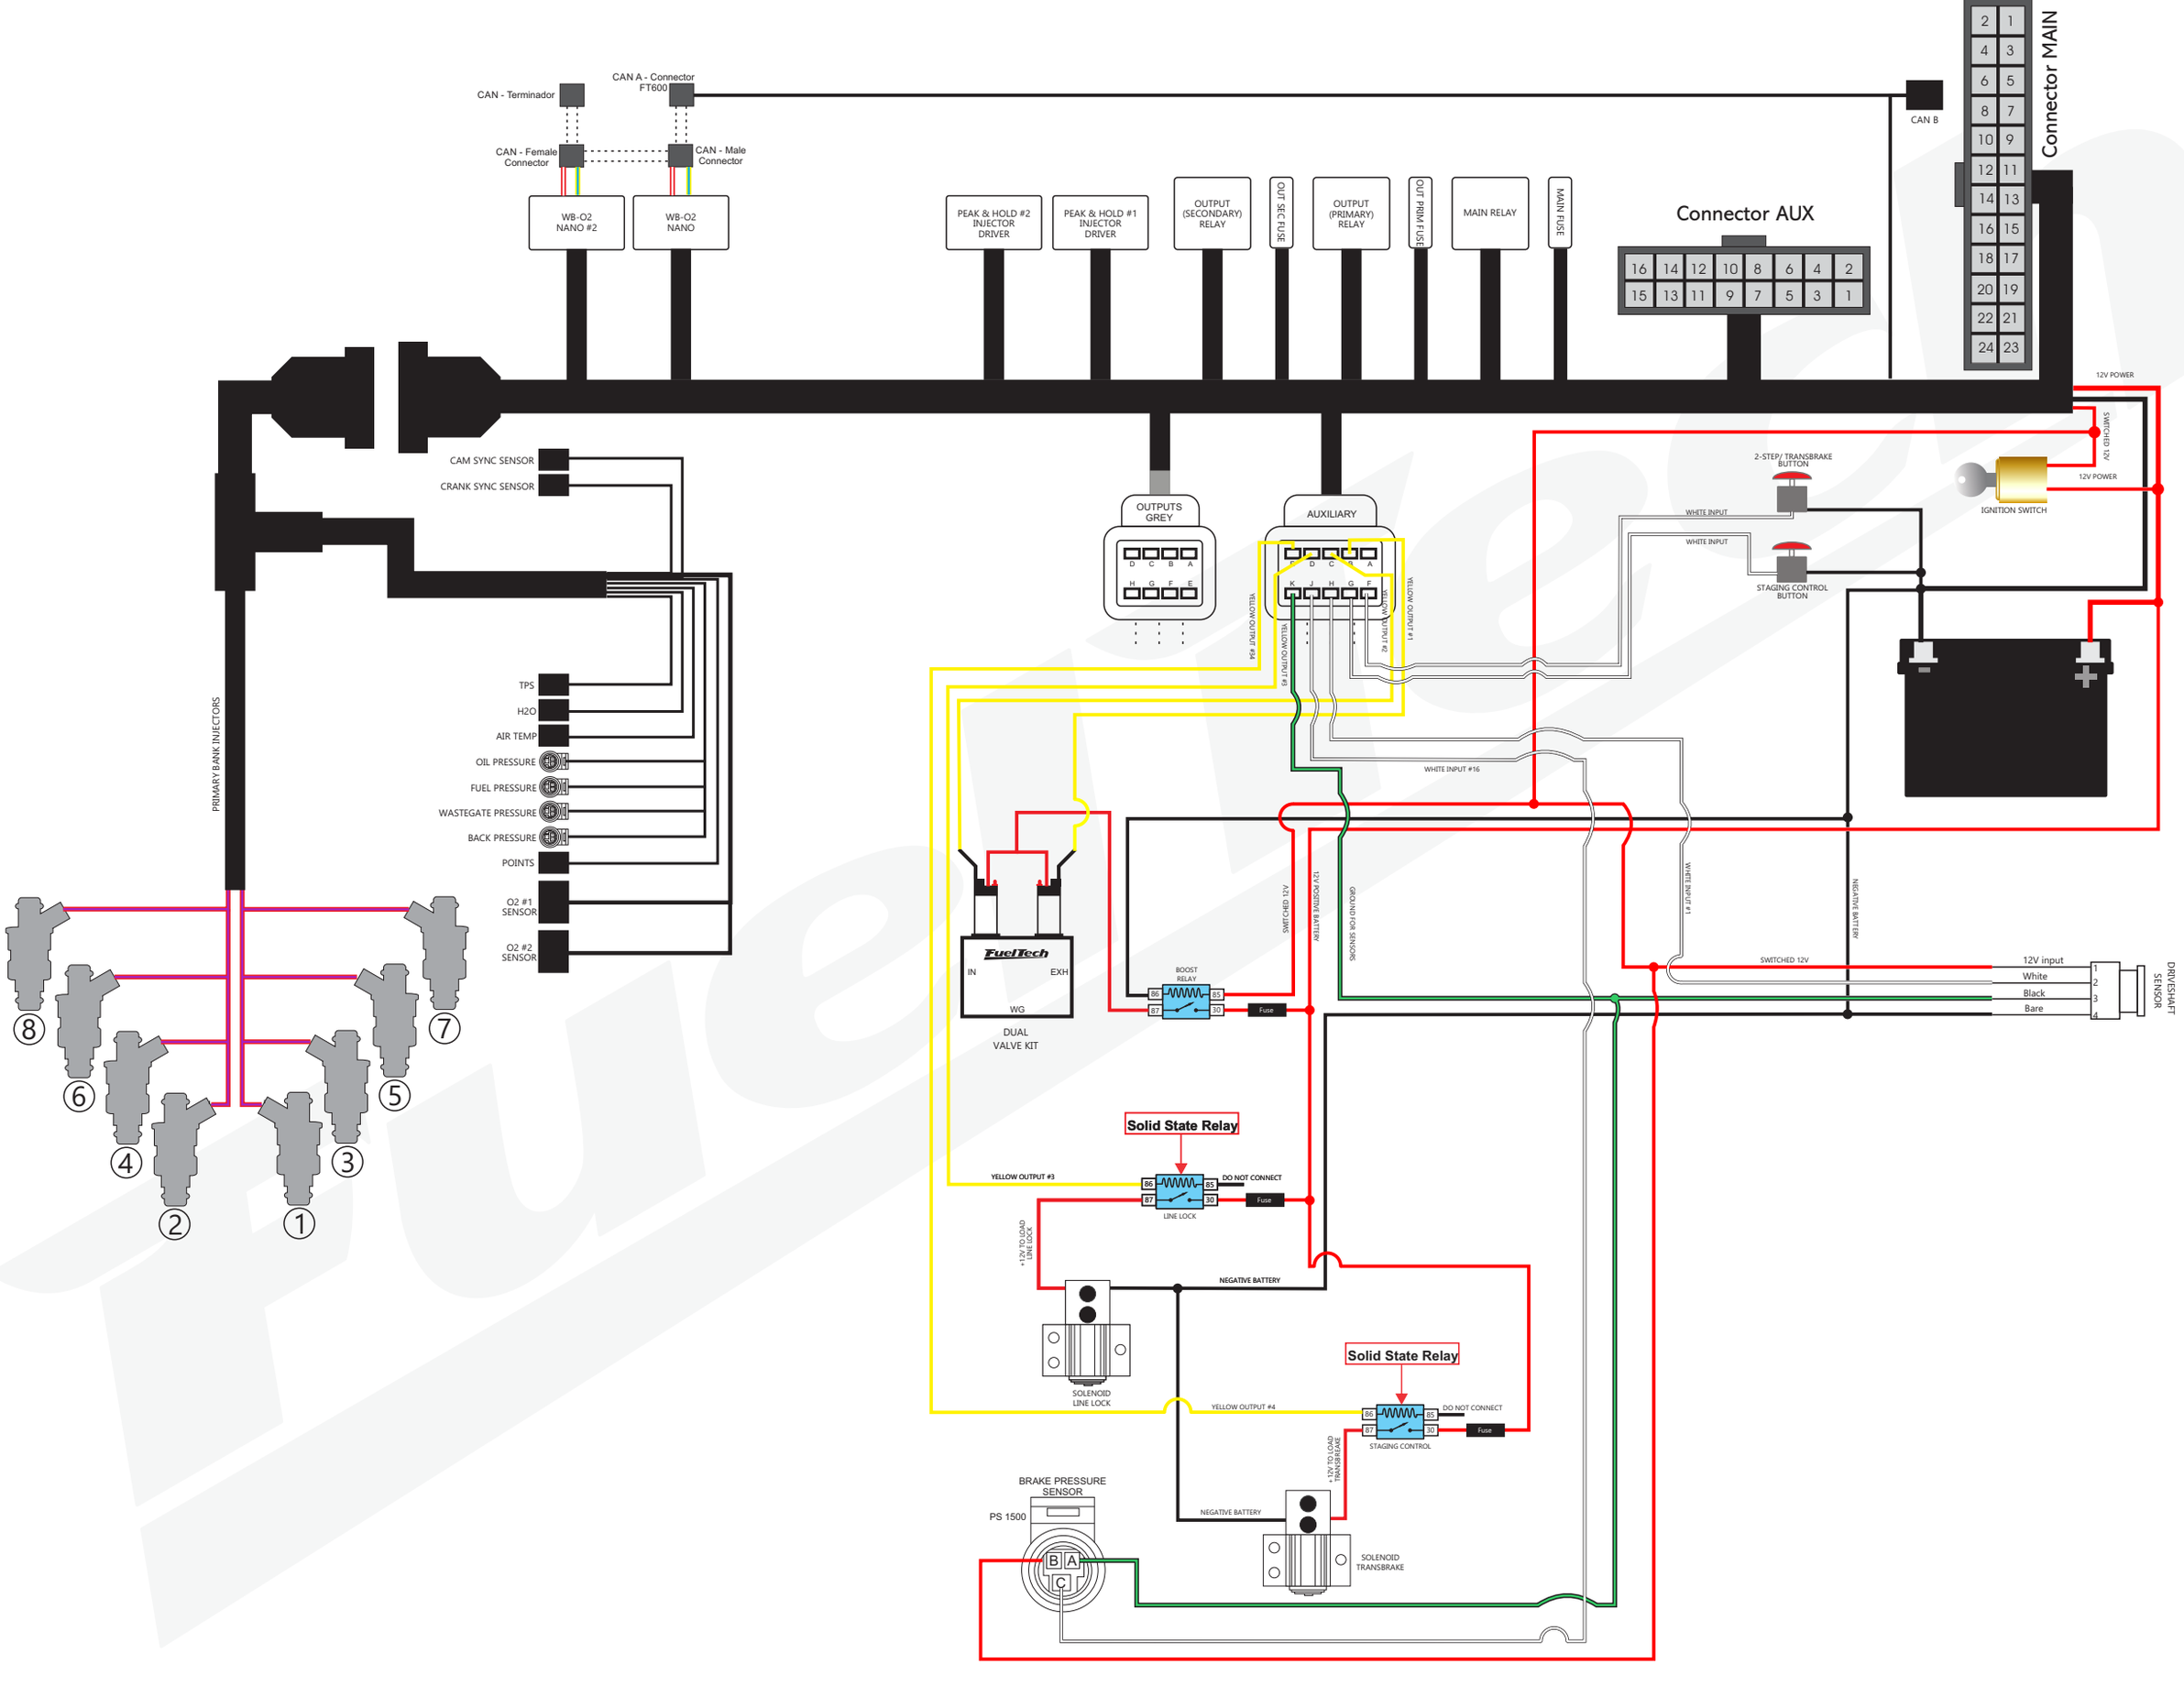
CAN - Terminador
CAN A - Connector FT600
CAN - Female Connector
CAN - Male Connector
WB-O2 NANO #2
WB-O2 NANO
PEAK & HOLD #2 INJECTOR DRIVER
PEAK & HOLD #1 INJECTOR DRIVER
OUTPUT (SECONDARY) RELAY
OUT SEC FUSE
OUTPUT (PRIMARY) RELAY
OUT PRIM FUSE
MAIN RELAY
MAIN FUSE
Connector AUX
CAN B
Connector MAIN
12V POWER
SWITCHED 12V
IGNITION SWITCH
2-STEP/ TRANSBRAKE BUTTON
STAGING CONTROL BUTTON
WHITE INPUT
CAM SYNC SENSOR
CRANK SYNC SENSOR
TPS
H2O
AIR TEMP
OIL PRESSURE
FUEL PRESSURE
WASTEGATE PRESSURE
BACK PRESSURE
POINTS
O2 #1 SENSOR
O2 #2 SENSOR
PRIMARY BANK INJECTORS
OUTPUTS GREY
AUXILIARY
YELLOW OUTPUT #1
YELLOW OUTPUT #2
YELLOW OUTPUT #3
YELLOW OUTPUT #4
WHITE INPUT #16
FuelTech
IN
EXH
WG
DUAL VALVE KIT
BOOST RELAY
Fuse
SWITCHED 12V
12V POSITIVE BATTERY
GROUND (CASE SENSORS)
WHITE INPUT #1
NEGATIVE BATTERY
12V input
White
Black
Bare
DRIVESHAFT SENSOR
Solid State Relay
DO NOT CONNECT
LINE LOCK
+12V TO LOAD LINE LOCK
NEGATIVE BATTERY
SOLENOID LINE LOCK
STAGING CONTROL
+12V TO LOAD TRANSBRAKE
BRAKE PRESSURE SENSOR
PS 1500
SOLENOID TRANSBRAKE