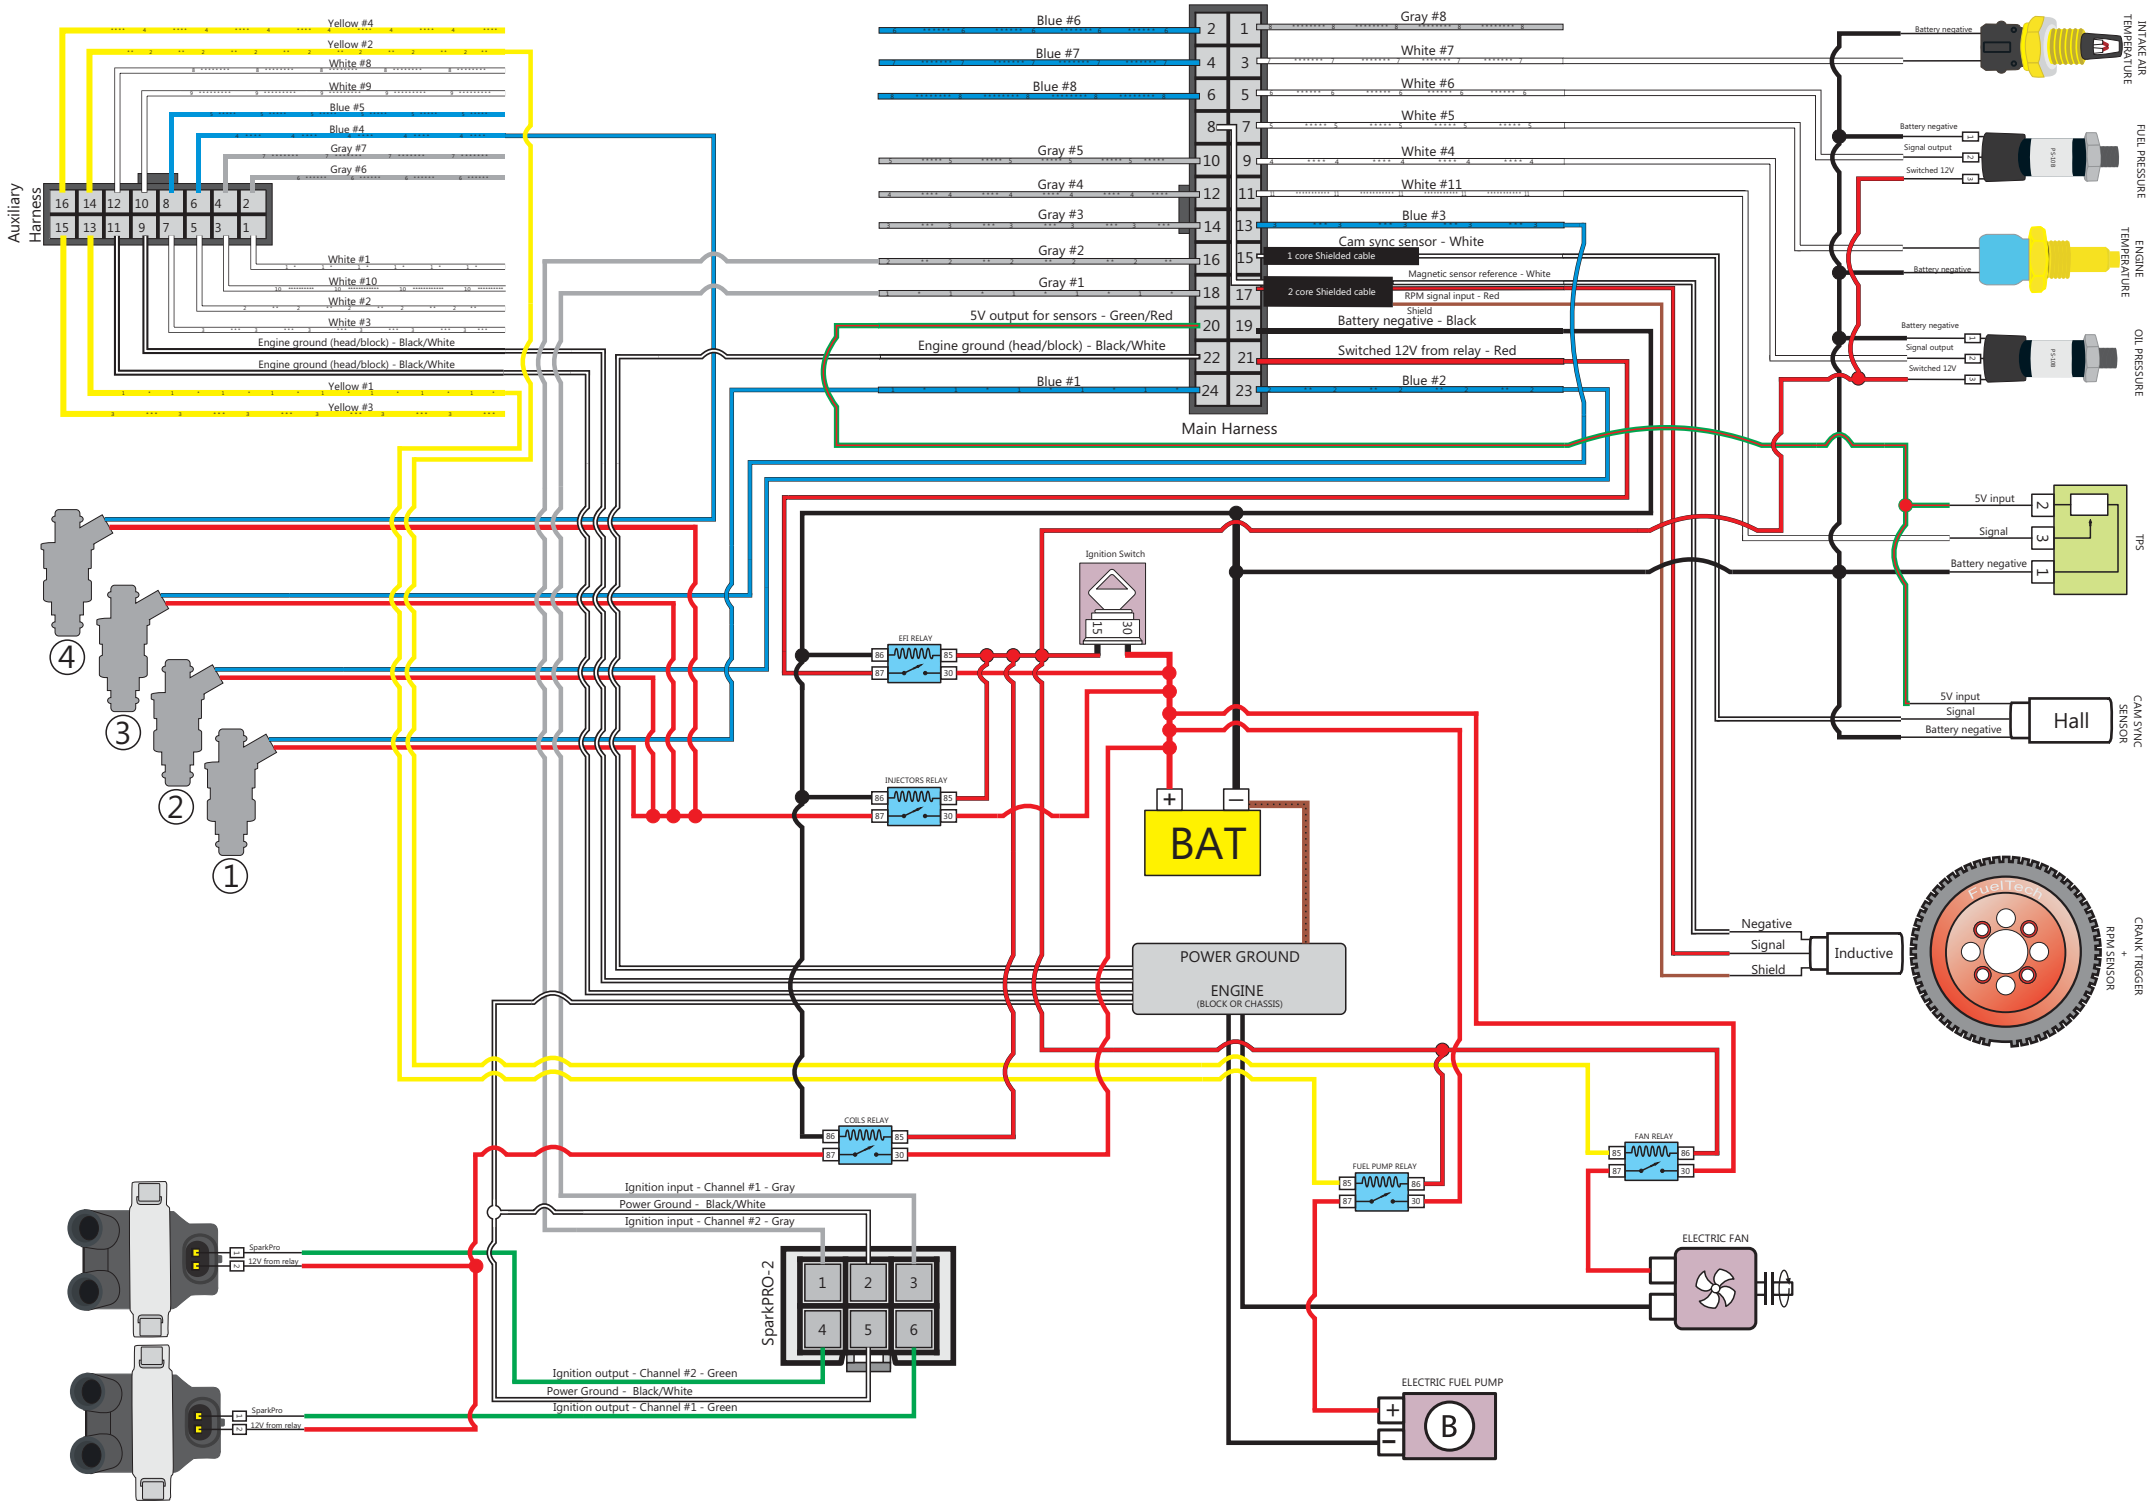
Auxiliary Harness
Yellow #4
Yellow #2
White #8
White #9
Blue #5
Blue #4
Gray #7
Gray #6
White #1
White #10
White #2
White #3
Engine ground (head/block) - Black/White
Engine ground (head/block) - Black/White
Yellow #1
Yellow #3
Blue #6
Blue #7
Blue #8
Gray #5
Gray #4
Gray #3
Gray #2
Gray #1
5V output for sensors - Green/Red
Engine ground (head/block) - Black/White
Blue #1
Gray #8
White #7
White #6
White #5
White #4
White #11
Blue #3
Cam sync sensor - White
1 core Shielded cable
Magnetic sensor reference - White
2 core Shielded cable
RPM signal input - Red
Shield
Battery negative - Black
Switched 12V from relay - Red
Blue #2
Main Harness
INTAKE AIR TEMPERATURE
Battery negative
FUEL PRESSURE
Signal output
Switched 12V
ENGINE TEMPERATURE
OIL PRESSURE
TPS
5V input
Signal
Battery negative
CAM SYNC SENSOR
Hall
CRANK TRIGGER + RPM SENSOR
Negative
Signal
Shield
Inductive
Ignition Switch
EFI RELAY
INJECTORS RELAY
BAT
POWER GROUND
ENGINE
(BLOCK OR CHASSIS)
COILS RELAY
FUEL PUMP RELAY
FAN RELAY
ELECTRIC FAN
ELECTRIC FUEL PUMP
SparkPRO-2
Ignition input - Channel #1 - Gray
Power Ground - Black/White
Ignition input - Channel #2 - Gray
Ignition output - Channel #2 - Green
Power Ground - Black/White
Ignition output - Channel #1 - Green
SparkPro
12V from relay