FAQ's

Can these units be cut?

Yes, by using a saw the units can be cut. Be sure to keep at least one connection point.

What size gravel do I need?

¾" clean(washed) angular gravel is recommended for base.
½" or smaller gravel is recommended for the unit's aggregate fill.

What size base do I need?

If used for driving on, 2"-3" of gravel base under units. If used for only pedestrian traffic, no base is needed.

Do I need to anchor the units?

Anchoring units is only necessary on slopes, if units are not embedded within the ground or areas where vehicle tires turn often. We recommend using Vodaland EasyPave/HexPave anchors or J-Hook rebar anchors.

Can I snow plow over these?

Yes, simply ensure the plow is set to the correct height, not digging into the units.

Thank you for your purchase

If you're satisfied with our product, we would really appreciate it if you took a quick moment to leave a review!

If you have any problems with your order or have questions, please contact us directly to resolve your issue!

📞 **314-717-1551**

Additional products shown are:

Agro Geo Textile

Contacts:

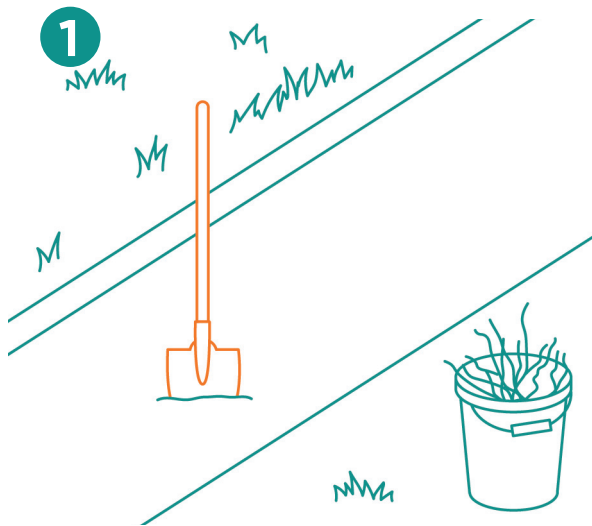📍 3120 Riverport Tech Center Dr. Maryland Heights MO 63043-4825

Social Media handles:

▶ youtube.com/@vodalandusa

📷 instagram.com/vodaland_usa
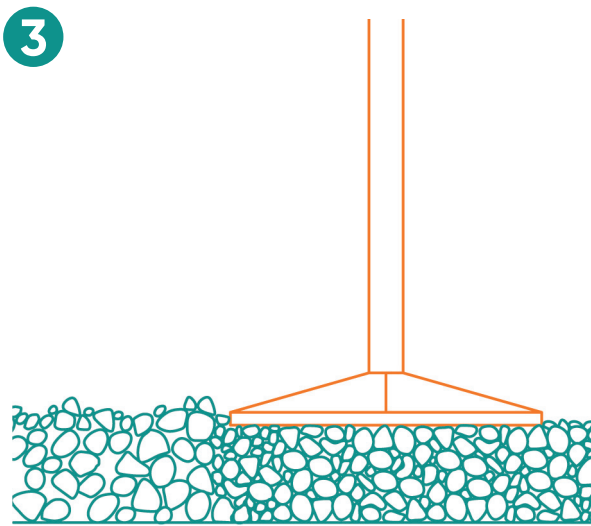
🌐 vodaland-usa.com

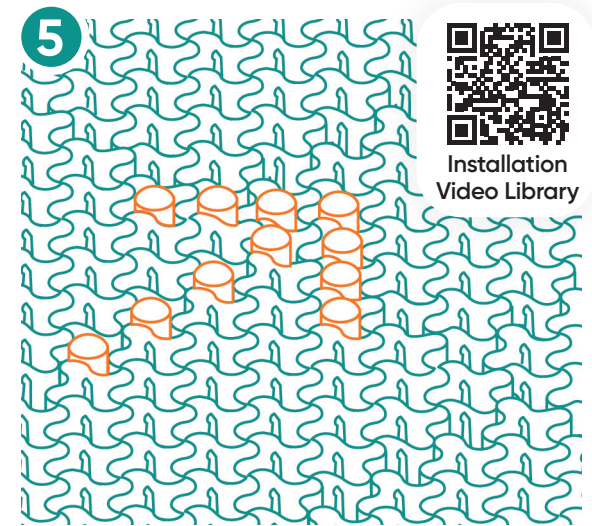f facebook.com/vodalandUSA

Pavers Installation Guide

VODALAND

1

Dig to the depth needed for your type of installation (in FAQs). Smooth out installation area. Remove any rocks or debris.

2

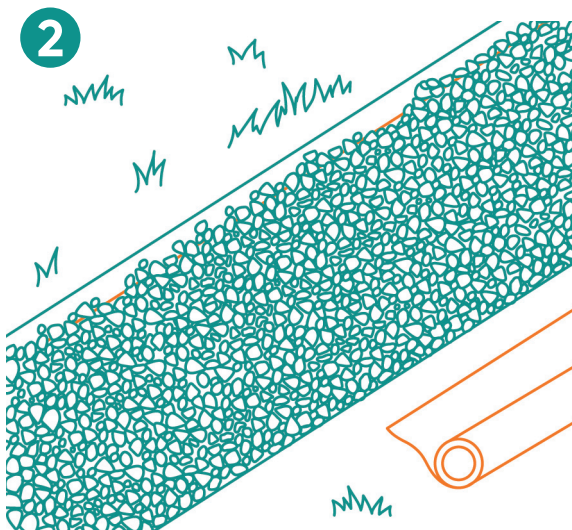Place GeoTextile or weed barrier down and add base layer of gravel.

3

Compact base with either hand tamp, vehicle or plat compressor.
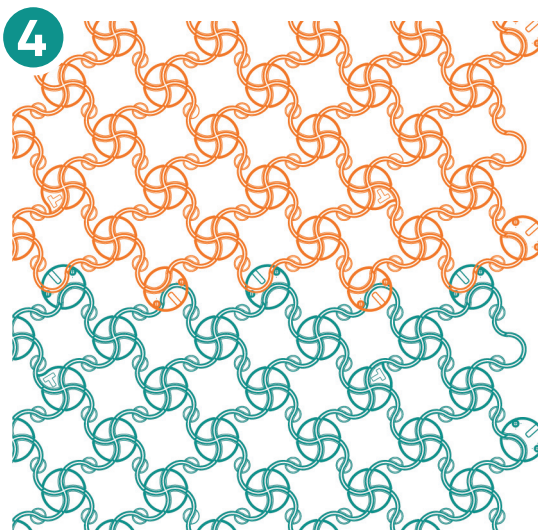
4

Connect grid over base, ensuring every unit is in the same pattern.

5

Installation Video Library

Anchor units and/or add easy spots where needed.
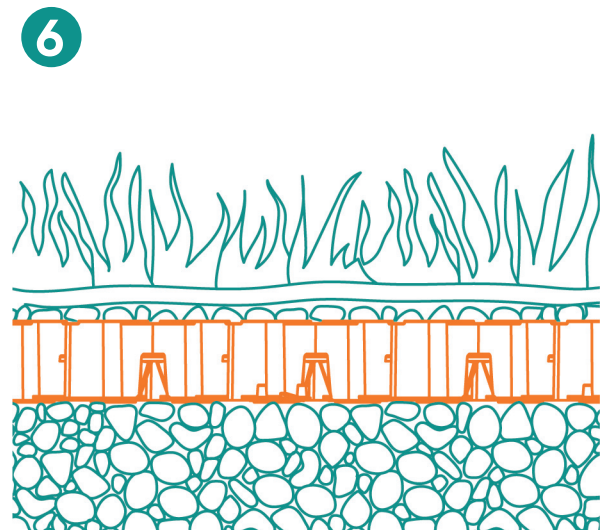
6

Add aggregate fill to units, (soil, sand, gravel, etc.). Then lightly compact area. Add seed or sod on top if growing grass.