Installation Manual

Date: February 27, 2023 12:57 PM

BLAZE-PRO Series

Specifications

	50W*	100W*	200W*
Power:	20/30/50W	50/70/100W	100/150/200W
CCT:	3000K/4000K/5500K	3000K/4000K/5500K	3000K/4000K/5500K
Lumen (±5%):	5060/5470/5360lm	10750/12150/11550lm	21970/24380/23470lm
Net Weight	0.72kg	1.28kg	2.60kg
Max Projected Area	$0.020m^2$	$0.045m^2$	$0.087m^2$

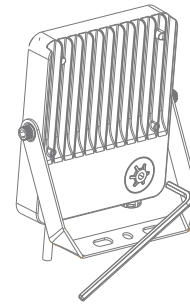|			
Dimmable:	No	IP Rating:	IP66
Input Voltage:	240V	Beam Angle:	120°
CRI:	≥70	Lifespan:	20,000hrs
CCT (Switchable):	3000K- 4000K-5500K	Power Factor:	≥0.9

CCT and Power selectable by DIP switch
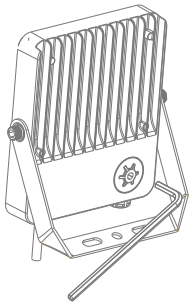
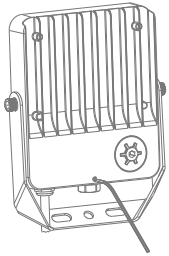Use Allen key (5mm) to unscrew the dip switch CCT and power selectable waterproof cover.
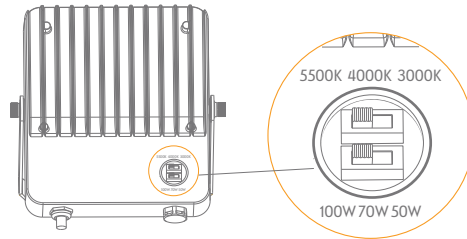
Toggle the switch to the desired colour temperature and power. (Please note don't operate the switch while power is on.)
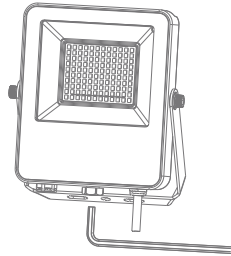
Use Allen key (5mm) to tighten screw on the waterproof ring and cover.

Note:
- The lamp must be installed by professional electrician
- Ensure the power supply is switched off before fitting this product
- Do not touch the lamp when in use
- Keep away from hot steam and corrosive gas

29-31 Richland St. Kingsgrove. Sydney NSW 2208 Australia

Phone: 02 9554 9600 | Fax: 02 9554 9433

enquiries@domuslighting.com.au | www.domuslighting.com.au
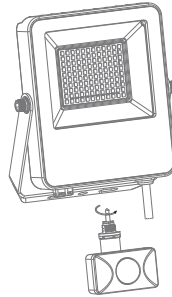
Installation Manual
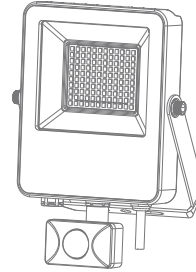
PIR sensor installation

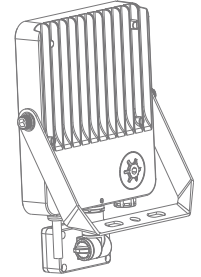Loosen the M4 set screw with the 2mm Allen key.
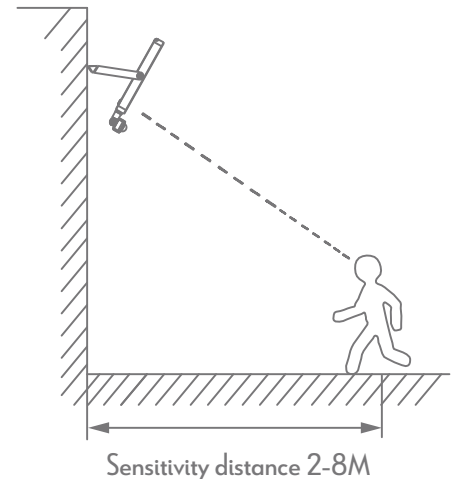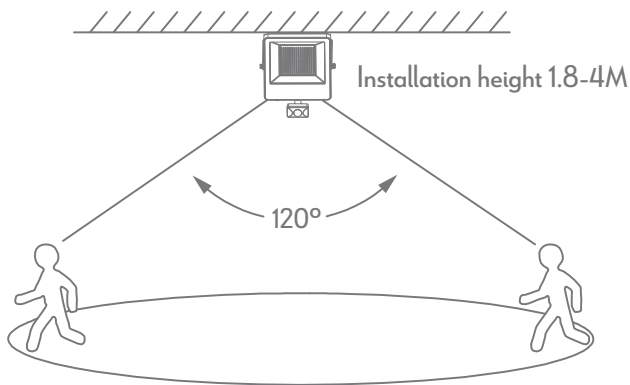
Use a 5mm Allen key to remove the waterproof cover.

Screw the sensor clockwise into the hole.

Adjust the direction of the sensor.

Tighten the M4 set screw with a wrench.

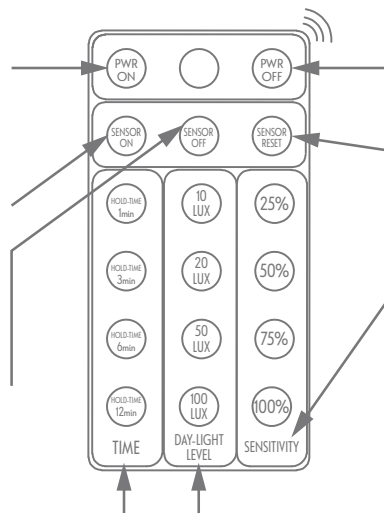Installation height 1.8-4M

120°

Sensitivity distance 2-8M

Press to power On the light for 15s by default, then enter the last saved parameter state to be commanded.

Press the sensor On button enter the last saved parameter state to be commanded.

Press to turn Off

30s Restore factory settings button, default delay time 30s, illumination 30 lux, sensitivity 50%.

Press the sensor Off button to turn on the constant light mode.

100% Sensitivity settings, a total of four options, 25%, 50%, 75% & 100%. Press the button and the light flashes once.

12min Delay time setting, a total of four options, 1min, 3min, 6min & 12min. Press the button and the light flashes once.
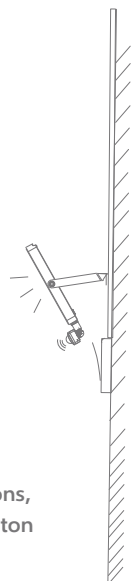
Illumination value settings, a total of four options, 10 Lux, 20 Lux, 50 Lux, 100 Lux. Press the button and the light flashes once.

PWR ON		PWR OFF
SENSOR ON	SENSOR OFF	SENSOR RESET
HOLD-TIME 1min	10 LUX	25%
HOLD-TIME 3min	20 LUX	50%
HOLD-TIME 6min	50 LUX	75%
HOLD-TIME 12min	100 LUX	100%
TIME	DAY-LIGHT LEVEL	SENSITIVITY

Note: -The lamp must be installed by professional electrician
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use
-Keep away from hot steam and corrosive gas