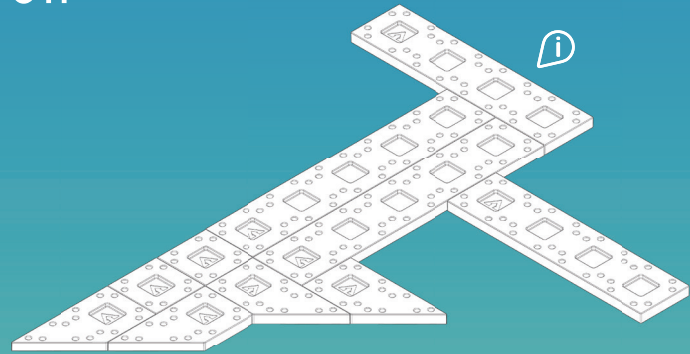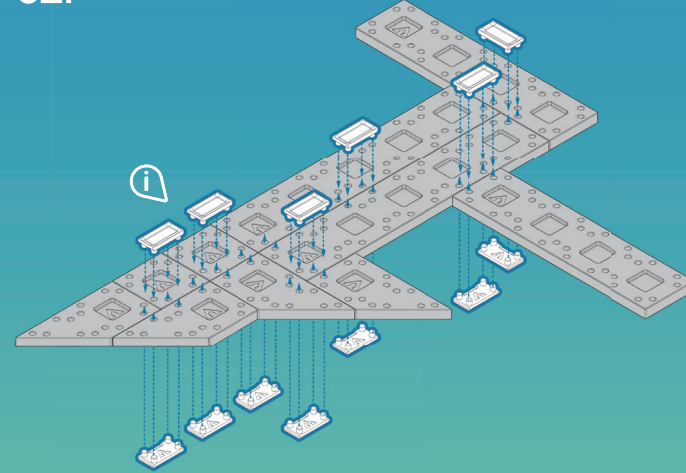# Assembly Instructions

01.

02.

03.
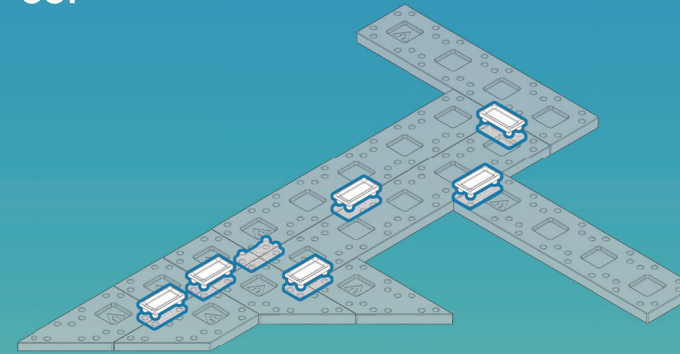
04.

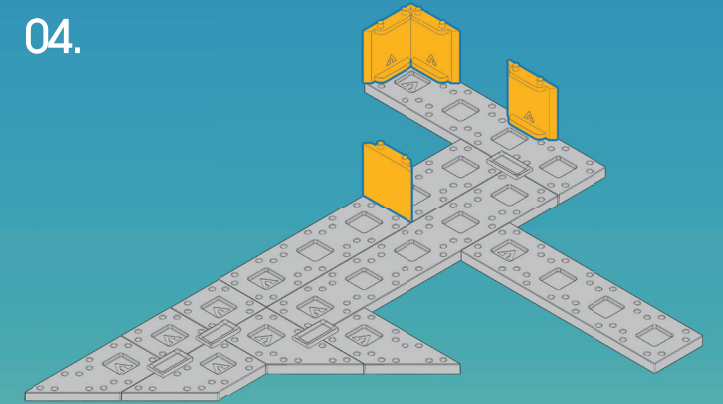05.
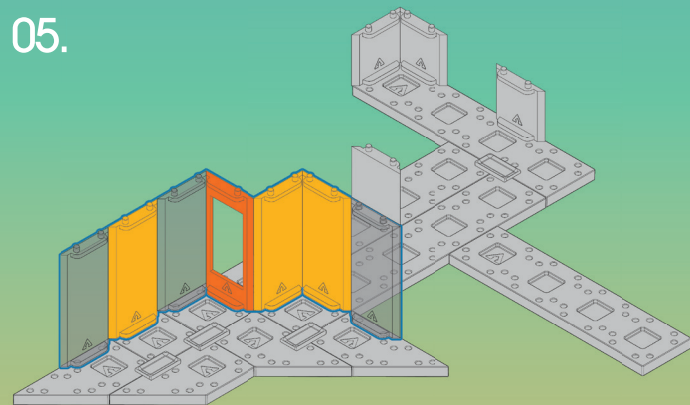
06.
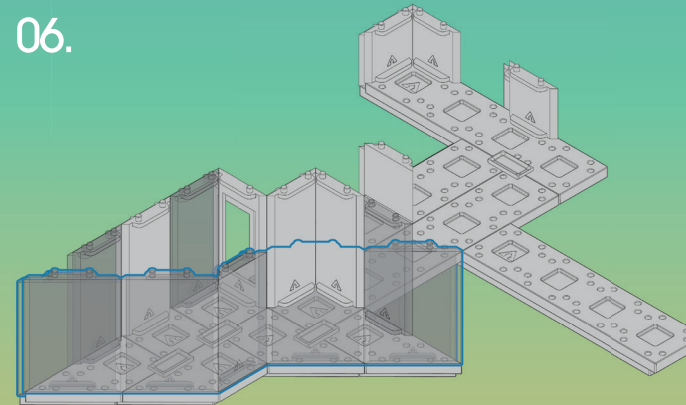
07.
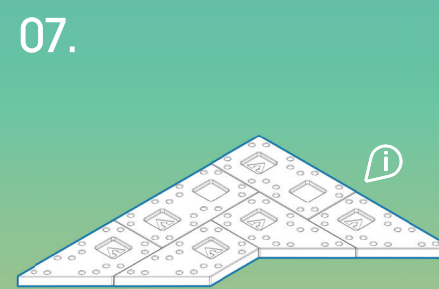
08.
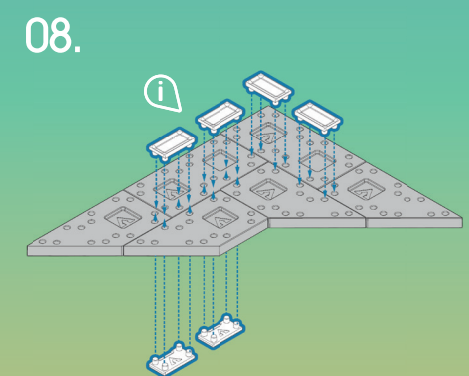
09.
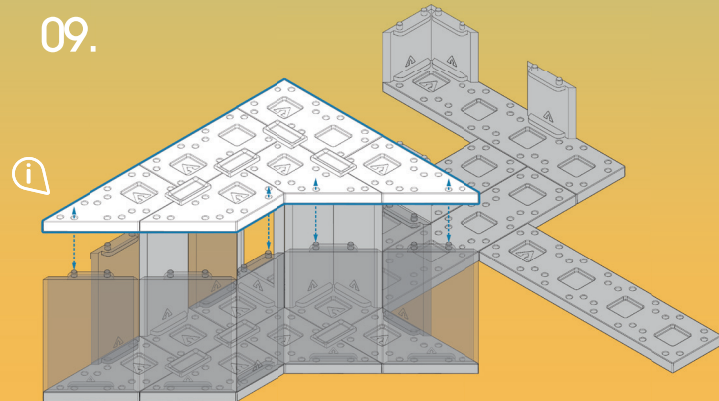
10.
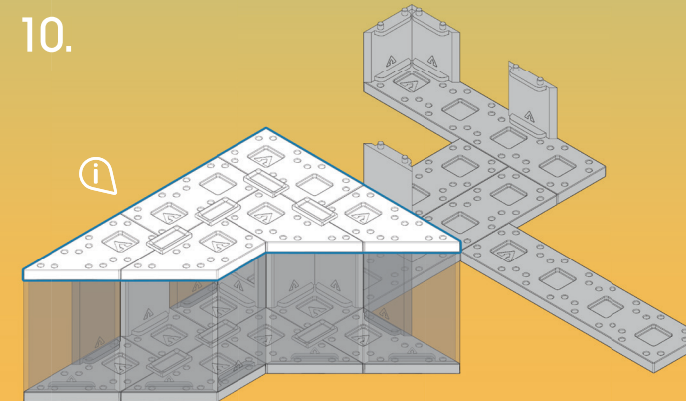
11.
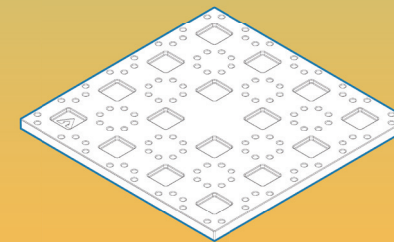
12.
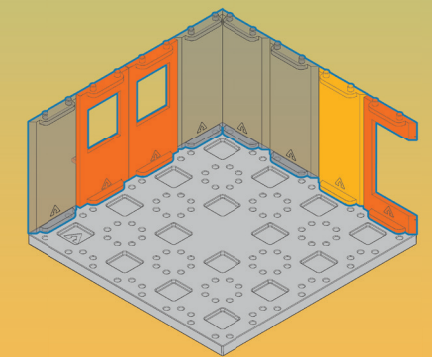
Assembly Instructions

13.

14.

15.

16.

17.

18.

Exploded View

MADE IN IRELAND

ARCKIT®
IMAGINE IT. BUILD IT.

14 - Make sure to align walls before loosely applying floor panel on top. Take you time to insert the wall pegs into the correct floor panel holes. 15.1 - Once pegs and holes are aligned, take the model in your hands and squeeze aroun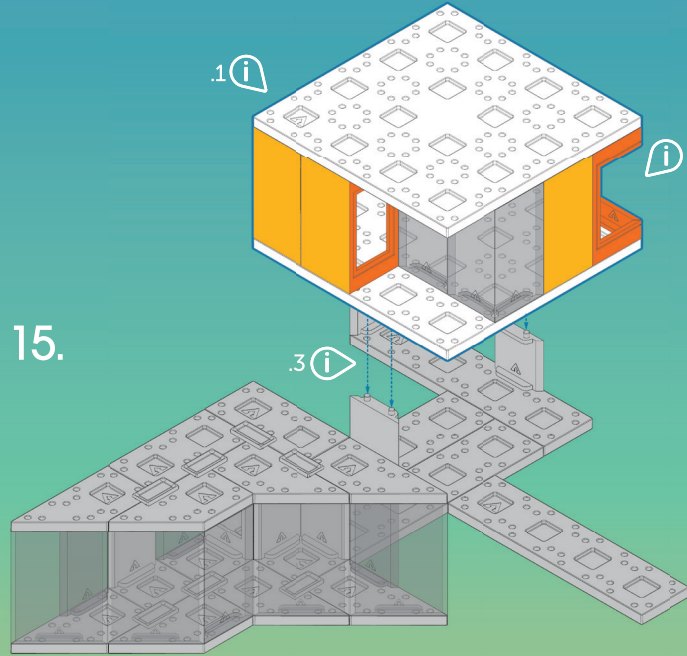d 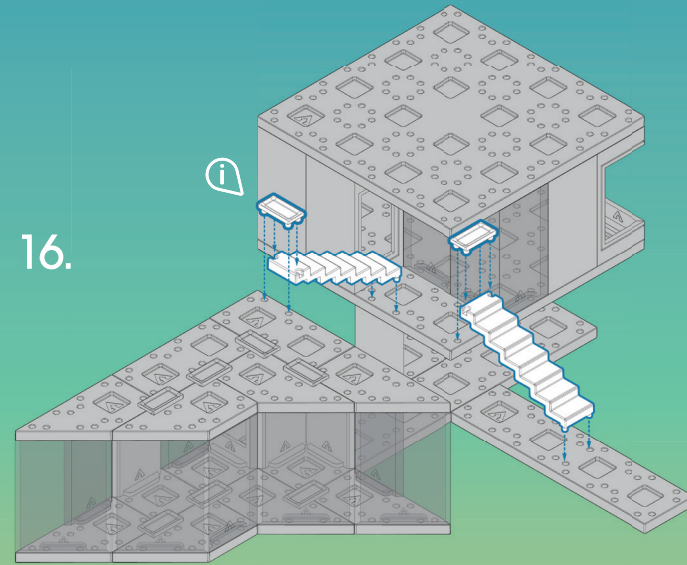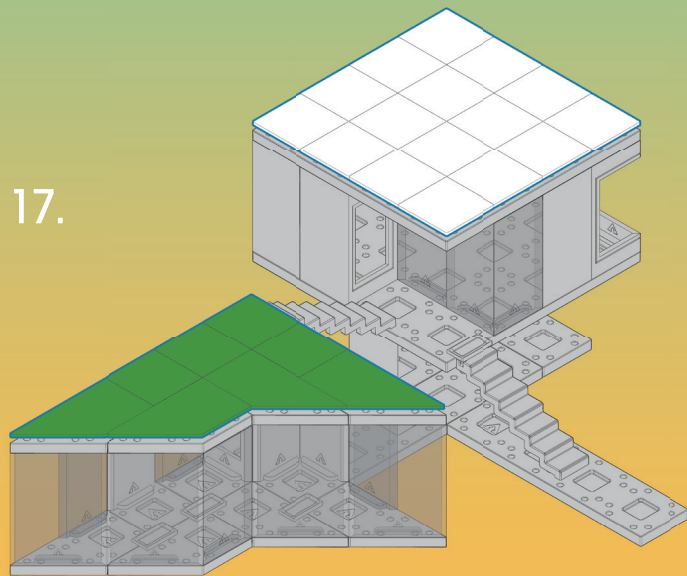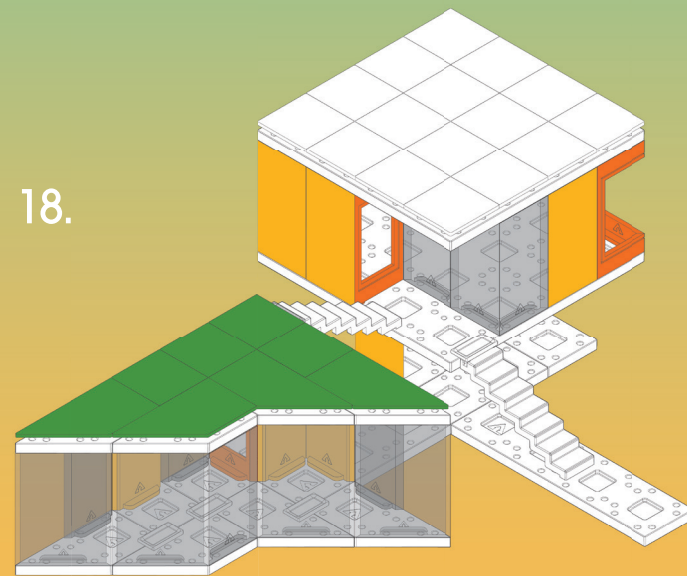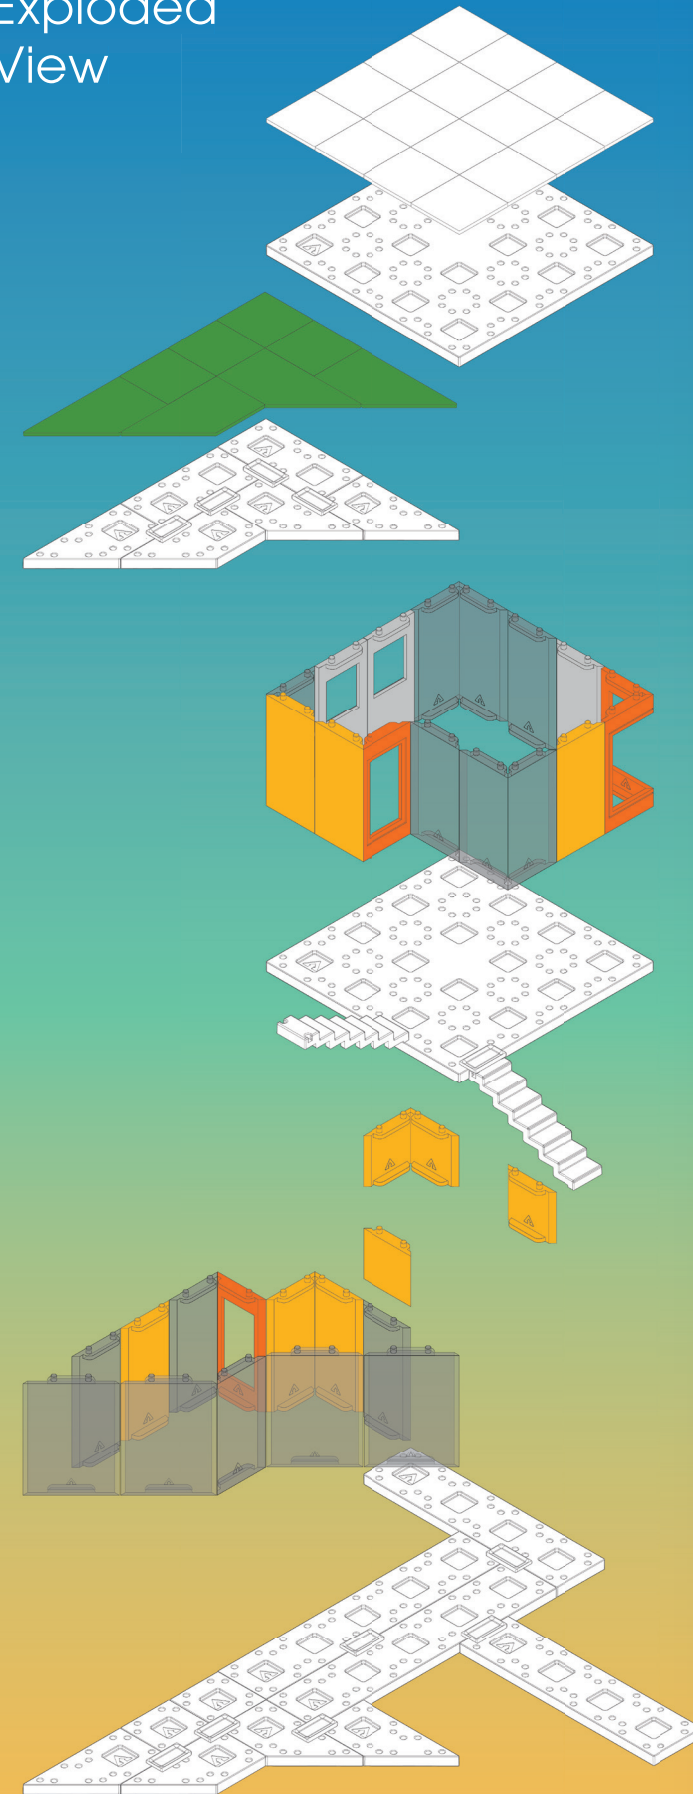the perimeter to fully secure the floors and the walls. 15.2 - To avoid bending window components when connecting to floors, simply use the openings to squeeze and secure top of window and floors panel together. 15.3 - Then mount the model block on top of the low walls as indicated. 16 - Add links to top of stairs and connect to model as indicated.