SDHQ

Product Packing List

Product: *SDHQ-02-3003-CP1*

Description: SDHQ Built Copper Battery Terminal Post Kit

_____	(1) Copper Positive Battery Terminal Post	SDHQ-02-3003-CP1-P
_____	(1) Copper Negative Battery Terminal Post	SDHQ-02-3003-CP1-N
_____	(1) Hardware Package	SDHQ-02-3003-CP1-HW
	_____ (2) 5/16" – 18 x 1 ¼" Button Socket Cap Screw	

Inspected and Packaged By: _____ Date: _____

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

For questions or help with the installation, please email help@sdhgoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.
Page **2** of **6**

SDHQ

SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.SDHQoffroad.com

INSTALLATION INSTRUCTIONS

Product: *SDHQ-02-3003-CP1*

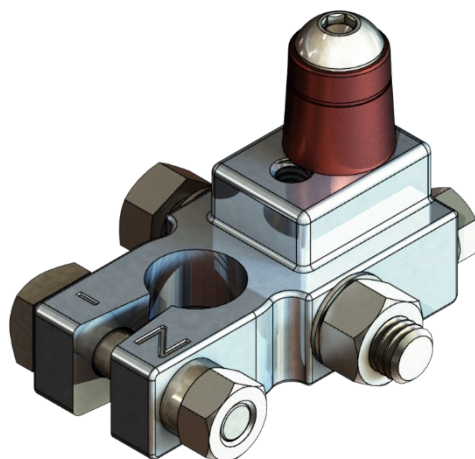**Description:** SDHQ Built Copper Battery Terminal Post Kit

Parts List	Hardware List	Required Tools
(1) SDHQ Copper Positive Post **SDHQ**-02-3003-CP1-P **(1) SDHQ Copper Negative Post** **SDHQ**-02-3003-CP1-N **(1) Hardware Package** **SDHQ**-02-3003-CP1-HW	**(2) 5/16"-18 x 1¼" Button Socket Cap Screw**	3/16" Allen Wrench ½" wrench or socket Ratchet

Tech Notes
Torque 5/16"-18 screws to 8 ft-lb
Positive Post has two lines, Negative Post has one line
Approx. Install Time: 10 mins

***READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! ***

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.
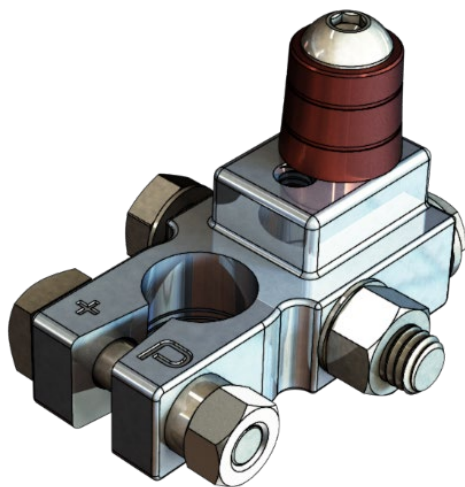
Positive Terminal with Copper Post Installed

Negative Terminal with Copper Post Installed

Positive Post

Negative Post

Installation Instructions:

1. Unbox your SDHQ Built Copper Battery Terminal Post Kit and check over all the parts. Familiarize yourself with the parts and diagrams above.

2. Remove the 5/16" hex head bolt pictured below from the positive terminal, this is done using a ½" socket or wrench. Set the bolt and washer aside as these will not be reused.

3. Place the Copper Positive Post (**Post with 2 lines**) onto the top of the terminal and thread the 5/16"-18 x 1¼" Button Socket Cap Screw into the 5/16" threaded hole in the top of the battery terminal. Torque 5/16"-18 screw to 8 ft-lb.

4. Repeat these steps for the Negative Terminal (**Post with 1 line**) to complete the install.

Double check all hardware is installed correctly and tight

Re-torque <u>ALL</u> bolts after 100 miles

190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.sdhqoffroad.com

Follow us on:

 Facebook   Instagram

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.