

# AirCycler® STAT

## Cleaning Instructions

Is your AirCycler® STAT not responding when you push the buttons? It is likely that the button contacts are dirty. Simply follow the cleaning instructions below.


### Step One:

First, remove the circuit board from the housing by pushing the plastic latches out of the way with one hand while pushing on one of the buttons with the other hand. The circuit board will pop out of the cover housing.



### Step Two:

Next, using a pencil eraser, clean the three silver contact pads where the buttons connect.

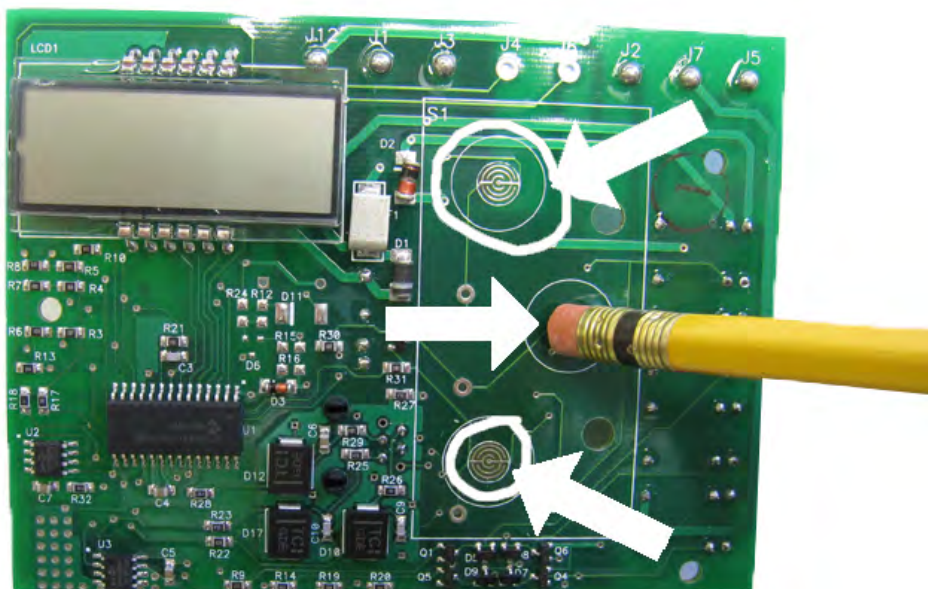

Replace the circuit board in the cover housing. Replace the unit on the base and now you should see the buttons respond like they were new. For extra caution, purchase the STAT rebuild kit to replace the buttons and cover plate.