



SPEC-TACULAR VIEW MEETS MELODY

GLARES

SMART GLASSES

WITH INBUILT SPEAKERS
FOR CALLS & MUSIC



Acoustic
Inbuilt Speakers



UV
Protection



Adaptable
Fit

USER MANUAL


Welcome

Thank you for purchasing Ambrane Glares Smart Glasses with Bluetooth Calling and Music. We recommend you to read the instruction manual carefully before using the product.


Package Contents

- 1 N Glares Smart Glasses
- 1 N Rating Card
- 1 N Charging Cable
- 1 N User Manual Card
- 1 N Extra Pair of Lenses

Product Overview

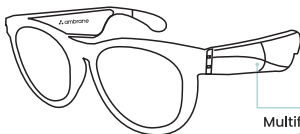

Multifunctional
Touch Sensors
(MFTS)

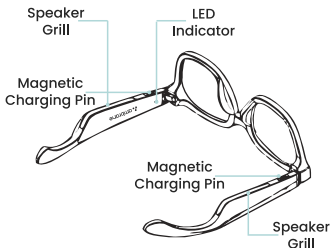

Product Specifications

- 5.1 Bluetooth Version
- 2 Hrs Charging Time
- Up to 7 Hrs Playtime
- 16 mm Speaker Driver
- Inbuilt Speakers
- Multifunctional Touch Sensors (MFTS)
- HD Stereo Sound
- Hands-free Calling
- UV Protection
- Voice Assistance
- Detachable Lenses
- 2 Lens Options
- UV400 Certified
- IPX4 Water Resistance

Note: The above data holds true in accordance with the laboratory testing. The actual results may vary as per usage if affected by temperature and volume.

How to Power ON?

- Simply open the glasses by separating its temples.
- It will automatically turn ON and enter into pairing mode.

Pairing Instructions

Search for Ambrane Glares on your device's Bluetooth list and select to pair.

Note: Upon second use and thereafter, the smart glasses will automatically connect if the Bluetooth of the device is turned on.

How to Power OFF?

- Simply fold the temples of the glasses back.
- It will automatically turn OFF.

Operating Instructions

FUNCTION	OPERATION
Play/ Pause Music	Single press the MFTS on L or R temple
Previous Song	Double press the MFTS on the L temple
Next Song	Double press the MFTS on the R temple
Increase Volume	Triple press the MFTS on the R temple
Decrease Volume	Triple press the MFTS on the L temple
Answer Phone Call	Single press the MFTS on L or R temple
Hang-up Phone Call	Single press the MFTS on L or R temple
Reject Call	Long-press the MFTS on L or R temple for 1 sec
Activate Voice Assistance	Long-press the MFTS on L or R temple for 2 secs

Charging Instructions

1. Align and attach the charging cable's pin connectors to the charging ports found at the bottom of each temple.
2. Connect the charging cable to a low-powered USB adaptor (Not exceeding 5V, 160mA and 0.8W power capacity.)
3. The LED indicators present on the inner part of the temples will start blinking.
4. Complete charging may take up to 2 hours. The LED Indicators would turn OFF after the charging is complete.
5. Please clean the charging interface before charging to avoid erosion of the gold prongs and other risks.

IMPORTANT NOTE Please do not use normal or high-wattage adaptors for charging. Only use low power output sources only, such as a laptop, computer or any low-powered adaptor

Precaution and Warning

- Do not listen at high volume for long periods of time to prevent hearing damage.
- Do not use the product in the vicinity of gas stations, oil depots, chemical warehouses, etc., where flammable or explosive gas or chemicals are stored.
- Do not use this equipment in hospital operating rooms, emergency rooms, intensive care units, etc. The magnetic fields could cause interference with cardiac pacemakers, implanted defibrillators (ICDs), hearing-aid, cochlear and other implants. Always keep at least a 15-centimetre distance from the pacemaker.
- Please consult your physician and the device manufacturer if you want to use this device near personal medical equipment.
- Please do not use the product in an environment that requires special attention such as in traffic, or driving.
- Do not use the product outdoors during thunderstorms to avoid lightning strikes.
- Do not use the charger in a high humidity area such as a bathroom, as electric shock, personal injury, fire and charger damage may result.
- Please comply with any legal requirements that expressly prohibit the use of the product in any environment.

Product Specifications

1. Before using, read all the safety information to ensure proper and safe operation.
2. Only use a charging cable recommended by the manufacturer or otherwise may cause fire, explosion or other accidents.
3. In case of fire, electronic damage or even complete scrap of the product, please do not dismantle or refit the product for any reason.
4. Only use the product at ambient temperature between 0°C ~ 35°C and keep the product as well as the accessories at a temperature between -20°C ~ 45°C for temperatures too low or too high that may cause functional faults.
5. For every time use, please attach the charging cable's pin connectors to the charging ports found at the bottom of each temple and connect the charging cable to a USB port. After charging, disconnect the power first and then remove the pin connectors of the charging cable. Do not directly connect the USB port when the pin connectors don't connect to the temple, which may cause short-circuiting and danger.
6. When charging is completed, disconnect the charger from the product and the charger from the socket. Do not exceed 12 hours of continuous charging time.
7. Always keep the product dry.
8. The product must not be disposed of with normal household waste to avoid battery fire or explosion. For packing disposal, please observe the legal regulations in your country.
9. This product is with a built-in-non-removable lithium battery, which must not be disassembled, bumped, squeezed or exposed to fire. For any serious expansion of batteries, please stop using.
10. Maintain a distance between the product components containing the magnet (the glasses legs and the charging

cable) and metal objects to avoid the danger of electrical short-circuit which will lead to the overheating of the battery and cause personal injuries such as skin burns.

11. The product must not be exposed to or thrown into the fire to avoid explosion.
12. Do not expose the product to sunlight for a long time to avoid corrosion or deformation.
13. Only use the product complying with the relevant laws and regulations, and do not use it in the following environments.

■ Warranty Card and Terms & Conditions

NOTE: For valid warranty claim, all information on the warranty certificate has to be completed and presented along with the original invoice.

- All warranty information, product features and specifications are subject to change without prior notice.
- All matters are subject to Delhi Jurisdiction.

Customer's Name: _____

Contact Number: _____

Customer's Address: _____

Model No.: _____

Purchase Date: _____

Invoice Number: _____

Dealer's Stamp: _____

- Ambrane Glares Smart Glasses comes with 365 days warranty from the date of purchase.
- Warranty can not be claimed if the product is damaged by wrong operation or force majeure.
- Accessories supplied with Ambrane Glares Smart Glasses are not covered under the warranty.

CUSTOMER CARE:

Ambrane India Pvt. Ltd.

224, Second Floor, D-Mall, Netaji
Subhash Place, Delhi; India - 110034

Contact No.: +91 1145911111,

E-mail: care@ambraneindia.com

Web: www.ambraneindia.com

Join the Ambrane Ally!

@ambraneindia

