

INSTRUCTIONS TO CHANGE OUT BULB ON THE 170AIR Purifier.

SAFETY FIRST! PLEASE NOTE:

- Bulb contains a very small amount of mercury – please dispose of old bulbs in accordance with local regulations &with due consideration for the environment.
- The bulb is fragile, and could break & cause injuries. Always use protective gloves & goggles when changing out bulb. Handle bulb carefully.
- NEVER look directly at the bluish light generated by the bulb. Exposure could result in damage to the eyes.
- Never operate the unit without fully assembling it first.

There are 2 generations of the Purifier (170AIR) in the market. Please refer to instructions A if your Serial number is less then **12004728**. Otherwise, please refer to instructions B

INSTRUCTIONS A (Only if your unit's serial number is less then 12004728)

PLEASE READ SAFETY INSTRUCTIONS BEFORE PROCEEDING!



Unscrew the 4 screws on both end plates using a star screw driver. Please exercise caution not to pull too hard & break the wire connections on the end plate closer to the LCD screen.



Pull the lamp slightly to dislodge it from the lamp holder socket. The lamp support prevents the lamp from coming out completely. Pull as far as possible, until lamp comes to a stop. (ALWAYS wear gloves: this picture does not show gloves just for the sake of clarity of instructions!).



At this point, it is possible to slide the base of the bulb from under the lamp holder on the other side (the wired end plate side).


Repeat these steps in the opposite sequence to put in the new bulb.
CAUTION: When reassembling the end plates, be especially careful not to pinch the wires on end plate closer to the LCD screen!

INSTRUCTIONS B (Only if your unit's serial number is more then 12004728)

PLEASE READ SAFETY INSTRUCTIONS BEFORE PROCEEDING!



Unscrew the 4 screws on the end plate further away from the LCD screen using a star screw driver. Do NOT remove the end plate that is closer to the LCD screen!

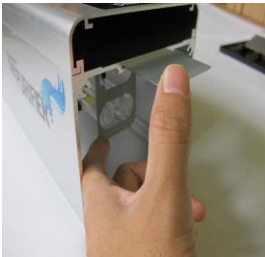

Slide out the lamp support – jiggling the lower end slightly if necessary. The lamp support comes out completely. Carefully grip the bulb (ALWAYS wear gloves: this picture does not show gloves just for the sake of clarity of instructions!). Give the bulb a tug to dislodge from socket & pull the entire bulb out of the body.



Pull the lamp slightly to dislodge it from the lamp holder socket. The lamp support prevents the lamp from coming out completely. Pull as far as possible, until lamp comes to a stop. (ALWAYS wear gloves: this picture does not show gloves just for the sake of clarity of instructions!).

Repeat these steps in the opposite sequence to put in the new bulb.