




Rack & Pinion Door Closer Hold open arm for CDC-1/3 Instructions CDC-1/3

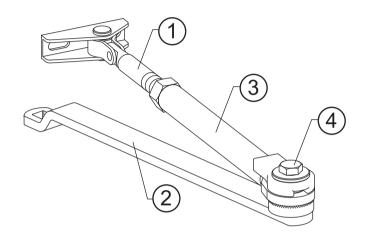

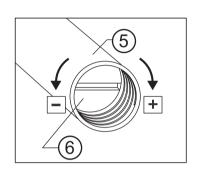

* Maximum HO angle depend on the closer maximum door opening angle.

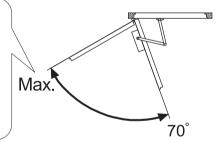

Adjusting the hold open function

- 1. Take off the nut, and separate arm A and B.
- 2.As seen on the drawing, use a screw driver to turn the slotted screw to right or left hand side so that the strength of the hold open will be adjusted.
- 3. After the adjustment, assemble the arm again, and make sure that all the parts are in the right position.

- 1) Arm B
- (2) Arm A
- (3) Link arm
- 4 Nut
- (5) Link arm
- (6) Adjusting nut