

AIR IONIZER

N328 product information



IMPORTANT!

- Do not immerse unit in water or other liquid
- Supervision is necessary when used by or near children
- Do not use unit for other applications than its intended use
- To prevent corrosion, remove batteries when not using for long periods

USE & OPERATION

- Remove the battery door on the bottom of the unit and install 4 "AA" 1.5V high-quality alkaline batteries. (not included)
- Press the "ON/OFF" button once and the power Indicator light will come on. The light will flash every 3 seconds letting you know the unit is in operation.
- Press the "MODE" button to choose the different mode settings:

Mode 1: Press the "MODE" button and the power indicator will light up. The ionizer will operate continuously for about 20 minutes. Then it will enter into a cycle of sterilization and deodorization for 2.5 minutes every hour. When the unit is not sterilizing and deodorizing, it will be in sleep mode.

Mode 2: Press the "MODE" button and the power indicator will light up. The ionizer will operate continuously for about 30 minutes. Then it will enter into a cycle of sterilization and deodorization for 4 minutes every 2 hours. When the unit is not sterilizing and deodorizing, it will be in sleep mode.

■ PRODUCT PATTERN



Photo 1

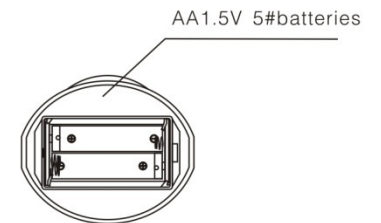


Photo 2