

INSTALLATION GUIDE FOR VIRUSTON 3 + 4

ULTRAVIOLET GERMICIDAL LAMP


Please follow these instructions carefully and retain for future use.

Installation


1. Set the cord switch to "ON".



- 2. Push the ON/OFF button on the remote once only to switch the unit on.
- 3. Push the 15 / 30 / 60 minute buttons to select the exposure time.



 The UVC lamp will switch on after 15 - 20 seconds allowing you time to leave the room and will run for the selected period.

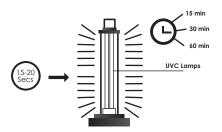

 The unit will automatically turn OFF once the selected disinfection duration has completed.



7. Motion sensor automatically switches the fitting off temporarily when motion is detected and will resume when safe.

Important: Do not enter the room whilst sterilization is taking place.

If you need to enter the room push the OFF button on the remote.



It is recommended that you ventilate the room for at least 40min after disinfection

Do not use this remote with another device.

Warning and Safety

- For indoor use only.
- Leave the room before switching the fitting on, this is why a remote control is supplied.
- Ensure the lamp is fitted securely.
- Stay out of the room while fitting is in use as UVC rays are harmful to humans and animals.
- Do not look directly at the lamp.
- Do not alter the fitting in any way.
- Use for recommended purpose only.
- Do not remove the safety labels.
- Do not use if the fitting or power cord looks damaged in any way.
- Use with the correct power requirements.
- An ozone odour may be experienced after use.
- Ventilate the room for 40mins.