


# TABLET FIRMWARE INSTRUCTIONS



## FOLLOW THESE INSTRUCTIONS TO UPDATE YOUR CM-7000 SERIES TABLET:

To Update Your CM-7000 Series Tablet  
- Start at Step 6 If you have been given  
a USB drive with your order.

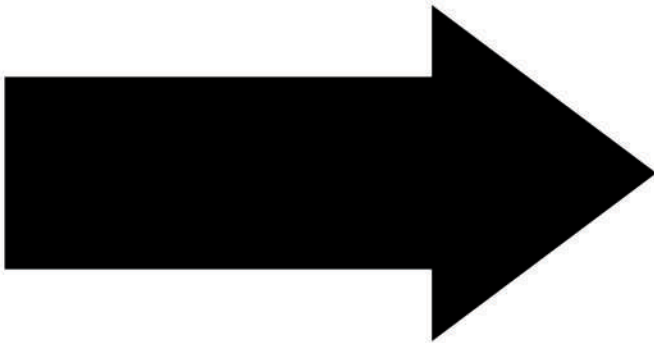

### Step 6.

Plug the flash drive into the bottom of the tablet in the USB port. The update should begin automatically after a couple of seconds.

### Step 7.

Wait for the update to finish installing (this install should not take more than 1 minute).

### Step 8.

You will see an alert pop up that says "Unfortunately, Multidrop has stopped." [This is supposed to happen]. Press 'OK' to finish.

### Step 9.

On the tablet screen wait for the firmware to finish updating and press the 'settings' gear in the top right corner.

### Step 10.

Scroll all the way to the bottom of the screen and it should read "Version v2.3.15"  
This means your tablet has been updated!

**\*PLEASE NOTE\***

**FOR PROPER UPDATE YOU MUST FOLLOW  
BOTH PAGE 1 AND 2 INSTRUCTIONS.**

# SENSORS/REMOTE FIRMWARE INSTRUCTIONS



## FOLLOW THESE INSTRUCTIONS TO UPDATE YOUR CM-7000 SERIES SENSORS:

**\*Please Note:** Depending upon your CM-7000 series configuration, you will need to repeat steps 1-6 for EACH sensor\*

### Step 1.

From the home page of the CM-7005 tablet, press on any of the "sensor circles" to go to the sensor detail page.

### Step 2.

Press on the lock icon in the top right corner and enter the password: 'co2meter' to unlock the sensor settings.

(The settings will remain unlocked for 5 min)

### Step 3.

Press the 'UPDATE' button.

### Step 4.

A prompt will come up asking if you are sure you would like to soft reset your sensor.

### Step 5.

Press "YES".

### Step 6.

Press the '**DONE**' button to go back to the home page.

### Step 7.

To verify the update was successful: go into the same "sensor circle" and look to see that the version number (located above the sensor name) has changed to "**v1.2.5**".

Congratulations!

**This means your sensor(s) and tablet have all been updated!**

FOR ADDITIONAL SUPPORT CONTACT:  
[CASESUPPORT@CO2METER.COM](mailto:CASESUPPORT@CO2METER.COM)