



INSTRUCTION MANUAL

SUMMIT⁺ Product Overview



EXTREME CONDITIONS

0°F to 176°F (-18°C to 80°C)
operating range

IP54 RATED

Splashproof and dust
protection



3300MAH

Powerful, built-in
rechargeable lithium ion
battery

TEMPERATURE ADJUSTMENT

8 device settings from
330°F to 440°F
(160°C to 230°C)



SMARTPHONE CONTROL

Pair with Smartphone for Precise
control of: Temperature, Session
Time and Temperature Boost

ULTRA-STEALTH NOTIFICATION

Vibrations signify
device readiness



STIR TOOL

Remove to stir,
mix and pack

MICRO USB CHARGING PORT

Allows use while recharging



ERGONOMIC DESIGN

Rubberized,
easy-grip contouring

ADVANCED AIR PATH

Laser welded stainless steel
continuous pathway



2Y WARRANTY


Manufacturers warranty

CUSTOMER SERVICE

+1 844 GO VAPIUM
www.vapium.com



Button Behavior

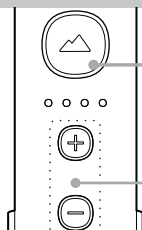

GO BUTTON

Press and hold 3 seconds: Power ON/ OFF

Tap for initiating heating in Standby Mode

TEMPERATURE BUTTONS (+) (-)

+ BUTTON: Increase Temperature (press or hold)

- BUTTON: Decrease Temperature (press or hold)

LED Behavior

GO BUTTON LED

BLACK: OFF

BLUE (SOLID): Standby

BLUE (FLASHING): Paired to Smartphone

GREEN: GO Time!

RED: Recharge

BATTERY DISPLAY (White LED)

BLINKING: Charging


SOLID: Battery Level

TEMPERATURE DISPLAY (Colored LED)

BLINKING: Heating/Adjusting

SOLID: Maintaining

Vibration Notification




1 VIBRATION: Power ON (into Standby)

2 VIBRATIONS: Power OFF

3 VIBRATIONS: GO Time

Loading Aromatic Blends

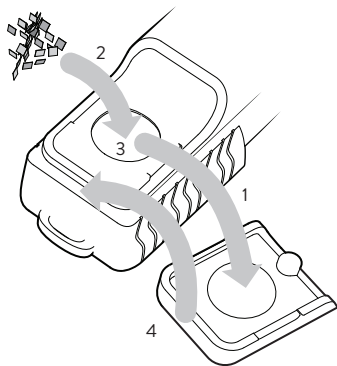

1) Open magnetic lid to reveal heating chamber.

2) Prepare finely ground aromatic blends.

3) Fill the heating chamber to the top.

4) Secure the magnetic lid over the heating chamber.

Temperature Display...



○ ○ ○ ○

● ○ ○ ○

● ○ ○ ○

○ ● ○ ○

○ ● ○ ○

○ ○ ● ○

○ ○ ● ○

○ ○ ○ ●

○ ○ ○ ●

...And corresponding heating chamber temperature presets:

Temp 1 (half BLUE) – 320°F / 160°C

Temp 2 (BLUE) – 338°F / 170°C

Temp 3 (half YELLOW) – 356°F / 180°C

Temp 4 (YELLOW) – 374°F / 190°C


Temp 5 (half ORANGE) – 392°F / 200°C

Temp 6 (ORANGE) – 410°F / 210°C

Temp 7 (half RED) – 428°F / 220°C

Temp 8 (RED) – 446°F / 230°C

Powering ON (from OFF)

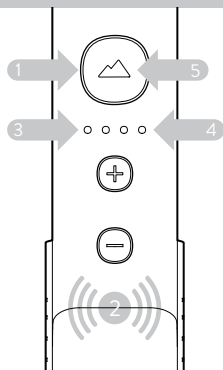

1) Press and Hold GO Button for 3 seconds until it lights up Blue

2) Feel the Vibration Notification

3) Battery Level is displayed for 1 second

4) Blinking Temperature LED indicates warming of the heating chamber

5) GO Button Lights up Green

Its GO Time!

Powering ON (From Standby)


1) Press the GO Button

2) Follow steps 2-5 as above

TIPS

- Heating Chamber heats up in as little as 35-45 seconds.
- Feel free to adjust heating Chamber temperature up or down with +/- buttons

Session Time Adjustment



Ensure GO Button is lit up Green or Blue

- 1) Press and Hold both the (+) and (-) buttons simultaneously
- 2) Individually press the (+) or (-) buttons to increase or decrease the Session Time (30, 60, 90, 120 seconds)
- 3) White LED will indicate session time

• • • •

• 4 White LEDs... 120 Seconds

• • • ○

• 3 White LEDs... 90 Seconds


• • ○ ○

• 2 White LEDs... 60 Seconds

• ○ ○ ○

• 1 White LED... 30 Seconds

Built in Pick/Pack Tool

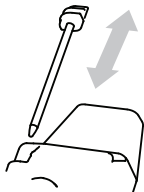

Top 3 reasons to use the Pick/Pack Tool

- 1) To secure and remove oven screen
- 2) To stir materials at any point before, during or after a session
- 3) To easily remove materials in preparation for a reload.

TIPS

- Always keep the Pick/Pack tool clean before inserting back into the housing
- Use a key to assist removing the Pick/Pack tool from the housing if its stuck

Powersaving



AUTOMATIC SHUT OFF

Automatic shut off timer will turn OFF after 30 minutes of non-use.

MANUAL SHUT OFF

Press and hold the GO Button for 3 seconds.


TIPS

- During Recharging pressing the GO Button for 3 seconds will stop the heating process and return into Recharging mode.

Performance

- Press GO Button / adjust temperature anytime!
- GO Button stays green for 90 seconds, then returns to Standby Mode.
- Open up the heating chamber lid and stir the aromatic blends anytime within 15 seconds and the heating cycle will resume.
- GO Button will turn Blue when lid removed.
- Temperature LED turns solid when lid removed during warming.
- When adjusting to a new temperature and GO Button is Green, it will take about 10 seconds to stabilize at the new temperature.


Recharging

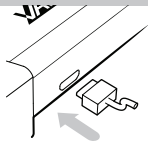


Plug the micro USB connector into the base and the other end into a USB port.

While recharging the battery level, White LEDs will blink.

A solid White LED indicates current charge level.
Approximately 3h to full recharge.



LED Battery Indicator

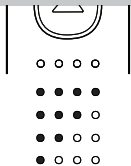


- 4 White LEDs... 75%+ Battery
- 3 White LEDs... 50% Battery
- 2 White LEDs... 15% Battery (recharge)
- 1 White LED... 5% Battery (recharge)

TIPS

- With at least one solid battery LED lit, SUMMIT⁺ can be used while recharging.
- Charging continues during use while plugged into USB.
- Press GO Button / adjust temperature anytime during recharging.


Cleaning

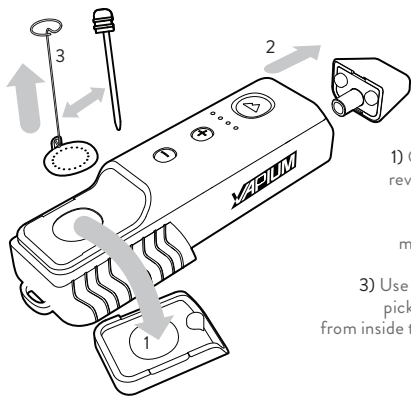

1) Open magnetic lid to reveal heating chamber.


2) Remove the magnetic mouthpiece.

3) Use the pick/pack tool to pick out the filter screen from inside the heating chamber.

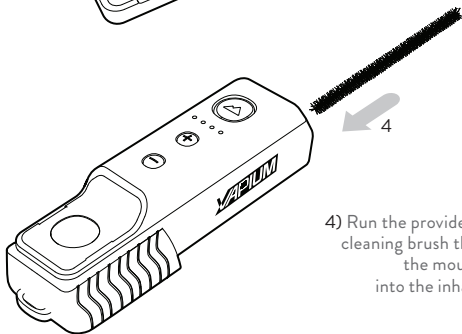

4) Run the provided elongated cleaning brush through from the mouthpiece end into the inhalation tube.


Cleaning

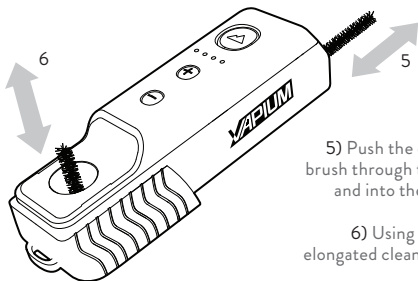

5) Push the elongated cleaning brush through the inhalation tube and into the heating chamber.

6) Using two hands, pull the elongated cleaning brush back and forth.

Post Cleaning Assembly

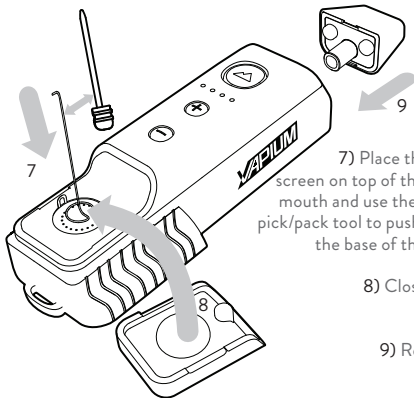


7) Place the heating chamber screen on top of the heating chamber mouth and use the pick/pack tool to push it securely against the base of the heating chamber.

8) Close magnetic lid over heating chamber.

9) Replace mouthpiece.

Heating Chamber Lid Removal

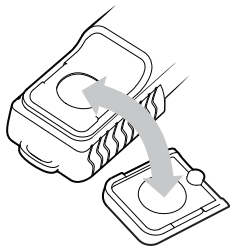

If heating is in progress, removal of the heating chamber lid will pause warming of the heating chamber.



GO Button turns Blue.

Replace lid within 15 seconds to continue heating cycle.

TIPS

- With the Heating Chamber lid removed, pressing the GO Button will result in the GO Button LED to flash RED, replace the lid and follow the steps on page 4.


Low Power



o o o o

GO Button will flash red.
Time to recharge!

Pairing to Smartphone

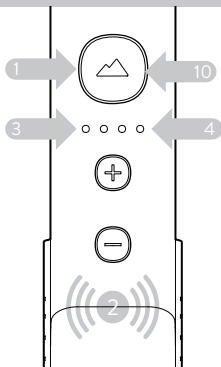

- 1) Press and Hold GO Button for 3 seconds until it lights up Blue.
- 2) Feel the Vibration Notification.
- 3) Battery Level is displayed for 1 second.
- 4) Blinking Temperature LED indicates warming of the heating chamber.
- 5) Enable Bluetooth® on Smartphone
- 6) Scan for VAPIUM SUMMIT
- 7) Launch VAPIUM smartphone APP
- 8) Select Settings in the APP
- 9) Select VAPIUM SUMMIT from the list of available devices
- 10) Flashing Blue GO Button indicates SUMMIT is paired to Smartphone

Un Pairing from Smartphone

- 1) Exit smartphone APP
- 2) Turn off Bluetooth®

TIPS

- Battery life is extended on the SUMMIT by not being paired to the smartphone
- Battery life is extended on the SUMMIT by not being paired to the smartphone

APP Operation – Brief Overview



Displays battery level



Connect SUMMIT+



Switch between Fahrenheit and Celcius temperature display




Temporarily boost heating chamber temperature by 10 °C / 50° F




GO Button
BLUE/WHITE - Standby
BLUE - Heating
GREEN - At Temperature

Temperature Adjustment in APP

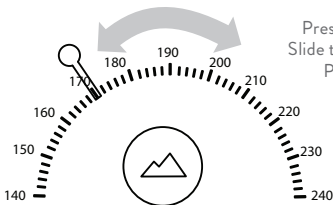

Press APP GO Button (Standby)
Slide to adjust heating temperature
Press APP GO Button to heat

Session Time Adjustment in APP



Press APP GO Button (Standby)
Slide to adjust heating temperature
Press APP GO Button to heat

Warranty

VAPIUM Ltd. believes strongly in the quality of its products. We guarantee our products to be free of malfunction due to defect in materials or workmanship for a period of two (2) years from the date of purchase. If such a defect is found, an exchange or repair to the device in question will be issued. We do not offer refunds on used products. All warranted items must have been purchased from our website (www.vapium.com), an authorized distributor or authorized retail location. In the event that servicing is required due to defect, please contact our support department for information on where to send your unit along with a copy of the sales receipt for warranty service and the unit serial number.

Terms of Use & Disclaimer

GENERAL DISCLAIMER

Vaporizers, such as those manufactured by VAPIUM®, (“Vapium Vaporizers”) are designed, manufactured, and sold as hot air extraction devices used and intended to be used in the field of aromatics. The lawful and proper use of any Vapium Vaporizer or accessory is a required condition of sale.

By purchasing any of these devices you are representing that you are 18 years of age or older and that you agree to follow the instructions contained herein and in any accompanying literature.

The improper use of these devices may void any applicable warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under federal law.

Vapium Vaporizers are only to be used by someone knowledgeable in the field of aromatics. Only legal, safe, known, identifiable, and commercially developed and marketed aromatic blends or compounds should be used in any device purchased from this website. Keep these devices and all

aromatic products out of the reach of children and animals. Study this information, the product instructions, and all of the accompanying literature before using a Vapium Vaporizer or any aromatic blend or compound. Likewise, always keep in mind that this device is extremely efficient in extracting the bioactive ingredients from any aromatic compound.

The information contained in this disclaimer and any other cautionary instructions, and all of the documents and literature included with any Vapium Vaporizer, was developed for informational purposes only. In no way is any of the information contained in these documents intended to be a medical or prescriptive guide or to be used for diagnosing or treating a health problem or disease. No aromatic should take the place of any prescribed medication. Neither the manufacturer nor the seller, or their respective affiliates, directors, officers, or shareholders, of any aromatic products on this Site shall be held responsible for the misuse of same or the misuse of any aromatic blend or compound. You, the purchaser and/or user of this device, are responsible for your own use of such products.

If pregnant, nursing or diagnosed with epilepsy, a heart condition, allergies or other medical condition, seek the advice and assistance of a physician or trained health professional before using any Vaporizer or aromatic blend or compound. If you believe or suspect that you have a medical problem, promptly contact your doctor or health care provider.

VAPORIZER PRODUCT DISCLAIMER

The statements and devices shown here and on our website have not been evaluated by the United States Food and Drug Administration (“FDA”) or by any other comparable agency or administration in any other jurisdiction. The SUMMIT+® is not a medical device and is not intended to diagnose, treat, mitigate, cure or prevent any ailment, disease or other conditions. The SUMMIT+® is not intended to administer medicinal or illegal products of any kind and is not intended for use with any substance that may affect the structure or any function of the body. If you have any health problems consult your doctor or pharmacist before using. The SUMMIT+® systems

are not designed, nor intended for use with any material that is not lawful, allergenic, or poisonous or may cause harm. If you use a Vapium Vaporizer, you do so at your own risk. Inhalation is unadvisable and may potentially be harmful. Vaporizing does not necessarily eliminate any and all toxins found in vaporized substances so much care should be taken prior to use. Our products are not smoking cessation devices. The lawful and proper use of Vapium Vaporizers is a condition of sale. Any improper use of the SUMMIT+® voids the warranty. Any illegal use of our devices could subject the user to severe fines, penalties and/or imprisonment under the law of your jurisdiction. No liquid sources of vapor can be used with the SUMMIT+®. Use of liquids is likely to cause damage to this device and may cause harm or risk of injury to the user. Liquid will boil in our vaporizers and may burn the user. All comments and testimonials presented, in any form, by customers are not and do not represent the opinions of the manufacturers. The SUMMIT+® is intended to be used solely with aromatic material. You must be 18 or older and respect all local laws to purchase a Vaporizer.

LIMITATION OF LIABILITY

In no event will Vapium Ltd. or any of their officers, directors, members or employees be liable to you for any lost profits, lost savings or incidental, indirect, special or consequential damages, arising out of your use or inability to use the product, service, website or the breach of this agreement, even if advised of the possibility of such damages. Some jurisdictions do not allow the limitation or exclusion of liability for incidental or consequential damages so the above limitation or exclusion may not apply to you, in which case the liability of Vapium Ltd. and all related parties shall be limited to the fullest extent of the law.

CONTACT US AND SUPPORT

If you have any questions regarding this Privacy Policy, our website Vapium.com, or your order please reach out to us using the Contact Us form, call us direct at 1-844-GO-VAPIUM or support@vapium.com.