

Quickstart Software Manual – AgriEid.com

PART ONE. USB Connection with Windows PC


Step 1: Connect the Scanner to a Windows PC with USB cable provided

Step 2: Download the Software Connector from AgriEid.com Support Section


Step 3: Open File : [PTCollection-USB.exe](#)




Step 4 : Select File then Option and Device "PT280/PT580 with Port "USB"

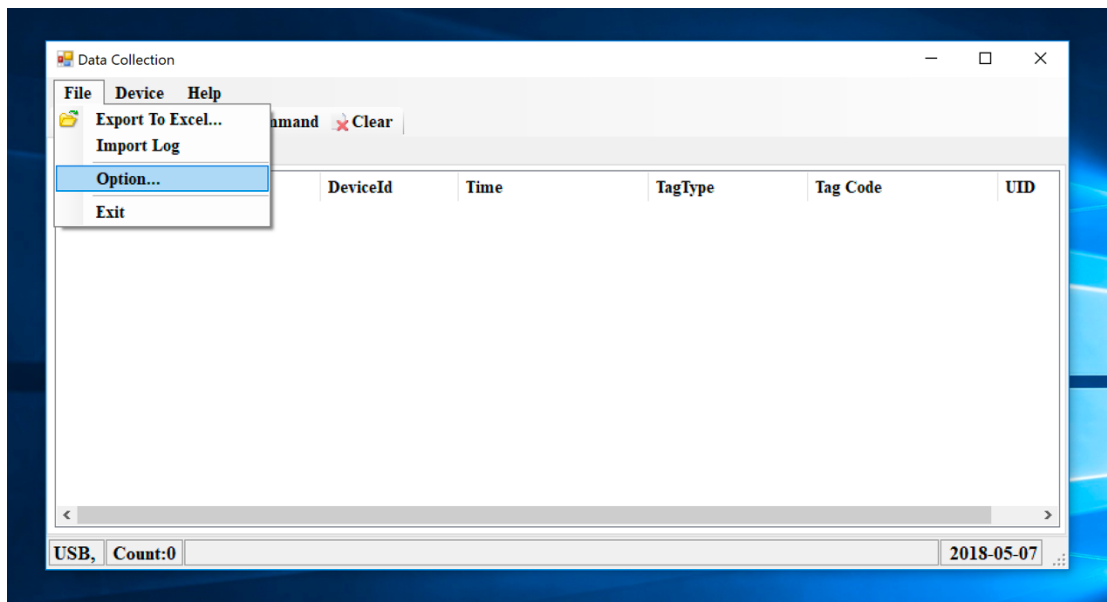

Step 5: Select the preferred option for "Clear records after read"

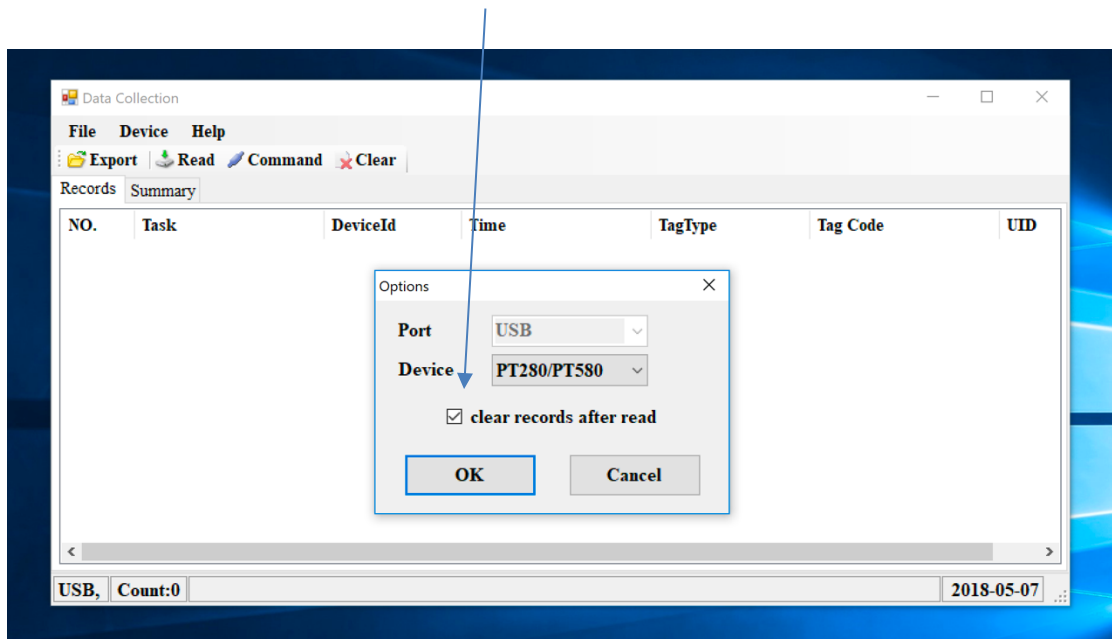

Step 6 : Click "Read" then "Export" data as csv or excel file.

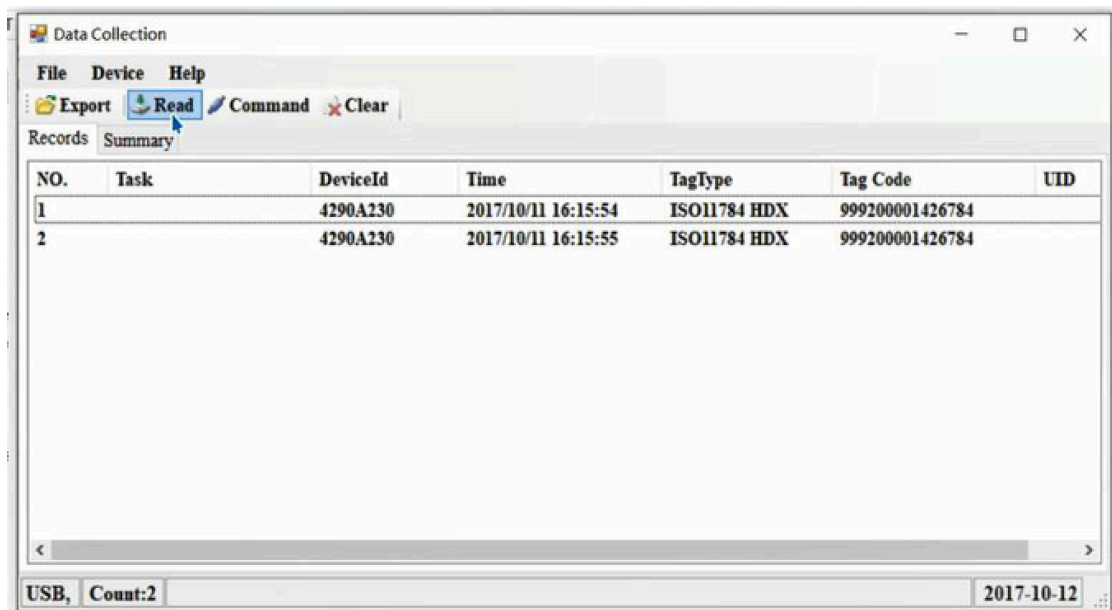

PART TWO. Bluetooth Connection with PC


Step 1: Connect the Scanner to a Windows PC via Bluetooth

Step 2: Download the Software Connector from AgriEid.com Support

Step 3: Open File : [PTCollection.exe](#)



Step 4: Select File then Options – select the correct Port and Device

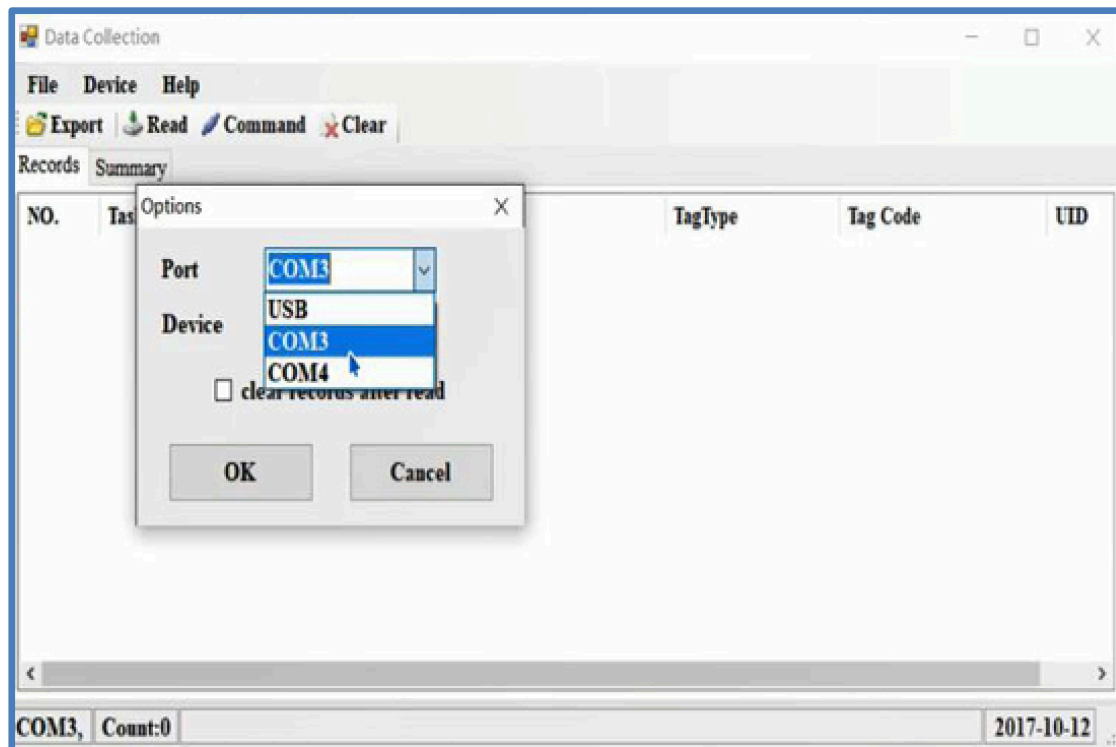

Step 5 : Click "Read" then "Export" data as csv or excel file. (refer previous page)