



GAMMA



Gamma Soothe Lamp User Manual




Introduction

Thank you for purchasing a Gamma Soothe Lamp. Please read the user manual carefully and keep it for future reference.

Device Overview

1. Touch Control (metal base)
2. Light Area
3. DC Connector

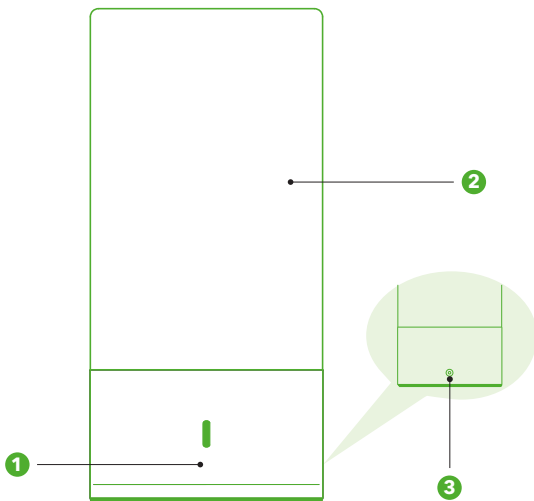



Operation

1. Plug the 12V DC Power Adapter provided into the Gamma Soothe Lamp.
2. Easily power on/off by using the 360° Touch Control Base.
3. Enjoy your Gamma Soothe Lamp.

Suggestions

- Turn on the Soothe Lamp for at least 30 minutes, optimal results may be achieved with two or more hours of use.
- Turn off all other lights in the room. The Soothe Lamp should be the only visible light.
- Adjust the Soothe Lamp to the lowest brightness setting possible for the room you are in.
- Touch anywhere on the aluminum dimmer panel to operate the lamp and adjust the brightness.
- A standard wall plug-in timer can be used to turn the Soothe Lamp on and off.

Warnings

- Do not repair, disassemble, or modify under any circumstances.
- Do not place near any heat source or in direct sunlight.
- Do not place on an uneven, unsecured desk or table.
- Use ONLY the supplied AC power adapter.
- Do not use appliance with frayed or damaged electrical cords.
- Do not place on or in body.
- Do not use lamp with wet hands, wet conditions, or when liquids are present.
- Keep the lamp and all parts dry and clean.
- Unplug the adapter when the lamp is not used.
- Power off before cleaning.
- Clean the lamp only with a soft dry cloth.
- Never overload electrical circuits as it may cause electrical shock or fire.



Specifications

Model	GSL101
Power	6 Watt Max
Input Voltage	AC 100 - 240V 50/60Hz
Working Voltage	DC 12V - 600mA
Brightness	≥ 450LM
Expected Life	20,000hrs

For more information visit GammaLightTherapy.com

DISCLAIMER: GAMMA LIGHT THERAPY LLC. AND ITS PRODUCT MAKERS AND WEBSITE OWNERS MAKE NO GUARANTEES OR WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO PRODUCT FUNCTIONS, WARRANTIES OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. USE OF OUR PRODUCTS IS COMPLETELY AT THE USER'S RISK. OUR PRODUCTS AND STATEMENTS HAVE NOT BEEN EVALUATED BY THE FOOD AND DRUG ADMINISTRATION. THIS PRODUCT IS NOT INTENDED TO DIAGNOSE, TREAT, CURE OR PREVENT ANY DISEASE OR ILLNESS. WE DO NOT ASSUME ANY RESPONSIBILITY FOR ANY POTENTIAL ERRORS CONTAINED ON OUR WEBSITE OR PRODUCT INFORMATION PROVIDED OR ANY DAMAGES OR LOSSES RESULTING FROM THE USE OF ANY OF OUR PRODUCTS OR RELYING ON ANY INFORMATION WE'VE PROVIDED. NOT INTENDED FOR USE BY PERSONS UNDER THE AGE OF 18.



Designed in the USA