

MELODY SUSIE

BRING YOUR NAIL SALON HOME

EOS 3

UV LED NAIL LAMP

Instruction Manual



INDEX

- 1** Check before Using
- 1** Note for Using
- 2** Maintenance Work
- 2** Note for Injury
- 3** How to Use
- 3** Problems and Terms of Settlement
- 5** Specifications
- 5** Warranty and Customer Service



Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.



To reduce the risk of burns, electrocution, fire or injury to persons.

Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

01 Check before Using

- 1** Check the power supply cord before the first time use and during the life of the device. Do not use the device if it has a damaged cord or plug, or if it is not working properly.
- 2** Do not plug the device into a voltage system that is not specified on the device or charger. Use with improper voltage will damage the device and VOID warranty.
- 3** Use the original charger only.

02 Note for Using

- 1** To prevent electric leakage and shock or fire, do not draw out the connecting wires during use or touch the plug with the wet hand. Turn the power off after use.
- 2** Misuse, dropping or excessive force may cause device damage.
- 3** Minor should not use this device without parental consent and supervision.
- 4** Do not place any object on the nail lamp, as it may negatively affect the performance.



03 Maintenance Work

- 1 Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions.
- 2 Do not keep the device in a metal box, car, or other places at high temperature (more than 50°C). Keep the handpiece dry and away from oil and grease.
- 3 Do not store the device in a hot or humid environment. Store it in a cool and dry place.
- 4 Keep the electrical cord away from heated surfaces.
- 5 Do not dispose of the device in heat or fire.
- 6 Do not clean the device with harmful chemicals or detergents.

04 Note for Injury

- 1 Having manicures done frequently can cause injuries to the nails as well.
- 2 Do not use the device if you have an open wound on your nail or hand.
- 3 If you have any skin diseases, heat-sensitive, allergic reactions, onychomycosis, or any other disorder, you should consult your doctor and medical professionals before using the device.


The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions.

If you require any technical support, **please contact us.**

SAVE THE INSTRUCTION MANUAL



05 How to Use?

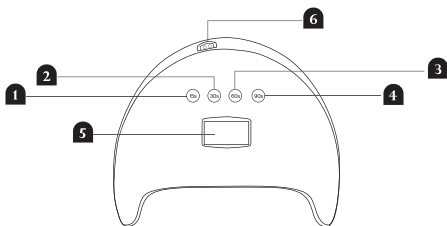

1 15s timer

2 30s timer

3 60s timer

4 90s timer

5 Time display

6 Power jack

Step 1: Connect the power cord to a secure outlet.

Step 2: Put your hands in and the lamp will automatically turn on(15s).

Step 3: Simply remove your hands when curing, and the lamp will turn off automatically.

or

Step 4: Choose a pre-set timer button(15s, 30s, 60s, 90s) as needed. The lamp will run until the preset time has elapsed.

06 Problems and Terms of Settlement

| Malfunction | Reasons | Solutions |
|--|--|--|
| The nail lamp does not work well. /The beads do not turn on. | The power cord is loose or poorly connected. | Reconnect the power cord and make sure it is properly connected. |



| Malfunction | Reasons | Solutions |
|--|--|---|
| The nail lamp does not work well. /The beads do not turn on. | The power cord is not compatible with outlet. | Please kindly note the plug is US plug. If you want to use the nail lamp in other countries or areas, please use it with a universal adaptor. |
| | The LCD screen has display. The countdown is normal. But the LED light beads don't turn on. | The LED light beads or the lamp's internal circuit is damaged. |
| | The LED light beads are defective, or the lamp's internal circuits are damaged. | When the light beads are damaged, please contact MelodySusie customer service team for help. |
| | When pressing the button, the lamp doesn't have any response. | Please check whether the surface of the button has water or dust. Clean the nail lamp with a dry cloth. |
| The gel nail polish cannot be cured or dried completely. | Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors. | Please try to extend the curing time appropriately until the nail surface is completely cured. For best results, avoid moving your hands too much until curing is complete. |
| | The light to your nail surface is not enough. | Please adjust the angle of your nail surface to face the light straightly to ensure sufficient illumination. |



| Malfunction | Reasons | Solutions |
|--|---|--|
| The gel nail polish cannot be cured or dried completely. | Please check whether the light beads of nail lamp are aging. | The light beads are aged and need to replace. |
| | Use the incompatible polish, such as regular nail polish, nail lacquer. | Please use LED, UV gel nail polish, or use a compatible nail lamp. |
| | The gel polish is a bit tacky after drying. | Please wipe your nail surface with a gentle cleanser or alcohol prep pads. |

07 Specifications

Input voltage range: 100-240V 50/60Hz

Items included:

1 x EOS 3 UV LED Nail Lamp

1 x Power Cord

1 x User Manual

E-mail: service@melodysusie.com

E-mail: service.uk@melodysusie.com

Website: www.melodysusie.com

08 Warranty and Customer Service

MelodySusie offers a 6 months limited warranty on quality related issues. Please apply for your extra 6 months warranty extension and download the instruction manual in other languages by registering on www.melodysusie.com if needed.

Thank you for purchasing from MelodySusie.
You are welcome to share your experience after receiving the product.
Please contact us for any technical support if needed.

 www.melodysusie.com

 US Service: service@melodysusie.com

 UK Service: service.uk@melodysusie.com

 FR Service: service.fr@melodysusie.com

 DE Service: service.de@melodysusie.com

 Whipple Rd, Union City, CA 94578

EU REP AMZLAB GmbH
Laubenhof 23, 45326 Essen, Germany

UK REP THEMIS AR support ltd.
85 Great Portland St. London, United Kingdom, W1W 7LT