




User Manual

Please read and follow this user manual carefully before use, product technology and software update won't be informed

Product Diagram

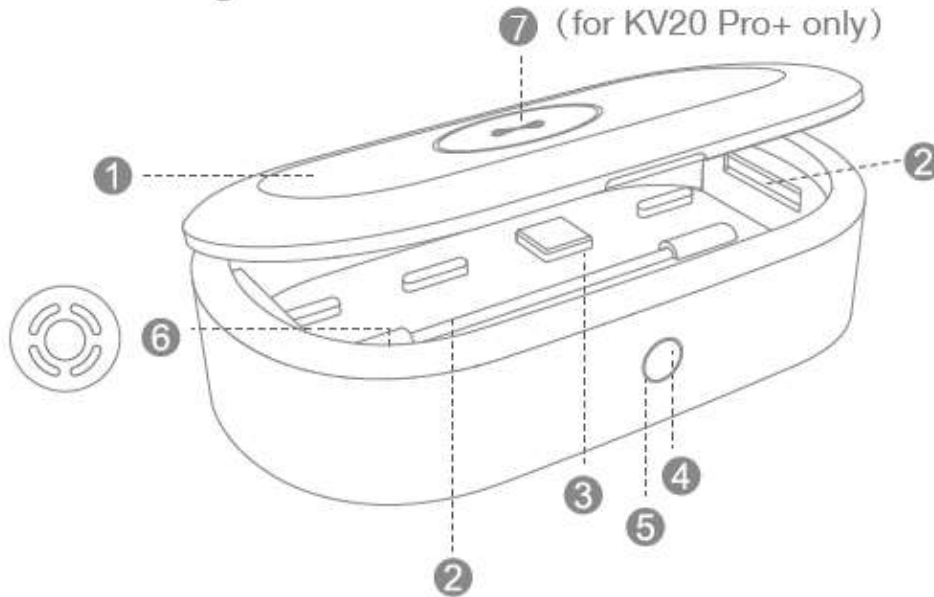

- ① Cover
- ② UV lamp
- ③ Cavity
- ④ Touch switch
- ⑤ LED status indicator
- ⑥ Aroma diffuser
- ⑦ Wireless Charger(for KV20 Pro+ only)

Specifications

Model	KV20 Pro	KV20 Pro+
Power Input	DC 5.0V/1.0A	DC 5.0V/2.0A, 9.0V/2.0A
Ultraviolet wavelength	253.7nm	253.7nm
Disinfection power	5W Max	5W Max
Wireless Output	/	10W Max
Product size	217x125x58 mm	217x125x58 mm
Product inner size	195x104x33 mm	195x104x33 mm

Sterilization Guide:

1. Put the mobile phone or other items to be sterilized into the box and close the cover.
 2. Sterilization mode: press switch once, and the sterilizer performs automatic sterilization for 8 minutes, the sterilizer will be stopped and the timer will be reset if the cover is opened; sterilization is automatically turned on and the timer is restarted after the cover is closed. Check "Specific explanation for indicator lights" for details of indicator instructions.
 3. Sterilization completed: The entire sterilization process is 8 minutes. After the operation is completed, the indicator turns to another light. Check "Specific explanation for indicator lights" for details of indicator instructions.
 4. Before the sterilization, add 2 or 3 drops of perfume oil into the aroma hole in the box to sterilize items at the same time during the process.
 5. Opening the cover automatically turn off the ultraviolet function (magnetic switch to prevent human body and eyes from harm)
- ※ Wireless charging version of the product defaults to the wireless charging mode after power on, indicator is on. Check "Specific explanation for indicator lights" for details of indicator instructions

Specific explanation for indicator lights:

Model		KV20 Pro	KV20 Pro+	Remark
Indicator	Standby mode	Blue light on	Blue light on	Indicator lights flashing once alternatively
	Sterilization	Red light on	Red light on	Cover is closed, short press to start
	Sterilization stopped	Blue light on	Blue light on	Opening cover turns off automatically and vice versa;
	Sterilization stopped manually	Blue light on	Green light on (Wireless Charging)	Cover is closed, press 3 seconds to turn off
			Blue light on (Wireless Charging standby)	
	Charging mode	/	Green light flashing	
	Wireless charger's protection mode	/	Blue light flashing	
	Smartphone fully charged	/	Blue light on	
Disinfection + Wireless charging		Red light on		

Warm Prompt

- ※ A maximum of two to three drops of perfume can produce a full aromatherapy effect, do not drop too much.
- ※ Please do not use any liquid containing alcohol (such as floral water, etc.) to avoid bad effects to the surface of silicone phone.
- ※ Sterilization will be stopped and UV lamp will be automatically turned off to avoid unnecessary damage to human body if the cover is opened in the process of sterilization; The operation will be recovered after the cover is closed again.
- ※ If the product has not been used for a long time, the UV light may have a warm-up process when disinfection begins, it's about 10 seconds long. After the warm-up, the UV light will automatically light up.

Notes

- ※ Do not disassemble the product by yourself.
- ※ Do not use this product in high temperature or humid environment, please keep away from fire and water.
- ※ This product is only suitable for mobile phone charging which supports wireless charging function.
- ※ If the phone does not have built-in wireless reception function, please purchase a wireless charging receiver separately for use.
- ※ If the mobile phone does not support the wireless quick charge function, it will automatically adjust to the charging efficiency of the mobile phone itself.
- ※ The charging contact surface on the back of the mobile phone shall not contain metal substances, such as iron sheet, ring and metal protective case.

Package List

- ※ (Wireless Charger) UV Sterilizer x 1
- ※ Type-C cable x 1
- ※ User Manual x 1
- ※ Wet rag x 1
- ※ Dropper x 1