


verilux[®]
The Healthy Lighting Company[®] Est. 1956

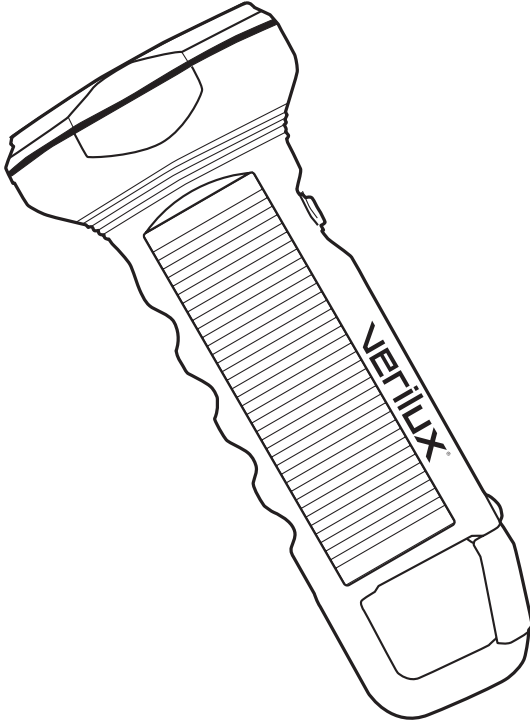

ReadyLight[™]

Solar Rechargeable Flashlight

VB03

Dear Customer,

Thank you for purchasing the ReadyLight™ Solar Rechargeable Flashlight. You have received an innovative and quality manufactured product, backed by a one-year limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call our toll-free number 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a Bright Day!

Nicholas Harmon

Nicholas Harmon
President, Verilux, Inc.


Features

- Durable, shock resistant solar panel never needs replacing and recharges the flashlight for up to 4 hours of bright, Natural Spectrum illumination.
- Environmentally friendly, rechargeable NiMH battery pack eliminates the need to purchase and dispose of expensive batteries.
- Night Glow Strip around the lens allows you to find your ReadyLight™, even in total darkness.
- Rugged ABS body and water resistant design provides protection from drops or water damage.
- Carabiner-style hook attaches easily to backpacks or belt loops.

Installing and Charging the Battery

Installing the ReadyLight Battery

1. Using a Philips head screwdriver, unscrew the battery compartment door on the side of the ReadyLight and carefully remove the side panel.
2. Locate the connector on the battery and locate the connector in the battery compartment.
3. Push the two halves of the connector together. Ensure that the connector is oriented properly, otherwise the ReadyLight will fail to operate and damage to the flashlight may occur.
4. Insert the battery pack into the flashlight.
5. Attach the battery compartment panel and tighten the screw securely. Do not over tighten the screw.

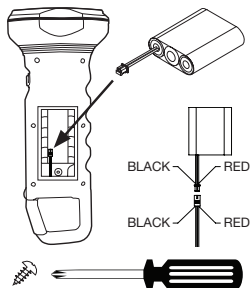

ATTENTION: for correct battery installation, insert battery as shown. Place wires between screw hole and battery, with connector to the left of screw hole.

Replacing the ReadyLight Battery

1. Use a Philips head screwdriver to unscrew the battery compartment door on the side of the ReadyLight and carefully remove the side panel.
2. Locate the connector to the battery. While holding both sides of the connector, carefully pull them apart.
3. Repeat the installation steps above to insert a new battery.

When replacing batteries, please ensure that you use only a Verilux® ReadyLight Replaceable Battery Pack.

To charge the battery pack, place the ReadyLight in an area with direct sunlight. Unit usually takes 10 hours to fully recharge in full sunlight, but you may use the flashlight at anytime.

This product contains NiMH batteries. They maybe discarded in household garbage.

▲WARNING: Discharge fully prior to disposal.

▲WARNING: Do not incinerate.

▲WARNING: Do not open or puncture batteries.

▲WARNING: Observe all national, state, and local rules and regulations for disposal of rechargeable batteries.

Five-Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of five years from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first five years of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

**Please visit our website at www.verilux.com or
call our Customer Service Department at**

1-800-786-6850

Representatives are available Monday – Friday, 9am – 5pm EST

verilux®

340 Mad River Park, Waitsfield, VT 05673