



A guide to using your Mipro Portable PA



Audiovisual Products Online

PH: 1300 014 923

www.avproductsonline.com.au

Mipro MA101A



Hand held microphone



**Belt Pack Transmitter &
Head worn microphone**

Rechargeable lithium battery for improved reliability, longer life, reduce weight and higher performance. Choose from either handheld transmitter microphone or belt pack transmitter with headset microphone option.

Lightweight, robust and battery operated, it can be hand carried, shoulder strapped or mounted on a microphone stand and ideal for addressing small crowds or as voice reinforcement for a teacher in low classroom environments.

Ideal applications include:

- School classrooms
- Places of worship
- Presentations, seminars and meetings
- Day-care activities; playground duty
- Indoor/outdoor gatherings
- Tour guides & Paging
- Fire fighters, law enforcement, search & rescue
- Street performers
- Factory or company tours



Mipro MA202B



Mipro MA101



Mipro MA202



Place speaker
on the stand




Open legs on
speaker stand and
tighten here

ADJUSTING MICROPHONE VOLUMES



Adjust individual Mic volumes here

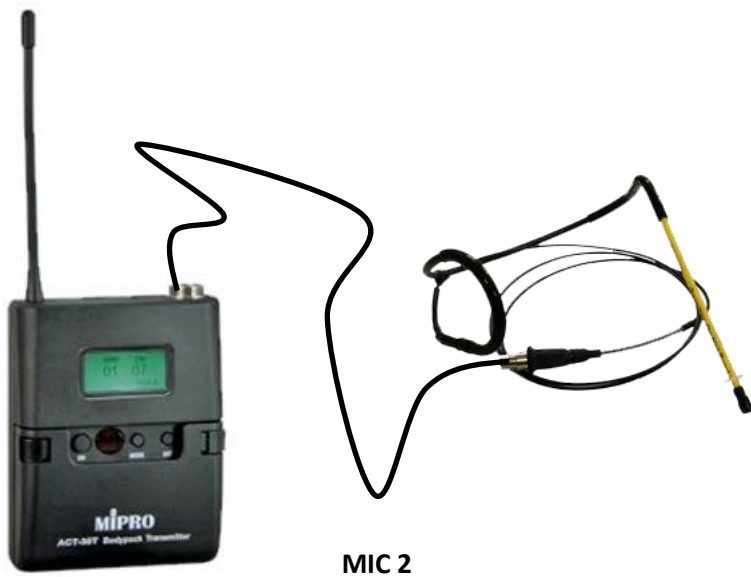

MIC 1

MIC 2

CHANGING BATTERIES IN YOUR HAND HELD MIC



Unscrew the bottom battery cover



Remove the two AA batteries and replace with two GOOD quality batteries



When you turn on the Mic a RED light will flash and then go off... this indicates the batteries are good.

Replace batteries if the red light remains constantly on.

Hold microphone close to your mouth and speak clearly.



Playing music with a summing lead



**Summing
lead**

Charging your Mipro Portable PA



Leave speaker OFF when charging!
Red light will flicker whilst unit is charging...
the **RED** light will remain constantly ON
when fully charged.
Allow over night to fully charge.



Meet the Family



**FOR FURTHER ADVICE ON
YOUR MIPRO PORTABLE PA
SYSTEM...**

**PLEASE CALL US ON
1300 014 923**