

Outdoor Station Clock/Thermometer


360° Rotation



Analog Time



Analog Thermometer

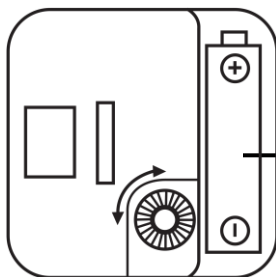


Battery Compartment
1-AA



Side View

Lock

Time Set
Knob

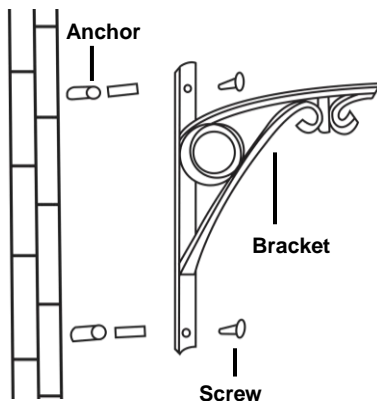

Anchor

Bracket

Screw

Get Started

Step 1: Lift the lock on the side of the case to open the clock case. One side is a clock, the other side is a thermometer.

Step 2: Remove the battery cover. Insert one new "AA" Alkaline battery according to the polarity marked.

Step 3: Set Time—turn the **TIME SET** knob to the desired time. Replace the battery cover, and replace the back of the clock case.

Step 4: Close the clock and close the lock on the side of the case.

Set Time

- Spin the **TIME SET** knob to adjust the time.

Mounting

For accurate temperature measurements, choose a location that is not subject to direct weather elements. The ideal location is out of direct sunlight, on the North side of a building or in a shaded location.

1. Place the bracket over the desired location. Through the 2 screw holes of the bracket, mark the mounting surface with a pencil.
2. Install the bracket with the screws provided at these marks.

Note: If it is a hollow wall, drill a hole and insert the 2 plastic anchors (Diameter: 5.5mm, Length: 35mm) in the holes. With the bracket in place, insert the screws in the bracket holes and tighten.

3. Rotate the clock to the desired position and tighten the knob on the top to keep the clock in place.

Specifications

Dimensions: 11.81 x 3.74 x 13.39 (in)
8" Dial

Temperature Range: -60°F to 120°F
(Fahrenheit only)

Battery Required: 1 x "AA" LR6 Alkaline
(not included)

Battery Life: 1 year

Care and Maintenance

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove the battery from equipment with is not to be used for an extended period of time.
- Remove used battery promptly.
- Clean with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the product.

1-Year Limited Warranty

La Crosse McCormick, LLC provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship. This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse McCormick, LLC for problem determination and service procedures. Warranty service can only be performed by a La Crosse McCormick, LLC authorized service center. The original dated bill of sale must be presented upon request as

proof of purchase to La Crosse McCormick, LLC or La Crosse McCormick, LLC's authorized service center.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE MCCORMICK, LLC WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you. For warranty work, technical support, or information contact:

Attn: La Crosse McCormick, LLC Warranty Dept.

2830 South 26th Street
La Crosse, WI 54601

Support: www.lacrosseclock.com/support

Product Registration:

www.lacrosseclock.com/register

