

PIVOT

pivotcase.com

INSTRU	JCTI	ON	MA	NL	JΑ


Document no. PM-C295-CA/FO Installation and Removal Manual	Revision 20-01	Date 08 June 2020	Page 1 of 5
FINI-C233-CAYTO Ilistaliation and Nemoval Manual	20-01	08 Julie 2020	1013



Better Connection. Better Protection.

Making the **Case** for Aviation.

Airbus C295 Long Term Removable Mount (LTRM™) Installation and Removal Manual

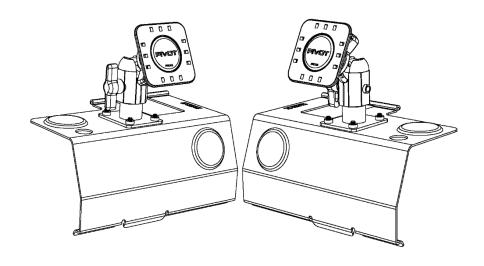



Document no. PM-C295-CA/FO Installation and Removal Manual	Revision 20-01	Date 08 June 2020	Page 2 of 5
FIVE-C233-CAYTO ITISCATIALION AND NETHOVALIVIATION	20-01	08 Julie 2020	2 01 3

Read Before Use

Follow the instructions to ensure proper installation, deployment and maintenance of the PIVOT PM-C295-CA and PM-C295-FO LTRM™ device.

For the purposes of this manual, the term "LTRM™ device" will be replaced with "device" as appropriate, as these terms are interchangeable.

Purpose

Provide information for correct installation, removal, and maintenance of the device for the Airbus C295.

Extent

This instruction manual is appropriate for all personnel involved in the installation, removal, or maintenance of the device for the Airbus C295.

Reference / Definitions

LTRM Long Term Removable Mount

Device LTRM™ device

CA Captain's Side Mount (PM-C295-CA)
FO First Officer's Side Mount (PM-C295-FO)



Revision Highlights

Initial publication.

Revision Record

Revision Number	Revision Date	Author	Technical Approval
20-01	08 June 2020	Jessica Gillespie Swanwick	Nate Stoffregen

Responsibility

PIVOT reserves the right to make design updates to meet new requirements without obligation to modify existing installations. This manual is subject to change without notice. Service Bulletins may be issued separately and their effect on this manual will be made evident by reissue of the appropriate list of Service Bulletins. This document can only be changed by an authorized PIVOT employee.

Illustrations

Visual depictions are for explanatory purposes only.



Document no. PM-C295-CA/FO Installation and Removal Manual	Revision 20-01	Date 08 June 2020	Page 3 of 5
--	----------------	----------------------	----------------

Overview

The PIVOT LTRM™ device consists of several parts:

- Contoured attachment plate
- Universal mounting plate

To ensure proper fit and function, the clip provided by Airbus must remain installed.

Total installation time for a shipset (CA and FO) is approximately five (5) minutes. Captain and First Officer devices are mirrored and have the same installation and removal process. Installation does not require tools. Accomplishing the steps detailed in the manual provide any user with required data for successful installation or removal. You may also want to refer to the following link: https://pivotcase.com/ltrm/.

Installation Instructions

Hold the device in both hands and place over the clip as shown.



Guide the device into position using both hands.



Apply pressure to the edge of the device closest to you and ensure it clicks into place.





9720 Landry Blvd., Spring, TX 77379

pivotcase.com

INSTRUCTION MANUAL

Docume	nt no.	Revision	Date	Page
PM-C2	295-CA/FO Installation and Removal Manual	20-01	08 June 2020	4 of 5

The installation is complete.



Attachment & Removal of PIVOT Case to LTRM

Refer to PIVOT Case User User Guide for details.

Removal Instructions

With both hands, grip the bottom edge of the device.



While pulling the edge, gently lift the device upwards.



Continue lifting the device upwards with both ends, while maintaining clearance from the clip.





pivotcase.com

INICED	ICT			NII I	
INSTR	UCII	IUIN.	IVIA	INL	JAI

Document no. PM-C295-CA/FO Installation and Removal Manual	Revision 20-01	Date 08 June 2020	Page 5 of 5	
--	----------------	----------------------	----------------	--

The removal is complete.

PIVOT



Daily Use Considerations

Scratches and other surface imperfections are typical and do not affect the performance of the device.

If a discrepancy is identified, remove the device from service and either repair or replace. If any part is visibly damaged, loose, or missing, remove the device from service and either repair or replace before further use. All surfaces of the device may be wiped with a solvent-free cleaner to remove any accumulated dirt or debris prior to being re-installed.

Additional Information

To learn more, please visit pivotcase.com for instructional videos, product support and additional information about PIVOT products. You'll find valuable online resources to enhance your user experience and see the complete line of PIVOT products.

If you have questions, please contact PIVOT Support.



www.pivotcase.com/support



sales@pivotcase.com



1-888-4-FLYBOYS (1-888-435-9269) Outside the U.S.A.: 281-895-0128



www.youtube.com/c/pivotcasevideo



TM and © 2020 Fly Boys All rights reserved. Designed in USA. Printed in USA.