## INSTRUCTION MANUAL





## SEE HOW IT WORKS

Go to www.all-in-capsule.com and see how the capsule machine works!

## WATCH THE VIDEO TUTORIAL AT WWW.ALL-IN-CAPSULE.COM





**BODY PLATE** 



CAPPING PLATE



FRAME PLATE



**TAMPER** 



POWDER SPREADER\*



MIDDLE PLATE\*



**SPILL GUARD\*** 




CAPSULE BODY & CAP

\*Part colours may vary depending on capsule size

## INSTRUCTIONS

## BEFORE FIRST USE

Use a Phillips screwdriver to attach the **Handle** to the **Tamper**. Screws are found pre-attached to the handle.

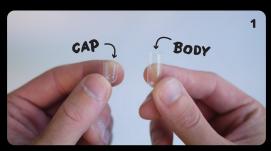

## OPEN ALL OF YOUR CAPSULES, SEPARATING THE BODY AND CAPS INTO DIFFERENT BOWLS

The large part is the body and the small part is the cap



PLACE THE BODY PLATE ON A TABLE



#### PLACE THE FRAME PLATE ON TOP OF IT



## POUR ALL OF THE CAPSULE BODIES ONTO THE FRAME PLATE



## SHAKE THE CAPSULE MACHINE GENTLY

So that all of the capsule bodies fall into place. Make sure all capsule openings are facing upwards



## LIFT UP THE FRAME PLATE AND ATTACH SPILL GUARD



## **POUR YOUR POWDER ON TOP**

Use the **POWDER SPREADER** to spread the powder evenly



USE THE TAMPER TOOL TO TAMP DOWN YOUR POWDER



## ADD A BIT MORE OF YOUR POWDER TO ENSURE ALL CAPSULES ARE FILLED



## MOVE THE BODY PLATE ASIDE AND TAKE OUT THE CAPPING PLATE




PLACE THE FRAME PLATE ON TOP AND POUR ALL OF YOUR CAPSULE CAPS IN



#### SHAKE THE CAPPING PLATE GENTLY

So that all of the capsule caps fall into place. Make sure all capsule openings are facing upwards

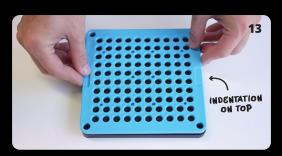

# REMOVE THE FRAME PLATE AND PLACE THE MIDDLE PLATE ON TOP OF THE CAPPING PLATE



## TAKE OUT THE BODY PLATE



## FLIP THE CAPPING + MIDDLE PLATE ON TOP OF THE BODY PLATE



## PRESS DOWN FIRMLY A COUPLE OF TIMES

Remember to press evenly all around the capsule machine. You should hear multiple snapping sounds as the capsules close



LIFT UP THE CAPPING PLATE AND YOUR CAPSULES ARE READY!

## FIND ALL OUR PRODUCTS AT

WWW.ALL-IN-CAPSULE.COM

#### EMPTY ALL-IN CAPSULES





VEGAN

GELATIN

#### ALL-IN CAPSULE FILLING MACHINES



Capsule size: 000



Capsule size: 00



Capsule size: 0



Capsule size: 1



# VISIT WARRANTY.ALL-IN-CAPSULE.COM TO ADD AN EXTENDED 12 MONTHS WARRANTY TO YOUR ALL-IN CAPSULE PRODUCT



If for any reason your not satisfied with your all-in capsule product through the **first 30 days**, we're happy to give all your money back!

Just let us know

support@allincapsule.com