



***Jabees***®

**OBees**


Quick Reference Guide

[www.jabees.com](http://www.jabees.com)

OBees is a V 4.1 Bluetooth Sport Headphones supporting multipoint connection and voice prompts in Chinese, English, Spanish and French .

- (1) LED Light
- (2) Microphone
- (3) Speaker
- (4) Micro USB Charging Contact
- (5) Volume Up / Next Song
- (6) Volume Down / Previous Song
- (7) MF Button (Multifunction Button)

## OVERVIEW OF OBEES:

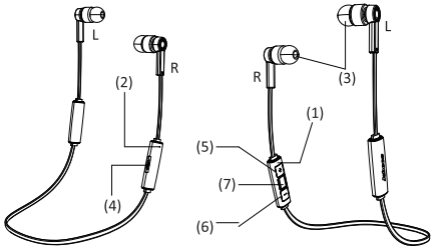

## **INTRODUCTION**

Thank you for purchasing our OBees Bluetooth Sport Headphone. This manual will help you to accurately operate OBees, but you should familiarize yourself with the Bluetooth function of your mobile phone or other devices before using the Bluetooth headphones OBees.

## **CHARGING UP OBees**

1. Plug one end of the USB charging cable into OBees.
2. Plug the other end of the USB charging cable into your computer or AC charger with USB port.
3. The red indicator light will be on.
4. When the battery is fully charged, the red LED light turns off and the blue LED light turns on.

## WHEN THE BATTERY IS LOW

You will hear the voice prompt "Battery Low",  
At this time, please charge up OBees.

Battery meter on iPhone and other  
iOS devices.



## **IMPORTANT**

- For first use, please charge up OBees fully beforehand.
- You must recharge OBees if it has been not used for more than 12 months.
- You must use the authorized charger to charge up OBees.

## **MUTIFUNCTION BUTTON**

Answer/End/Reject/Transfer Calls; Play/Pause Music; Voice Dialing; Redial; Language Selecting; Factory Reset.

## **TURNING OBees ON/OFF**

### **To turn OBees on:**

Long press MF button for 3 seconds. The blue LED light flashes with a voice prompt. The headphones are now turned on.

### **To turn OBees off:**

Long press MF button for 3 seconds. The red LED light flashes with a voice prompt. The headphones are now turned off.

## **PAIRING OBees WITH A MOBILE PHONE**

You are required to pair OBees with your mobile phone before using it.

1. Long press MF button for about 5 seconds until the blue LED light turns on with a voice prompt, and OBees is now in pairing mode.
2. Activate Bluetooth function on your mobile phone.
3. Set your phone to discover OBees and operate following the instruction.
4. If password or PIN-code is required, confirm with 0000.

## **PAIRING OBees WITH THE SECOND MOBILE PHONE**

OBees supports multipoint technology, which means that it can be paired and connected with two Bluetooth-enabled mobile phones and use at the same time.

1. Pair and connect OBees with the first mobile phone (Please refer to PAIRING OBees WITH A MOBILE PHONE )
2. Turn off the Bluetooth function of the first mobile phone.

3. Pair OBees with the second mobile phone.
4. Turn off OBees.
5. Turn on the Bluetooth function on first mobile phone.
6. Turn on OBees again and it will automatically connect to the two mobile phones.

## **MAKING CALLS**

Once OBees is successfully connected to your mobile phone, you can use it to make and receive calls. The headphones can be used with voice dialing if your mobile phone supports this feature. Please consult your mobile phone's manual for more information.

### **1. Voice Dialing**

Double click MF button, and there will be voice prompt, with indicator light flashing in blue. Then say the name of the person you want to call.

### **2. Usual Dial**

Enter and dial the number on your mobile phone as you normally do.



Once the call has been set up, the sound will be transmitted to your headphones automatically.

### **3. Redial**

Long press MF button for 2 seconds to redial the last number you called.

## **ANSWERING/ENDING/REJECTING CALLS**

When the headphones are turned on, and there is an incoming call, you will hear a musical tone.

- Press MF button to answer the call.
- Press MF button to end the call.
- Long press MF button for 2 seconds to reject the call.

## **PUT THE CALL ON HOLD**

Press and hold the MF-button for 2 seconds to put the current call on hold and accept the call waiting.

Press and hold the MF-button for 2 seconds to resume to the first call.

## **VOICE BROADCAST FUNCTION**

OBees supports voice prompts and reading incoming number.

## **TRANSFERRING CALLS**

To transfer a call to the mobile phone, you can double press the MF-button and the blue LED light flashes with a 'beep'. If you want to transfer the call back to OBees, double press MF-button again. More procedures may be involved for some mobile phones.

## **ADJUSTING THE VOLUME**

You can increase/decrease the volume by adjusting Volume Up/Volume Down button of OBees or your mobile phone.

Press Volume Up “ + ” button to increase the volume;

Press Volume Down “ - ” button to decrease the volume.

## **PLAYING/PAUSING MUSIC**

Press the MF-button to play or pause music.

Long press Volume Up “ + ” button to play next song;

Long press Volume Down “ - ” button to play previous song.

## **LANGUAGE SELECTING**

OBees supports voice prompts in Chinese, English, Spanish and French. When OBees is on and not connected with other devices, double press the “V+” button to select the language you need and you can hear voice prompt. At this time, OBees has been switched to a different language.

## **CONNECTING WITH A PC OR PDA**

You can connect OBees with a Bluetooth-enabled PC or PDA that supports headphones or hands free profiles. Please refer to the user manual of your Bluetooth-enabled PC or PDA for setup information.

## **FACTORY RESET**

To restore the headset to factory setting, you will have to turn off the headphones first. And then long press the MF-button for 8 seconds. When the blue LED light is off, the factory reset is successful.

## **GUARANTEE**

Jabees is a registered trademark of FreeTek International Co, Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of twelve (12) months from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.

## **WARNING**

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low volume as possible and avoid prolonged use of the earphone at excessive sound pressure levels. Please read the safety guidelines below prior to using the safety guidelines below prior to using this earphone.

### **(Prior to using this product follow these steps)**

1. Before putting on the earphone, turn the volume control to its lowest level.
2. Put the earphone on, and then slowly adjust the volume control to a comfortable level.

### **(During the use of this product)**

1. Keep the volume at the lowest level as possible.
2. If increased volume is necessary, adjust the volume control slowly.
3. If you experience discomfort or ringing in your ears, immediately discontinue using the earphone. With continued use at high volume, your

ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

## **SAFETY INFORMATION!**

- 1.If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
- 2.This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
- 3.Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause short circuit,which led to the fire or get an electric shock.
- 4.None of the components can be replaced or repaired by users. Only authorized dealer or service center may open the product.
- 5.If any parts of your product require replacement for any reason,including normal wear and rear or breakage, please contact your dealer.

6.If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.

**REMEMBER:**

Be sure to ensure safe driving, avoid distractions and follow local laws.