

Jabees[®]

Love Life Love Music

HearLink

Quick Reference Guide

www.jabees.com

Jabees HearLink is the 4-in-1 Bluetooth Remote Microphone Transmitter which can be used as the Wireless Remote Microphone, Bluetooth Transmitter (TX), Bluetooth Receiver (RX) and Bluetooth Stereo Headsets.


PACKAGE CONTENTS



1 x HearLink




1 x 3.5mm Stereo Earphones

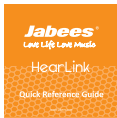

1 x User Manual



1 x 3.5mm Audio Cable





1 x USB Cable for Charging



1 x RCA Cable

OVERVIEW of HearLink

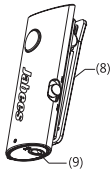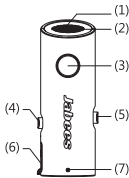

- (1) Microphone
- (2) LED Indicator Light for Mic
- (3) MF Button (Multifunction Button)
 - Play/Pause Music
 - Answer/Reject the Call
 - Transfer the Call
 - Pairing
- (4) Microphone/ AUX Mode Switch

- (5) 3-Way-Switch
 - Transmitter (TX)
 - Power Off
 - Receiver(RX)
- (6) USB Charging Port
- (7) LED Indicator Light for Host
- (8) Back Clip
- (9) 3.5mm Input/Output Jack

COMPATIBILITY

HearLink is compatible with any device that has one of the following audio outputs:



3.5mm Audio Jack




RCA Audio Jack

INTRODUCTION

Thank you for purchasing the Jabees HearLink the 4-in-1 Bluetooth Remote Microphone Transmitter. We hope you will enjoy it! This manual will help you to accurately operate HearLink, but please familiarize yourself with the Bluetooth function of your mobile phone or other devices before using HearLink.

HOW TO CHARGE

1. Plug the included USB charging cable into any powered USB port and the charging port on HearLink.
2. LED light turns on in solid red when charging.
3. LED light turns on in solid blue when fully charged. It takes approx 2 hours to fully charge HearLink.

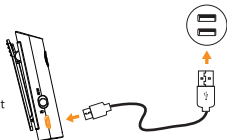

IMPORTANT

- HearLink can be charged and used at the same time. If you use HearLink while plugged in to USB power, it is not necessary to charge the unit before using it, or to turn it off after each use.
- The USB output of some TVs do not provide a stable current. It is recommended to use a computer or USB wall charger to charge HearLink.

WHEN THE BATTERY IS LOW

When the LED light flashes in red every 5 seconds along with the voice prompt, that means the battery is low, please recharge HearLink.

HOW TO CONNECT


WIRELESS REMOTE MICROPHONE

CONNECTING TO *BHearing* (Jabees Bluetooth Personal Hearing Amplifiers) OR OTHER BLUETOOTH AUDIO DEVICE


Using the HearLink enhances your hearing experience by extending the listening range so you can enjoy understanding conversations in a variety of social listening situations.

• Steps to Pair and Connect:

1. Turn on HearLink by switching the 3-Way-Switch to Transmitter (TX).

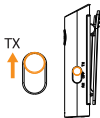

2. Switch the Mic/AUX Mode Switch to Mic.

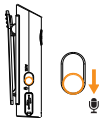


3. Press and hold the MF button on HearLink for about 3 seconds until you see the LED light flashes in blue twice quickly. HearLink is now in pairing mode.




4. Turn on *BHearing* or other Bluetooth audio device and turn it into pairing mode. (Consult the user manual of *BHearing* or other Bluetooth audio device to get the instruction.)



5. HearLink will be connected to BHearing or other Bluetooth audio device automatically within 1 minute.

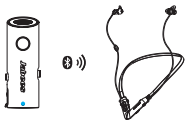

6. Once the connection is successful, the LED Indicator Light for Mic will turn on in solid green. You can now use HearLink to stream the crystal clear voices right to BHearing or other Bluetooth device from up to 10 meters away.

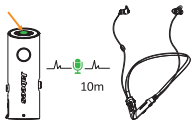

Want to hear more clearly from—the person who uses BHearing or other Bluetooth audio device, simply plug the included 3.5mm stereo earphones in HearLink .



NOTE

After the initial pairing, HearLink will automatically connect to BHearing or other Bluetooth audio device as soon as you turn both devices on.

TRANSMITTER (TX) MODE

CONNECTING TO TV OR OTHER AUDIO DEVICES


HearLink includes two connection options as the transmitter. Consult the user manual for your TV or other devices to find the appropriate connector to use for audio output (Audio Out).

Option 1: 3.5mm Headphone Jack


Some TVs and most standalone receivers have a headphone jack on the front and side. To use HearLink with the headphone jack, plug the included 3.5mm stereo audio cable into the headphone jack on the TV and the 3.5mm input/output jack on HearLink.

NOTE:

TV speakers will typically be muted automatically when the headphone jack is in use. The volume can be controlled using the TV or remote controller and will affect the volume of HearLink.

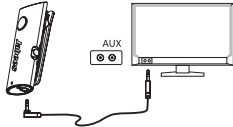**Option 2: RCA Audio Out (Red and White Connectors)**

Older TVs usually have analog audio output with RCA (red and white) connectors. To use the RCA output, attach the included RCA adapter to the 3.5mm stereo audio cable. Plug the connectors of the RCA adapter into the matching-color RCA jacks on the TVs and

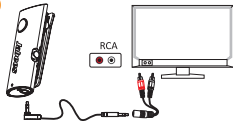
**NOTE:**

Some older TVs do not automatically output sound via RCA for certain inputs. To enable RCA audio output, locate the audio output setting on your TV with the options 'FIXED' and 'VARIABLE', sometimes labeled 'SET MONITOR OUT', and change this setting to 'VARIABLE'. If you still do not hear any sound, look for a setting that controls the TV's internal speakers and set it to 'OFF'.

- **Steps to Pair and Connect:**

Prior to first use, HearLink must be paired with the Bluetooth headphone or other Bluetooth audio device.

1. Switch to 'TX' mode when HearLink is turned off.

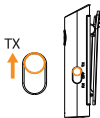

2. Switch the Mic/AUX Mode Switch to AUX.





3. Press and hold the MF Button for about 3 seconds to turn HearLink into pairing mode, you will see the LED light flashes in blue twice quickly. HearLink is now in pairing mode.



5. HearLink and your Bluetooth headphones or other Bluetooth audio devices will be connected automatically in 1 minute when both devices are in pairing mode simultaneously.

4. Put your Bluetooth headphones or other Bluetooth audio device into pairing mode. (Consult the user manual of the device to find out how to go into the pairing mode.)

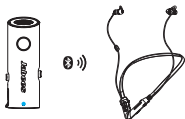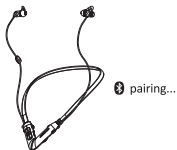


RECEIVER (RX) MODE

CONNECTING TO CAR AUDIO SYSTEM OR OTHER AUDIO DEVICES

HearLink can be used as the Bluetooth Receiver to convert your non-Bluetooth audio devices into wireless.


Option 1: 3.5mm Headphone Jack

Plug the included 3.5mm stereo audio cable into the headphone jack on the audio devices (*Car AUX-In, Wired Speaker Line-In, Wired Headphones Line-In, etc*) and the 3.5mm input/output jack on HearLink.

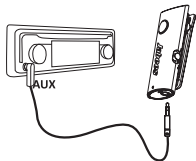

Option 2: RCA Audio Out (Red and White Connectors)


To use the RCA input of your HiFi Amplifier, attach the included RCA adapter to the 3.5mm stereo audio cable. Plug the connectors of the RCA adapter into the matching-color RCA jacks on the HiFi Amplifier and plug the attached 3.5mm cable into the 3.5mm input/output jack on HearLink.

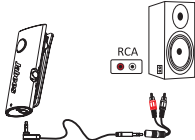


• Steps to Pair and Connect:

Prior to first use, HearLink must be paired with at least one mobile phone or other device.


1. Switch to 'RX' mode when HearLink is turned off.

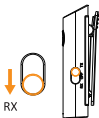

2. It will go into pairing mode automatically with LED light flashes in blue and red alternatively.

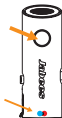

3. Activate Bluetooth on your mobile phone, set your phone to discover 'HearLink' and follow the instruction. (If your phone asks for passkey or PIN-code, confirm with '0000' 4 zero)

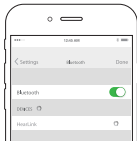

4. HearLink LED light flashes in blue when connection is successful.




BLUETOOTH STEREO HEADSETS

CONNECTING TO MOBILE PHONE


HearLink can be used as the Bluetooth Stereo Headsets for phone calls and music streaming.

• *Steps to Pair and Connect:*

1. Switch to 'RX' mode when HearLink is turned off.

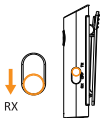

2. Press and hold the MF Button for about 3 seconds to put HearLink into pairing mode, you will see the LED light flashes in blue and red alternatively.

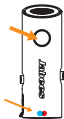


4. HearLink LED light flashes in blue when connection is successful.



3. Activate Bluetooth on your mobile phone, set your phone to discover 'HearLink' and follow the instruction. (If your phone asks for passkey or PIN-code, confirm with '0000' 4 zero)



5. Plug the included 3.5mm stereo earphones in HearLink for wireless phone calls and

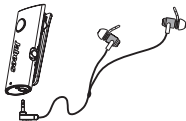

MAKING CALLS

Once HearLink is successfully connected to your mobile phone, you can use them to make and receive calls. Please consult your mobile phone's manual for more information.

DIAL BY THE PHONE KEYS

Enter and dial the number on your mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to your HearLink automatically.

ANSWERING/ENDING/REJECTING CALLS

When HearLink is turned on, and there is an incoming call, you will hear a musical tone.

-Press MF Button to answer the call.

-Press MF Button to end the call.

-Long press MF Button for 2 seconds to reject the call.

VOICE BROADCAST FUNCTION

HearLink supports voice prompt in English under RX mode.

TRANSFERRING CALLS

During both incoming call and outgoing call state, you can press and hold the MF Button for about 2 seconds to transfer the call to the mobile phone. If you want to transfer the call back to HearLink, press and hold the MF Button for 2 seconds again. More procedures may be involved for some mobile phones.

ADJUSTING THE VOLUME

There is no volume button on HearLink, please adjust the volume via the volume keys on your mobile phone or other Bluetooth device.

PLAYING/PAUSING MUSIC

Playing Music: Short press the MF Button.

Pausing Music: Short press the MF Button

HOW TO RECONNECT

HearLink will stay connected until either the unit or headphones/speakers/mobile phone are turned off or taken out of range. It is not necessary to turn off HearLink or headphones/speakers after each use

except to conserve battery.

Previously connected Bluetooth headphones/speakers will reconnect to HearLink automatically once turned back on. If HearLink itself is turned off, it is recommended to turn it back on first before turning on the connected headphones/speakers so that it can accept incoming Bluetooth connection from the headphones/speakers. If the headphones/speakers are already on, turn them off and then on again.

Note:

1. It may take up to 60 seconds for audio transmission to start after headphones/speakers re-connect.
2. HearLink will be turned off automatically if it fails to connect to the device in 5 minutes.

FACTORY RESET

To restore the HearLink to factory setting, you will have to turn on HearLink and make sure it's not connected to any device. Press and hold the MF button for about 8 seconds, the LED light flashes in blue and red simultaneously, then the factory reset is successful.

Note:

The TX and RX are 2 individual modes, so you will have to do the factory reset under each mode if you need to. For example, doing the factory reset under the TX mode won't affect the RX mode.

GUARANTEE

Jabees is a registered trademark of FreeTek International Co, Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of twelve (12) months from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.

WARNINGS

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low volume as possible and avoid prolonged use of the earphone at excessive sound pressure levels. Please read the safety guidelines below prior to using the safety guidelines below prior to using this earphone.

(Prior to using this product follow these steps)

1. Before putting on the earphone, turn the volume control to its lowest level.
2. Put the earphone on, and then slowly adjust the volume control to a comfortable level.

(During the use of this product)

1. Keep the volume at the lowest level as possible.
2. If increased volume is necessary, adjust the volume control slowly.

3. If you experience discomfort or ringing in your ears, immediately discontinue using the earphone. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

SAFETY INFORMATION!

1. If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
2. This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
3. Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause short circuit, which led to the fire or get an electric shock.
4. None of the components can be replaced or repaired by users. Only authorized dealer or service center may open the product.
5. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
6. If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.

REMEMBER

Be sure to ensure safe driving, avoid distractions and follow local laws.