

LUNAR MIRAGE



USER MANUAL

LUNAR MIRAGE

Thank you for choosing the boAt Lunar Mirage as your fitness transformation companion.


Allow this manual to guide you through the functioning of your smartwatch. Please read it thoroughly before using it for a smooth sail. You may refer to these instructions for later use as well.



- Package Contains:**
- boAt Lunar Mirage x1
 - USB magnetic charging cable x1
 - User Manual x1
 - Warranty Card x1


CHARGING THE WATCH

The smartwatch must be charged before initial use. It takes up to 2 hours to be fully charged. Connect and charge the watch with the image below as a reference, using a 5V/2A adapter.

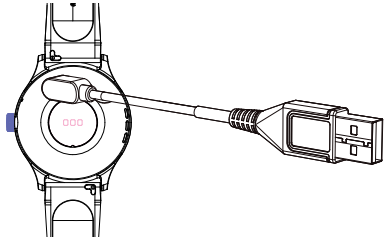

TURNING THE WATCH ON/OFF

To restart or turn the watch on/off, long-press the side button for 3-5 seconds. You can wake up the screen by lifting your wrist.

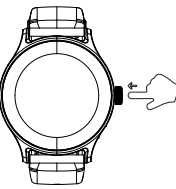

CONNECTING TO THE APP

1. Download the boAt Wearables app on your phone.

Available on both App Store (iOS 12.0 and above) and Google Play Store (Android 7.0 and above) OR



Scan [QR CODE] (Also available on the watch)

2. Connect the device with the boAt Wearables app; ensure that the phone's Bluetooth, as well as the GPS functionalities, are turned on
3. Select Lunar Mirage on the app's home screen and click pair to connect.
4. Once connected, you will get an alert to connect with LUNARMIRAGE, click pair if need to receive or make calls from the watch
5. To use all your Lunar Mirage features seamlessly, tap on 'yes' to the 'connection' and 'grant access' system prompt.
6. Disable battery optimization



Note: To ensure connectivity throughout your journey, make sure the app is allowed to always run in the background of your phone.


SYNCING YOUR SMARTWATCH TO THE APP

- Data Synchronization**
- Open the app on your phone.
 - Make sure your Lunar Mirage is connected to the app.
 - Synchronization will start automatically once you enter the app interface.
- Note: Synchronize data at least once a day to avoid data loss in the watch.

NAVIGATING THROUGH THE FUNCTIONS

SHORT PRESS THE SIDE BUTTON FOR THE MAIN MENU

- Phone Contacts**
- Add up to 10 contacts from boAt Wearables app. You can select any contact to directly dial from the watch.

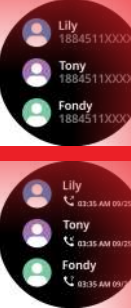

- Call History**
- You can find recently received, missed, and outgoing call logs in the call history of the watch.

Factory Reset

Tap on this to reset watch data.

*Note: All data will be erased if watch is reset

About

Shows the device details.




System Menu

Tap on this to reboot the watch.

Power Off

Tap on this to switch your watch off.

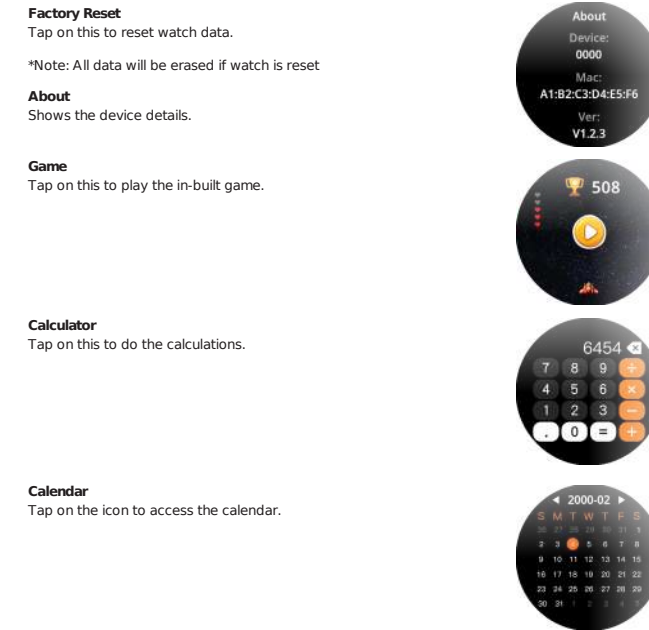

SWIPE DOWN FOR THE SHORTCUT MENU

You can access Switch Audio, Screen on Display, Alarm, Brightness, QR code, settings, and DND.

SWIPE LEFT TO ACCESS ALL DATA.

You can access activity, heart rate, SpO2, and stress. You can also customize the data according to your preferences.

SWIPE RIGHT TO ACCESS RECENTLY USED

You can access Weather, Music, and recently used features.

SWIPE UP TO ACCESS THE NOTIFICATIONS.


You can check all the notifications from here.

FUNCTIONALITY OF THE SIDE BUTTON

You can rotate the side button to change the watch faces. Short press the side button to go back to the previous function.

PRODUCT PARAMETERS:

Model	Lunar Mirage
Screen type	152" HD Display
Battery capacity	290mAh
Net weight	46g
Bluetooth version	BLE5.3 +BT3.0
Working temperature	-10°C-40°C
Charging time	2 Hours
Working time	2 days +7 days
Water Resistance	IP67
Frequency band	2.4GHz

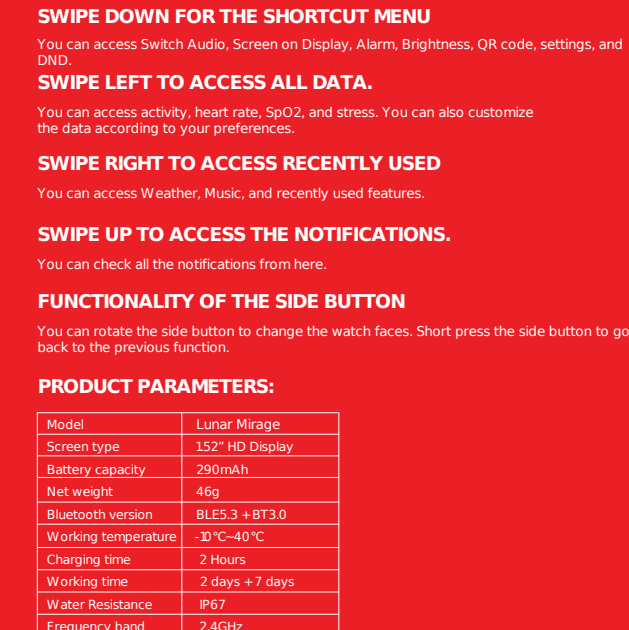

Female Wellness

Enable and set the details on the boAt Wearables app and get the alerts of your period and ovulation dates on the watch.

Once the asleep criteria are met, your smartwatch will start recording from 8 pm at night to 10 am in the morning the next day. Once you lie down and watch detects no movement for 30 minutes, it will start recording, and will stop recording if it detects excessive movement. You can check the data on the app only after the awake criteria is met. You can also track sleep scores on the watch or through the boAt Wearables app.

Note: Measurements are for reference only and not for medical purposes

Heart Rate Monitor

Wear the watch on your wrist, then click on the icon to start measurements. You can view the detailed data through the app.

Note: Measurements are for reference only and not for medical purposes

Stress monitoring

Click this option to start the stress monitoring. Make sure you wear your watch on your wrist properly to get accurate results.

Analysis of the measurement is Relax: 1-29 Normal: 30-59 Medium: 60-79 High: 80-100

Note: Measurements are for reference only and not for medical purposes.

MAINTENANCE:

Regularly clean your wrist and the strap of the smartwatch, especially after sweating during exercise or being exposed to substances such as soap or detergent, which may get stuck on the other end of the product.

Do not wash the strap with a household cleanser. Please use soap less detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

For spots or stains that are not easy to remove, scrub the area with rubbing alcohol and then follow the above procedure.

FAQ

Search for the app to connect keeps failing

1. Keep the boAt Wearables app updated to the latest version
 2. Close all the programs on the watch → Stop and restart Bluetooth and GPS → Connect again
 3. Check and enable notification functions of your phone and keep the phone and watch in close contact.
- Note: Make sure your phone system meets Android 7.0 and above and iOS 12.0 and above.

My Watch Lunar Mirage is receiving no alerts, texts, or phone calls.


Make sure smart reminders on the app are on and synced to Lunar Mirage. Also make sure your notification center of the phone is displaying messages. Only then will your smartwatch also display those notifications. Make sure app is running in the background and battery optimization feature on the phone is disabled.

My Bluetooth keeps getting disconnected

1. Make sure there is not more than 7m distance between Bluetooth on the phone & the watch.
2. There is no obstacle in between the watch and the phone.
3. Make sure the app is running in background

Which functions of Lunar Mirage need Bluetooth to work?

Call & Text Notifications, Find My Phone, music control, camera control, weather forecast, cloud and custom watch faces and Bluetooth calling need Bluetooth connectivity to work.

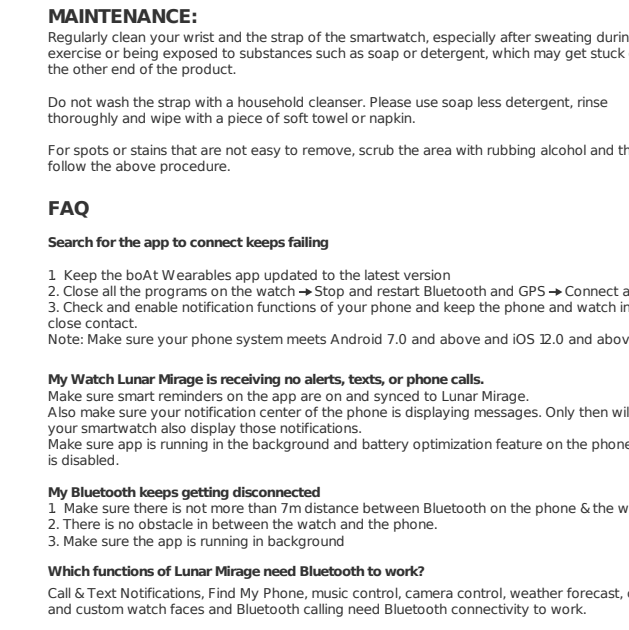

Sleep Monitor

Tap on the icon to review the sleep data of the previous night. Once the asleep criteria are met, your smartwatch will start recording from 8 pm at night to 10 am in the morning the next day. Once you lie down and watch detects no movement for 30 minutes, it will start recording, and will stop recording if it detects excessive movement. You can check the data on the app only after the awake criteria is met. You can also track sleep scores on the watch or through the boAt Wearables app.

Note: *For accurate sleep data recording, the asleep criteria have to be met, including limited movement, wrist positions and angles, and more. *The awake criteria will be met only after it records some noticeable movement

SpO2 monitoring

Wear the watch on your wrist, then click on the icon to start measurements. You can view the detailed data through the app.

Note: Measurements are for reference only and not for medical purposes.

SpO2 monitoring

Wear the watch on your wrist, then click on the icon to start measurements. You can view the detailed data through the app.

Note: Measurements are for reference only and not for medical purposes.

Will it be okay to take a bath wearing Lunar Mirage?

The IP67 water resistance will only work under the following conditions: (1) Maximum depth of water: 15m (2) Maximum time for exposure to water: 10 minutes The watch isn't suitable for hot baths, hot springs, saunas, snorkeling, diving, water skiing and other wading or deep-water activities with high-speed water flow.

SAFETY & PRODUCT INFORMATION

Battery

- Do not disassemble, bore or damage the battery.
- Do not disassemble the built in batteries of non-replaceable battery devices.
- Do not use sharp objects to remove the battery.

Health Warning


- If you are wearing a pacemaker or other implanted electronic devices, please consult your doctor before using the heart rate monitor of the watch.
- The optical heart rate sensor will glow green. If you suffer from epilepsy or are sensitive to blinking light sources, please consult your physician before wearing this device.
- The device tracks your daily activities through sensors. This data is intended to tell you about your daily activities such as steps, sleep, distance, heart rate and calories, but may not be completely accurate.
- The device accessories, heart rate sensor, oxygen level monitor, and other relevant data is designed for fitness and not for medical purposes. They are not applicable to the diagnosis, monitoring, treatment or prevention of any diseases or symptoms. The heart rate and blood pressure data is for reference only. We're not responsible for any deviation in data.
- Avoid wearing the watch too tightly. Make sure you keep your skin dry - the area that comes in contact with the watch. If symptoms such as redness or swelling appear on your skin, immediately stop using the watch and consult the doctor.

Things to keep in mind

- Sync data everyday days to avoid data loss.
- Water Resistance will not work for seawater, acidic and alkaline solutions, chemical reagents & other corrosive liquid. The damage or defects caused by misuse or improper use are not covered by the warranty.
- Sports modes support up to 6 hours of exercise at a time.

Which functions of Lunar Mirage need Bluetooth to work?

Call & Text Notifications, Find My Phone, music control, camera control, weather forecast, cloud and custom watch faces and Bluetooth calling need Bluetooth connectivity to work.

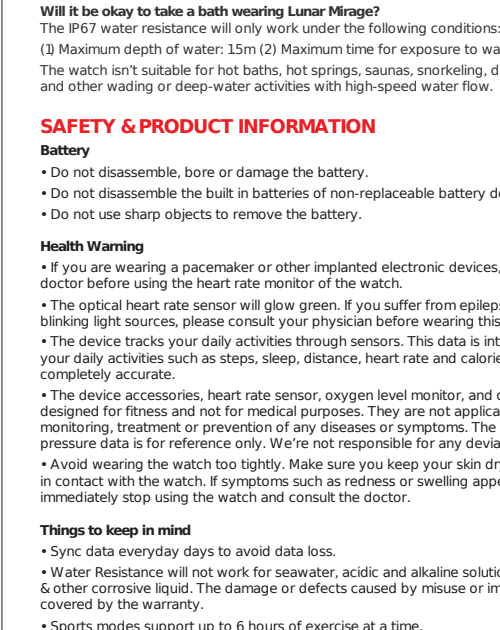

Breathe

Click on the breath exercises icon to regulate your breathing by doing breathing exercises. You can set the time and level of exercise.

Note: *For accurate sleep data recording, the asleep criteria have to be met, including limited movement, wrist positions and angles, and more. *The awake criteria will be met only after it records some noticeable movement

Notifications

You can check all the notifications from here.

Alarm

Tap on this to set an alarm on your watch.

Music Control

Tap on the remote music control icon on your watch to play music from your phone.

*Note: Some apps with different protocols might not work.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT SUBSTITUTE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

