

### Care Instructions:


*The Coventry Brassworks Product you have just purchased is designed to provide you with long lasting beauty and dependability. To ensure your product's longevity, please follow the following care instructions.*

*When installing, we recommend you lay all parts on a soft cloth or towel to avoid scratching or damaging the product. To care for your fitting, wipe with a clean, soft, damp cloth and blot dry as often as possible. Never use abrasive cleansers, sponges, or acidic cleaning products as these may damage the finish and may VOID THE WARRANTY.*

# COVENTRY

BRASS WORKS LIMITED

## Accessories Installation Instructions

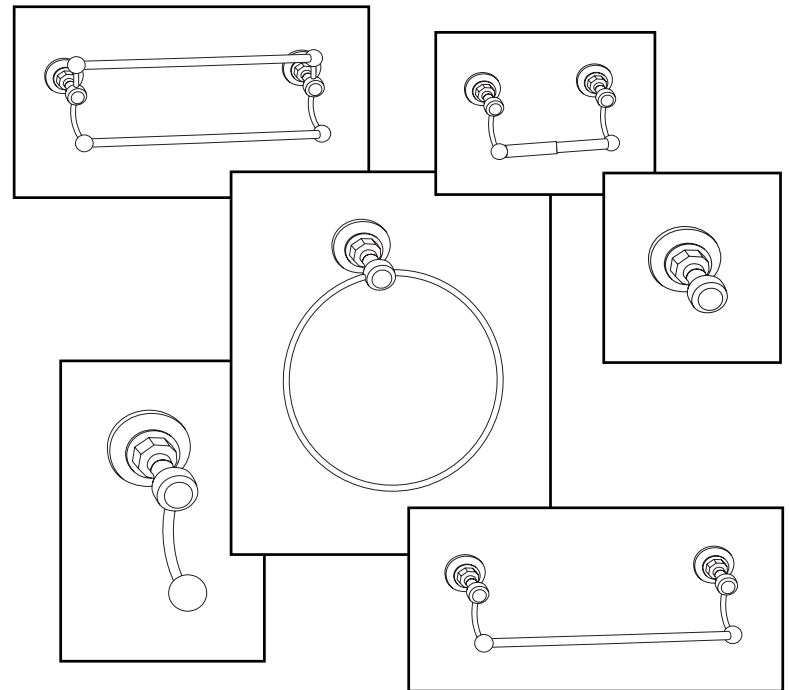

# Accessory Installation Instructions

## Robe Post, Single Robe Hook and Towel Ring

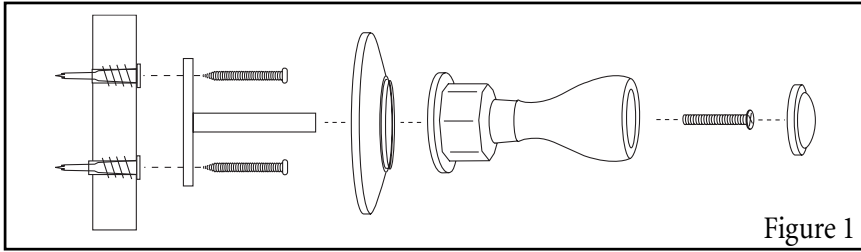


Figure 1

### Step 1:

For solid walls or wood stud walls, only wood screws will be needed. Drill two 1/8" holes using the mounting bracket as a guide. The holes should be 1-1/8" apart and should be located where the accessory will be installed. For dry wall or hollow walls, drill two 1/4" holes to accommodate the necessary plastic anchors.

### Step 2:

If using wood screws, simply secure the mounting bracket to the wall by tightening the screws. Run the screws through the bracket and into the 1/8" drilled holes, as shown in Figure A.

If installing into a dry or hollow wall, first screw plastic anchors into the 1/4" drilled holes. Then place mounting bracket over anchors and tighten screws into the anchors, securing bracket to the wall. See Figure B.

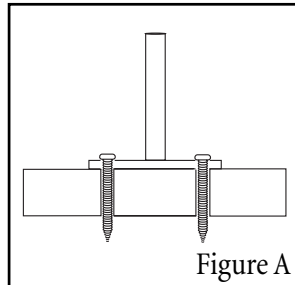


Figure A

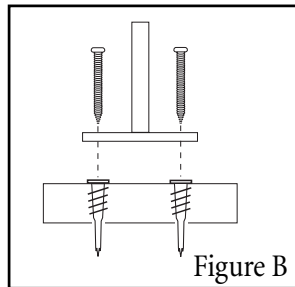


Figure B

### Step 3:

Place the escutcheon and accessory post onto the mounting bracket. Insert the mounting screw through the post and into the bracket and tighten securely.

### Step 4:

Finish by placing Coventry button over the top of accessory post and tighten. See Figure 1.

*For Care Instructions See Page 4.*

## Single Towel Bars, Double Towel Bars and Tissue Holder

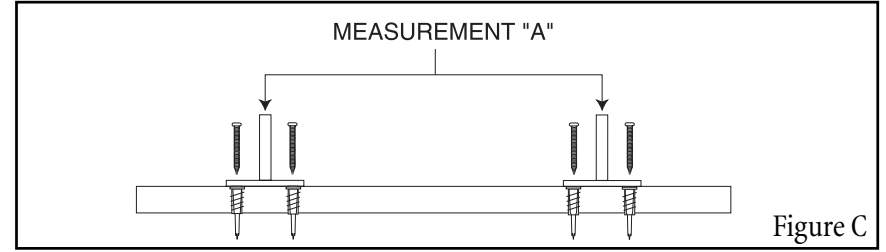


Figure C

### Step 1:

Follow steps 1 through 4 on previous page, but install a second mounting bracket and accessory post the specified distance away, according to Measurement A in the table below. See Figure C.

Accessory	Measurement A
Single Towel Bar 18"	18"
Single Towel Bar 24"	24"
Single Towel Bar 30"	30"
Double Towel Bar 18"	18"
Double Towel Bar 24"	24"
Double Towel Bar 30"	30"
Tissue Holder	6"

### Step 2:

Tighten posts onto mounting brackets, making sure the holes in the posts are facing each other. For the single and double towel bars, turn the right post 1/8 of a turn counter clockwise down and the left post 1/8 of a turn counter clockwise up. Insert the bar into the left post and hold the end of the bar to the right post. Turn each post back to its fully tightened position. The bar will slip into the holes as you turn the posts. For the tissue holder, simply compress the roller mechanism and insert into the holes. The spring will hold it in place.

#### Part Numbers

18-800-00 Robe Post	18-860-00 Single Towel Bar 18"
18-811-00 Single Robe Hook	18-861-00 Single Towel Bar 24"
18-840-00 Towel Ring	18-862-00 Single Towel Bar 30"
18-850-00 Tissue holder	18-863-00 Double Towel Bar 18"
	18-864-00 Double Towel Bar 24"
	18-865-00 Double Towel Bar 30"