



**Ceramic Disc Cartridge
Installation Instructions:
KA-900-30xx**

LP-100-70

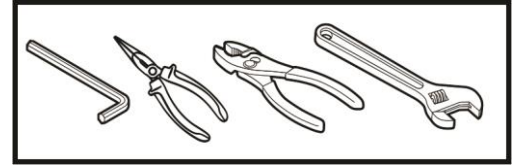

1

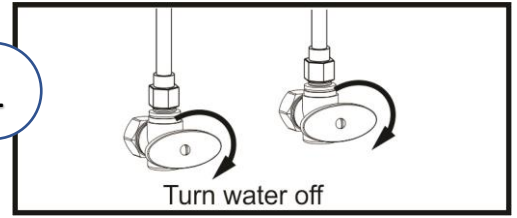

2



Remove indicator

3



Use a 2.5mm allen wrench
to loosen the screw.
(Counter clockwise)

4



Remove handle. Remove
collar by twisting it in a
counter clockwise direction.

5



Remove retaining nut in a counter
clockwise direction

6



Remove cartridge. Clean area
before installing new
cartridge.

7



Align holes on cartridge with
holes on the faucet. Install
replacement parts in reverse
order.