


Setting up WiFi via Mobile/Tablet device

Ensure the camera is connected to your router with the ethernet cable and powered on. Locate the camera on the PHYCAM app and wait for 'online' status to appear.

Setting up Wi-Fi via iOS device

Tap on the arrow  on the right side of the camera, the sliding menu will be displayed.

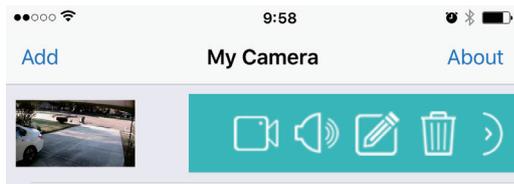


Tap the **Edit Camera** icon  from the sliding menu.

And then go to **Advanced Setting > WiFi Networks**.



Press **“WiFi Networks”**, then the camera will search for available Wi-Fi networks around it.

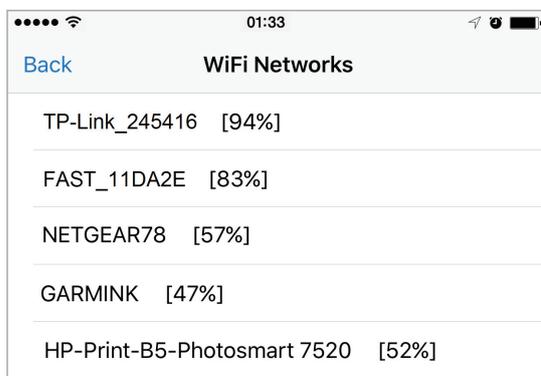


Select your network from the list. Type your Wi-Fi password and press “OK” button to complete the Wi-Fi setup.



After a successful wireless setup, you can remove the network cable and the camera should work through the wireless network after a short delay.


Setting up Wi-Fi via Android device

Tap on the arrow  on the right side of the camera, the sliding menu will be displayed.

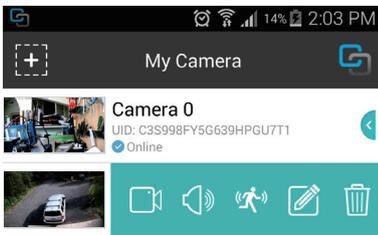


Tap the **Edit Camera** icon  from the sliding menu.

And then go to **Advanced Setting > Wi-Fi Setting**.

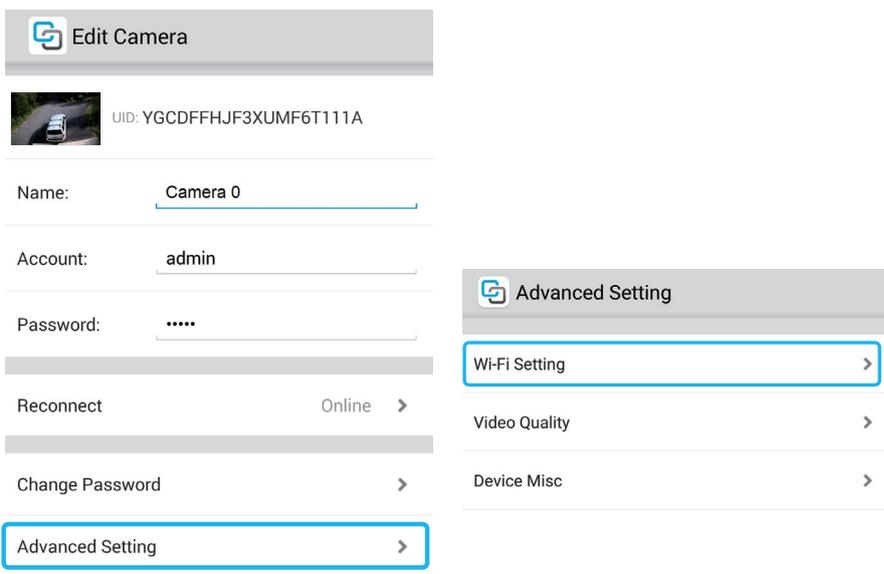

Press **“Wi-Fi Setting”** , then the camera will search for available Wi-Fi networks around it.

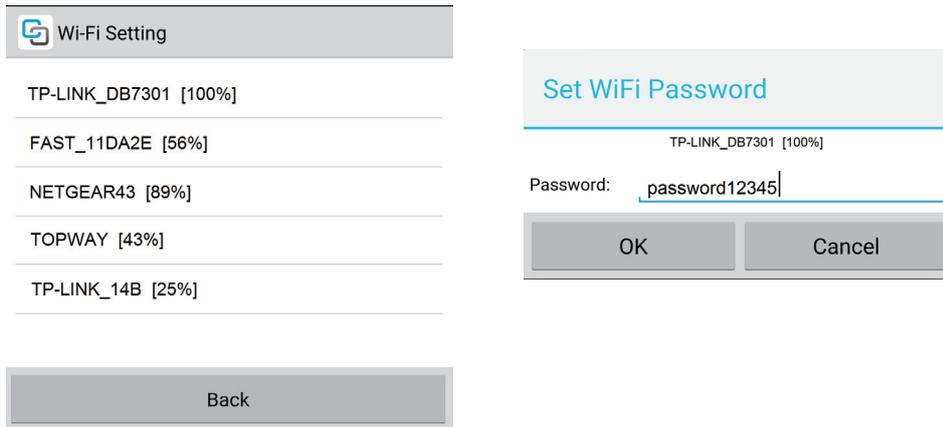

Select your wireless network from the list. Type in your Wi-Fi password and then press **"OK"** to save the settings. After a successful wireless setup, remove the network cable and the camera should work through the wireless network after a short delay.

Find additional support and information

For more information or support, visit <http://www.phylink.com> or contact support@phylink.com



Scan QR Code to get support