

**EdenPURE 5 Air Purifier
A 4646
OPERATION MANUAL**




EdenPURE 5 Air Purifier STERILIZES BOTH AIR AND SURFACES

Thank you for purchasing the EdenPURE 5 Air Purifier .

For maximum benefits please read this entire manual.

Index

Index	2
Advanced Functions	3
Overview of Operating Modes.....	4
Plasma Button & Benefits.....	5
Fan Speed, UV Benefits.....	5-6
Placement.....	6
Service Instructions.....	7
Remote Control	8
Specification & Technical Data	9
Cautions.....	4,9
Warranty.....	10

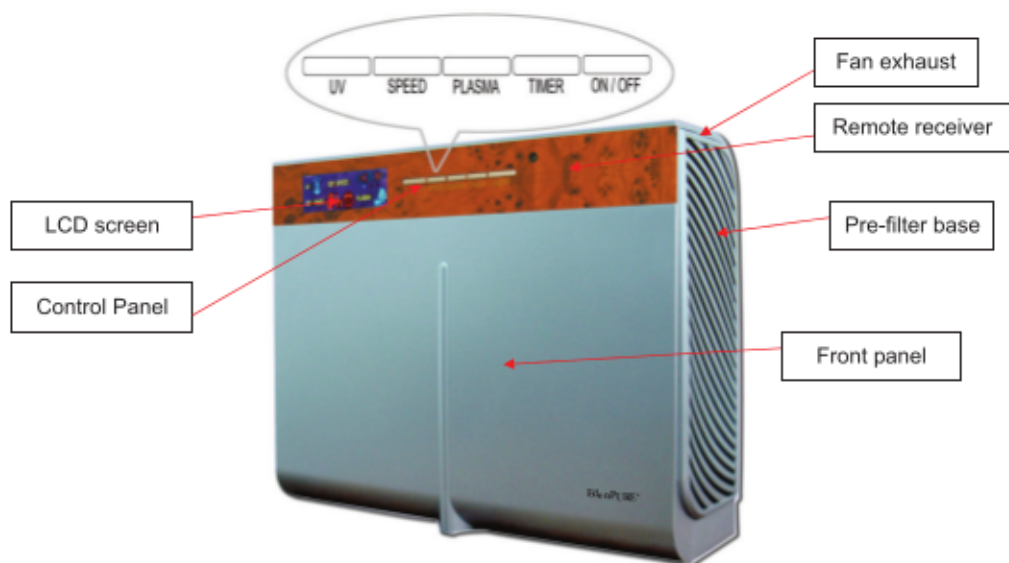

Advanced Functions

Speed: Select from 3 fan speeds by pressing the SPEED button.

Plasma: Restores healthy ion balance to reduce lung damaging particulates out of the air.

UV Photo Catalyst Chamber: Most advanced sterilizer—should run continuously.

Pre-filter: Washable filters keep out large particulates so that the HEPA and Catalyst filter do not become blocked.

Activated Catalyst Pad: Automatically absorbs smoke and odors, killing virus and bacteria.

HEPA Filter: Effective to 99.97% for pollen, drifting dead skin and other lung damaging particulates.

Display Mode: LCD full screen readout.

Remote control: Simple to use and operates all functions.

HEPA FILTER USAGE: Includes a permanent advanced HEPA/Carbon filter to accelerate the UV sanitation process. This feature also captures the pollutants the negative ion feature drops from the air.

LCD screen



Overview of Operating Modes

Power Setting

Press POWER button. This starts the unit and turns on the LCD displays.

Plasma

Press the PLASMA button to initiate or stop ionizer and ozone function.

Fan Speed Setting

Press the SPEED button successively to select low, medium or high fan speed functions.

UV

The UV activates the advanced photo catalyst chamber that sterilizes the air destroying bacteria, germs even virus. It is recommended to operate this function continuously for pure safe air. Press to switch off.

Timer

Press the Timer button to set the unit off by 1 /2 / 4 /8 hours settings.

Supplement

This unit built-in memory will restart the unit in its previous function when it is turned off and restarted. except for the time setting function.



Caution:

For equipment having a grounding-type plug, the following instructions or the equivalent shall be provided: "To reduce the risk of electric shock, this equipment has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way. "

Plasma Button & Benefits

* Automatically actuated of Plasma when power is on

NOTE: Plasma setting is designed to replicate nature's fresh air elements that act as air vitamins and reduce lung damaging particulates.

1. Replaces essential air electricity which promotes a feeling of being energized or of well-being similar to standing next to a water fall.
2. Fresh air has 200,000 negative ions per cubic centimeter. Indoors negative ions are virtually nonexistent promoting a sense of fatigue for many.
3. Negative ions literally sweep your breathing space clean of many lung damaging pollutants by causing the smallest most damaging particulate to magnetize (attract) together forming mass which drops it to the floor to be swept up.

Fan Speed, UV Benefits

SPEED BUTTON: Select from 3 options of low, medium or high speeds. Our advanced high velocity barrel designed fan chamber emits purifications molecules in an even distribution to cover a large area more rapidly producing accelerated coverage for cleaner air and surfaces disinfection.

BENEFITS: Permits you to control the fan noise as well as control the distribution of the cleansing molecules to accelerate purification and odor removal for various tasks.

NOTE: UV

1. Produces accelerated destruction for bacterial and odor clean up.
2. Sanitizes surfaces, mattresses, pillows and furniture. Will remove offensive odors and bacteria from furniture, carpet, vehicles, boats, clothes. (the list is endless)
3. Super cleansing molecules working together are highly reactive hydroxyl molecules, which accelerates the destruction of nauseous odors, toxic gases and germs converting them to harmless odorless water vapor and ash.

UV Catalyst Photo Chamber:

- It is recommended that this function is used continuously.
- This Advanced EdenPURE 5 Air Purifier produces a highly accelerated destruction to virus, gases, germs and odors.

EdenPURE 5 Air Purifier Placement

- For normal daily use place the EdenPURE 5 Air Purifier as high as possible in a living room etc.

Since the EdenPURE 5 Air Purifier blows the purification molecules out the top of the machine this will produce the maximum area coverage. For target purification (example mattress) place a sheet and tent it over the mattress keeping the intake end of the EdenPURE 5 Air Purifier unrestricted for air flow.

Service Instructions

Warning:

Unit must be unplugged before servicing filter or UV light. UV may be damaging to the eyes.



1. Remove the pre-filter grid.



2. Remove the HEPA/charcoal filter.




3. Unplug the UV lamp from the photo chamber.



4. Replace UV lamp.

Remote Control

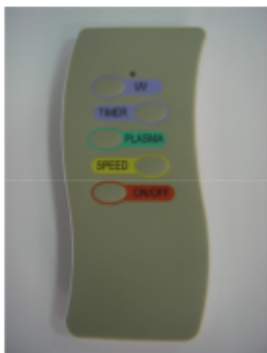

All the functions that can be selected on the control panel directly can also be selected by means of the remote control unit which must be pointed at the control panel on the machine.

- One 3VDC CR2025 Lithium Button Cells Battery is included.

Warning :

Battery may explode if disposed of in a fire.

Caution :

Do not dispose of Battery in a fire to prevent injury or burns. Do not short circuit.

Do not open battery. Do not crush, it must be disposed of properly.



- Insert the battery by sliding the battery compartment open and placing the battery with the positive side facing the bottom of the remote.

Specification & Technical Data

Air Purifier Model YL-1050R	
Power rated	120V ~ 60 Hz
Power consumption	35 Watts
Air circulation	97.2 m ³ /hour.
Fan speed	High / Medium / Low
Battery style (for remote controller)	CR2025 Lithium Button Cells DC3V x 1
Net weight	3.0 kgs
Dimension	38 x 30 x 11.5 cm
Noise level	Below 49dB
Tubular Quartz UV (Ultra Violet)	Germicidal Lamp
Input	AC 36-48V/160mA
Power consumption	6 Watts
UV lamp tube length	212mm
UV wave length	254 nm
Life span	8,000 hours

Cautions:

1. Do not insert metallic items into the purifier to avoid possible damage and electric shock.
2. Keep the purifier away from flammable and explosive substances.
3. Avoid getting the purifier wet.
4. Do not place the purifier under direct sunshine or too close to a heat source to prevent deformation of the exterior.
5. Keep at least 2 feet away from occupants in the room while in operation.



Conforms to UL STD. NO. 867
 Certified to CSA STD. C22.2 NO. 187

Warranty

GUARANTEE

This product carries a 60-day satisfaction guarantee. If you are not totally satisfied, your purchase price will be refunded if you return your EdenPURE® unit within sixty (60) days. No questions asked.

ONE YEAR LIMITED WARRANTY

WARRANTY: The Company warrants this product, to the original purchaser or gift recipient, to be free from defects in workmanship and materials under normal use and service, for a period of one year from the date of purchase.

LIMITATIONS: ALL WARRANTIES IMPLIED BY LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some jurisdictions do not allow limitations on the length of the implied warranty, so the above limitation may not apply to you. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFIT OR MEDICAL EXPENSES CAUSED BY ANY DEFECT, FAILURE, MISUSE, OR MALFUNCTION OF THE PRODUCT.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Company will not be responsible for damages or losses, direct or indirect, caused by misuse, abuse, accident, negligence, conditions of transportation or storage, or failure to follow instructions. The Company will not be responsible for any statements that are made or published, written or oral, that are inconsistent with this written warranty, or which are misleading or inconsistent with the facts as published in the literature or specifications by the Company.

WARRANTY CLAIM PROCEDURE: Any product that proves defective within the warranty period will, transportation charges pre-paid, be repaired or replaced at the option of the Company, free of charge. Simply include your purchase receipt and deliver to the address below.

For more information, or for assistance, please call or write:

Biotech Research
7800 Whipple Ave NW
Canton, OH 44767
1-800-466-7688